

13A MULTIPoint FUEL INJECTION (MPI)

CONTENTS

MULTIPOINT FUEL INJECTION (MPI)

- GENERAL INFORMATION
- GENERAL SPECIFICATIONS
- MULTIPOINT FUEL INJECTION (MPI) SYSTEM DIAGRAM
- MULTIPOINT FUEL INJECTION (MPI) SYSTEM DIAGRAM <WITH TCL>

SERVICE SPECIFICATIONS

SEALANT

SPECIAL TOOLS

TROUBLESHOOTING

- DIAGNOSIS TROUBLESHOOTING FLOW
- DIAGNOSIS FUNCTION
- FAIL-SAFE FUNCTION REFERENCE TABLE
- INSPECTION CHART FOR DIAGNOSIS
- INSPECTION CHART FOR TROUBLE SYMPTOMS
- PROBLEM SYMPTOMS TABLE (FOR YOUR INFORMATION)
- INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS
- DATA LIST REFERENCE TABLE
- ACTUATOR TEST REFERENCE TABLE
- CHECK AT THE ENGINE A/T-ECU TERMINALS

ON-VEHICLE SERVICE

- THROTTLE BODY (THROTTLE VALVE AREA) CLEANING
- CLOSED THROTTLE POSITION SWITCH AND THROTTLE POSITION SENSOR ADJUSTMENT
<Vehicles without TCL>
- THROTTLE POSITION SENSOR ADJUSTMENT
<Vehicles with TCL>
- CLOSED THROTTLE POSITION SWITCH AND ACCELERATOR PEDAL POSITION SENSOR ADJUSTMENT
<Vehicles with TCL>
- FIXED SAS ADJUSTMENT
- BASIC IDLE SPEED ADJUSTMENT
- FUEL PRESSURE TEST
- FUEL PUMP CONNECTOR DISCONNECTION (HOW TO REDUCE PRESSURISED FUEL LINES)
- FUEL PUMP OPERATION CHECK

INSPECTION OF MPI COMPONENTS

- COMPONENT LOCATION
- MPI CONTROL RELAY AND FUEL PUMP RELAY CONTINUITY CHECK
- INTAKE AIR TEMPERATURE SENSOR CHECK

ENGINE COOLANT TEMPERATURE SENSOR CHECK
THROTTLE POSITION SENSOR CHECK
ACCELERATOR PEDAL POSITION SENSOR CHECK (Vehicles with TCL)
CLOSED THROTTLE POSITION SWITCH CHECK <Vehicles without TCL>
CLOSED THROTTLE POSITION SWITCH CHECK (Vehicles with TCL)
OXYGEN SENSOR CHECK
INJECTOR CHECK
IDLE SPEED CONTROL (ISC) SERVO (STEPPER MOTOR) CHECK
PURGE CONTROL SOLENOID VALVE CHECK
EGR CONTROL SOLENOID VALVE CHECK
VENTILATION CONTROL SOLENOID VALVE CHECK <Vehicles with TCL>
VACUUM CONTROL SOLENOID VALVE CHECK <Vehicles with TCL>
VACUUM TANK CHECK <Vehicles with TCL>
VACUUM ACTUATOR CHECK <Vehicles with TCL>

THROTTLE VALVE OPERATION CHECK
<Vehicles with TCL>

NEGATIVE PRESSURE CHECK DURING TRACTION CONTROL OPERATION
<Vehicles with TCL>

INJECTOR

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

THROTTLE BODY

REMOVAL AND INSTALLATION
<Vehicles without traction control, with cruise control>

<Vehicles with traction control and cruise control>

INSTALLATION SERVICE POINT

DISASSEMBLY AND REASSEMBLY
<Vehicles without traction control, with cruise control>

<Vehicles with traction control, and cruise control>

CLEANING THROTTLE BODY PARTS

REASSEMBLY SERVICE POINT