

# 13H TRACTION CONTROL SYSTEM (TCL)

## CONTENTS

### GENERAL DESCRIPTION

### SPECIAL TOOLS

### SERVICE SPECIFICATIONS

### DIAGNOSIS

#### DIAGNOSTIC TROUBLESHOOTING FLOW

#### DIAGNOSIS FUNCTION

#### INSPECTION CHART FOR DIAGNOSIS TROUBLE CODES

#### INSPECTION PROCEDURES FOR DIAGNOSIS CODES

#### INSPECTION CHART FOR TROUBLE SYMPTOMS

#### DATA LIST REFERENCE TABLE

### CHECK AT ECU TERMINALS

### ON-VEHICLE SERVICE

#### INDICATOR LAMP CHECK

#### TCL SYSTEM OPERATION CHECK

#### STOP LAMP SWITCH CHECK

#### WHEEL SPEED SENSOR CHECK

#### VACUUM SOLENOID VALVE CHECK

#### VENTILATION SOLENOID VALVE CHECK

#### VACUUM TANK CHECK

#### VACUUM ACTUATOR CHECK

#### ACCELERATOR PEDAL POSITION SENSOR (APS) CHECK

## WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*)

**TCL SWITCH**

REMOVAL AND INSTALLATION

INSPECTION

**STEERING WHEEL SENSOR**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSPECTION

**TCL-ECU**

REMOVAL AND INSTALLATION

INSPECTION