

17 ENGINE AND EMISSION CONTROL

CONTENTS

[ENGINE CONTROL SYSTEM](#)

[GENERAL INFORMATION](#)

[SERVICE SPECIFICATIONS](#)

[ON-VEHICLE SERVICE](#)

[ACCELERATOR CABLE AND PEDAL](#)

[INSTALLATION SERVICE POINT](#)

[CRUISE CONTROL SYSTEM](#)

[GENERAL INFORMATION](#)

[CONSTRUCTION DIAGRAM](#)

[SERVICE SPECIFICATIONS](#)

[SPECIAL TOOLS](#)

[TROUBLESHOOTING](#)

[DATA LIST REFERENCE TABLE](#)

[ON-VEHICLE SERVICE](#)

[CRUISE CONTROL SYSTEM OPERATION CHECK](#)

[CRUISE CONTROL COMPONENT CHECK](#)

[CRUISE CONTROL](#)

[EMISSION CONTROL SYSTEM](#)

[GENERAL INFORMATION](#)

[EMISSION CONTROL DEVICE REFERENCE TABLE](#)

[SERVICE SPECIFICATIONS](#)

[SPECIAL TOOL](#)

[VACUUM HOSE](#)

[VACUUM HOSE PIPING DIAGRAM](#)

[VACUUM CIRCUIT DIAGRAM](#)

[VACUUM HOSE INSTALLATION](#)

[VACUUM HOSE INSPECTION](#)

[CRANKCASE EMISSION CONTROL SYSTEM](#)

[GENERAL INFORMATION](#)

[SYSTEM DIAGRAM](#)

[COMPONENT LOCATION](#)

[POSITIVE CRANKCASE VENTILATION SYSTEM CHECK](#)

[POSITIVE CRANKCASE VENTILATION \(PCV\) VALVE CHECK](#)

EVAPORATIVE EMISSION CONTROL SYSTEM

- GENERAL INFORMATION
- SYSTEM DIAGRAM
- COMPONENT LOCATION
- PURGE CONTROL SYSTEM CHECK
- PURGE PORT VACUUM CHECK
- EVAPORATIVE EMISSION PURGE SOLENOID CHECK
- VOLUME AIR FLOW SENSOR, ENGINE COOLANT TEMPERATURE SENSOR AND INTAKE AIR TEMPERATURE SENSOR CHECK
- AIR CONDITIONING SWITCH CHECK
- CANISTER AND TWO WAY VALVE REMOVAL AND INSTALLATION
- INSPECTION

EXHAUST GAS RECIRCULATION (EGR) SYSTEM

- GENERAL INFORMATION
- OPERATION
- SYSTEM DIAGRAM
- COMPONENT LOCATION
- EGR SYSTEM CHECK
- VACUUM CONTROL VALVE CHECK
- EGR VALVE CHECK
- EGR PORT VACUUM CHECK
- EGR SOLENOID CHECK

CATALYTIC CONVERTER

- GENERAL INFORMATION
- REMOVAL AND INSTALLATION
- REMOVAL SERVICE POINT
- INSPECTION