

22A MANUAL TRANSMISSION OVERHAUL

CONTENTS

SECTIONAL VIEW	
GENERAL SPECIFICATIONS	INSPECTION
SERVICE SPECIFICATIONS	INSTALLATION SERVICE POINTS
LUBRICANTS	REVERSE IDLER GEAR
SEALANTS	DISASSEMBLY AND REASSEMBLY
TORQUE SPECIFICATIONS	INSPECTION
FORM-IN-PLACE GASKET	SPEEDOMETER GEAR
DISASSEMBLY	DISASSEMBLY AND REASSEMBLY
SURFACE PREPARATION	SELECTOR LEVER
FORM-IN-PLACE GASKET APPLICATION (FIPG)	DISASSEMBLY AND REASSEMBLY
SNAP RINGS, SPACERS AND THRUST PLATE ADJUSTMENT	INSTALLATION SERVICE POINTS
SPECIAL TOOLS	CONTROL HOUSING
TRANSMISSION	DISASSEMBLY AND REASSEMBLY
REMOVAL SERVICE POINTS	REMOVAL SERVICE POINTS
INSPECTION	INSTALLATION SERVICE POINTS
PRE-ASSEMBLY ADJUSTMENTS	CLUTCH HOUSING
INSTALLATION SERVICE POINTS	DISASSEMBLY AND REASSEMBLY
INPUT SHAFT	REMOVAL SERVICE POINTS
REMOVAL SERVICE POINTS	INSTALLATION SERVICE POINTS
INSPECTION	TRANSMISSION CASE
INSTALLATION SERVICE POINTS	INSTALLATION SERVICE POINTS
OUTPUT SHAFT	DIFFERENTIAL
REMOVAL SERVICE POINTS	REMOVAL SERVICE POINTS