

36 PARKING BRAKE

CONTENTS

GENERAL INFORMATION

CONSTRUCTION DIAGRAM

SERVICE SPECIFICATIONS

LUBRICANTS

ON-VEHICLE SERVICE

PARKING BRAKE LEVER STROKE CHECK

LINING RUNNING-IN

REPLACING DUST BOOT

PARKING BRAKE SWITCH CHECK

PARKING BRAKE LEVER

REMOVAL AND INSTALLATION

PARKING BRAKE CABLE

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

PARKING BRAKE <SEDAN>

REMOVAL AND INSTALLATION

PARKING BRAKE <WAGON>

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

INSPECTION

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.