

# 52A INTERIOR

## CONTENTS

### SPECIAL TOOLS

### INSTRUMENT PANEL

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

DISASSEMBLY AND REASSEMBLY

### FLOOR CONSOLE

REMOVAL AND INSTALLATION

### TRIMS<SEDAN>

REMOVAL AND INSTALLATION

### TRIMS<SEDAN>

REMOVAL AND INSTALLATION

### TRIMS<WAGON>

REMOVAL AND INSTALLATION

### HEADLINING AND INSIDE REAR VIEW

#### MIRROR<SEDAN>

REMOVAL AND INSTALLATION

#### HEADLINING AND INSIDE REAR VIEW

#### MIRROR<WAGON>

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

### FRONT SEAT

REMOVAL AND INSTALLATION

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINT

INSPECTION

### REAR SEAT<SEDAN>

REMOVAL AND INSTALLATION

### REAR SEAT<WAGON>

REMOVAL AND INSTALLATION

### FRONT SEAT BELT

REMOVAL AND INSTALLATION

INSPECTION

### REAR SEAT BELT<SEDAN>

REMOVAL AND INSTALLATION

### REAR SEAT BELT<WAGON>

REMOVAL AND INSTALLATION

### REAR CENTRE SEAT BELT<WAGON>

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

## WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

### NOTE

Section titles with the asterisk (\*) in the table of contents in each group indicate operations requiring warnings.