

54 CHASSIS ELECTRICAL

CONTENTS

HOW TO READ CONFIGURATION DIAGRAMS

HOW TO READ CIRCUIT DIAGRAMS

MARKINGS FOR CONNECTOR EARTHING

WIRE COLOUR CODES

ABBREVIATION SYMBOLS

SPECIAL TOOLS

BATTERY

ON-VEHICLE SERVICE

FLUID LEVEL AND SPECIFIC GRAVITY CHECK

BATTERY INSPECTION

BATTERY CHARGING

IGNITION SWITCH

REMOVAL AND INSTALLATION

BODY ELECTRONICS MODULE (BEM)

SPECIAL TOOLS

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS

TROUBLESHOOTING

DIAGNOSIS FUNCTION

BASIC TEST MODE (BTM) PROCEDURE

FLASH CODE REFERENCE TABLE

OUTPUT TEST CHECKLIST

INPUT TEST CHECKLIST

INSPECTION CHART FOR TROUBLE
SYMPTOMS

IMMOBILISER

DIAGNOSIS FUNCTION

DIAGNOSIS CODES

INSPECTION CHART FOR IMMOBILISER
SYSTEM DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS
CODES

BEM PINOUT REFERENCE TABLE

ON-VEHICLE SERVICE

IMMOBILISER TEACHING OPTIONS

MUT-II IMMOBILISER MENU

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

CRASH DETECT SENSOR - NON SRS	REMOVAL AND INSTALLATION
INSTALLATION SERVICE POINT	"AACRASH DETECT SENSOR. CRASH DETECT SENSOR TESTING
RF TRANSMITTER	BATTERY TESTING BATTERY REPLACEMENT PROGRAMMING RF TRANSMITTERS SPEEDOMETER CHECK TACHOMETER CHECK FUEL GAUGE SIMPLE CHECK FUEL GAUGE UNIT CHECK ENGINE COOLANT TEMPERATURE GAUGE SIMPLE CHECK ENGINE COOLANT TEMPERATURE GAUGE UNIT CHECK
COMBINATION METERS	REMOVAL AND INSTALLATION
CENTRE MESSAGE DISPLAY	SERVICE SPECIFICATIONS SPECIAL TOOLS PRELIMINARY TROUBLE SYMPTOM CHECKS < MAGNA AND SPORTS > PRELIMINARY TROUBLE SYMPTOM CHECKS < VERADA > INSPECTION CHART FOR TROUBLE SYMPTOMS CENTRE MESSAGE DISPLAY REMOVAL AND INSTALLATION CENTRE DISPLAY SETTING PROCEDURE
EXTERIOR LAMPS	HEADLAMPS ON-VEHICLE SERVICE HEADLAMP AIMING LUMINOUS INTENSITY MEASUREMENT HEADLAMP, POSITION LAMP ASSEMBLY AND FRONT TURN SIGNAL LAMP ASSEMBLY
	REMOVAL AND INSTALLATION SIDE TURN SIGNAL LAMP REMOVAL AND INSTALLATION FOG LAMP FOG LAMP AIMING REMOVAL AND INSTALLATION REAR COMBINATION LAMP AND REAR LID LAMP REMOVAL AND INSTALLATION HIGH MOUNTED STOP LAMP REMOVAL AND INSTALLATION
RHEOSTAT	REMOVAL AND INSTALLATION
HAZARD WARNING LAMP SWITCH	REMOVAL AND INSTALLATION
HORN	
CIGARETTE LIGHTER	REMOVAL AND INSTALLATION ACCESSORY SOCKET < VERADA > REMOVAL AND INSTALLATION
RADIO, TAPE PLAYER AND CD PLAYER	QUICK-REFERENCE TROUBLESHOOTING CHART RADIO WITH TAPE PLAYER AND CD PLAYER REMOVAL AND INSTALLATION SPEAKERS REMOVAL AND INSTALLATION ANTENNA REMOVAL AND INSTALLATION ANTENNA POLE REPLACEMENT
REAR WINDOW DEFOGGER	ON-VEHICLE SERVICE PRINTED-HEATER LINE CHECK
STEERING REMOTE CONTROL AND SLIP RING	REMOVAL AND INSTALLATION