


RELAY LOCATION

Name	Symbol	Name	Symbol
Air conditioning compressor clutch relay	A	Headlamp relay (HI)	A
Alternator relay	A	Horn relay	A
A/T control relay	F	Power window relay	A
Blower motor relay	C	Radiator fan relay (LO)	A
Blower motor relay (high)	G	Radiator fan relay (MI) (3.5 litre engine only)	A
Condenser fan relay (LO)	A	Radiator fan relay (HI)	A
Condenser fan relay (HI)	A	Taillamp relay	A
Defogger relay	C	Trunk lid and fuel door opener relay	B
Engine control relay/Fuel pump relay	E	Turn signal and hazard flasher unit	C
Fog lamp relay	A	Turn signal and hazard flasher unit (export)	D
Headlamp relay (LO)	A		







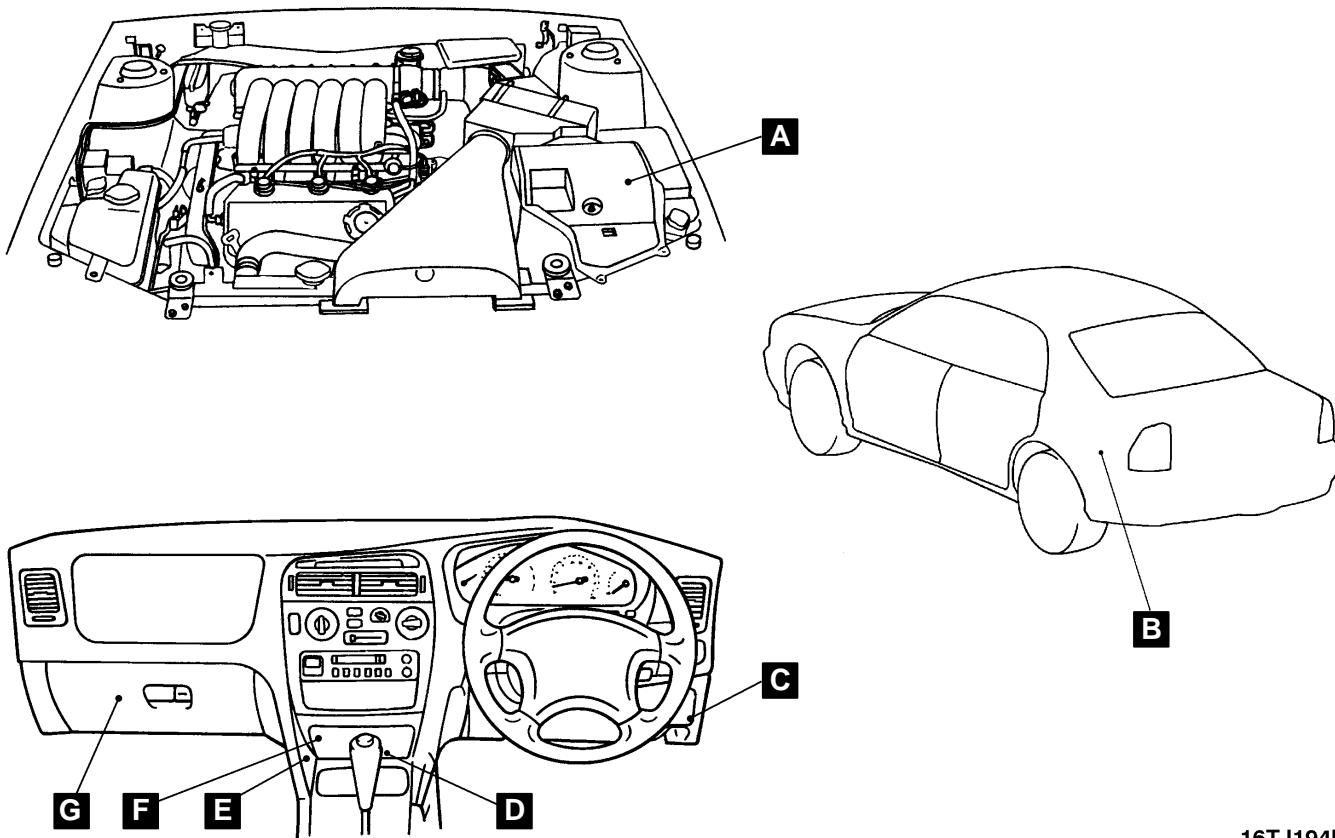


54A SINGLE PART INSTALLATION POSITION – Relay Location

Main Index







54 Index

54A Index

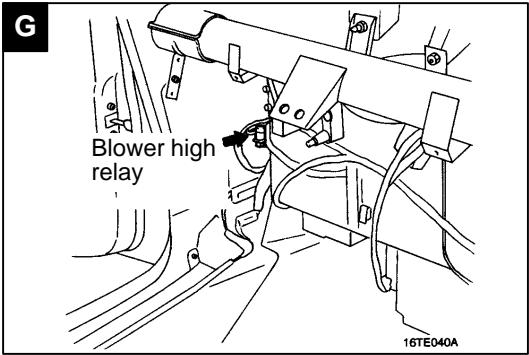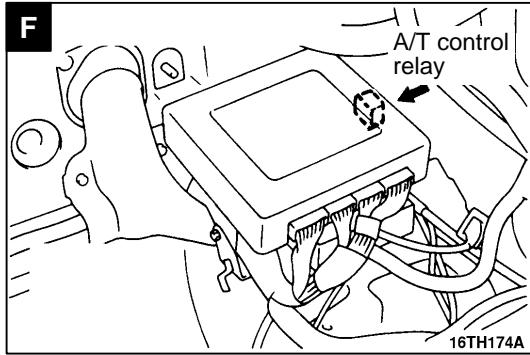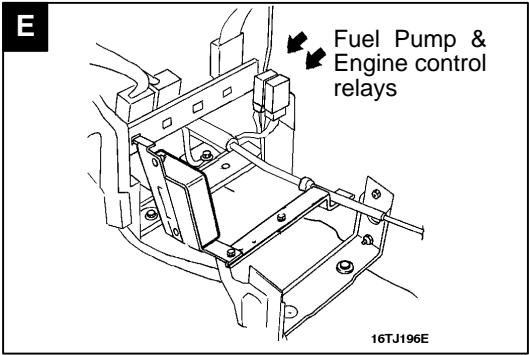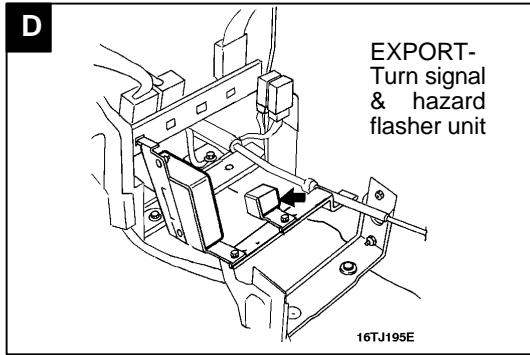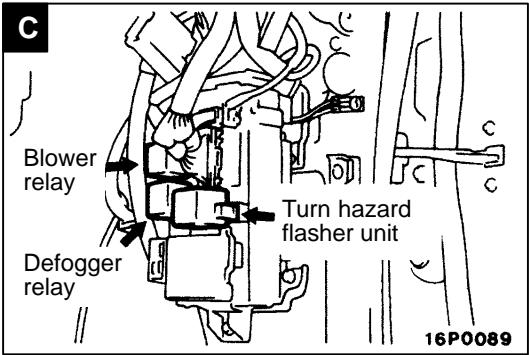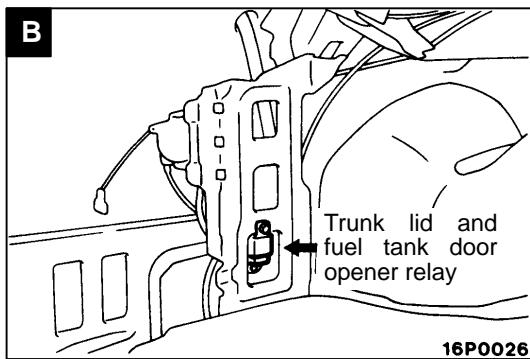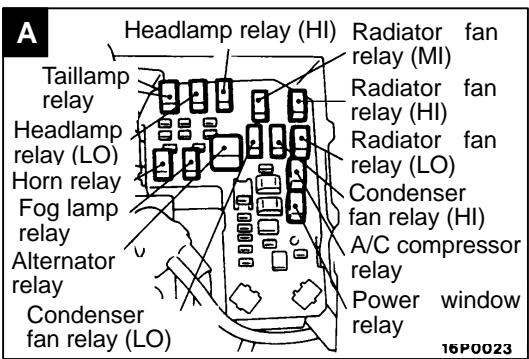

CONTROL UNIT LOCATION

Name	Symbol	Name	Symbol
ABS-ECU	D	Engine-ECU	F
A/C-ECU	A	Front door module	B
Body electronics module	E	SRS-ECU	F
Cruise-ECU	G	Sunroof-ECU	C
A/T-ECU	F		

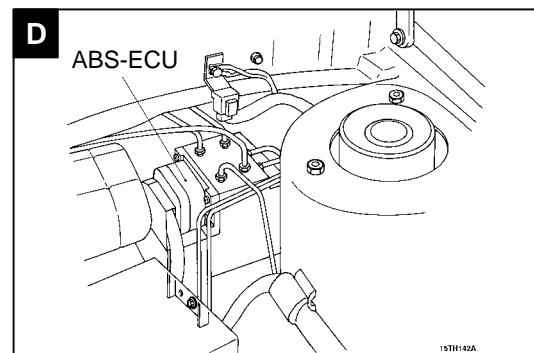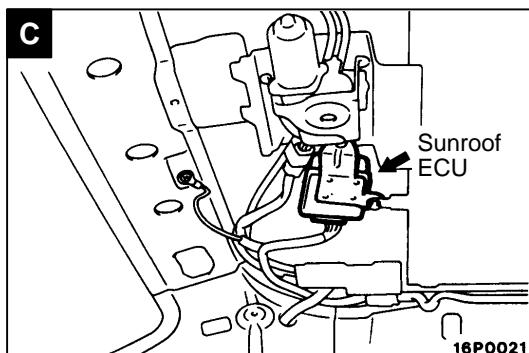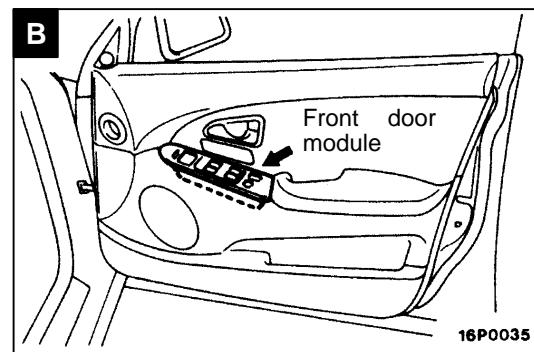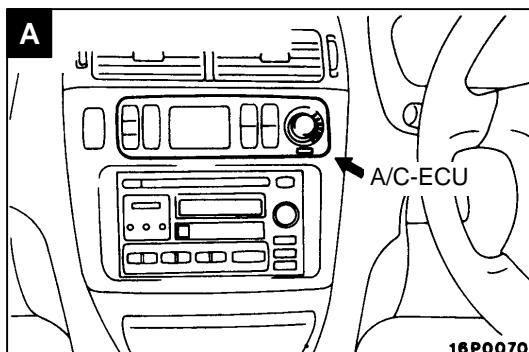
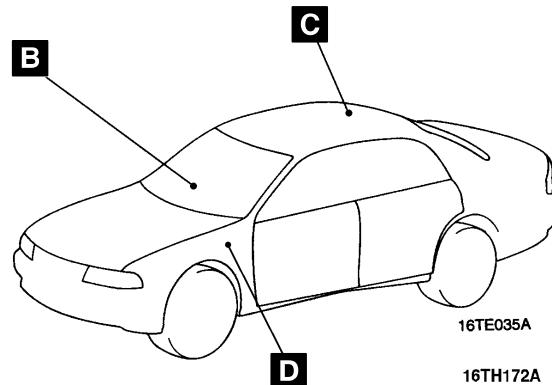
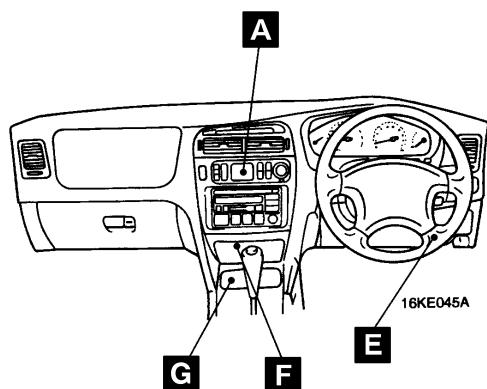


54A SINGLE PART INSTALLATION POSITION – Control Unit Location

Main Index

54 Index

54A Index

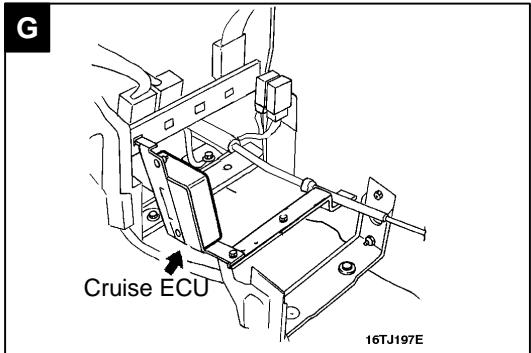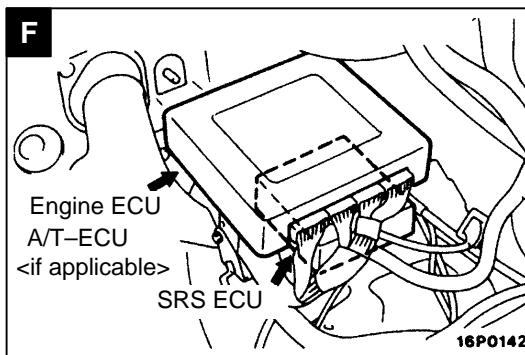
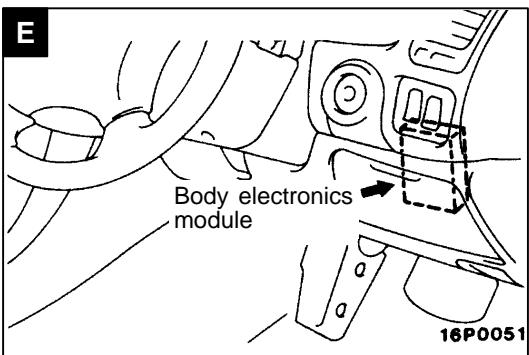


SENSOR LOCATION

Name	Symbol	Name	Symbol
ABS speed sensor (front)	L	O2 sensor	L
ABS speed sensor (rear)	J	Output shaft speed sensor	C
Accelerator pedal position sensor	B	Outside air temperature sensor <A/C>	O
A/T fluid temperature sensor	E	Photo sensor	N
Air flow sensor (with built-in barometric pressure sensor and intake air temperature sensor)	D	Refrigerant temperature sensor	R
Crank angle sensor	R	Revolution pickup sensor	R
Crash detect sensor (NON-SRS)	H	Room temperature sensor	F
Distributor assembly (with built-in camshaft position sensor)	Q	Steering wheel sensor	G
Engine coolant temperature sensor	P	Throttle position sensor	A
Fin thermo sensor	J	Vehicle speed sensor	C
Input shaft speed sensor	C	Water temperature sensor <A/C>	I

NOTE

The "Name" column is arranged in alphabetical order.

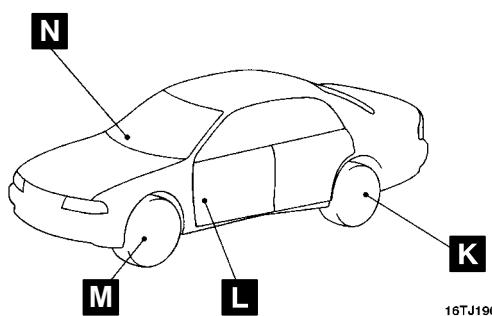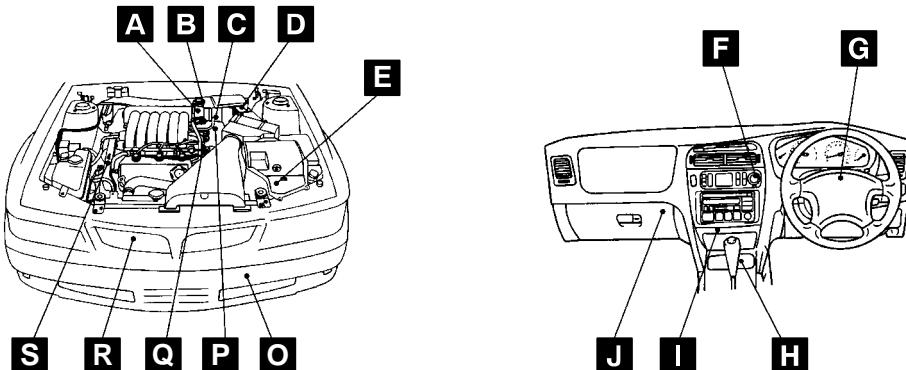











16TJ190A

54A SINGLE PART INSTALLATION POSITION – Sensor Location

Main Index

54 Index

54A Index

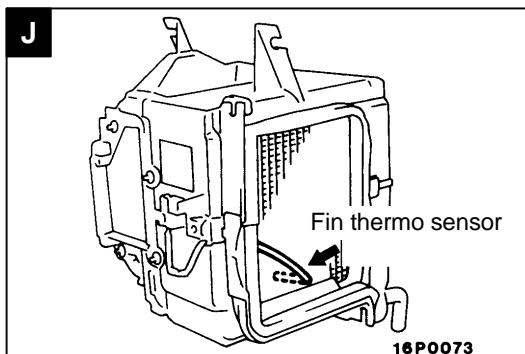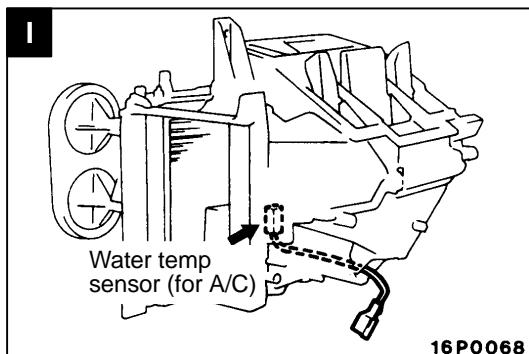
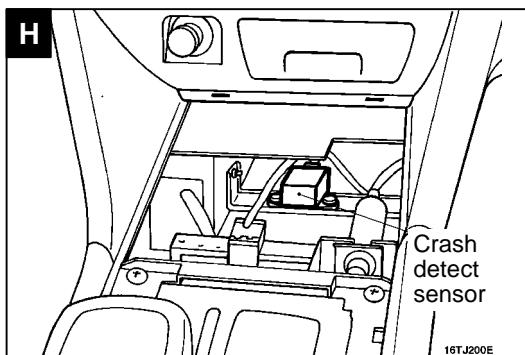
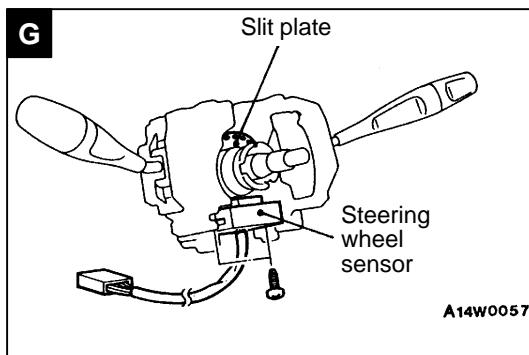
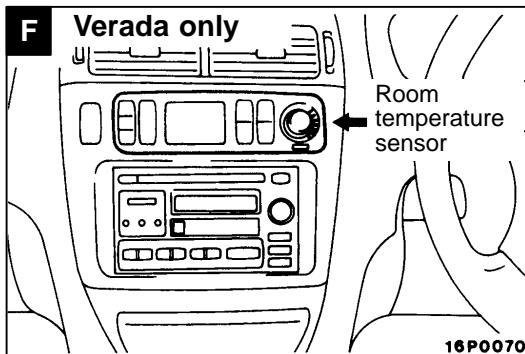
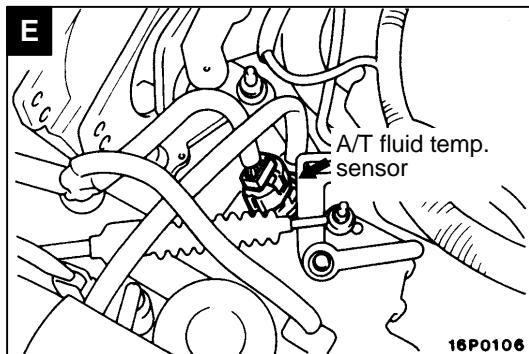
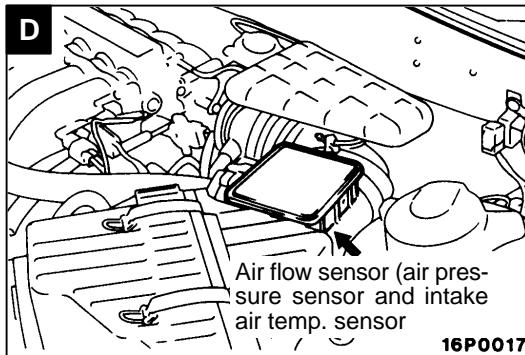
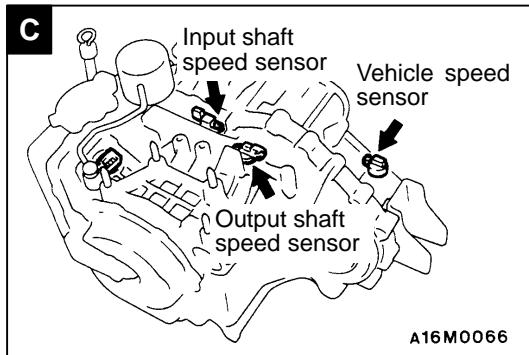
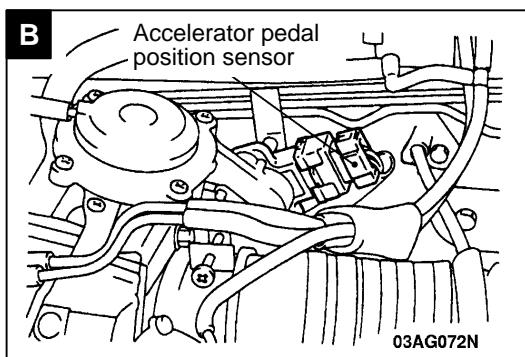
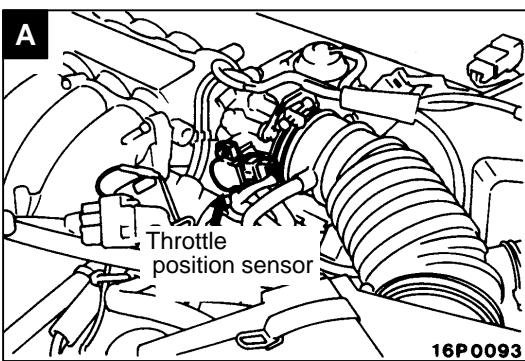


54A SINGLE PART INSTALLATION POSITION – Sensor Location

Main Index

54 Index






54A Index

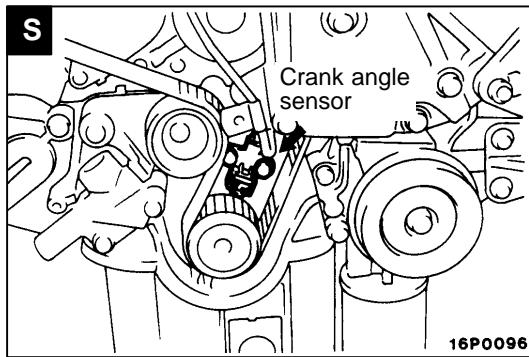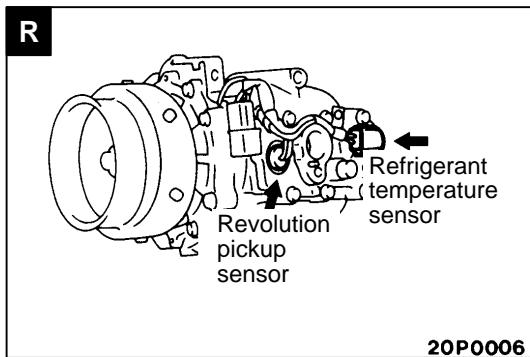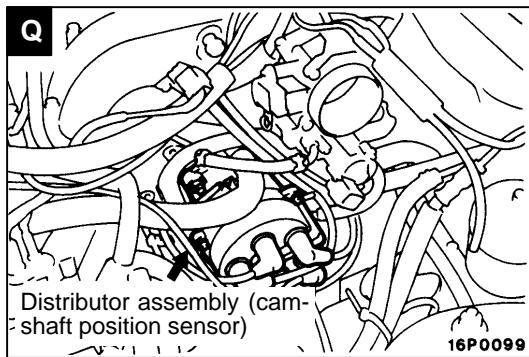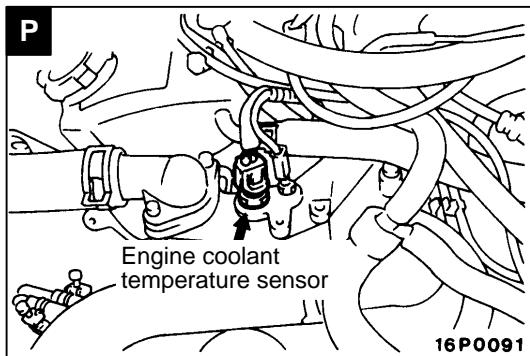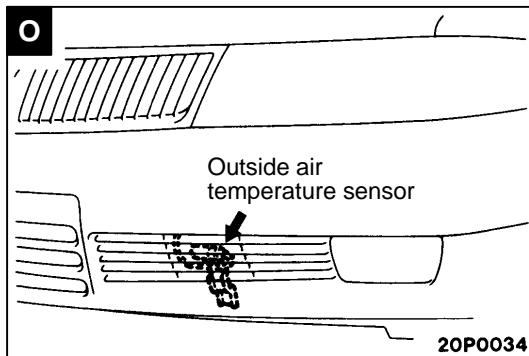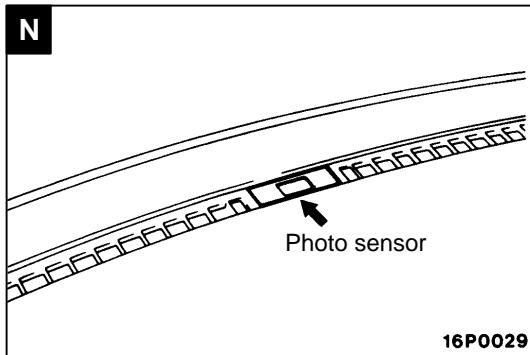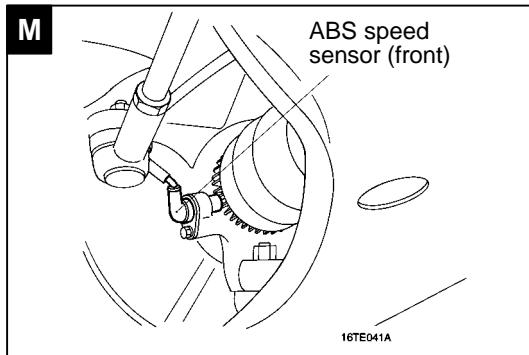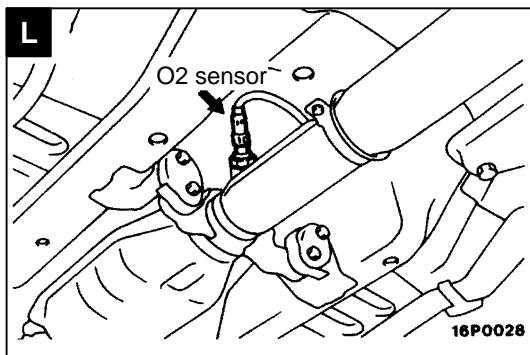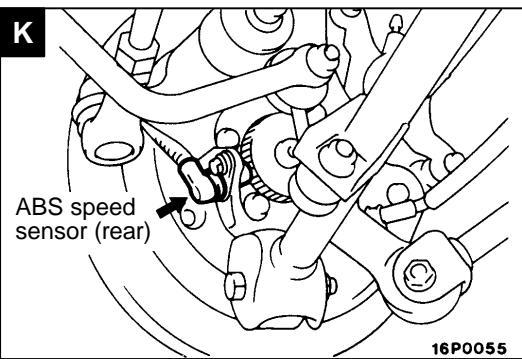


SOLENOID AND SOLENOID VALVE LOCATION

Name	Symbol	Name	Symbol
ABS hydraulic unit (with built-in solenoid valve)	B	Purge control solenoid valve	D
A/T control solenoid valve assembly	C	Vacuum control solenoid	A
Cruise control actuator (with built-in control valve, release valve)	E	Ventilation control solenoid	A
EGR solenoid valve	D		







Engine compartment

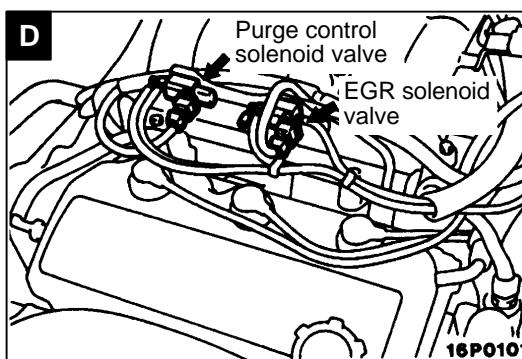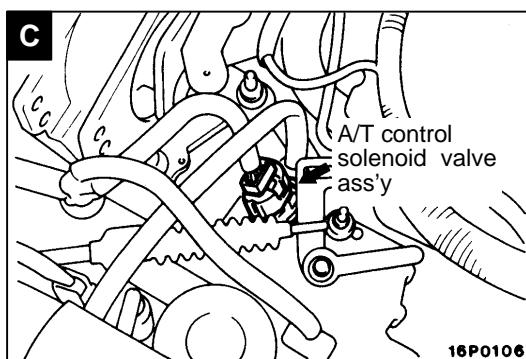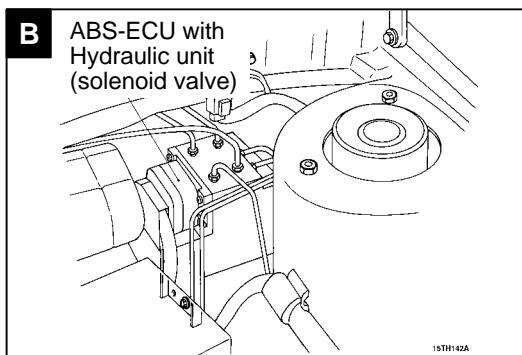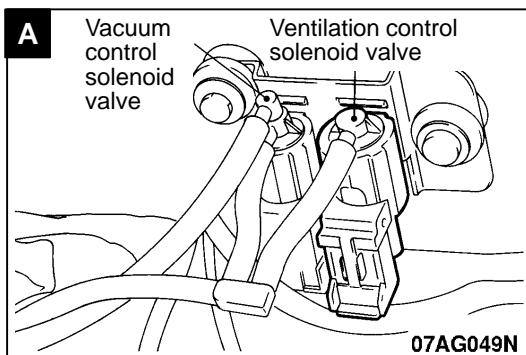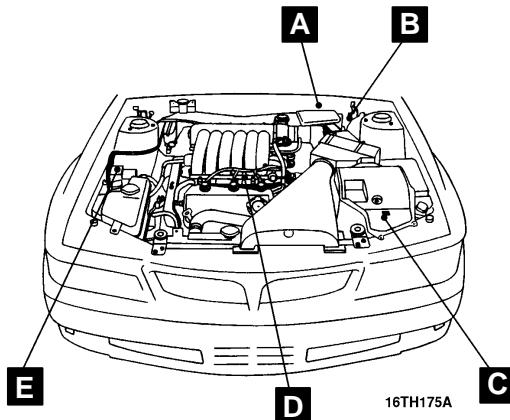

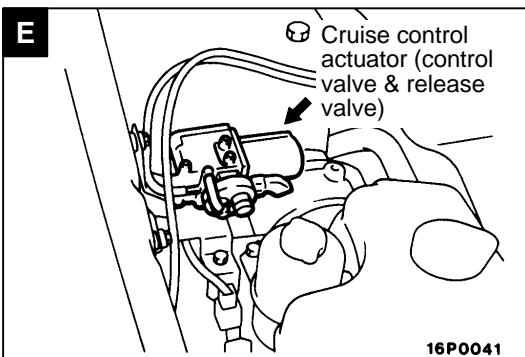





DIODE LOCATION

Name	Symbol	Name	Symbol
Diode (for cooling circuit)	A	Diode for power antenna circuit	B

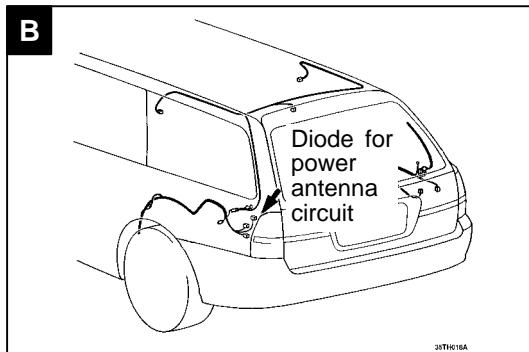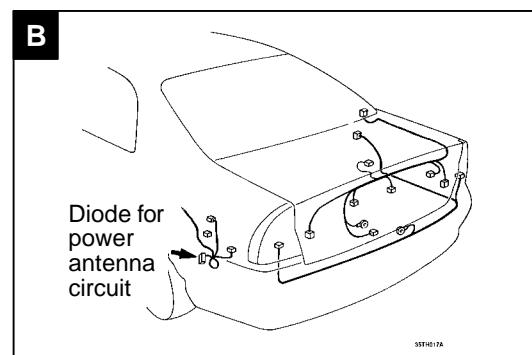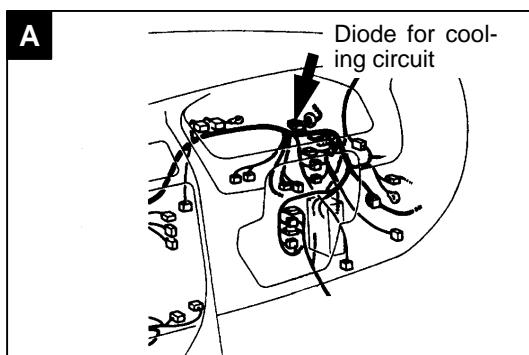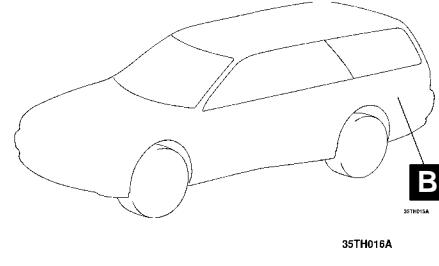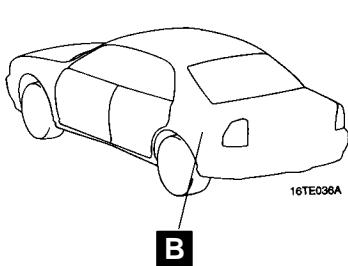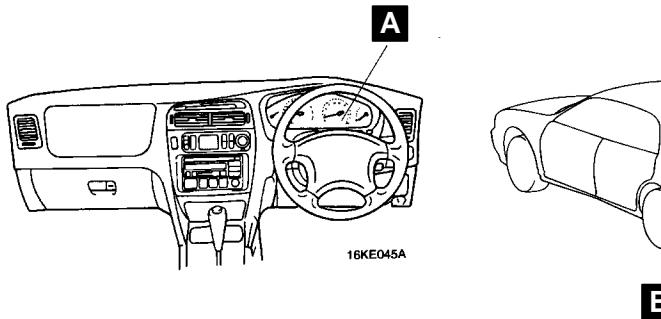

INSPECTION TERMINAL LOCATION

Name	Symbol	Name	Symbol
Checking connector	A	Diagnosis connector Flash memory connector	B


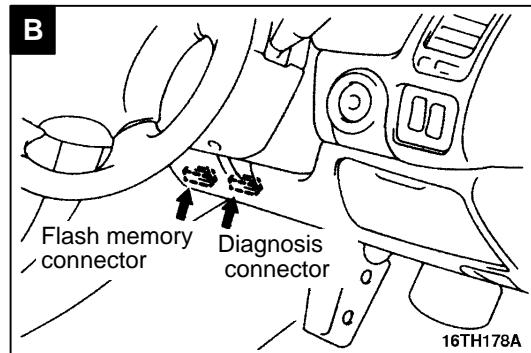
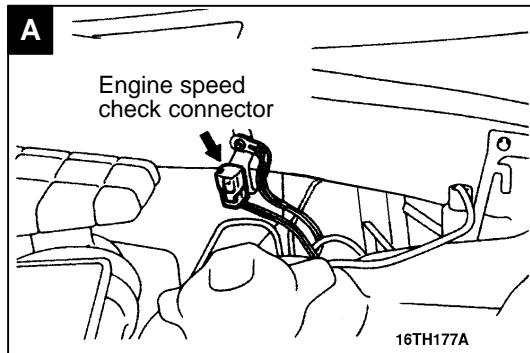
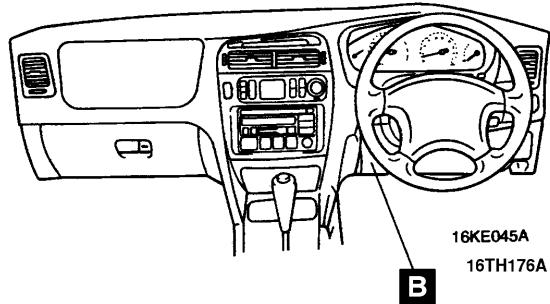
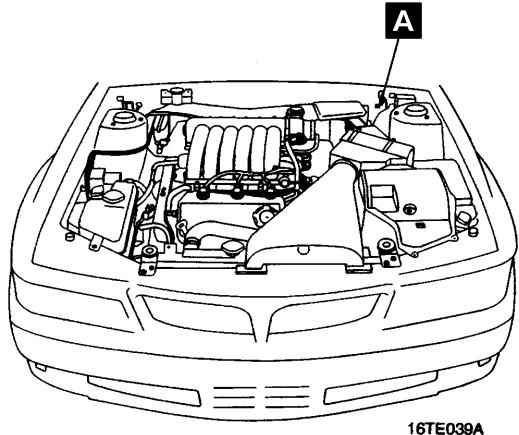


FUSIBLE LINK AND FUSE LOCATION





Name	Symbol	Name	Symbol
Dedicated fuses	A	Fusible link	A
Multi-purpose fuses	B		

NOTE



For details of fusible link and fuse, refer to CENTRALISED JUNCTION.

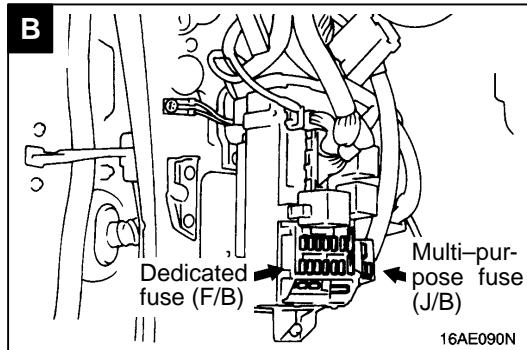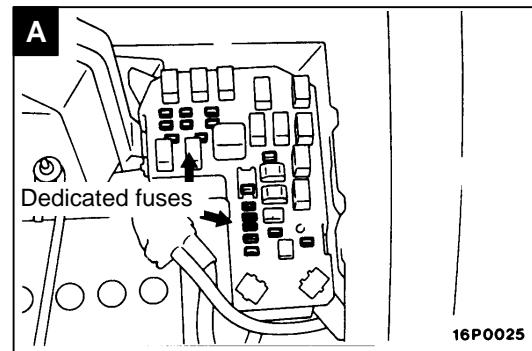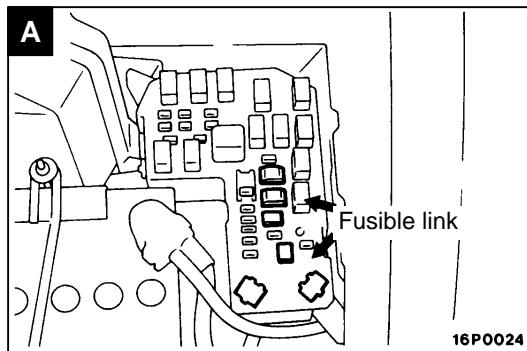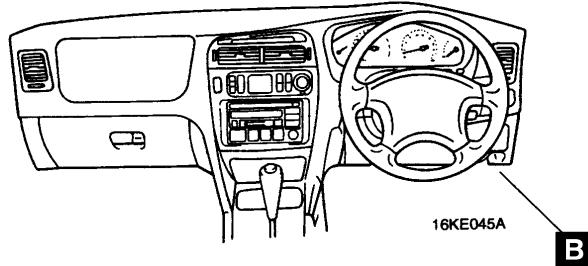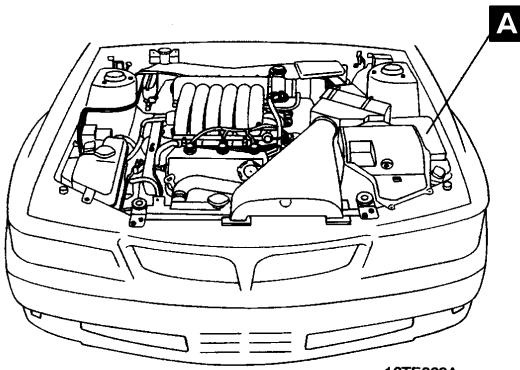

GROUND CABLE LOCATION

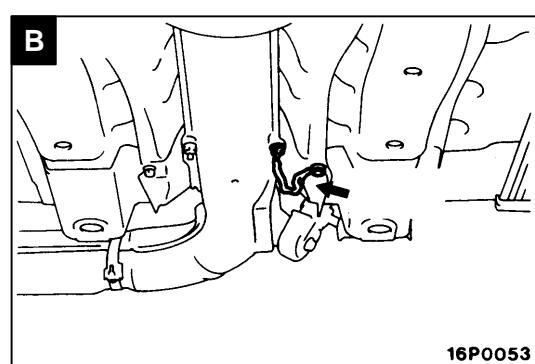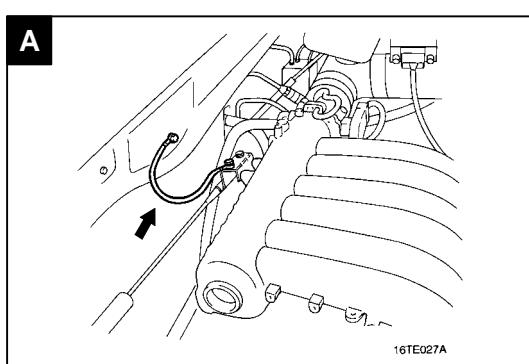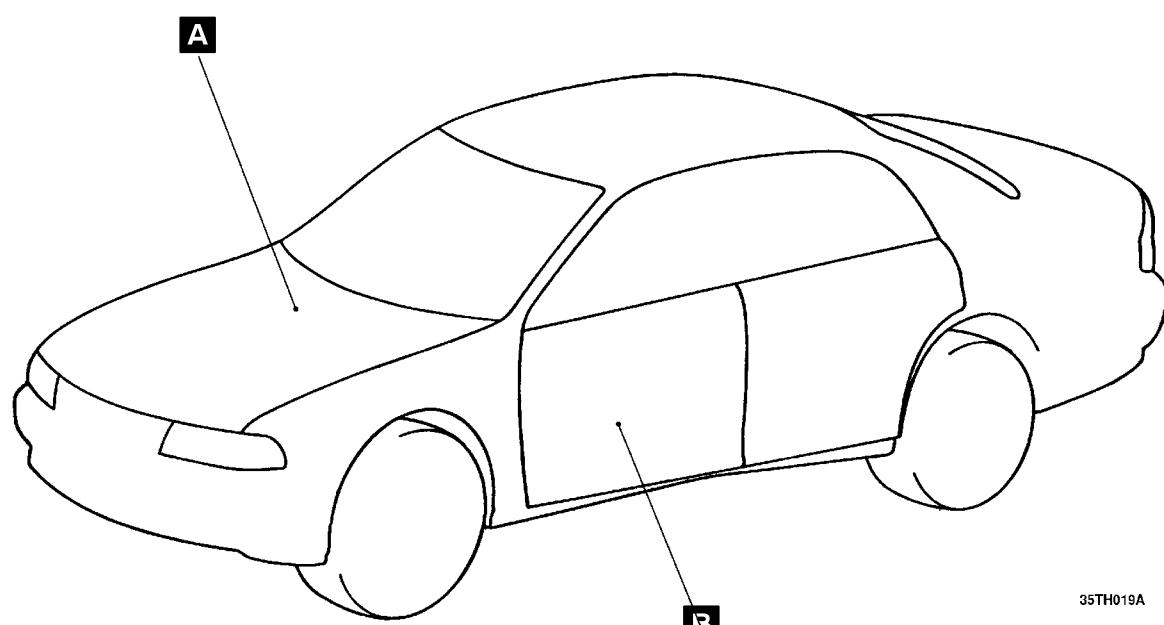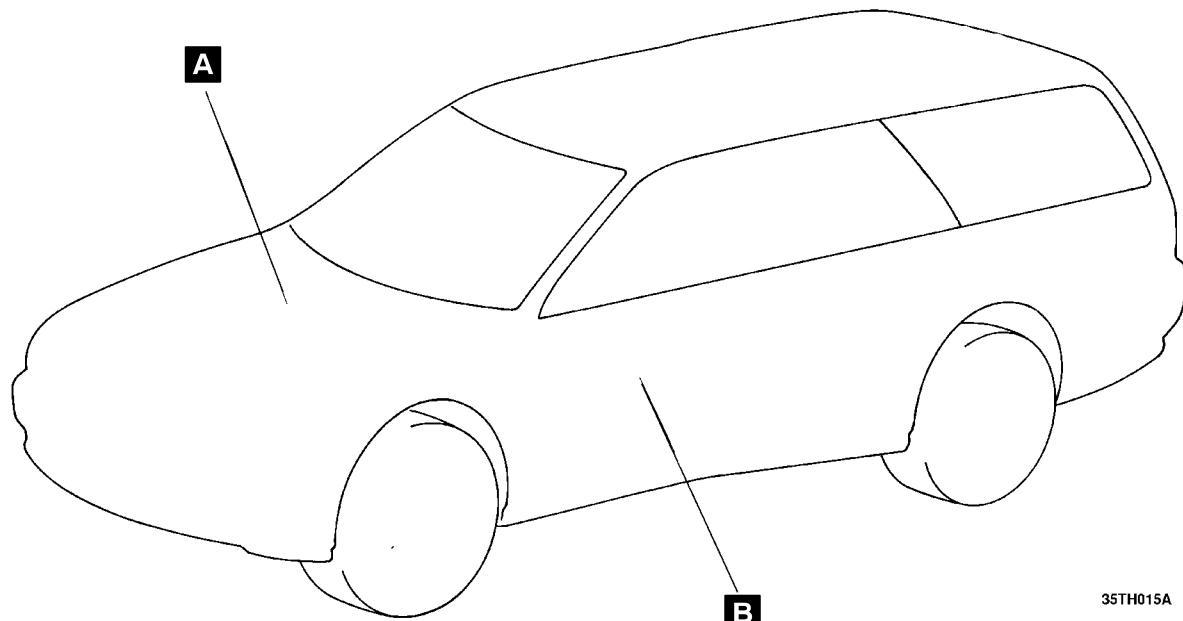

GROUNDING LOCATIONS









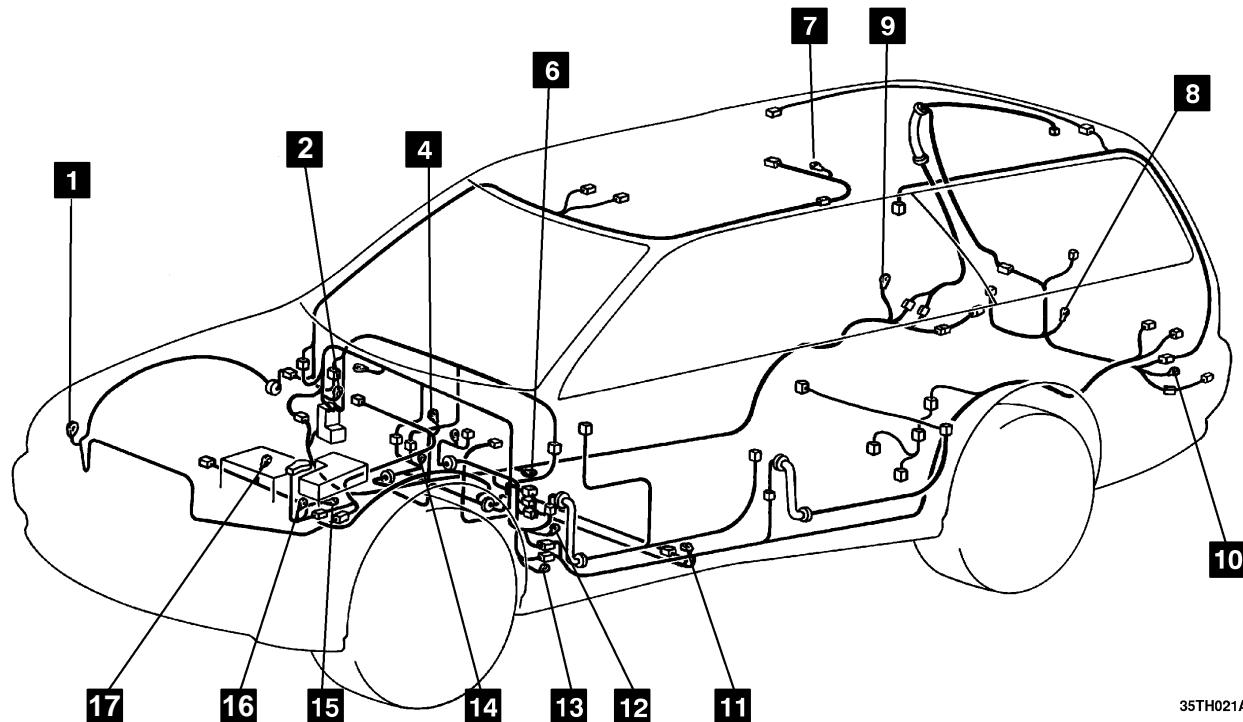
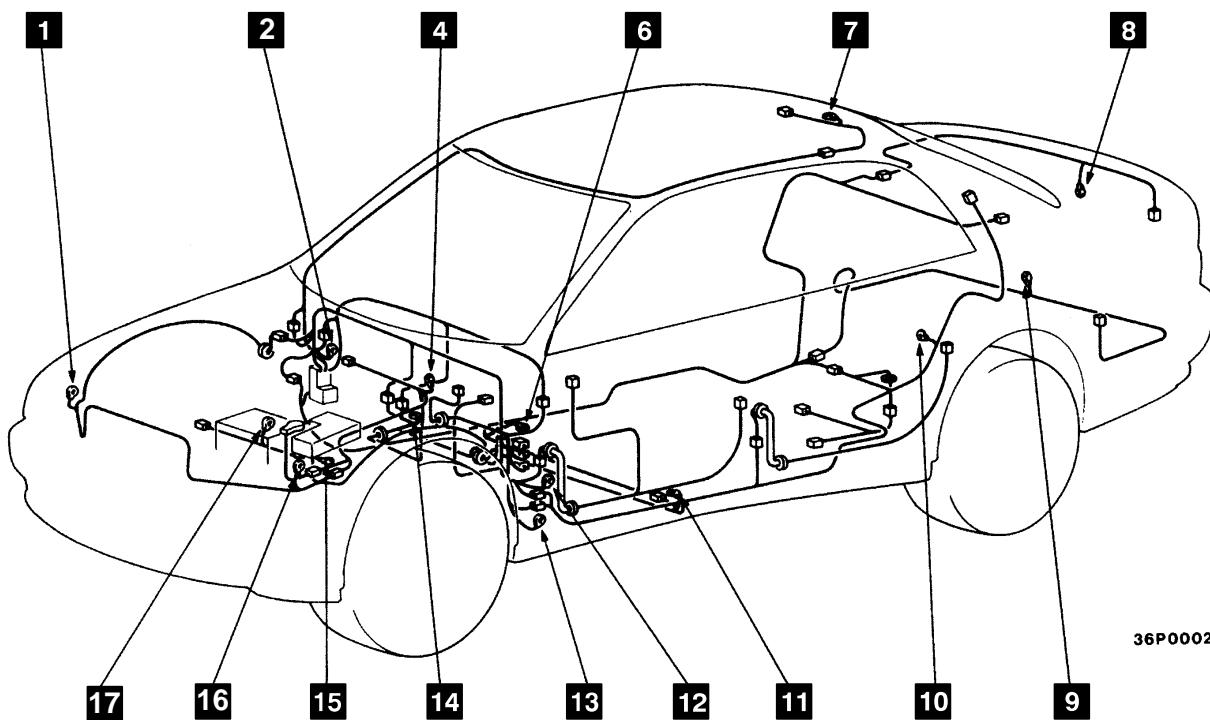


54A SINGLE PART INSTALLATION POSITION – Grounding

Main Index

54 Index

54A Index

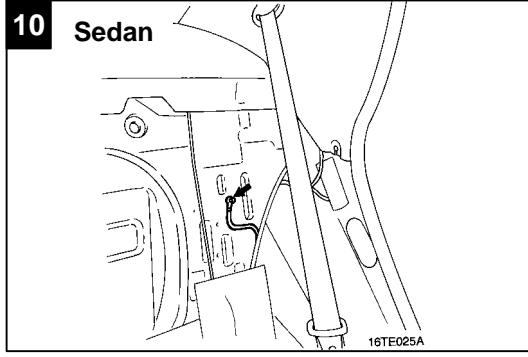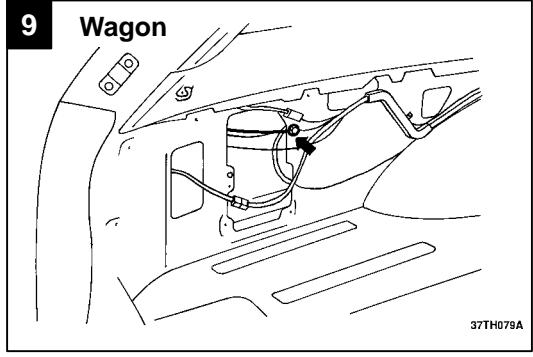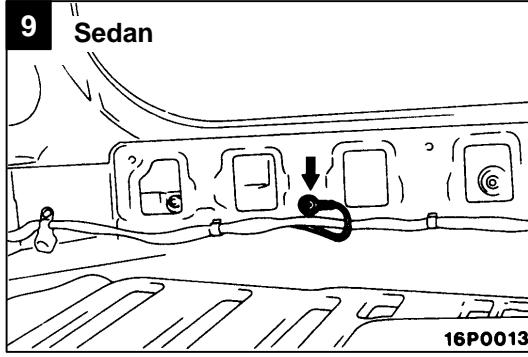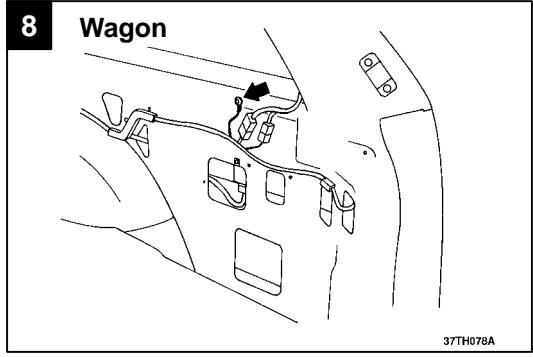
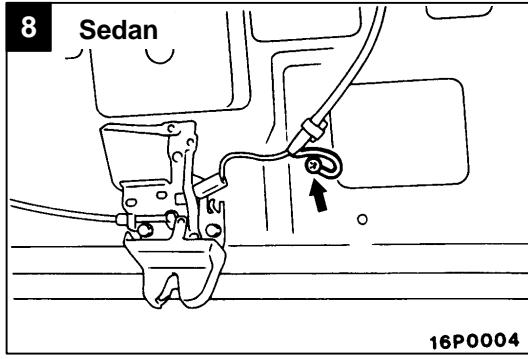
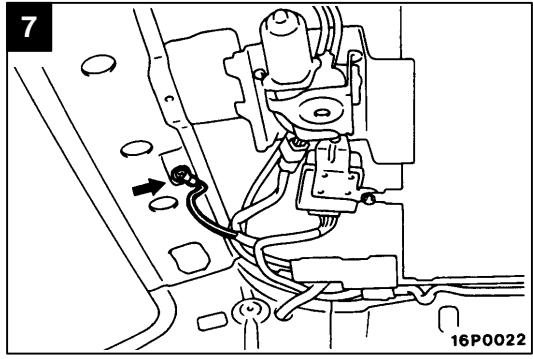
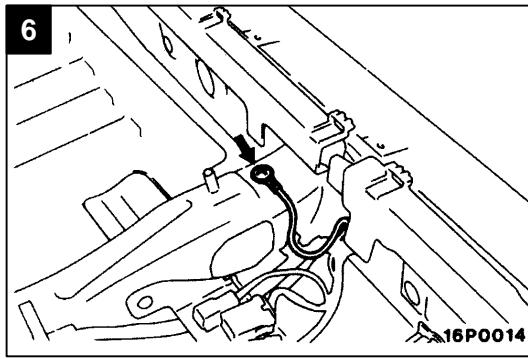
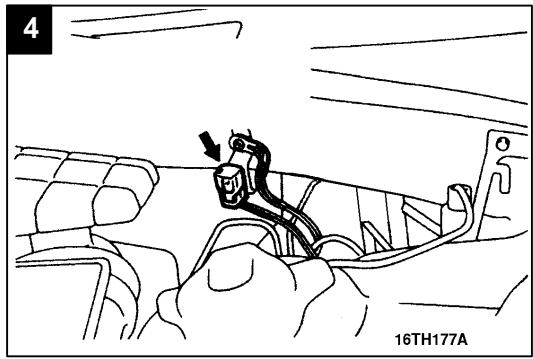
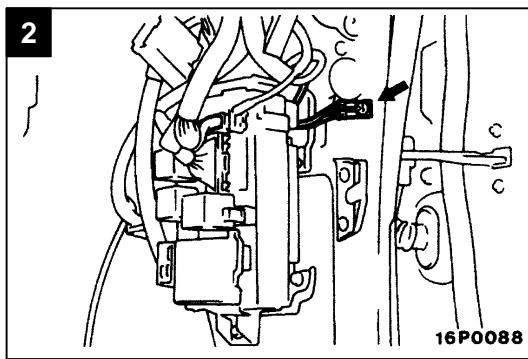
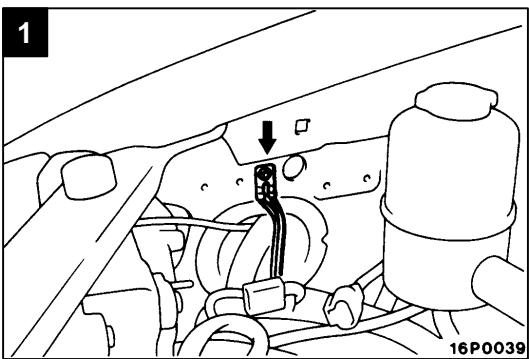


54A SINGLE PART INSTALLATION POSITION – Grounding

Main Index

54 Index

54A Index

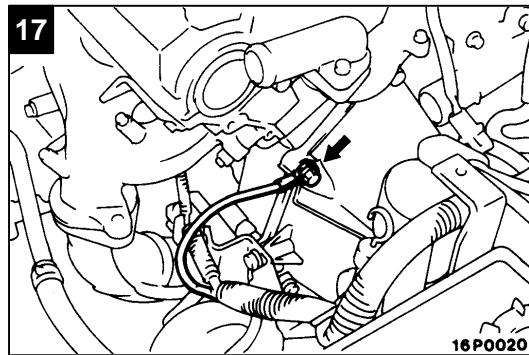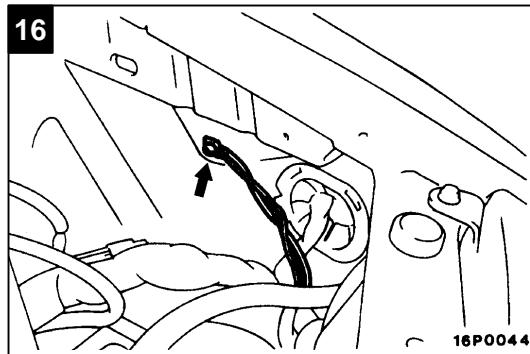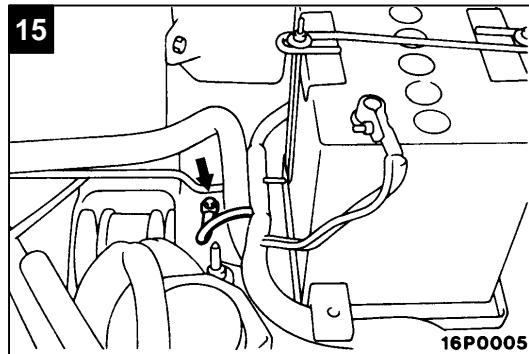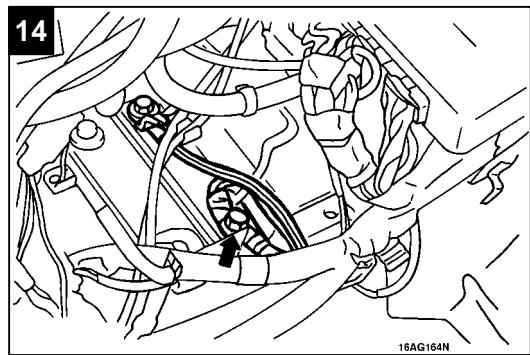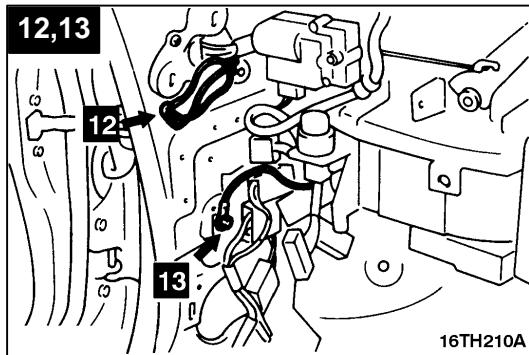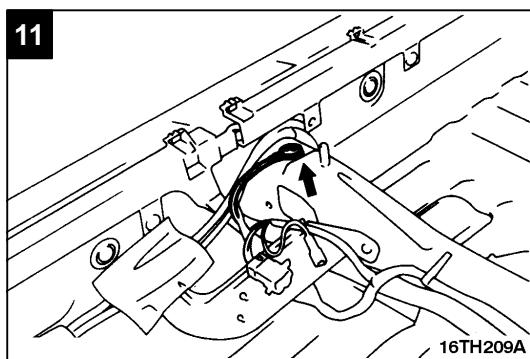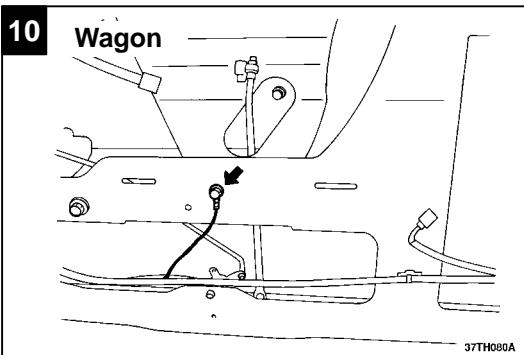

OTHER DEVICES

NAME	SYMBOL	NAME	SYMBOL
Capacitor (Noise Condenser)	C	Park/Neutral position switch	D
Dual pressure switch	E	Power steering pressure switch	A
Idle air control motor	B	Power transistor	F

