


DASH PANEL

Connector
symbol
B -01
thru
-58

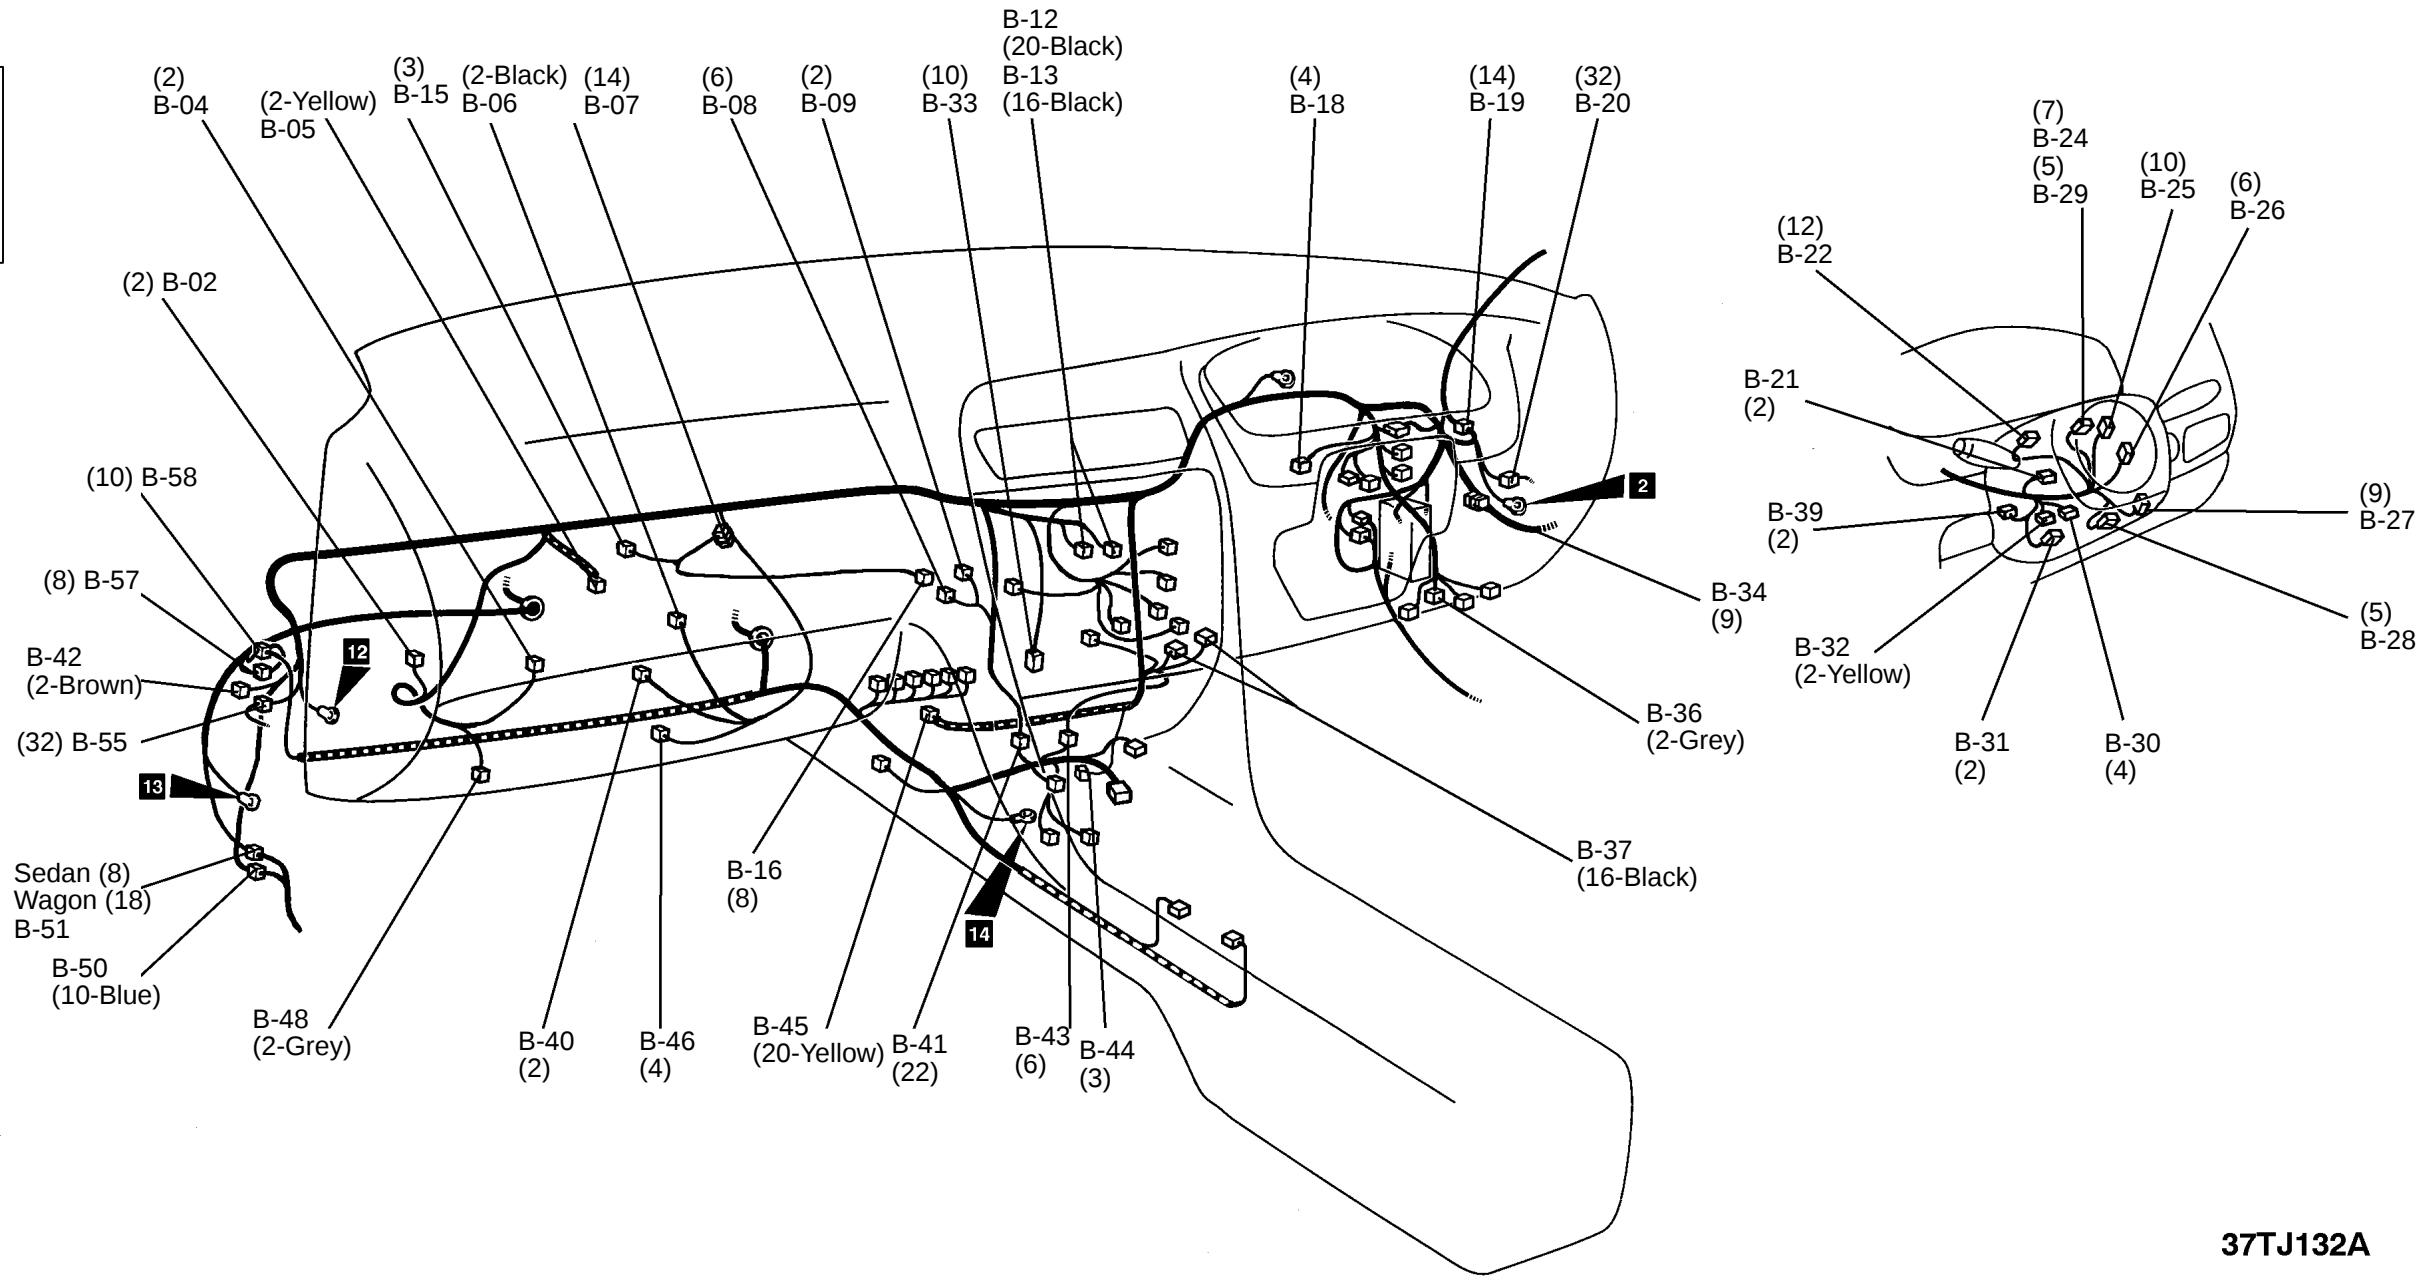


37TJ132A

B-02	Inside and outside air switching damper motor	B-18	Stop lamp switch	B-30	Clock spring	B-43	Connection of dash and control harnesses
B-04	Blower motor	B-19	Connection of dash and roof harness	B-31	Key ring antenna	B-44	Crash detect sensor
B-05	Air bag module (front passenger side)	B-20	Connection of dash and front door harness (RH)	B-32	Air bag module (Driver)	B-45	SRS-ECU
B-06	Fin thermo sensor	B-21	Ignition key cylinder illumination lamp	B-33	Hazard alarm relay	B-46	Power transistor
B-07	A/C sub harness	B-22	Column switch	B-34	Mirror Switch	B-48	Foot lamp (LH)
B-08	Air mixing damper motor/potentiometer	B-24	Slip ring	B-35	Cruise control switch	B-50	Connection of dash and floor harnesses (LH)
B-09	Water temperature sensor (for A/C)	B-25	Column switch	B-36	Foot lamp (RH)	B-51	Connection of ABS and floor harnesses (LH)
B-12	A/C-ECU	B-26	Column switch	B-37	Diagnostic connector	B-55	Connection of dash and front door harness (LH)
B-13	A/C-ECU	B-27	Column switch	B-40	Trunk lid switch	B-57	Connection of ABS and front harnesses
B-15	Accumulator	B-28	Column switch (Steering angular velocity sensor)	B-41	Connection of dash and control harnesses	B-58	Connection of ABS and control harnesses
B-16	A/C Switch	B-29	Slip ring (W/Out ABS)	B-42	Connection of ABS and dash harnesses		

DASH PANEL

Connector symbol
B -59 thru -122

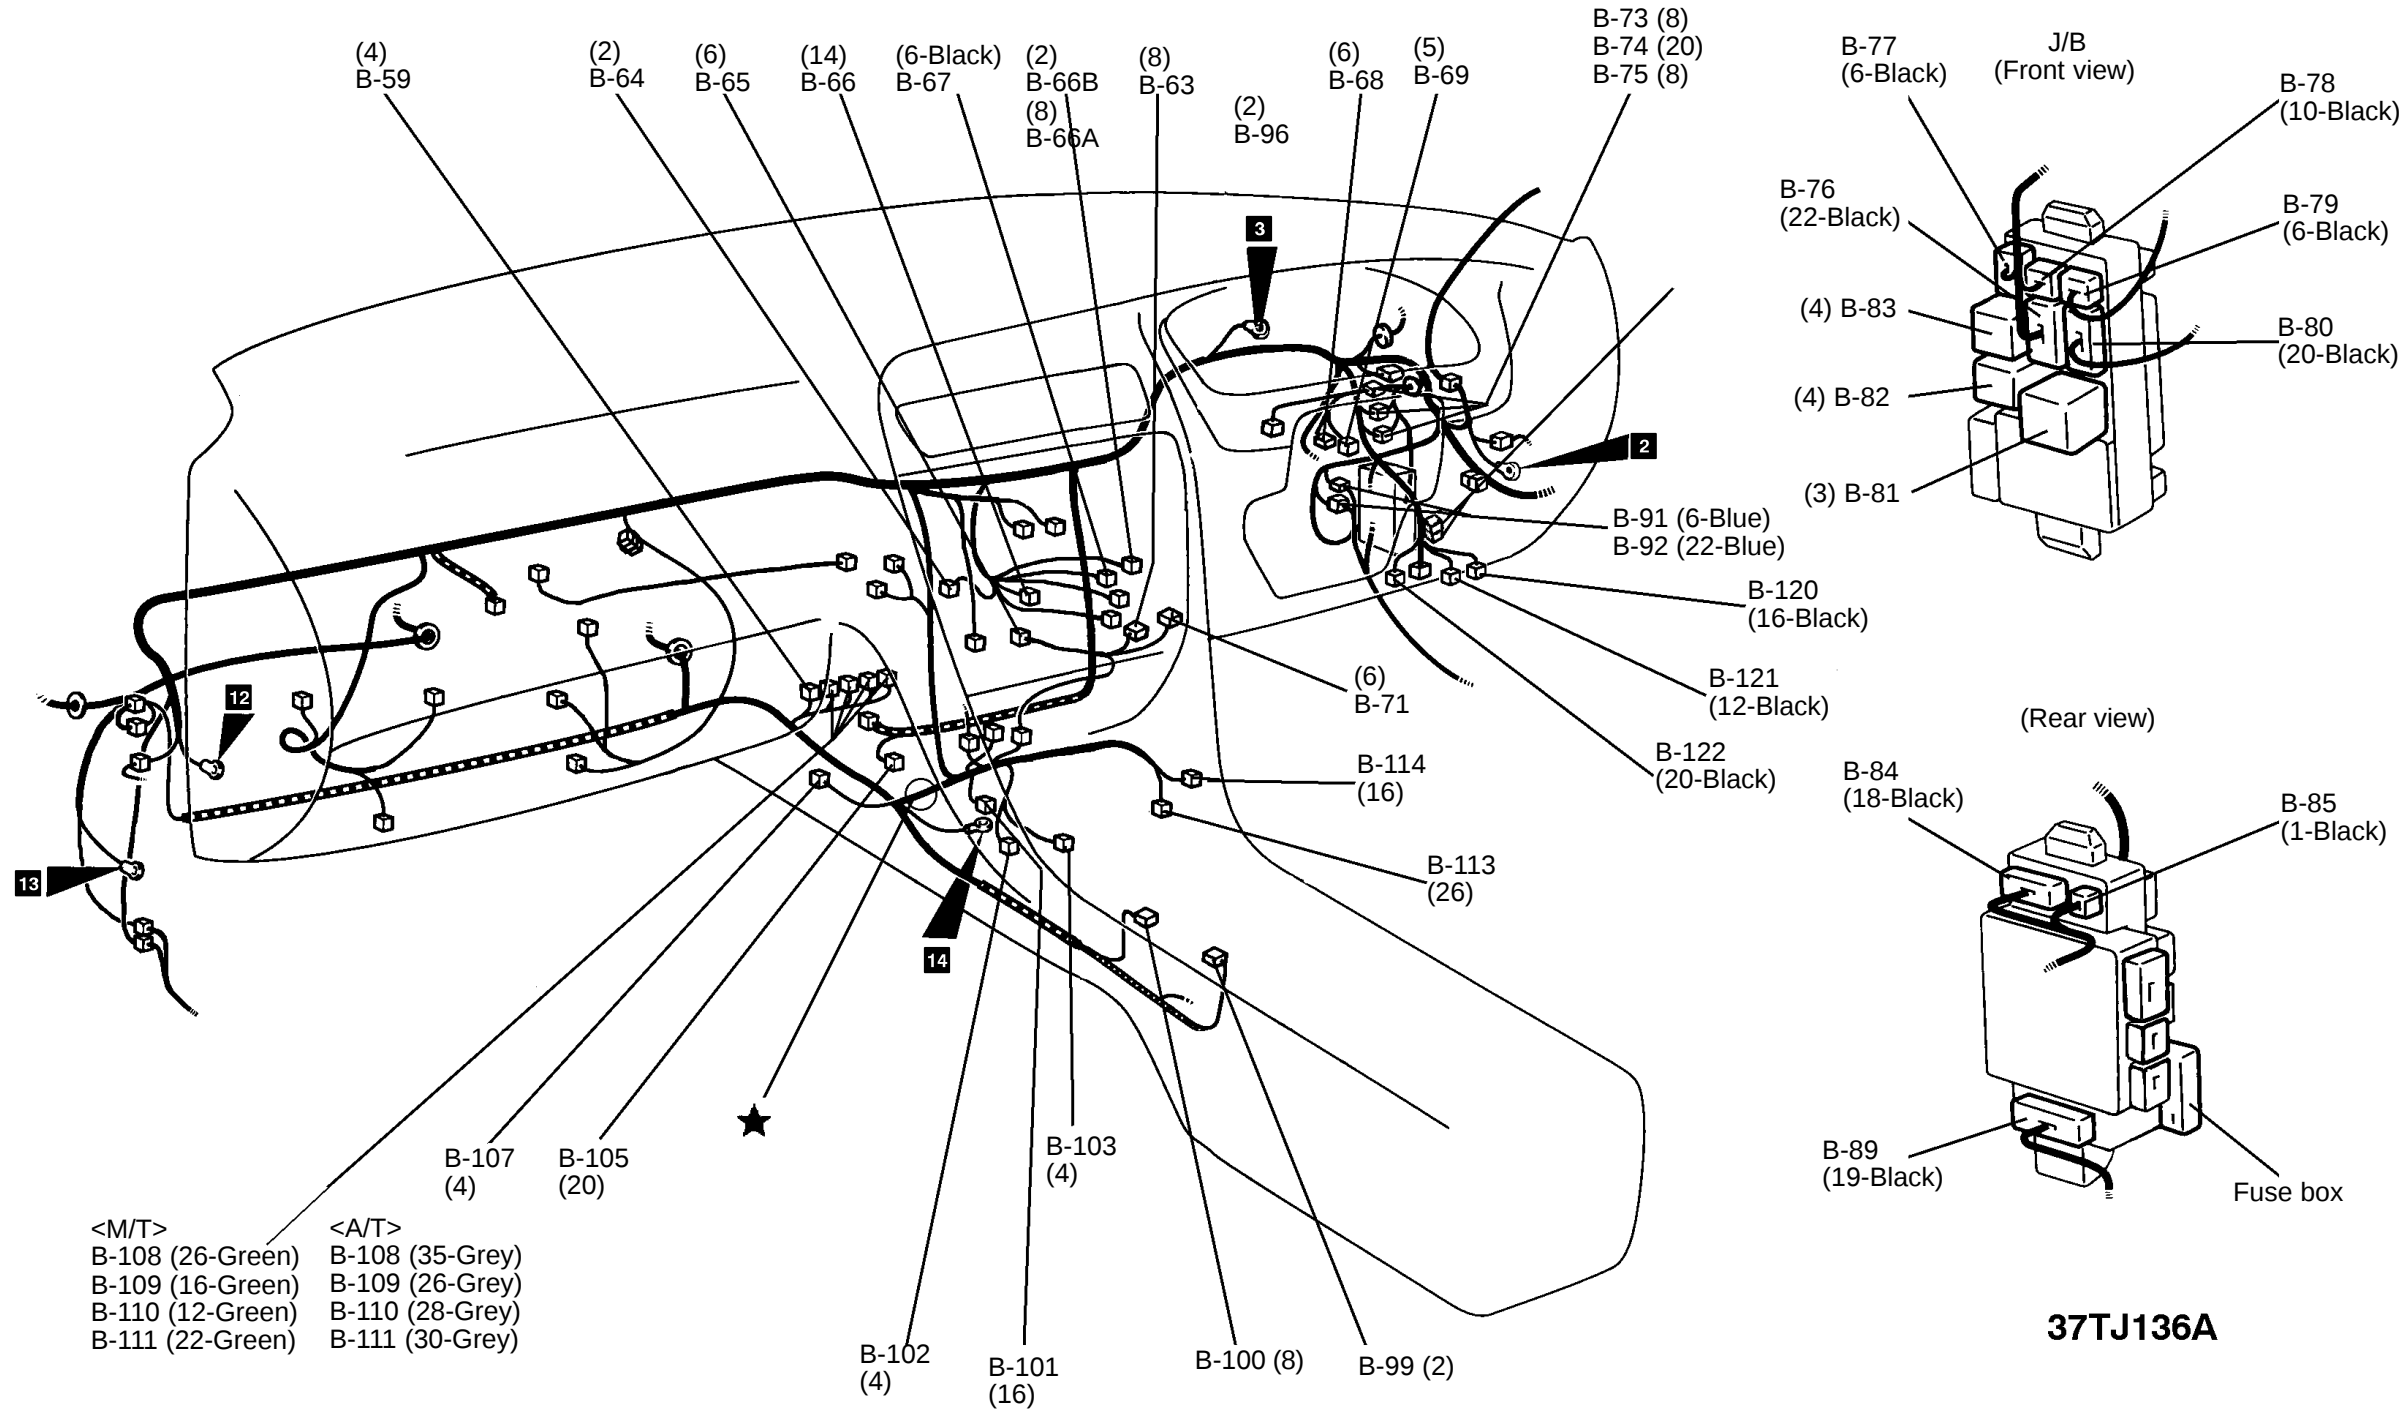

B-59	A/T control relay	B-74	Connection of front and dash harnesses	B-89	Connection of floor harness (RH) and J/B	B-108	Engine-ECU <M/T> or engine and A/T-ECU <A/T>
B-63	Blower switch	B-75	Connection of front and dash harnesses	B-91	Connection of floor (RH) and dash harnesses	B-109	Engine-ECU <M/T> or engine and A/T-ECU <A/T>
B-64	Illumination	B-76	Connection of dash harness and J/B	B-92	Connection of floor (RH) and dash harnesses	B-110	Engine-ECU <M/T> or engine and A/T-ECU <A/T>
B-65	Mode selector damper motor/potentiometer	B-77	Connection of dash harness and J/B	B-96	Clutch switch	B-111	Engine-ECU <M/T>
B-66	Radio and tape player	B-78	Connection of dash harness and J/B	B-99	Position indicator lamp assembly (SPORTS)	B-113	Traction control ECU
B-66A	Radio and tape player	B-79	Connection of roof harness and J/B	B-100	Manual control switch assembly	B-114	Traction control ECU
B-66B	Radio and tape player	B-80	Connection of instrument panel harness and J/B	B-101	Cruise ECU	B-120	Body electronics module
B-67	Radio and tape player	B-81	Turn/hazard flasher unit	B-102	Fuel pump relay	B-121	Body electronics module
B-68	Ignition switch	B-82	Defogger relay	B-103	Engine control relay	B-122	Body electronics module
B-69	Key reminder switch	B-83	Blower relay	B-105	Connection of instrument panel and control harness		
B-71	Rear defogger switch	B-84	Connection of front harness and J/B	B-107	O2 sensor		
B-73	Connection of front and dash harnesses	B-85	Connection of front harness and J/B				

Main
Index

54
Index



54B
03/02

INSTRUMENT PANEL

Main
Index

54
Index

54B
03/02

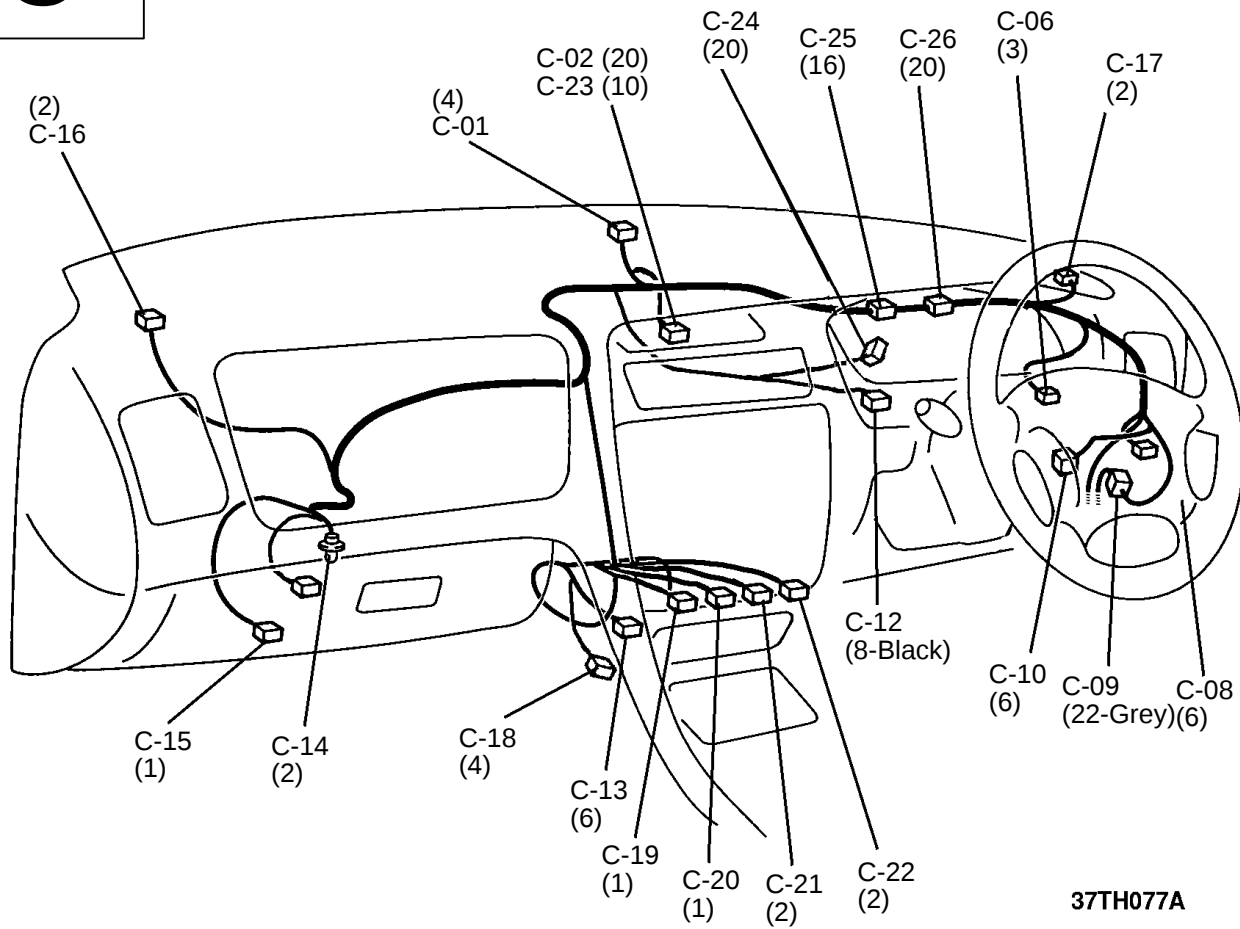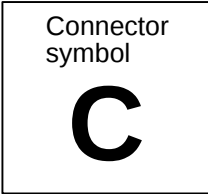



- | | | | |
|------|---|------|---|
| C-01 | Sunlight sensor | C-16 | Front speaker (LH) |
| C-02 | Centre warning display <high contrast meter> | C-17 | Front speaker (RH) |
| C-06 | Rheostat | C-18 | Phone connection |
| C-08 | Traction control switch | C-19 | Cigarette lighter (positive) |
| C-09 | Connection of instrument panel and dash harnesses | C-20 | Cigarette lighter (negative) |
| C-10 | Connection of instrument panel and dash harnesses | C-21 | Ashtray lamp |
| C-12 | Centre message display switch | C-22 | Cigarette lighter lamp |
| C-13 | Ashtray (Verada) | C-23 | Centre warning display <standard meter> |
| C-14 | Glove box lamp | C-24 | Combination meter |
| C-15 | Glove box lamp switch | C-25 | Combination meter |
| | | C-26 | Combination meter |

Main
Index

54
Index


54B
03/02

TRUNK ROOM

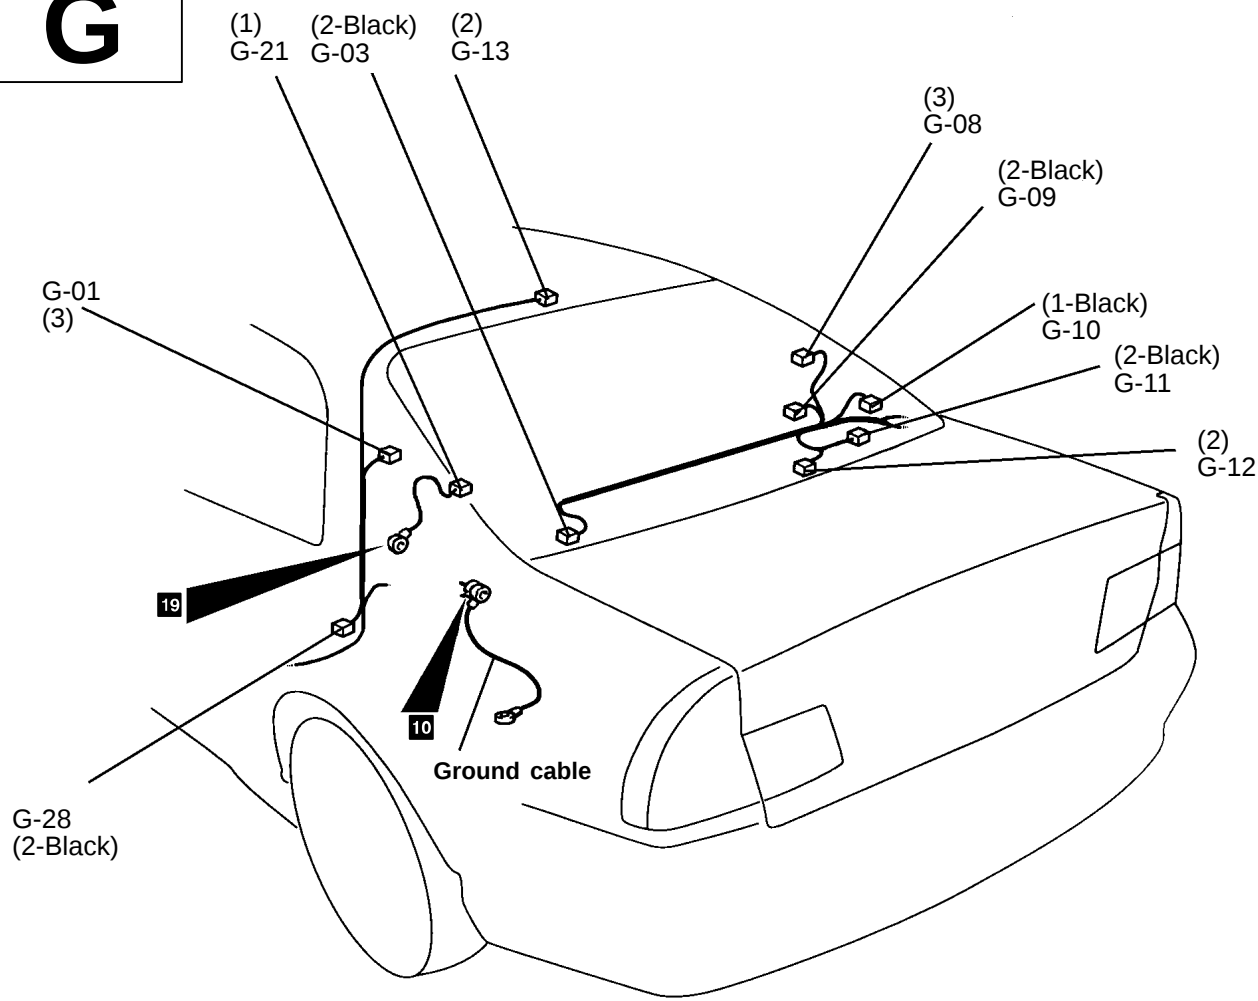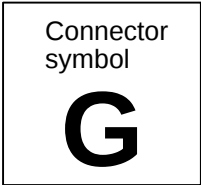

37TH075A

- | | | | |
|------|-------------------------|------|-----------------------------------|
| G-01 | Rear personal lamp (LH) | G-11 | Rear speaker (RH) |
| G-03 | Rear speaker (LH) | G-12 | Trunk room lamp |
| G-08 | Rear personal lamp (RH) | G-13 | High mount stop lamp (Rear Shelf) |
| G-09 | Rear door switch (RH) | G-21 | Defogger earth cable |
| G-10 | Defogger | G-28 | Rear door switch (LH) |

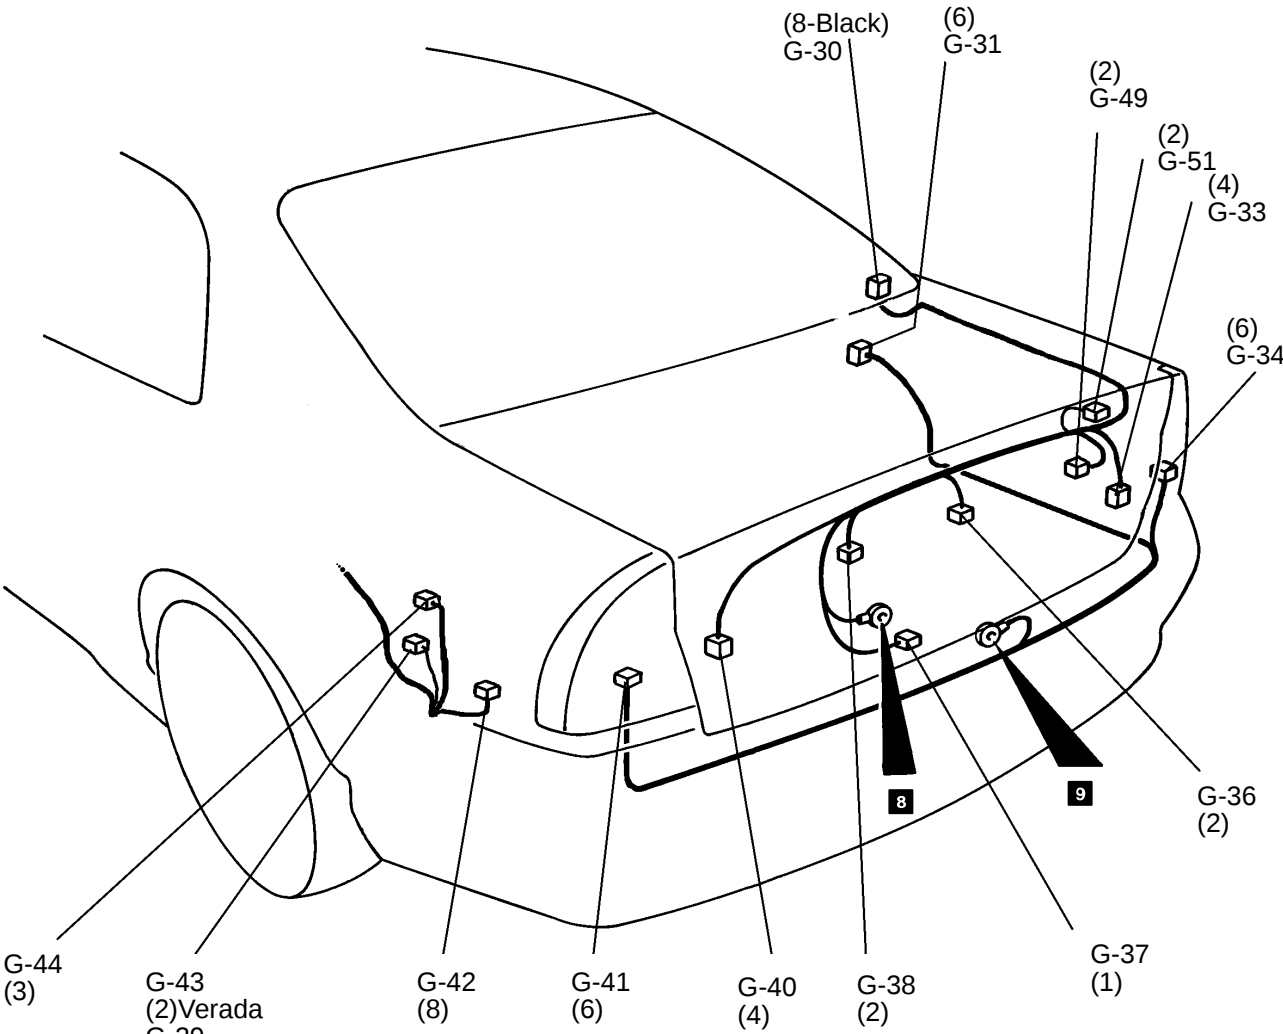

37TJ159A

- | | | | |
|------|---|------|--|
| G-30 | Connection of floor (RH) and rear lid harnesses | G-40 | Rear lid lamp (LH) |
| G-31 | Connection of floor (RH) and trunk room harnesses | G-41 | Rear combination lamp (LH) |
| G-33 | Rear lid lamp (RH) | G-42 | Trunk lid and fuel tank door opener relay |
| G-34 | Rear combination lamp (RH) | G-43 | Trunk lid and fuel tank door opener actuator |
| G-36 | License plate lamp (RH) | G-44 | Motor antenna |
| G-37 | Trunk room lamp switch | G-49 | Trunk key switch |
| G-38 | License plate lamp (LH) | G-51 | High mounted stop lamp (Rear spoiler) |

Main
Index

54
Index

54B
03/02