

55 HEATER, AIR CONDITIONING AND VENTILATION

CONTENTS

GENERAL INFORMATION

SAFETY PRECAUTIONS

SERVICE SPECIFICATIONS

LUBRICANTS

SPECIAL TOOLS

AUTOMATIC AIR CONDITIONING

TROUBLESHOOTING

DIAGNOSIS FUNCTION

ERASING DIAGNOSIS CODES

INSPECTION CHART FOR DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS CODES

INSPECTION CHART BY TROUBLE SYMPTOM

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

SERVICE DATA REFERENCE TABLE

ACTUATOR TEST REFERENCE TABLE

CHECK AT THE A/C-ECU TERMINALS

MANUAL AIR CONDITIONING

TROUBLESHOOTING PROCEDURES

ON-VEHICLE SERVICE

SIGHT GLASS REFRIGERANT LEVEL TEST

MAGNETIC CLUTCH TEST

RECEIVER DRIER TEST

DUAL PRESSURE SWITCH CHECK

COMPRESSOR DRIVE BELT ADJUSTMENT

CHARGING

PERFORMANCE TEST

REFRIGERANT LEAK REPAIR

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

COMPRESSOR NOISE CHECK	INSTALLATION SERVICE POINT
POWER RELAY CHECK	INSPECTION
IDLE-UP OPERATION CHECK	DISASSEMBLY AND REASSEMBLY
MANUAL AIR CONDITIONING, HEATER UNIT, HEATER CORE, BLOWER ASSEMBLY AND COOLING UNIT	DISASSEMBLY SERVICE POINTS
REMOVAL AND INSTALLATION	REASSEMBLY SERVICE POINTS
REMOVAL SERVICE POINTS	INSPECTION
INSPECTION	REFRIGERANT LINE
BLOWER MOTOR ASSEMBLY	REMOVAL AND INSTALLATION
REMOVAL AND INSTALLATION	INSTALLATION SERVICE POINT
INSPECTION	CONDENSER AND CONDENSER FAN MOTOR
AIR CONDITIONING CONTROLS	REMOVAL AND INSTALLATION
REMOVAL AND INSTALLATION	INSTALLATION SERVICE POINT
AUTOMATIC AIR CONDITIONING, HEATER UNIT, HEATER CORE, BLOWER ASSEMBLY AND COOLING UNIT	INSPECTION
REMOVAL AND INSTALLATION	SENSORS
REMOVAL SERVICE POINTS	PHOTO SENSORS
INSPECTION	REMOVAL AND INSTALLATION
BLOWER MOTOR ASSEMBLY	INSPECTION
REMOVAL AND INSTALLATION	OUTSIDE AIR TEMPERATURE SENSOR
AIR CONDITIONING CONTROL UNIT ASSEMBLY	REMOVAL AND INSTALLATION
REMOVAL AND INSTALLATION	INSPECTION
DAMPER CONTROL MOTOR ASSEMBLY AND POWER TRANSISTOR	HEATER WATER TEMPERATURE SENSOR
REMOVAL AND INSTALLATION	REMOVAL AND INSTALLATION
INSPECTION	REMOVAL SERVICE POINTS
COMPRESSOR AND TENSION PULLEY	INSTALLATION SERVICE POINT
REMOVAL AND INSTALLATION	INSPECTION
REMOVAL SERVICE POINTS	VENTILATORS
	REMOVAL AND INSTALLATION
	VENTILATORS (AIR OUTLET)
	REMOVAL AND INSTALLATION