

GROUP 35A

BASIC BRAKE SYSTEM

GENERAL

OUTLINE OF CHANGES

The LSPV (LOAD SENSING PROPORTIONING VALVE) has been abolished to correspond to the adoption of EBD* (Electronic Brake force Distribution) control carried out by the ABS-ECU. <Vehicles with ABS>

NOTE

*: Refer to 2000 SPACE RUNNER Workshop Manual (Pub. No. PWDE9803-A) for an explanation of EBD operation.

GROUP 35B

ANTI-SKID BRAKING SYSTEM (ABS) <2WD>

GENERAL

OUTLINE OF CHANGE

- The following service procedures have been established to correspond to the addition of an EBD* (Electronic Brake force Distribution) function to the ABS-ECU.

NOTE

*: For the GENERAL and the service procedures of the EBD function, refer to 2000 SPACE RUNNER Workshop Manual (Pub. No. PWDE9803-A).