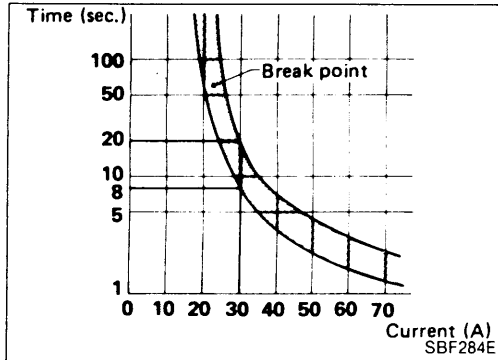


GENERAL SERVICING

Precautions

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installation. Be careful not to soil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.



Circuit Breaker Inspection

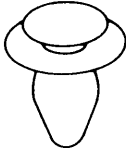
 
 
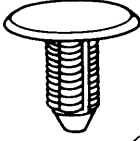
 
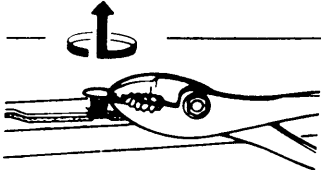
For example, when current is 30A, the circuit is broken within 8 to 20 seconds.

Circuit breakers are used in the following systems.

- Power window & power door lock
- Power sun roof

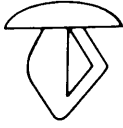
 
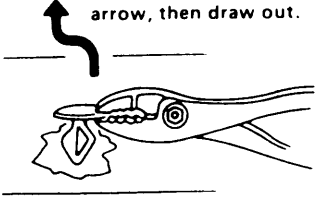
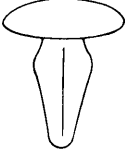
 
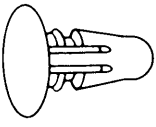
 
 
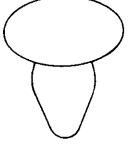
 
 
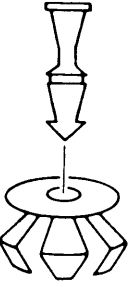
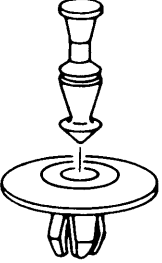
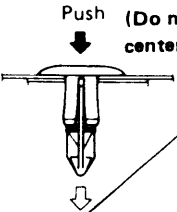
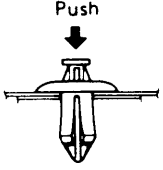
 
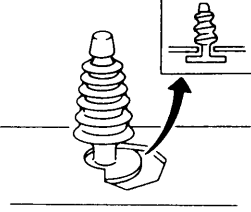
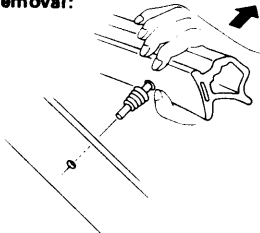
Clip and Fastener

- Clips and fasteners in BF section correspond to the following numbers and symbols.
- Replace any clips and/or fasteners which are damaged during removal or installation.

No.	Symbol	Shape	Removal & Installation
C101	 SBF092B	 SBF109B	Removal: Remove by bending up with a flat-bladed screwdriver.  SBF094B
C102	 SBF113B	 SBF114B  SBF137B	 Removal: Pull up while rotating. SBF115B

 
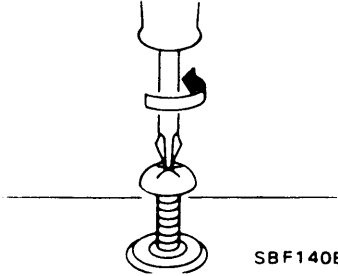
GENERAL SERVICING

Clip and Fastener (Cont'd)

No.	Symbol	Shape	Removal & Installation
C105			Removal: Tilt clip as indicated by arrow, then draw out.  SBF141B SBF142B SBF143B
C106		  	Removal: Remove with flat-bladed screwdriver or pliers.   SBF089B SBF090B SBF091B
C110			Removal: Remove with a flat-bladed screwdriver or pliers.   SBF290C SBF291C SBF292C
C203			Push center pin to catching position. (Do not remove center pin by hitting it.)   Installation: SBF708E
CE103			Removal:  SBF103B SBF104B SBF147B

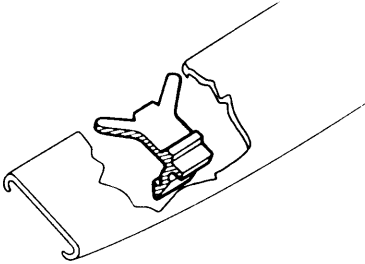
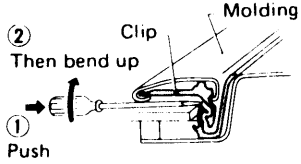
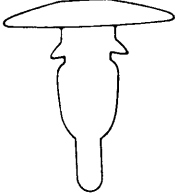
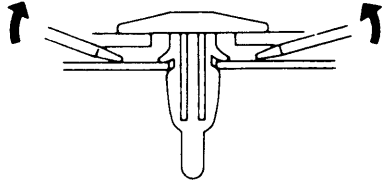
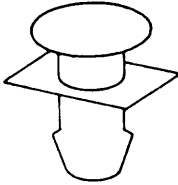
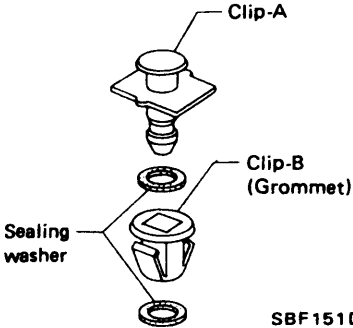
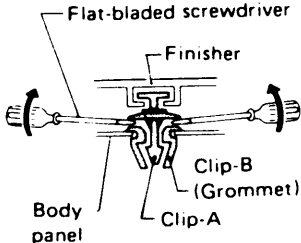
 
 
 
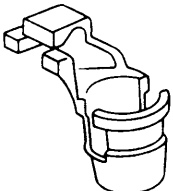
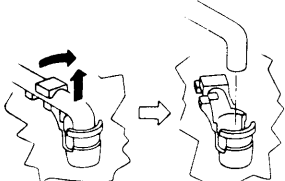
GENERAL SERVICING

Clip and Fastener (Cont'd)

No.	Symbol	Shape	Removal & Installation
CS102	 SBF138B	 SBF139B	Removal: Screw out with a Phillips screwdriver.  SBF140B

GENERAL SERVICING

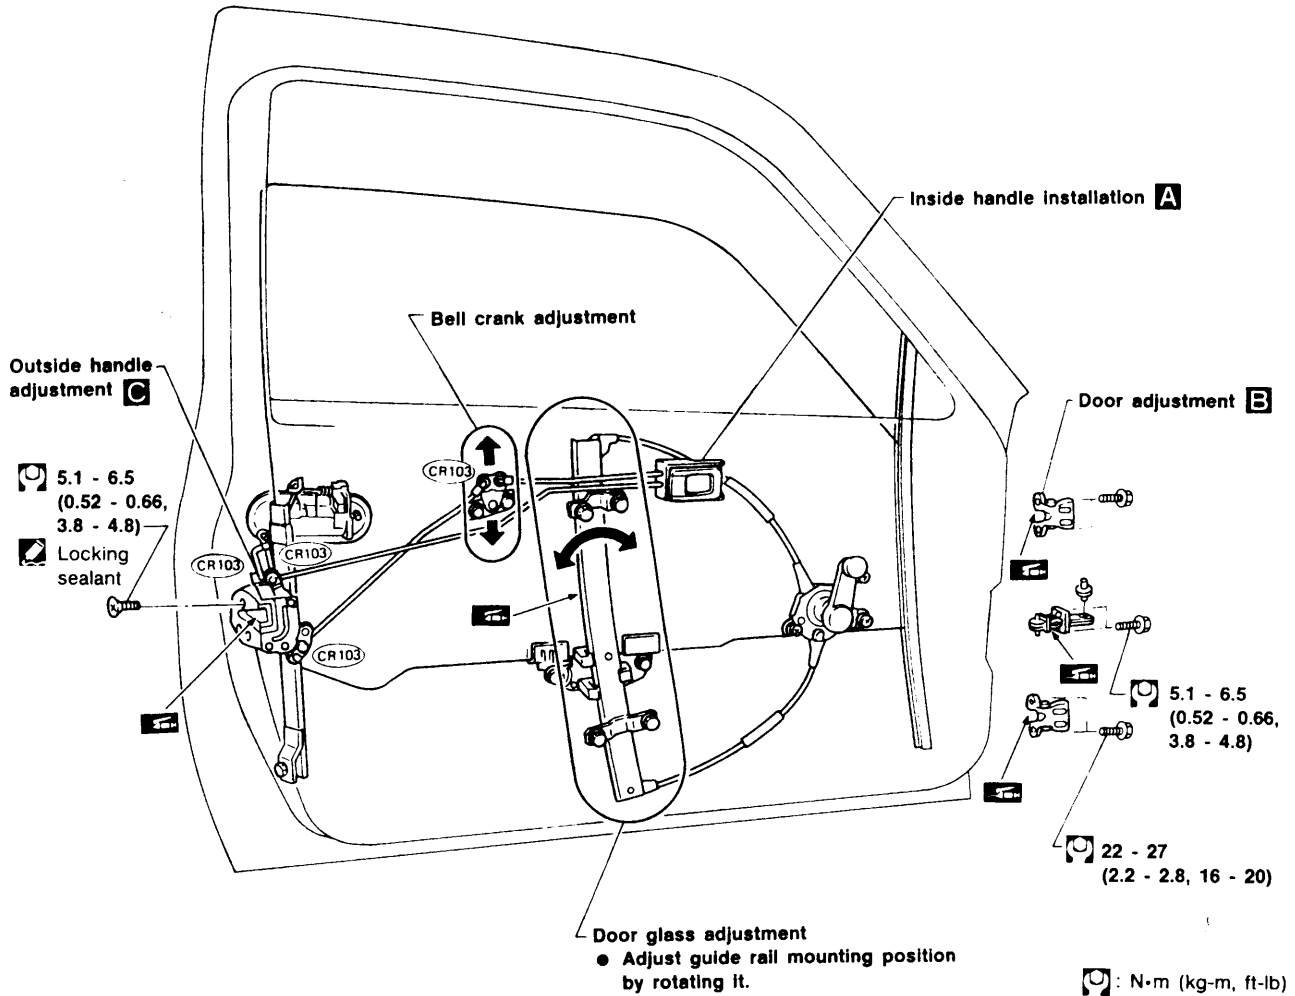
Clip and Fastener (Cont'd)

No.	Symbol	Shape	Removal & Installation
CE106		SBF653B	Removal:  SBF654B
CE117		SBF173D	 SBF175D
CF118		 SBF151D	Removal:  SBF652B
CG101		 SBF145B	Removal  Rotate 45° to remove. Installation  SBF085B
CR103		SBF768B	Removal: Holder portion of clip must be spread out to remove rod.  SBF770B

DOOR

Front Door

N14 3-DOOR HATCHBACK



Striker adjustment

