

ALPHABETICAL INDEX

SECTION **IDX**

GI

WA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-29
ABS component parts and connector locations	BR-40
ABS hydraulic circuit	BR-29
ABS self-diagnosis	BR-39
ABS symptom chart	BR-35
ABS system components	BR-29
ABS trouble diagnoses	BR-32
ABS wheel sensors	BR-31
ABS wiring diagram	BR-30
A/C air flow	HA-11
A/C circuit diagram (auto A/C)	HA-93
A/C circuit diagram (manual A/C)	HA-49
A/C component layout	HA-10
A/C compressor clutch removal and installation	HA-26
A/C compressor mounting	HA-23
A/C compressor precaution	HA-6
A/C compressor special service tool	HA-15
A/C control linkage adjustment (auto A/C)	HA-116
A/C control linkage adjustment (manual A/C)	HA-69
A/C control operation (auto A/C)	HA-9
A/C control operation (manual A/C)	HA-7
A/C diagnostic work flow (auto A/C)	HA-29
A/C diagnostic work flow (manual A/C)	HA-28
A/C harness layout (auto A/C)	HA-91
A/C harness layout (manual A/C)	HA-47
A/C HFC134a (R134a) system identification	HA-3
A/C HFC134a (R134a) system introduction	HA-3
A/C HFC134a (R134a) system precaution	HA-4
A/C HFC134a (R134a) system service procedure	HA-20
A/C HFC134a (R134a) system service tools	HA-16
A/C HFC134a system service equipment precaution	HA-18
A/C lubrication oil	HA-24
A/C operational check	HA-30
A/C performance chart	HA-33
A/C performance test diagnoses	HA-34
A/C push control	HA-117
A/C relay	HA-68
A/C self-df diagnoses (auto A/C)	HA-74
A/C service data specification	HA-136
A/C switch	HA-68
A/C symptom chart (auto A/C)	HA-82
A/C symptom chart (manual A/C)	HA-40
A/C system description (auto A/C)	HA-121
A/C trouble diagnoses (auto A/C)	HA-72
A/C trouble diagnoses (manual A/C)	HA-39
A/C wiring diagram (auto A/C)	HA-94
A/C wiring diagram (manual A/C)	HA-50

Acceleration cut control (VE30DE)	EF&EC-174
Acceleration cut control (VG30E)	EF&EC-25
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Activated carbon canister inspection (VE30DE)	EF&EC-335
Activated carbon canister inspection (VG30E)	EF&EC-152
Activated carbon canister (VE30DE)	EF&EC-167
Air bag	BF-80
Air bag caution labels	BF-82
Air bag precautions	GI-2
Air bag removal and installation	BF-86
Air bag scrapping	BF-89
Air bag system trouble diagnoses	BF-91
Air bleeding for brake system	BR-5
Air cleaner filter replacement (VE30DE)	MA-16
Air cleaner filter replacement (VG30E)	MA-10
Air cut valve (VG30E)	EF&EC-14
Air mix door control linkage adjustment	HA-116
Air mix. door motor	HA-127
Air Spoiler (Rear)	BF-75
Alternator	EL-23
Ambient sensor	HA-123
Angular tightening application	EM-2
Anti-freeze coolant	MA-7
ASCD (automatic speed control device)	EL-113
AT control unit (RE4F02A)	AT-76
AT control unit (RE4F04V)	AT-150
AT fluid temperature sensor (RE4F02A)	AT-81
AT fluid temperature sensor (RE4F04V)	AT-156
AT mode switch (RE4F04V)	AT-154
AT removal and installation	AT-184
AT self-diagnoses (RE4F02A)	AT-44
AT self-diagnoses (RE4F04V)	AT-116
AT trouble diagnoses (RE4F02A)	AT-19
AT trouble diagnoses (RE4F04V)	AT-90
Audio	EL-107
Automatic amplifier	HA-125
Automatic transaxle number	GI-18
Automatic transmission fluid	MA-7
Automatic transmission fluid replacement	MA-19
Auxiliary air control (AAC) (VE30DE)	EF&EC-164
Auxiliary air control (AAC) (VG30E)	EF&EC-14

B

Back-up lamp	EL-35
Back up lamp switch (MT)	MT-6
Ball joint front axle	FA-23
Battery	EL-13
Baulk ring (MT)	MT-10
Belt inspection (drive belt) (VG30E)	MA-8
Blower motor	HA-67
Blower relay	HA-68
Blower resistor	HA-67

ALPHABETICAL INDEX

Body alignment.....BF-76
 Brake booster.....BR-12
 Brake fluid.....MA-7
 Brake fluid change.....BR-3
 Brake fluid level.....MA-20
 Brake fluid level and line check.....BR-3
 Brake hydraulic line.....BR-4
 Brake inspection.....MA-20
 Brake lines and cables inspection.....MA-20
 Brake lining temporary checking.....MA-21
 Brake master cylinder.....BR-9
 Brake pedal.....BR-7

C

Camshaft inspection (VE engine).....EM-71
 Camshaft inspection (VG engine).....EM-24
 Camshaft position sensor (CMPS)
 (VE30DE).....EF&EC-161
 Camshaft position sensor (CMPS)
 (VG30E).....EF&EC-11
 Camshaft position sensor inspection
 (VE30DE).....EF&EC-324
 Camshaft position sensor inspection
 (VG30E).....EF&EC-143
 Charging system.....EL-21
 Check connector for ECCS checker box
 (VG30E).....EF&EC-17
 Cigarette lighter.....EL-103
 Clearance lamp.....EL-34
 Clock.....EL-103
 Clutch cover.....CL-9
 Clutch disc.....CL-8
 Clutch fluid.....MA-7
 Clutch fluid level.....MA-18
 Clutch master cylinder.....CL-5
 Clutch operating cylinder.....CL-6
 Clutch pedal.....CL-4
 Clutch pedal free play.....CL-4
 Clutch pedal height.....CL-4
 Clutch release bearing.....CL-7
 Clutch withdrawal lever.....CL-7
 Coil spring (front).....FA-20
 Coil spring (rear).....RA-8
 Combination lamp (rear) removal and
 installation.....BF-75
 Combination meter (digital type).....EL-49
 Combination meter (needle type).....EL-44
 Combination switch.....EL-25
 Compression pressure (VE engine).....EM-49
 Compression pressure (VG engine).....EM-8
 Compressor clutch removal and
 installation.....HA-26
 Compressor mounting.....HA-23
 Compressor precaution.....HA-6
 Compressor special service tool.....HA-15

Connecting rod bearing clearance
 (VE engine).....EM-86
 Connecting rod bearing clearance
 (VG engine).....EM-41
 Connecting rod bushing clearance
 (VE engine).....EM-87
 Connecting rod bushing clearance
 (VG engine).....EM-42
 Connecting rod (VE engine).....EM-82
 Connecting rod (VG engine).....EM-37
 Consult for ECCS (VE30DE).....EF&EC-201
 CONSULT general information.....GI-14
 Control lever (MT).....MT-8
 Control valve (AT) (RE4F02A).....AT-200
 Control valve (AT) (RE4F04V).....AT-263
 Converter housing installation.....AT-184
 Coolant.....MA-7
 Coolant replacement (VE30DE).....MA-13
 Coolant replacement (VG30E).....MA-8
 Cooling circuit (VE engine).....LC-14
 Cooling circuit (VG engine).....LC-6
 Cooling fan control system (VE engine).....LC-18
 Cooling fan control system (VG engine).....LC-9
 Cooling fan control (VE30DE).....EF&EC-177
 Cooling fan control (VG30E).....EF&EC-25
 Cooling fan motor inspection
 (VE30DE).....EF&EC-332
 Cooling fan relay inspection
 (VE30DE).....EF&EC-331
 Cooling fan relay inspection
 (VG30E).....EF&EC-148
 Cornering lamp.....EL-38
 Counter gear (MT).....MT-10
 Coupling sleeve (MT).....MT-10
 Crankcase emission control system
 (VE30DE).....EF&EC-337
 Crankcase emission control system
 (VG30E).....EF&EC-154
 Crankshaft assembly (VE engine).....EM-89
 Crankshaft assembly (VG engine).....EM-43
 Crankshaft bearing clearance
 (VE engine).....EM-85
 Crankshaft bearing clearance
 (VG engine).....EM-40
 Crankshaft inspection (VE engine).....EM-84
 Crankshaft inspection (VG engine).....EM-39
 Cylinder block (VE engine).....EM-80
 Cylinder block (VG engine).....EM-35
 Cylinder block boring (VE engine).....EM-84
 Cylinder block boring (VG engine).....EM-39
 Cylinder head (VE engine).....EM-69
 Cylinder head (VG engine).....EM-19
 Cylinder head bolt tightening
 (VE engine).....EM-62
 Cylinder head bolt tightening
 (VG engine).....EM-31

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

D

Data link connector for Consult (VE30DE)	EF&EC-167
Daytime light system	EL-30
Differential gear (FF AT) (RE4F02A)	AT-219
Differential gear (FF AT) (RE4F04V)	AT-306
Differential gear (FF MT)	MT-24
Digital touch entry system	EL-145
Dimensions	GI-18
Direct ignition system (VE30DE)	EF&EC-179
Door adjustment (front)	BF-10
Door adjustment (rear)	BF-11
Door mirror	BF-74
Door weatherstrip	BF-36
Drive plate runout (VE engine)	EM-88
Drive plate runout (VG engine)	EM-42
Drive shaft (front)	FA-12
Dropping resistor (AT) (RE4F02A)	AT-82
Dropping resistor (AT) (RE4F04V)	AT-156
Dual pressure switch	HA-68

E

ECCS basic inspection (VE30DE)	EF&EC-215
ECCS basic inspection (VG30E)	EF&EC-55
ECCS circuit diagram (VE30DE)	EF&EC-160
ECCS circuit diagram (VG30E)	EF&EC-10
ECCS component parts location (VE30DE)	EF&EC-155
ECCS component parts location (VG30E)	EF&EC-5
ECCS fail-safe system (VE30DE)	EF&EC-177
ECCS fail-safe system (VG30E)	EF&EC-26
ECCS on-board diagnostic system (VE30DE)	EF&EC-195
ECCS on-board diagnostic system (VG30E)	EF&EC-39
ECCS relay inspection (VE30DE)	EF&EC-331
ECCS relay inspection (VG30E)	EF&EC-148
ECCS system diagram and chart (VE30DE)	EF&EC-157
ECCS system diagram and chart (VG30E)	EF&EC-7
ECCS trouble diagnoses (VE30DE)	EF&EC-190
ECCS trouble diagnoses (VG30E)	EF&EC-34
ECCS wiring diagram	Foldout page
ECM input/output signal inspection (VE30DE)	EF&EC-319
ECM input/output signal inspection (VG30E)	EF&EC-138
EGR canister control solenoid valve inspection (VG30E)	EF&EC-145
EGR control (EGRC) - BPT valve (VE30DE)	EF&EC-166

EGR control (EGRC) - BPT valve (VG30E)	EF&EC-16
EGR control (EGRC) - solenoid valve (VE30DE)	EF&EC-166
EGR control (EGRC) - solenoid valve (VG30E)	EF&EC-16
EGR temperature sensor inspection (VE30DE)	EF&EC-327
EGR temperature sensor inspection (VG30E)	EF&EC-145
EGR temperature sensor (VE30DE)	EF&EC-166
EGR temperature sensor (VG30E)	EF&EC-17
EGR valve inspection (VE30DE)	EF&EC-326
EGR valve inspection (VG30E)	EF&EC-145
EGRC - BPT valve inspection (VE30DE)	EF&EC-326
EGRC - BPT valve inspection (VG30E)	EF&EC-145
Electrical units location	EL-166
Electronic ignition (EI) system (VE30DE)	EF&EC-170
Electronic ignition (EI) system (VG30E)	EF&EC-20
Engine control module (ECM) (VE30DE)	EF&EC-161
Engine control module (ECM) (VG30E)	EF&EC-11
Engine coolant temperature sensor (ECTS) (VE30DE)	EF&EC-161
Engine coolant temperature sensor (ECTS) (VG30E)	EF&EC-12
Engine coolant temperature sensor inspection (VE30DE)	EF&EC-325
Engine coolant temperature sensor inspection (VG30E)	EF&EC-28
Engine coolant temperature sensor inspection (VG30E)	EF&EC-143
Engine oil	MA-7
Engine oil filter replacement (VE30DE)	MA-16
Engine oil filter replacement (VG30E)	MA-11
Engine oil precautions	GI-4
Engine oil replacement (VE30DE)	MA-16
Engine oil replacement (VG30E)	MA-10
Engine outer component parts (VE engine)	EM-45
Engine outer component parts (VG engine)	EM-6
Engine removal (VE engine)	EM-77
Engine removal (VG engine)	EM-33
Engine serial number	GI-17
Evaporative emission system (VE30DE)	EF&EC-335
Evaporative emission system (VG30E)	EF&EC-152
Exhaust gas recirculation (EGR) system (VE30DE)	EF&EC-172
Exhaust gas recirculation (EGR) system (VG30E)	EF&EC-23

ALPHABETICAL INDEX

Exhaust gas recirculation (EGR) valve
(VE30DE)EF&EC-165
Exhaust gas recirculation (EGR) valve
(VG30E)EF&EC-16
Exhaust systemFE-4
Exhaust system inspectionMA-18
ExteriorBF-35
Exterior lampEL-34

F

Fan control amp.HA-134
Fan switchHA-67
Final drive (FF AT) (RE4F02A)AT-219
Final drive (FF AT) (RE4F04V)AT-306
Final drive (FF MT)MT-24
Fluid temperature sensor (AT) (RE4F02A) ..AT-81
Fluid temperature sensor (AT)
(RE4F04V)AT-156
FluidsMA-7
Flywheel runout (VE engine)EM-88
Fog lamp, frontEL-36
Fork rod (MT)MT-11
Forward clutch (RE4F04V)AT-284
Fresh vent door control linkage
adjustmentHA-70
Front axleFA-8
Front bumperBF-5
Front disc brakeBR-17
Front suspensionFA-19
Fuel check valve inspection (VG30E) ..EF&EC-153
Fuel filler lidBF-7
Fuel filter (VE30DE)EF&EC-167
Fuel filter (VG30E)EF&EC-17
Fuel filter replacement (VE30DE)MA-15
Fuel filter replacement (VG30E)MA-10
Fuel gaugeEL-45
Fuel injector (VE30DE)EF&EC-162
Fuel injector (VG30E)EF&EC-13
Fuel line inspection (VE30DE)MA-15
Fuel line inspection (VG30E)MA-9
Fuel precautionsGI-5
Fuel pressure check (VE30DE)EF&EC-333
Fuel pressure check (VG30E)EF&EC-150
Fuel pressure regulator (VE30DE)EF&EC-163
Fuel pressure regulator (VG30E)EF&EC-13
Fuel pressure release (VE30DE)EF&EC-333
Fuel pressure release (VG30E)EF&EC-150
Fuel pump (VE30DE)EF&EC-163
Fuel pump (VG30E)EF&EC-13
Fuel pump control (VE30DE)EF&EC-172
Fuel pump control (VG30E)EF&EC-22
Fuel pump inspection (VE30DE)EF&EC-325
Fuel pump inspection (VG30E)EF&EC-144
Fuel pump relay inspection
(VE30DE)EF&EC-331

Fuel pump relay inspection (VG30E) ..EF&EC-148
Fuel systemFE-3
Fuel tank vacuum relief valve inspection
(VE30DE)EF&EC-336
Fuel tank vacuum relief valve inspection
(VG30E)EF&EC-153
Full cold switchHA-69
FuseEL-12
Fusible linkEL-12

G

Gear oilMA-7
Gears (MT)MT-10
GreaseMA-7

H

Harness connectorEL-4
Harness layoutEL-169
Hazard warning lampEL-37
Headlamp (For Canada)EL-30
Headlamp (For U.S.A.)EL-29
Heated oxygen sensor (H02S)
(VE30DE)EF&EC-163
Heated oxygen sensor (H02S)
(VG30E)EF&EC-13
Heated oxygen sensor heater
inspection (VE30DE)EF&EC-327
Heated oxygen sensor monitor
(VE30DE)EF&EC-201
Heated oxygen sensor monitor
(VG30E)EF&EC-41
Height (Dimensions)GI-18
HFC134a (R134a) system identificationHA-3
HFC134a (R134a) system introductionHA-3
HFC134a (R134a) system precautionHA-4
HFC134a (R134a) system service
procedureHA-20
HFC134a (R134a) system service toolsHA-16
HFC134a system service equipment
precautionHA-18
High clutch (RE4F02A)AT-210
High clutch (RE4F04V)AT-280
Hood adjustmentBF-5
HornEL-103
How to follow flow chart in trouble
diagnosesGI-11
How to read wiring diagramsGI-8
How to use this manualGI-6
Hydraulic lash adjuster inspection
(VE engine)EM-74

ALPHABETICAL INDEX

I

IACV - air regulator inspection
(VE30DE)EF&EC-329
IACV - FICD solenoid valve inspection
(VE30DE)EF&EC-328
IACV-AAC valve inspection
(VE30DE)EF&EC-328
IACV-AAC valve inspection (VG30E) ..EF&EC-146
Identification plateGI-17
Idle air control (IAC) system
(VE30DE)EF&EC-171
Idle air control (IAC) system (VG30E) ..EF&EC-21
Idle air control valve (IACV)
(VE30DE)EF&EC-164
Idle air control valve (IACV) (VG30E) ...EF&EC-14
Idle mixture ratio inspection
(VE30DE)EF&EC-182
Idle mixture ratio inspection (VG30E) ...EF&EC-29
Idle speed inspection (VE30DE)EF&EC-182
Idle speed inspection (VG30E)EF&EC-29
Ignition coil inspection (VE30DE)EF&EC-325
Ignition coil inspection (VG30E)EF&EC-144
Ignition coil relay inspection
(VE30DE)EF&EC-331
Ignition timing inspection (VE30DE)EF&EC-182
Ignition timing inspection (VG30E)EF&EC-29
Illuminated entry systemEL-43
Illumination (Analog meter)EL-41
Illumination (Digital meter)EL-40
In vehicle sensorHA-121
Inhibitor switch inspection (VE30DE) ..EF&EC-330
Inhibitor switch inspection (VG30E)EF&EC-148
Inhibitor switch (RE4F02A)AT-81
Inhibitor switch (RE4F04V)AT-154
Injection removal and installation
(VE30DE)EF&EC-334
Injection removal and installation
(VG30E)EF&EC-151
Injector inspection (VE30DE)EF&EC-329
Injector inspection (VG30E)EF&EC-148
Instrument panelBF-29
Intake door control linkage adjustment
(manual A/C)HA-70
Intake door control linkage adjustment
(auto A/C)HA-116
Intake sensorHA-124
InteriorBF-31
Interior lampEL-40

J

Jacking pointsGI-19
Joint connector (J/C)Foldout page

K

Key illuminationEL-43
Knock sensor (KS) (VE30DE)EF&EC-165
Knock sensor (KS) (VG30E)EF&EC-15
Knock sensor inspection (VE30DE)EF&EC-330
Knock sensor inspection (VG30E)EF&EC-147

L

Length (Dimensions)GI-18
Lifting pointsGI-19
Line pressure solenoid valve (RE4F02A)AT-82
Line pressure solenoid valve (RE4F04V) ..AT-155
Line pressure test (AT) (RE4F02A)AT-85
Line pressure test (AT) (RE4F04V)AT-159
Liquid gasket applicationEM-2
Low and reverse brake (RE4F02A)AT-215
Low and reverse brake (RE4F04V)AT-290
LSV (load sensing valve)BR-15
LubricantsMA-7
Lubrication circuit (VE engine)LC-10
Lubrication circuit (VG engine)LC-4
Lubrication oil A/CHA-24
Lubrication-locks, hinges and hood
latchesMA-23

M

Magnet clutchHA-26
Main drive gear (MT)MT-10
Mainshaft (MT)MT-10
MaintenanceMA-1
Maintenance (engine) (VE30DE)MA-13
Maintenance (engine) (VG30E)MA-8
Maintenance generalMA-2
Maintenance periodicMA-4
Maintenance schedule (1)MA-5
Maintenance schedule (2)MA-6
Manual transaxle numberGI-17
Manual transmission oilMA-7
Manual transmission oil replacementMA-18
Mass air flow sensor inspection
(VE30DE)EF&EC-324
Mass air flow sensor inspection
(VG30E)EF&EC-28
Mass air flow sensor inspection
(VG30E)EF&EC-143
Mass air flow sensor (MAFS)
(VE30DE)EF&EC-161
Mass air flow sensor (MAFS)
(VG30E)EF&EC-11
Master cylinder (brake)BR-9
Master cylinder (clutch)CL-5

ALPHABETICAL INDEX

Max cold door motor.....HA-71
 Max cold door control linkage
 adjustment.....HA-116
 Meter and gauges (Digital type)EL-49
 Meter and gauges (Needle type)EL-44
 Mode door control linkage adjustment
 (manual A/C).....HA-69
 Mode door control linkage adjustment
 (auto A/C).....HA-116
 Model variation.....GI-15
 Molding (window)BF-36
 MT overhaulMT-9
 MT removal and installationMT-6
 Multi purpose grease.....MA-7
 Multiport fuel injection (MFI) system
 (VE30DE)EF&EC-168
 Multiport fuel injection (MFI) system
 (VG30E)EF&EC-18
 Multiport fuel injection precautions.....GI-4

N

Neutral position switch inspection
 (VE30DE)EF&EC-330
 Neutral position switch (MT)MT-6

O

Oil change (capacity)MA-7
 Oil pan (VE engine)EM-50
 Oil pan (VG engine)EM-9
 Oil pressure relief valve (VG engine)LC-5
 Oil pressure (VE engine).....LC-11
 Oil pressure (VG engine)LC-4
 Oil pump (AT) (RE4F02A)AT-196
 Oil pump (AT) (RE4F04V).....AT-259
 Oil pump regulator valve (VE engine).....LC-13
 Oil pump regulator valve (VG engine)LC-5
 Oil pump (VE engine)LC-11
 Oil pump (VG engine).....LC-4
 Oil seal replacement (VE engine)EM-67
 Oil seal replacement (VG engine)EM-17
 Operating cylinder (clutch).....CL-6
 Overdrive switch (RE4F02A)AT-83
 Overdrive switch (RE4F04V).....AT-154
 Overrun clutch (RE4F04V)AT-284
 Overrun clutch solenoid valve
 (RE4F04V)AT-155
 Oversize piston (VE engine).....EM-84
 Oversize piston (VG engine)EM-39

P

Parking brake control.....BR-27

PCV (positive crankcase ventilation)
 inspection (VE30DE)EF&EC-337
 PCV (positive crankcase ventilation)
 inspection (VG30E)EF&EC-154
 Piston assembly (VE engine)EM-88
 Piston assembly (VG engine)EM-42
 Piston pin inspection (VE engine)EM-81
 Piston pin inspection (VG engine)EM-36
 Piston ring inspection (VE engine)EM-82
 Piston ring inspection (VG engine)EM-37
 Piston to bore clearance (VE engine).....EM-83
 Piston to bore clearance (VG engine)EM-38
 Power antennaEL-107
 Power door lock.....BF-12
 Power seatBF-40
 Power steering fluid level.....MA-21, ST-5
 Power steering fluidMA-7
 Power steering gearST-12
 Power steering hydraulic pressureST-7
 Power steering oil pressure switch
 (VE30DE)EF&EC-165
 Power steering oil pressure switch
 (VG30E)EF&EC-15
 Power steering oil pressure switch
 inspectionEF&EC-331
 Power steering oil pumpST-23
 Power steering system bleedingST-5
 Power supply routing (VE Engine)EL-10
 Power supply routing (VG ENGINE).....EL-8
 Power transistor Ignition coil
 (VE30DE)EF&EC-163
 Power transistor Ignition coil
 (VG30E)EF&EC-14
 Power transistor inspection
 (VE30DE)EF&EC-326
 Power transistor inspection
 (VE30DE)EF&EC-326
 Power transistor inspection
 (VG30E)EF&EC-144
 Power valve (VE30DE)EF&EC-166
 Power valve (VG30E)EF&EC-16
 Power valve actuator inspection
 (VE30DE)EF&EC-329
 Power valve control (VE30DE)EF&EC-173
 Power valve control (VG30E)EF&EC-24
 Power valve control solenoid valve
 inspection (VE30DE)EF&EC-329
 Power valve control solenoid valve
 inspection (VG30E)EF&EC-147
 Power valve control solenoid valve
 (VE30DE)EF&EC-166
 Power valve control solenoid valve
 (VG30E)EF&EC-16
 Power window.....BF-18
 Power window/Power door lock trouble
 diagnosesBF-20
 Precautions (General)GI-2
 Pressure test (AT) (RE4F02A)AT-85

ALPHABETICAL INDEX

Pressure test (AT) (RE4F04V).....AT-159

R

Radiator (VE engine)LC-18
 Radiator (VG engine).....LC-9
 Rear axleRA-6
 Rear bumper.....BF-7
 Rear disc brake.....BR-22
 Rear drum brake.....BR-20
 Rear suspensionRA-7
 Rear window defogger.....EL-104
 Refrigerant connection precaution.....HA-5
 Refrigerant general precautionHA-5
 Refrigerant lines.....HA-22
 Refrigeration cycle.....HA-13
 Release bearing (clutch).....CL-7
 Resistor inspection (VG30E).....EF&EC-149
 Reverse clutch (RE4F02A).....AT-214
 Reverse clutch (RE4F04V).....AT-277
 Reverse gear (MT).....MT-10
 Reverse idler shaft (MT).....MT-10
 Revolution sensor (AT) (RE4F02A).....AT-82
 Revolution sensor (AT) (RE4F04V).....AT-155
 Road wheel size.....GI-18

S

Safety relay (VG30E).....EF&EC-15
 SEA J1930 terminology listGI-22
 Seat (front)BF-39
 Seat (rear).....BF-41
 Seat belt inspection.....MA-23
 Seat belt systemBF-42
 Seat belt system trouble diagnosesBF-48
 Self-diagnostic results (VE30DE).....EF&EC-199
 Self-diagnostic results (VG30E)EF&EC-42
 Shift control (MT)MT-11
 Shift fork (MT).....MT-11
 Shift lock system.....AT-164
 Shift schedule (RE4F02A).....AT-39
 Shift schedule (RE4F04V).....AT-110
 Shift solenoid valve (AT) (RE4F02A).....AT-82
 Shift solenoid valve (AT) (RE4F04V).....AT-155
 Side guard moldingBF-38
 SMJ (super multiple junction)Foldout page
 Soft/Hard closed fthrottle position
 (CTP)switch (VE30DE).....EF&EC-162
 Soft/Hard closed fthrottle position
 (CTP)switch (VG30E).....EF&EC-12
 Spark plug replacement (VE30DE)MA-17
 Spark plug replacement (VG30E)MA-11
 SpeedometerEL-45
 Spot lampEL-42
 Spring (Wheelarch) height.....FA-5
 Stabilizer bar (front)FA-21

Stabilizer bar (rear)RA-12
 Stall test (AT) (RE4F02A).....AT-83
 Stall test (AT) (RE4F04V).....AT-156
 Standardized relay.....EL-5
 Starter.....EL-19
 Starting systemEL-17
 Steering gear and linkage inspectionMA-21
 Steering linkage.....ST-12
 Steering switch (With air bag).....EL-28
 Steering switch (Without air bag)EL-27
 Steering wheel and columnST-8
 Steering wheel play.....ST-4
 Steering wheel turning forceST-6
 Step lampEL-42
 Stop lampEL-34
 Striking rod (MT)MT-11
 Strut (front).....FA-20
 Strut (rear).....RA-8
 Sun roof.....BF-69
 Sunload sensor.....HA-123
 Supplemental restraint systemBF-80
 Synchronizer (MT).....MT-10

T

TachometerEL-45
 Tail lamp.....EL-34
 Temperature control cable and linkage
 adjustment.....HA-69
 Theft warning system.....EL-125
 Thermo control amp.....HA-67
 Thermostat (VE engine).....LC-17
 Thermostat (VG engine)LC-8
 Three way catalyst precautions.....GI-4
 Throttle position sensor inspection and
 adjustment (VE30DE).....EF&EC-327
 Throttle position sensor inspection and
 adjustment (VG30E).....EF&EC-145
 Throttle position sensor (TPS)
 (VE30DE).....EF&EC-162
 Throttle position sensor (TPS)
 (VG30E).....EF&EC-12
 Throttle position switch inspection
 (VE30DE).....EF&EC-327
 Tie-rodST-16
 Tie-rod ball joints.....ST-16
 Tightening torque of standard boltsGI-21
 Time control systemEL-85
 Timing belt (VG engine)EM-11
 Timing chain (VE engine).....EM-52
 Timing solenoid valve (RE4F02A).....AT-82
 Tire rotationMA-19
 Tire sizeGI-18
 Torque converter clutch solenoid valve
 (RE4F02A).....AT-82
 Torque converter clutch solenoid valve
 (RE4F04V).....AT-155

ALPHABETICAL INDEX

Torque converter installationAT-184
 Tow truck towingGI-20
 Towing pointsGI-20
 Transmission case (MT)MT-9
 Transverse link (front)FA-22
 Tread-FR&RR (Dimensions)GI-18
 Trim - doorBF-31
 Trim - luggage compartmentBF-33
 Trim - roofBF-34
 Trim - side and floorBF-31
 Trunk lidBF-7
 Trunk room lampEL-42
 Turn signal lampEL-37

V

Vacuum hose (brake system)BR-14
 Vacuum hose drawing (ECCS)
 (VE30DE)EF&EC-159
 Vacuum hose drawing (ECCS)
 (VG30E)EF&EC-9
 Valve guide inspection (VE engine)EM-72
 Valve guide inspection (VG engine)EM-26
 Valve seat inspection (VE engine)EM-73
 Valve seat inspection (VG engine)EM-27
 Valve spring inspection (VE engine)EM-74
 Valve spring inspection (VG engine)EM-28
 Valve timing control solenoid valve
 (VE30DE)EF&EC-165
 Valve timing control (VTC) (VE30DE) ..EF&EC-174
 Vapor lines inspection (VE30DE)MA-17
 Vapor lines inspection (VG30E)MA-12
 Vehicle identification numberGI-16

Vehicle speed sensor (VSS)
 (VE30DE)EF&EC-165
 Vehicle speed sensor (VSS) (VG30E) ..EF&EC-15
 Vehicle speed sensor inspectionEF&EC-144
 Vent mode switchHA-69
 Viscosity number (SAE)MA-7
 Viscous coupling (FF AT) (RE4F04V)AT-306
 Viscous coupling (FF MT)MT-24
 VTC solenoid valve inspection
 (VE30DE)EF&EC-330

W

Warning chimeEL-83
 Warning lampsEL-80
 Washer, frontEL-100
 Water cock solenoid valveHA-68
 Water pump (VE engine)LC-15
 Water pump (VG engine)LC-7
 Water temperature gaugeEL-45
 Wheel alignment (front)FA-6
 Wheel alignment (rear)RA-4
 Wheel bearing (front axle)FA-5
 Wheel bearing (rear)RA-4
 Wheel hub and knuckleFA-8
 Wheel sensors (ABS)BR-31
 Wheelbase (Dimensions)GI-18
 Width (Dimensions)GI-18
 Windshield and windowsBF-72
 Wiper and washerEL-100
 Wiper, frontEL-100
 Withdrawal lever (clutch)CL-7

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX