

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-23
 ABS actuator BR-26
 ABS circuit diagram BR-44
 ABS component parts and connector
 locations..... BR-41
 ABS control unit BR-24
 ABS hydraulic circuit BR-23
 ABS self-diagnosis BR-32
 ABS symptom chart BR-34
 ABS system components..... BR-24
 ABS trouble diagnoses BR-31
 ABS wheel sensors BR-25
 ABS wiring diagram BR-27
 A/C air flow..... HA-16
 A/C circuit diagram (auto A/C) HA-90
 A/C circuit diagram (manual A/C) HA-38
 A/C component layout..... HA-15
 A/C compressor clutch removal and
 installation..... HA-135
 A/C compressor description HA-11
 A/C compressor mounting HA-134
 A/C compressor precaution HA-5
 A/C compressor special service tool HA-5
 A/C control linkage adjustment (auto
 A/C)..... HA-115
 A/C control operation (auto A/C)..... HA-60
 A/C control operation (manual A/C)..... HA-17
 A/C diagnostic work flow (auto A/C) HA-64
 A/C diagnostic work flow (manual A/C) HA-19
 A/C harness layout (auto A/C) HA-88
 A/C harness layout (manual A/C) HA-36
 A/C HFC134a (R134a) system
 precaution HA-3
 A/C HFC134a (R134a) system service
 procedure..... HA-129
 A/C HFC134a (R134a) system service
 tools HA-6
 A/C HFC134a system service equip-
 ment precaution..... HA-8
 A/C lubricant (R134a) HA-131
 A/C operational check (auto A/C) HA-65
 A/C operational check (manual A/C) HA-20
 A/C performance chart..... HA-31
 A/C performance test diagnoses HA-29
 A/C relay (auto A/C) HA-114
 A/C relay (manual A/C) HA-57
 A/C self-df diagnoses (auto A/C) HA-70
 A/C service data specification..... HA-139
 A/C switch HA-56
 A/C symptom chart (auto A/C) HA-68
 A/C symptom chart (manual A/C) HA-22
 A/C system description (auto A/C) HA-117
 A/C trouble diagnoses (auto A/C) HA-62
 A/C trouble diagnoses (manual A/C) HA-18
 A/C wiring diagram (auto A/C) HA-91
 A/C wiring diagram (manual A/C) HA-39
 A/T control DTC:P0600 EC-256

Absolute pressure sensor..... EC-113
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-5
 Air bag disposal RS-13
 Air bag module RS-8
 Air bag precautions GI-2
 Air bag removal and installation RS-8
 Air bleeding for brake system BR-5
 Air cleaner filter replacement..... MA-13
 Air conditioner cut control EC-19
 Air flow meter - See Mass air flow
 sensor..... EC-108
 Air mix door control linkage adjustment
 (auto A/C)..... HA-115
 Air mix door control linkage adjustment
 (manual A/C)..... HA-58
 Air mix. door motor HA-122
 Air spoiler, rear - See Rear air spoiler..... BT-19
 Alternator EL-36
 Ambient sensor..... HA-119
 Angular tightening application EM-2
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control device) EL-128
 AT control unit AT-102
 AT diagnosis communication line..... EC-318
 AT fluid temperature sensor AT-106
 AT removal and installation..... AT-127
 AT self-diagnoses..... AT-46
 AT shift lock system..... AT-117
 AT trouble diagnoses AT-15
 Audio..... EL-104
 Audio and A/C control removal and
 installation - See Instrument panel BT-12
 Automatic transaxle number GI-35
 Automatic transmission fluid
 replacement..... MA-18
 Auxiliary air control (AAC)..... EC-246

B

Back-up lamp switch (MT) -See
 reverse lamp switch..... MT-6
 Basic inspection EC-70
 Battery..... EL-21
 Baulk ring (MT) MT-10
 Belt inspection (drive belt) MA-10
 Bi-level door control linkage adjustment
 (auto A/C)..... HA-116
 Bi-level door control linkage adjustment
 (manual A/C)..... HA-58
 Blower motor (auto A/C) HA-114
 Blower motor (manual A/C)..... HA-56
 Blower resistor HA-56
 Board-on lift GI-37
 Body alignment BT-33
 Brake booster BR-9
 Brake control valve (Proportioning
 valve) BR-4
 Brake fluid change BR-5

ALPHABETICAL INDEX

Brake fluid level	MA-19
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-3
Brake inspection	MA-19
Brake lines and cables inspection	MA-19
Brake master cylinder	BR-7
Brake pedal	BR-6
Bumper, front - See Front bumper	BT-6
Bumper, rear - See Rear bumper	BT-8

C

Camshaft inspection	EM-37
Camshaft position sensor (PHASE)	EC-197
Camshaft position sensor inspection	EC-200
Charging system	EL-32
Cigarette lighter	EL-98
Clearance lamp	EL-53
Clock	EL-98
Closed loop control	EC-144
Closed throttle position switch	EC-252
Clutch cover	CL-9
Clutch disc	CL-9
Clutch fluid level	MA-17
Clutch master cylinder	CL-6
Clutch operating cylinder	CL-7
Clutch pedal	CL-4
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front)	FA-21
Coil spring (rear)	RA-10
Combination lamp, rear, removal and installation	BT-19
Combination meter	EL-79
Combination meter removal and instal- lation - See Instrument panel	BT-12
Combination switch	EL-37
Compression pressure	EM-10
Compressor clutch removal and installation	HA-135
Compressor description	HA-11
Compressor mounting	HA-134
Compressor precaution	HA-5
Compressor special service tool	HA-5
Connecting rod	EM-56
Connecting rod bearing clearance	EM-60
Connecting rod bushing clearance	EM-61
Console box - See Instrument panel	BT-12
CONSULT for ABS	BR-35
Consult for ECCS	EC-51
CONSULT general information	GI-32
Control lever (MT)	MT-8
Control valve (AT)	AT-153
Converter housing installation	AT-128
Coolant replacement	MA-11
Cooling circuit (engine)	LC-7
Cooling fan control	EC-321
Cooling fan control system	LC-14

Cooling fan motor inspection	EC-332
Cooling fan relay inspection	EC-332
Cornering lamp	EL-66
Coupling sleeve (MT)	MT-10
Crankshaft assembly	EM-62
Crankshaft bearing clearance	EM-59
Crankshaft inspection	EM-58
Crankshaft position sensor (POS)	EC-192
Crankshaft position sensor (POS) chipping	EC-287
Crankshaft position sensor (REF)	EC-283
Cylinder block	EM-54
Cylinder head	EM-34
Cylinder head bolt tightening	EM-43

D

Detonation sensor - See Knock sensor	EC-189
Device (FICD) solenoid valve	EC-350
Diagnostic trouble code (DTC) for ECCS OBD system	EC-39
Differential gear (FF AT) (RE4F04A)	AT-196
Differential gear (FF AT) (RE4F04V)	AT-200
Differential gear (FF MT) (RS5F50A and RS5F50V)	MT-24
Differential gear (FF MT)	MT-10
Dimensions	GI-36
Direct ignition system	EC-30
Door lock	BT-10
Door mirror	BT-32
Door trim	BT-16
Door, front - See Front door	BT-10
Door, rear - See Rear door	BT-11
Drive plate runout	EM-61
Drive shaft (front)	FA-12
Dropping resistor (AT)	AT-108

E

ECCS circuit diagram	EC-8
ECCS component parts location	EC-10
ECCS on-board diagnostic system	EC-39
ECCS system diagram and chart	EC-9
ECCS trouble diagnoses	EC-66
ECM input/output signal inspection	EC-96
EGR control (EGRC) - BPT valve	EC-210
EGR control (EGRC) - solenoid valve	EC-292
EGR temperature sensor	EC-295
EGR temperature sensor inspection	EC-299
EGR valve inspection	EC-209
EGRC - BPT valve inspection	EC-211
Electrical load signal circuit	EC-354
Electronic ignition (EI) system	EC-18
Engine compartment	BT-33
Engine control module (ECM)	EC-259
Engine coolant temperature sensor (ECTS)	EC-125
Engine coolant temperature sensor	

ALPHABETICAL INDEX

(ECTS) P0115, DTC0103.....	EC-125
Engine coolant temperature sensor	
(ECTS) P0115, DTC0103 inspection	EC-128
Engine coolant temperature sensor	
(ECTS) P0125, DTC0908.....	EC-134
Engine coolant temperature sensor	
(ECTS) P0125, DTC0908 inspection	EC-138
Engine mounting control (Front)	EC-343
Engine oil filter replacement	MA-14
Engine oil precautions	GI-4
Engine oil replacement	MA-14
Engine outer component parts	EM-6
Engine removal	EM-51
Engine room - See Engine	
compartment	BT-33
Engine serial number	GI-35
EVAP canister	EC-22
EVAP canister control	EC-22
EVAP canister inspection	EC-22
EVAP canister purge control solenoid	
valve	EC-225
EVAP canister purge control valve	EC-225
EVAP canister purge control valve	
inspection	EC-305
EVAP canister vent control valve	EC-233
EVAP control system (small leak)	
diagnosis	EC-215
EVAP control system purge flow moni-	
toring diagnosis	EC-311
EVAP vapor purge lines inspection	MA-16
Evaporative emission (EVAP) system	EC-22
Exhaust gas recirculation (EGR)	
system	EC-201
Exhaust system	FE-4
Exhaust system inspection	MA-17
Exterior	BT-19
Exterior lamp	EL-52

F

Fan control amp.	HA-128
Fan switch	HA-56
Fast idle cam (FIC) inspection and	
adjustment	EC-29
Final drive (FF AT) (RE4F04A)	AT-196
Final drive (FF AT) (RE4F04V)	AT-200
Final drive (FF MT) (RS5F50A and	
RS5F50V)	MT-24
Final drive (FF MT)	MT-10
Finisher, interior - See Trim	BT-15
Floor trim	BT-15
Fluid temperature sensor (AT)	AT-106
Flywheel runout	EM-61
Fork rod (MT)	MT-11
Forward clutch	AT-174
Freeze frame data	EC-41
Front axle	FA-8
Front bumper	BT-6
Front disc brake	BR-11
Front door	BT-10

Front engine mounting control	EC-343
Front fog lamp	EL-55
Front fog lamp removal and installation	BT-6
Front heated oxygen sensor (HO2S)	
(Left bank)	EC-154
Front heated oxygen sensor (HO2S)	
(Right bank)	EC-139
Front heated oxygen sensor (HO2S)	EC-139
Front heated oxygen sensor (HO2S)	
monitor	EC-42, 45
Front heated oxygen sensor heater	
(Left bank)	EC-159
Front heated oxygen sensor heater	
(Right bank)	EC-146
Front seat	BT-24
Front seat belt	RS-3
Front suspension	FA-20
Fuel cut control (at no load & high	
engine speed)	EC-20
Fuel filler lid	BT-8
Fuel filter replacement	MA-12
Fuel gauge	EL-80
Fuel injection system (Left bank)	EC-172, 177
Fuel injection system (Right bank)	EC-162, 167
Fuel line inspection	MA-12
Fuel precautions	GI-5
Fuel pressure check	EC-27
Fuel pressure release	EC-27
Fuel pump control	EC-339
Fuel pump control module	EC-271
Fuel pump inspection	EC-342
Fuel pump relay inspection	EC-342
Fuel system	FE-3
Fuel tank vacuum relief valve	
inspection	EC-23
Fuse	EL-20
Fusible link	EL-20

G

Gauges	EL-78
Gears (MT)	MT-10
Generic scan tool (GST)	EC-64

H

Harness connector	EL-5
Harness layout	EL-284
Hazard warning lamp	EL-58
Headlamp	EL-40
Headlamp removal and installation	BT-6
Headlining - See Roof trim	BT-17
Heated oxygen sensor (HO2S) (Front)	
(Left bank)	EC-154
Heated oxygen sensor (HO2S) (Front)	
(Right bank)	EC-139
Heated oxygen sensor (HO2S) (front)	EC-139
Heated oxygen sensor (HO2S) heater	

ALPHABETICAL INDEX

(rear)..... EC-153
 Heated oxygen sensor (rear)..... EC-149
 Heated oxygen sensor heater
 (Front)(Left bank)..... EC-159
 Heated oxygen sensor heater
 (Front)(Right bank)..... EC-146
 Heated seat..... BT-25
 Height (Dimensions)..... GI-36
 HFC134a (R134a) system precaution..... HA-3
 HFC134a (R134a) system service
 procedure..... HA-129
 HFC134a (R134a) system service tools..... HA-6
 HFC134a system service equipment
 precaution..... HA-8
 High clutch..... AT-170
 Hood..... BT-6
 Horn..... EL-98
 How to erase DTC for ECCS OBD
 system..... EC-39
 How to follow flow chart in trouble
 diagnoses..... GI-29
 How to perform efficient diagnosis for
 an electrical incident..... GI-18
 How to read wiring diagrams..... GI-8
 How to use this manual..... GI-6

I

IACV - FICD solenoid valve inspection..... EC-353
 IACV-AAC valve inspection..... EC-251
 Identification plate..... GI-35
 Idle air control valve (IACV)..... EC-246
 Idle mixture ratio inspection..... EC-32
 Idle speed inspection..... EC-32
 Ignition coil inspection..... EC-282
 Ignition timing inspection..... EC-32
 Illumination..... EL-71
 Illumination-IVMS..... EL-268
 In vehicle sensor..... HA-118
 Inhibitor switch..... AT-107
 Injector inspection..... EC-336
 Injector removal and installation..... EC-28
 Input shaft..... MT-10, 15
 Instrument panel..... BT-12
 Intake air temperature sensor..... EC-120
 Intake air temperature sensor
 inspection..... EC-124
 Intake door control linkage adjustment
 (auto A/C)..... HA-116
 Intake door control linkage adjustment
 (manual A/C)..... HA-58
 Intake door motor..... HA-126
 Intake sensor..... HA-120
 Interior..... BT-15
 Interior lamp..... EL-70
 Interior lamp on-off control-IVMS..... EL-271
 IVMS (In-Vehicle Multiplexing System)..... EL-153

J

Jacking points..... GI-38

K

Knock sensor (KS)..... EC-189
 Knock sensor (KS) inspection..... EC-191

L

Length (Dimensions)..... GI-36
 License lamp..... EL-53
 Lifting points..... GI-39
 Line pressure solenoid valve..... AT-106
 Line pressure test (AT)..... AT-112
 Liquid gasket application..... EM-2
 Location of electrical units..... EL-281
 Lock, door - See Door lock..... BT-10
 Low and reverse brake..... AT-180
 Lubricant (R134a) A/C..... HA-131
 Lubrication circuit (engine)..... LC-3
 Lubrication-locks, hinges and hood
 latches..... MA-21

M

Magnet clutch..... HA-135
 Main drive gear (MT)..... MT-10
 Mainshaft (MT)..... MT-10, 20
 Maintenance (engine)..... MA-10
 Maintenance..... MA-1
 Maintenance general..... MA-3
 Maintenance periodic..... MA-5
 Maintenance schedule (1)..... MA-6
 Maintenance schedule (2)..... MA-7
 Malfunction indicator lamp (MIL)..... EC-41
 Manual transaxle number..... GI-35
 Manual transmission oil replacement..... MA-17
 MAP/BARO switch solenoid valve..... EC-265
 Mass air flow sensor (MAFS)..... EC-108
 Mass air flow sensor inspection..... EC-112
 Master cylinder (brake)..... BR-7
 Master cylinder (clutch)..... CL-6
 Meter and gauges..... EL-78
 MIL & Data link connectors circuit..... EC-357
 Mirror, door - See Door mirror..... BT-32
 Misfire..... EC-185
 Mode door control linkage adjustment
 (auto A/C)..... HA-115
 Mode door control linkage adjustment
 (manual A/C)..... HA-58
 Mode door motor..... HA-124
 Model variation..... GI-33
 Molding - See Exterior..... BT-19

ALPHABETICAL INDEX

MT removal and installation..... MT-6
 Mud guard - See Exterior BT-19
 Multi-remote control system-IVMS EL-215
 Multiport fuel injection (MFI) system..... EC-15
 Multiport fuel injection precautions..... GI-4

N

Neutral position switch (MT) MT-6

O

Oil pan (engine) EM-11
 Oil pressure (engine)..... LC-4
 Oil pump (AT) AT-149
 Oil pump (engine)..... LC-4
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (engine) EM-31
 Operating cylinder (clutch) CL-7
 Overdrive control switch..... AT-107
 Overrun clutch..... AT-174
 Overrun clutch solenoid valve..... AT-106

P

Park/Neutral position switch..... EC-261
 Parking brake control..... BR-21
 PCV (positive crankcase ventilation)
 inspection..... EC-26
 Piston assembly..... EM-62
 Piston pin inspection..... EM-55
 Piston ring inspection EM-56
 Piston to bore clearance..... EM-57
 Power door lock-IVMS..... EL-197
 Power steering fluid level..... MA-20, ST-5
 Power steering gear ST-12
 Power steering hydraulic pressure ST-7
 Power steering oil pressure switch EC-346
 Power steering oil pressure switch
 inspection..... EC-349
 Power steering oil pump..... ST-22
 Power steering system bleeding ST-5
 Power supply routing..... EL-7
 Power transistor & ignition coil EC-277
 Power transistor inspection..... EC-282
 Power window-IVMS..... EL-185
 Precautions (General) GI-2
 Pressure plate - See Clutch cover CL-9
 Pressure test (AT) AT-112

R

Radiator LC-14
 Rear air spoiler BT-19
 Rear axle..... RA-6

Rear bumper BT-8
 Rear disc brake BR-15
 Rear door BT-11
 Rear heated oxygen sensor (HO2S) EC-149
 Rear heated oxygen sensor (HO2S)
 heater EC-153
 Rear seat BT-26
 Rear seat belt..... RS-4
 Rear suspension RA-9
 Rear window BT-31
 Refrigerant connection precaution HA-4
 Refrigerant general precaution HA-3
 Refrigerant lines HA-133
 Release bearing (clutch) CL-8
 Reverse clutch..... AT-167
 Reverse gear (MT)..... MT-10
 Reverse idler shaft (MT) MT-10
 Reverse lamp switch..... MT-6
 Revolution sensor (AT)..... AT-108
 Road wheel size..... GI-36
 Roof trim BT-17

S

SAE J1930 terminology list..... GI-42
 Seal - See Exterior BT-19
 Seat belt inspection MA-21
 Seat belt, front - See Front seat belt RS-3
 Seat belt, rear - See Rear seat belt RS-4
 Seat, front - See Front seat..... BT-24
 Seat, rear - See Rear seat BT-26
 Self-diagnostic results EC-42
 Shift control (MT)..... MT-11
 Shift fork (MT)..... MT-11
 Shift lock system AT-117
 Shift schedule..... AT-36
 Shift solenoid valve (AT) AT-106
 Shock absorber (rear) RA-10
 Side trim..... BT-15
 Spark plug replacement..... MA-15
 Speedometer EL-80
 Spiral cable RS-8
 Spot lamp..... EL-70
 Spring (Wheelarch) height..... FA-5
 SRS - See Supplemental Restraint
 System..... RS-5
 SRS Trouble diagnoses RS-17
 SRS Wiring diagram RS-20
 Stabilizer bar (front) FA-22
 Stall test (AT)..... AT-109
 Standardized relay EL-6
 Starter EL-31
 Starting system EL-25
 Steering gear and linkage inspection MA-20
 Steering linkage ST-12
 Steering switch EL-39
 Steering wheel and column..... ST-8
 Steering wheel play ST-4
 Steering wheel turning force..... ST-6
 Step lamp-IVMS..... EL-277

ALPHABETICAL INDEX

Stop lamp..... EL-64
Striking rod (MT)..... MT-11
Strut (front)..... FA-21
Sun roof BT-27
Sunload sensor..... HA-119
Supplemental Restraint System..... RS-5
Symbols and abbreviations GI-7
Synchronizer (MT)..... MT-10

T

Tachometer EL-80
Tail lamp..... EL-53
Tank fuel temperature sensor EC-182
Telephone EL-121
Theft warning system-IVMS EL-245
Thermo control amp..... HA-57
Thermostat..... LC-13
Three way catalyst EC-212
Three way catalyst function (Left bank)..... EC-212
Three way catalyst function (Right bank)..... EC-212
Three way catalyst precautions GI-4
Throttle position sensor (TPS) EC-129
Throttle position sensor adjustment EC-70
Throttle position sensor inspection EC-70, 133
Throttle position switch..... AT-108
Throwout bearing - See Clutch release bearing CL-8
Tie-rod ST-16
Tie-rod ball joints ST-16
Tightening torque of standard bolts GI-41
Time control system-IVMS..... EL-231
Timing chain..... EM-17
Tire rotation..... MA-19
Tire size GI-36
Torque converter clutch solenoid valve..... AT-106
Torque converter installation AT-127
Tow truck towing..... GI-40
Transmission case (MT)..... MT-9
Transverse link (front)..... FA-23
Tread-FR&RR (Dimensions) GI-36
Trim..... BT-15
Triple pressure switch (auto A/C)..... HA-114
Triple pressure switch (manual A/C)..... HA-57
Triple pressure switch HA-10
Trunk lid BT-8
Trunk lid opener - See Trunk lid..... BT-8
Trunk room lamp..... EL-70
Trunk room trim BT-18
Turn signal lamp EL-58

Two trip detection logic EC-39

U

Under body BT-35

V

Vacuum cut valve EC-304
Vacuum cut valve bypass valve EC-300
Vacuum hose (brake system) BR-10
Vacuum hose drawing (ECCS) EC-13
Valve clearance..... EM-47
Valve guide inspection EM-38
Valve seat inspection EM-39
Valve spring inspection EM-40
Vehicle identification number GI-34
Vehicle Recovery. (Freeing a stuck vehicle)..... GI-40
Vehicle speed sensor (VSS) EC-242
Viscous coupling (FF AT) (RE4F04V) AT-200
Viscous coupling (FF MT) (RS5F50V)..... MT-6
Viscous coupling (FF MT)..... MT-10

W

Warning lamps EL-84
Water pump LC-8
Water temperature gauge EL-80
Weatherstrip - See Exterior BT-19
Wheel alignment (front) FA-6
Wheel alignment (rear) RA-5
Wheel balance MA-18
Wheel bearing (front axle) FA-6
Wheel bearing (rear) RA-4
Wheel hub (rear) RA-6
Wheel hub and steering knuckle FA-8
Wheel sensors (ABS)..... BR-25
Wheelarch height..... FA-5
Wheelbase (Dimensions) GI-36
Wide open & closed throttle position (CTP) switch EC-129
Width (Dimensions)..... GI-36
Windshield BT-31
Wiper and washer..... EL-91
Withdrawal lever (clutch) CL-8
Wrist pin - See Piston pin inspection EM-55

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX