

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-23
 ABS - Wiring diagram BR-32
 Absolute pressure sensor..... EC-110
 A/C air flow..... HA-17
 A/C component layout..... HA-16
 A/C compressor clutch removal and
 installation..... HA-133
 A/C compressor description..... HA-12
 A/C compressor mounting HA-132
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment (auto
 A/C)..... HA-113
 A/C control operation (auto A/C)..... HA-60
 A/C control operation (manual A/C)..... HA-18
 A/C diagnostic work flow (auto A/C) HA-64
 A/C diagnostic work flow (manual A/C) HA-21
 A/C harness layout (auto A/C)..... HA-88
 A/C harness layout (manual A/C) HA-37
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-125
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service equip-
 ment precaution..... HA-9
 A/C lubricant (R134a) HA-127
 A/C operational check (auto A/C) HA-65
 A/C operational check (manual A/C) HA-22
 A/C performance chart..... HA-33
 A/C performance test diagnoses HA-31
 A/C relay..... HA-57, 112
 A/C self-diagnoses (auto A/C) HA-70
 A/C service data specification..... HA-139
 A/C switch HA-56
 A/C symptom chart (auto A/C)..... HA-68
 A/C symptom chart (manual A/C) HA-24
 A/C system description (auto A/C) HA-114
 A/C trouble diagnoses (auto A/C) HA-62
 A/C trouble diagnoses (manual A/C) HA-20
 A/C, A - Wiring diagram HA-91
 A/C, M - Wiring diagram HA-40
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-5
 Air bag disposal RS-13
 Air bleeding (hydraulic clutch) CL-5
 Air bleeding for brake system BR-5
 Air cleaner filter replacement..... MA-13
 Air conditioner cut control EC-19
 Air flow meter - See Mass air flow
 sensor EC-104
 Air mix door control linkage adjustment
 (auto A/C)..... HA-113
 Air mix door control linkage adjustment
 (manual A/C)..... HA-58

Air mix. door motor..... HA-118
 Air spoiler, rear BT-22
 Alternator EL-40
 Ambient sensor..... HA-116
 Angular tightening application EM-2
 Antenna..... EL-132
 Anti-lock brake system - See ABS..... BR-23
 Anti-lock brake system - Wiring
 diagram..... BR-32
 ASCD (automatic speed control device) EL-146
 ASCD - Wiring diagram EL-151
 A/T - Wiring diagram AT-11
 A/T control..... EC-265
 AT control unit AT-55
 A/T diagnosis communication line EC-337
 AT fluid temperature sensor AT-67
 AT removal and installation..... AT-141
 AT self-diagnoses AT-26
 AT shift lock system AT-131
 A/T shift lock system - Wiring diagram AT-132
 Audio..... EL-125
 AUDIO - Wiring diagram..... EL-127
 Audio and A/C control removal and
 installation - See Instrument panel BT-13
 Auto air conditioner - Wiring diagram HA-91
 Automatic speed control system - See
 ASCD EL-146
 Automatic transmission fluid
 replacement..... MA-18
 Auxiliary air control (AAC) valve EC-255

B

Back-up lamp..... EL-60
 Back-up lamp switch (MT) MT-7
 BACK/L - Wiring diagram EL-60
 Battery..... EL-24
 Baulk ring (MT)..... MT-11
 Blower motor HA-56, 112
 Blower resistor HA-56
 Board-on lift..... GI-39
 Body alignment..... BT-37
 BPT valve..... EC-221
 Brake booster..... BR-9
 Brake control valve (Proportioning
 valve)..... BR-4
 Brake fluid change BR-5
 Brake fluid level MA-19
 Brake fluid level and line check BR-5
 Brake hydraulic line..... BR-3
 Brake inspection MA-19
 Brake lines and cables inspection..... MA-19
 Brake master cylinder BR-7
 Brake pedal BR-6
 Bumper, front BT-6
 Bumper, rear BT-9
 BUZZER - Wiring diagram..... EL-94

ALPHABETICAL INDEX

C

Camshaft inspection	EM-37
Camshaft position sensor (CMPS)	EC-205
Camshaft position sensor (PHASE)	EC-205
Canister-See EVAP canister	EC-21
CHARGE - Wiring diagram	EL-37
Charging system	EL-36
Chassis and body maintenance	MA-17
Cigarette lighter	EL-114
Circuit breaker	EL-19
Clock	EL-114
Closed loop control	EC-139
Closed throttle position switch	EC-261
Clutch cover	CL-9
Clutch disc	CL-9
Clutch fluid level	MA-17
Clutch master cylinder	CL-6
Clutch operating cylinder	CL-7
Clutch pedal	CL-4
Clutch release bearing	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front)	FA-21
Coil spring (rear)	RA-10
Collision diagnosis	RS-36
Combination lamp, front, removal and installation	BT-6
Combination lamp, rear, removal and installation	BT-22
Combination meter	EL-80
Combination meter removal and installation - See Instrument panel	BT-13
Combination switch	EL-41
COMM - Wiring diagram	EL-197
Compression pressure	EM-10
Compressor clutch removal and installation	HA-133
Compressor description	HA-12
Compressor mounting	HA-132
Compressor precaution	HA-6
Compressor special service tool	HA-6
Connecting rod	EM-56
Connecting rod bearing clearance	EM-60
Connecting rod bushing clearance	EM-61
Console box - See Instrument panel	BT-13
CONSULT for ABS	BR-39
CONSULT for ECCS	EC-59
CONSULT general information	GI-34
Control lever (MT)	MT-9
Control valve (AT)	AT-168
Converter housing installation	AT-142
Coolant mixture ratio	MA-9
Coolant replacement	MA-11
Cooling circuit (engine)	LC-8
Cooling fan control	EC-340
Cooling fan control system	LC-15
Cooling fan motor	EC-352
Cooling fan relay	EC-352
Coupling sleeve (MT)	MT-11

Crankshaft	EM-58
Crankshaft position sensor (POS)	EC-199
Crankshaft position sensor (POS) chipping	EC-303
Crankshaft position sensor (REF)	EC-298
Cruise control - See ASCD	EL-146
Cylinder block	EM-54
Cylinder head	EM-34
Cylinder head bolt tightening	EM-43

D

Daytime light system	EL-47
Daytime running light - See Daytime light system	EL-47
DEF - Wiring diagram	EL-117
Detonation sensor - See Knock sensor	EC-196
Diagnosis sensor unit	RS-8
Differential gear (FF AT)	AT-211, 215
Differential gear (FF MT)	MT-11, 25
Direct ignition system	EC-29
Distributor ignition (DI) system	EC-18
D/LOCK - Wiring diagram	EL-223
Door lock	BT-11
Door mirror	BT-36
Door trim	BT-19
Door, front	BT-11
Door, rear	BT-12
Drive belt inspection	MA-10
Drive plate runout	EM-61
Drive shaft (front)	FA-12
Dropping resistor (AT)	AT-96
DTRL - Wiring diagram	EL-49

E

ECCS basic inspection	EC-78
ECCS circuit diagram	EC-9
ECCS component parts location	EC-11
ECCS on board diagnostic system	EC-38
ECCS system diagram and chart	EC-10
ECM input/output signal	EC-91
EGR control (EGRC) - BPT valve	EC-220
EGR control (EGRC) - solenoid valve	EC-309
EGR control valve	EC-218
EGR temperature sensor	EC-314
EGR valve & EVAP canister purge con- trol solenoid valve	EC-313
Electric sun roof	EL-140
Electrical load signal circuit	EC-376
Electrical unit	Foldout
Electronic ignition system	EC-18
Engine compartment	BT-37
Engine control module (ECM)	EC-269
Engine coolant temperature sensor (ECTS)	EC-123, 134
Engine mounting control (Front)	EC-365
Engine oil filter replacement	MA-14

ALPHABETICAL INDEX

Engine oil replacement..... MA-14
 Engine outer component parts EM-6
 Engine removal..... EM-51
 Engine room - See Engine
 compartment BT-37
 EVAP canister EC-21
 EVAP canister purge control valve EC-233
 EVAP canister purge volume control
 valve EC-323
 EVAP canister vent control valve..... EC-241
 EVAP control system (small leak)
 diagnosis..... EC-225
 EVAP control system purge flow
 monitoring diagnosis..... EC-330
 EVAP vapor lines inspection..... MA-16
 Evaporative emission (EVAP) system..... EC-21
 Exhaust system FE-4
 Exhaust system inspection MA-17
 Exterior..... BT-22
 Exterior lamp..... EL-56

F

Fan control amp. HA-123
 Fan switch..... HA-56
 Fast idle cam (FIC) inspection and
 adjustment EC-28
 F/FOG - Wiring diagram EL-62
 Final drive (FF AT) AT-211, 215
 Final drive (FF MT) MT-11, 25
 Finisher, interior - See Trim BT-16
 Floor trim..... BT-16
 Fluid temperature sensor (AT) AT-67
 Fluids MA-8
 Flywheel (clutch)..... CL-10
 Flywheel runout EM-61
 Fog lamp, front EL-61
 Fog lamp, front, removal and
 installation BT-6
 Fork rod (MT) MT-12
 Forward clutch..... AT-189
 Freeze frame data..... EC-40
 Front axle FA-8
 Front bumper BT-6
 Front combination lamp removal and
 installation BT-6
 Front disc brake..... BR-11
 Front door..... BT-11
 Front engine mounting control EC-365
 Front fog lamp EL-61
 Front fog lamp removal and installation BT-6
 Front heated oxygen sensor (HO2S)..... EC-141
 Front heated oxygen sensor (HO2S)
 (Left bank) EC-159
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-141
 Front heated oxygen sensor (HO2S)
 monitor..... EC-50, 53
 Front heated oxygen sensor heater
 (Left bank) EC-165

Front heated oxygen sensor heater
 (Right bank)..... EC-146
 Front passenger air bag..... RS-5
 Front seat..... BT-27
 Front seat belt RS-3
 Front suspension FA-20
 Front washer EL-102
 Front wiper EL-102
 Fuel cut control (at no load & high
 engine speed)..... EC-20
 Fuel filler lid BT-9
 Fuel filter replacement MA-12
 Fuel gauge EL-81
 Fuel injection system (Left bank)..... EC-179, 184
 Fuel injection system (Right bank) EC-169, 174
 Fuel lid opener, electric EL-145
 Fuel line inspection MA-12
 Fuel pressure check..... EC-26
 Fuel pressure release EC-26
 Fuel pump EC-364
 Fuel pump control module EC-283, 360
 Fuel pump relay EC-364
 Fuel system FE-3
 Fuse EL-19
 Fuse block Foldout
 Fusible link..... EL-19

G

Garage jack and safety stand GI-40
 Gauges EL-79
 Gears (MT) MT-11
 Generic scan tool (GST) EC-72
 Ground distribution EL-20

H

Harness connector..... EL-3
 Harness layout..... EL-311
 Hazard warning lamp..... EL-64
 Headlamp..... EL-44
 Headlamp removal and installation BT-6
 Headlining - See Roof trim BT-20
 Heated oxygen sensor (HO2S) (front)..... EC-141
 Heated oxygen sensor (HO2S) (Front)
 (Left bank) EC-159
 Heated oxygen sensor (HO2S) (Front)
 (Right bank)..... EC-141
 Heated oxygen sensor (HO2S) monitor EC-53
 Heated oxygen sensor (rear) EC-150
 Heated oxygen sensor heater
 (Front)(Left bank)..... EC-165
 Heated oxygen sensor heater (Fron-
 t)(Right bank)..... EC-146
 Heated oxygen sensor monitor (HO2S)
 (front) EC-53
 Heated seat..... BT-29, EL-143
 HFC134a (R134a) system precaution HA-2

ALPHABETICAL INDEX

HFC134a (R134a) system service
 procedure..... HA-125
 HFC134a (R134a) system service tools HA-7
 HFC134a system service equipment
 precaution HA-9
 High clutch..... AT-185
 H/LAMP - Wiring diagram..... EL-45
 Hood BT-6
 Horn..... EL-114
 HORN - Wiring diagram..... EL-114
 How to erase DTC for ECCS OBD
 system EC-48
 HSEAT - Wiring diagram EL-143

I

IACV - FICD solenoid valve..... EC-375
 IACV-AAC valve..... EC-260
 IACV-FICD solenoid valve EC-373
 Idle air control valve (IACV)..... EC-255
 Idle mixture ratio EC-31
 Idle speed..... EC-31
 Ignition coil EC-297
 Ignition timing EC-31
 ILL - Wiring diagram EL-73
 Illumination..... EL-71, 287
 In vehicle sensor HA-115
 Inhibitor switch..... AT-63
 Injector..... EC-357
 Injector removal and installation EC-27
 Input shaft..... MT-11, 16
 Instrument panel..... BT-13
 INT/L - Wiring diagram EL-77
 Intake air temperature sensor..... EC-117
 Intake door control linkage adjustment
 (auto A/C)..... HA-113
 Intake door control linkage adjustment
 (manual A/C)..... HA-58
 Intake door motor..... HA-122
 Intake manifold EM-8
 Integrated homelink transmitter..... EL-305
 Interior..... BT-16
 Interior lamp..... EL-71
 Interior lamp on-off control..... EL-291
 IVMS (In-Vehicle Multiplexing System) EL-170
 IVMS-System description EL-170
 IVMS-Trouble diagnoses EL-197
 IVMS-Trouble diagnoses system..... EL-185

J

Jacking points..... GI-40
 Junction box (J/B) Foldout

K

Key illumination..... EL-291

Keyless entry system - See Multi-re-
 mote control system..... EL-240
 Knock sensor (KS) EC-196

L

License lamp..... EL-56
 Lifting points GI-41
 Line pressure solenoid valve AT-85, 93, 96
 Line pressure test (AT)..... AT-129
 Liquid gasket application EM-2
 Location of electrical units EL-307
 Lock, door BT-11
 Low and reverse brake AT-195
 Lubricant (R134a) A/C HA-127
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches..... MA-21

M

Magnet clutch..... HA-133
 Main drive gear (MT)..... MT-11
 Mainshaft (MT) MT-11, 21
 Maintenance MA-1
 Maintenance (engine) MA-10
 Malfunction indicator lamp (MIL)..... EC-50
 Manual air conditioner - Wiring diagram..... HA-40
 Manual transmission oil replacement MA-17
 MAP/BARO switch solenoid valve EC-277
 Mass air flow sensor (MAFS)..... EC-104
 Master cylinder (brake) BR-7
 Master cylinder (clutch) CL-6
 Meter..... EL-79
 METER - Wiring diagram EL-81
 MIL & Data link connectors circuit EC-379
 MIRROR - Wiring diagram EL-144
 Mirror, door BT-36
 Mirror, out side BT-36
 Misfire EC-192
 Mode door control linkage adjustment
 (auto A/C)..... HA-113
 Mode door control linkage adjustment
 (manual A/C)..... HA-57
 Mode door motor..... HA-120
 Molding - See Exterior BT-22
 MT removal and installation..... MT-7
 Mud guard - See Exterior BT-22
 MULTI - Wiring diagram..... EL-243
 Multi-remote control system EL-240
 Multiport fuel injection (MFI) system..... EC-16

N

Neutral position switch (MT) MT-7

ALPHABETICAL INDEX

O

Oil pan (engine) EM-11
 Oil pressure (engine) LC-5
 Oil pump (AT) AT-164
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-31
 Operating cylinder (clutch) CL-7
 Out side mirror BT-36
 Overdrive control switch AT-63
 Overrun clutch AT-189
 Overrun clutch solenoid valve AT-85, 93, 107
 Oxygen sensor monitor (O2S) (front) EC-53

P

P/ANT - Wiring diagram EL-133
 Park/Neutral position switch EC-272
 Parking brake control BR-21
 Parking lamp EL-56
 PCV (positive crankcase ventilation) EC-25
 PHONE - Wiring diagram EL-139
 Piston assembly EM-62
 Piston pin inspection EM-55
 Piston ring inspection EM-56
 Piston to bore clearance EM-57
 POWER - Wiring diagram EL-7
 Power antenna EL-132
 Power door lock EL-221
 Power door mirror EL-144
 Power seat EL-141
 Power steering fluid level MA-20, ST-5
 Power steering gear ST-12
 Power steering hydraulic pressure ST-7
 Power steering oil pressure switch EC-368, 372
 Power steering oil pump ST-22
 Power steering system bleeding ST-5
 Power supply routing EL-6
 Power transistor EC-297
 Power transistor & ignition coil EC-290
 Power window EL-206
 Pressure plate - See Clutch cover CL-9
 Pressure test (AT) AT-129

R

Radiator LC-15
 Radio - See Audio EL-125
 Rear air spoiler BT-22
 Rear axle RA-6
 Rear bumper BT-9
 Rear disc brake BR-15
 Rear door BT-12
 Rear heated oxygen sensor (HO2S) EC-150
 Rear heated oxygen sensor (HO2S)
 heater EC-154

Rear seat BT-30
 Rear seat belt RS-4
 Rear suspension RA-9
 Rear window BT-35
 Rear window defogger EL-116
 Refrigerant connection precaution HA-3
 Refrigerant general precaution HA-2
 Refrigerant lines HA-129
 Release bearing (clutch) CL-8
 Reverse clutch AT-182
 Reverse gear (MT) MT-11
 Reverse idler shaft (MT) MT-11
 Reverse lamp switch (MT) - See
 Back-up lamp switch (MT) MT-7
 Revolution sensor (AT) AT-69
 Road wheel size GI-38
 Roof trim BT-20
 ROOM/L - Wiring diagram EL-292

S

SAE J1979 - Mode 1 ~ 7 EC-38, 73
 Seal - See Exterior BT-22
 SEAT - Wiring diagram EL-141
 Seat belt inspection MA-21
 Seat belt, front RS-3
 Seat belt, rear RS-4
 Seat, front BT-27
 Seat, rear BT-30
 Self-diagnostic results EC-50
 SHIFT - Wiring diagram AT-132
 Shift control (MT) MT-12
 Shift fork (MT) MT-12
 Shift lock system AT-131
 Shift schedule AT-49
 Shift solenoid
 valve (AT) AT-73, 76, 79, 85, 93, 99, 102
 Shock absorber (rear) RA-10
 Side trim BT-16
 SMJ (super multiple junction) Foldout
 Spark plug replacement MA-15
 Speedometer EL-81
 Spiral cable RS-8
 Spot lamp EL-77
 Spring (Wheelarch) height FA-5
 SROOF - Wiring diagram EL-140
 SRS - See Supplemental Restraint
 System RS-5
 SRS - Wiring diagram RS-20
 SRS Trouble diagnoses RS-17
 Stabilizer bar (front) FA-22
 Stall test (AT) AT-126
 Standardized relay EL-4
 START - Wiring diagram EL-30
 Starter EL-35
 Starting system EL-28
 Steering gear and linkage inspection MA-20
 Steering linkage ST-12
 Steering switch EL-43
 Steering wheel and column ST-8

ALPHABETICAL INDEX

Steering wheel play ST-4
 Steering wheel turning force..... ST-6
 Step lamp..... EL-299
 STEP/L - Wiring diagram..... EL-300
 Stop lamp..... EL-58
 STOP/L - Wiring diagram EL-58
 Striking rod (MT) MT-12
 Strut (front)..... FA-21
 Sunload sensor..... HA-116
 Sunroof BT-31
 Supplemental Restraint System..... RS-5
 Supplemental restraint system - Wiring diagram..... RS-20
 SW/ILL - Wiring diagram EL-288
 Synchronizer (MT) MT-11
 System readiness test (SRT) code..... EC-40

T

2-pole lift..... GI-41
 Tachometer EL-81
 Tail lamp..... EL-56
 TAIL/L - Wiring diagram..... EL-56
 Tank fuel temperature sensor EC-189
 Telephone EL-139
 THEFT - Wiring diagram..... EL-266
 Theft warning system EL-260
 Thermostat..... LC-14
 Three way catalyst..... EC-222
 Three way catalyst function (Left bank)..... EC-222
 Three way catalyst function (Right bank)..... EC-222
 Throttle bodies EM-8
 Throttle position sensor (TPS) EC-128
 Throttle position switch..... AT-64
 Throwout bearing - See Clutch release bearing CL-8
 Tie-rod..... ST-16
 Tie-rod ball joints ST-16
 Timing chain..... EM-17
 Tire rotation..... MA-19
 Tire size GI-38
 TLID - Wiring diagram EL-145
 Torque converter clutch solenoid valve AT-85, 88, 93
 Torque converter installation AT-141
 Tow truck towing..... GI-42
 Transmission case (MT)..... MT-10
 TRANSMT - Wiring diagram..... EL-305
 Transverse link (front)..... FA-23
 Trim BT-16
 Triple pressure switch HA-11, 57, 112
 Trunk lid BT-9
 Trunk lid opener - See Trunk lid BT-9
 Trunk lid opener, electric EL-145
 Trunk room lamp..... EL-77
 Trunk room trim BT-21

TURN - Wiring diagram EL-66
 Turn signal lamp EL-64
 Two trip detection logic EC-38

U

Under body BT-39

V

Vacuum cut valve EC-322
 Vacuum cut valve bypass valve..... EC-318
 Vacuum hose (brake system) BR-10
 Vacuum hose drawing (ECCS) EC-14
 Valve clearance..... EM-47
 Valve guide EM-38
 Valve seat EM-40
 Valve spring EM-40
 Vehicle recovery (freeing a stuck vehicle)..... GI-42
 Vehicle speed sensor (VSS) EC-251
 Viscosity number (SAE)..... MA-8
 Viscous coupling (FF AT) AT-215
 Viscous coupling (FF MT) MT-7, 11

W

WARN - Wiring diagram EL-88
 Warning buzzer..... EL-93
 Warning lamps EL-87
 Washer, front..... EL-102
 Water pump LC-9
 Water temperature gauge..... EL-81
 Weatherstrip - See Exterior BT-22
 Wheel alignment (front) FA-6
 Wheel alignment (rear) RA-5
 Wheel balance MA-19
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-4
 Wheel hub (rear) RA-6
 Wheel hub and steering knuckle FA-8
 Wheel sensors (ABS)..... BR-26
 Wheelarch height..... FA-5
 Wide open & closed throttle position switch..... EC-128
 WINDOW - Wiring diagram EL-208
 Window antenna EL-136
 Windshield BT-35
 WIPER - Wiring diagram EL-104
 Wiper and washer..... EL-102
 Wiper, front EL-102
 Withdrawal lever (clutch) CL-8
 Wrist pin - See Piston pin inspection EM-55

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX