

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-24
 ABS - Wiring diagram BR-33
 Absolute pressure sensor..... EC-117
 A/C air flow..... HA-18
 A/C component layout..... HA-17
 A/C compressor clutch removal and
 installation..... HA-129
 A/C compressor description..... HA-13
 A/C compressor mounting HA-128
 A/C compressor precaution HA-7
 A/C compressor special service tool HA-7
 A/C control linkage adjustment (auto
 A/C)..... HA-108
 A/C control operation (auto A/C)..... HA-61
 A/C control operation (manual A/C)..... HA-19
 A/C diagnostic work flow (auto A/C) HA-64
 A/C diagnostic work flow (manual A/C) HA-21
 A/C harness layout (auto A/C) HA-88
 A/C harness layout (manual A/C) HA-37
 A/C HFC134a (R134a) system
 precaution HA-3
 A/C HFC134a (R134a) system service
 procedure..... HA-121
 A/C HFC134a (R134a) system service
 tools HA-8
 A/C HFC134a system service equip-
 ment precaution..... HA-10
 A/C lubricant (R134a) HA-123
 A/C operational check..... HA-22, 65
 A/C performance chart..... HA-33
 A/C performance test diagnoses HA-31
 A/C relay HA-56, 107
 A/C self-diagnoses (auto A/C) HA-70
 A/C service data specification..... HA-133
 A/C switch HA-55
 A/C symptom chart (auto A/C)..... HA-68
 A/C symptom chart (manual A/C) HA-24
 A/C system description (auto A/C)..... HA-109
 A/C trouble diagnoses (auto A/C) HA-64
 A/C trouble diagnoses (manual A/C) HA-21
 A/C, A - Wiring diagram HA-91
 A/C, M - Wiring diagram HA-40
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-8
 Air bag disposal RS-19
 Air bag precautions GI-2
 Air bleeding (hydraulic clutch) CL-6
 Air bleeding for brake system BR-4
 Air cleaner filter replacement..... MA-13
 Air conditioner cut control EC-21
 Air flow meter - See Mass air flow
 sensor EC-110
 Air mix door control linkage
 adjustment HA-57, 108
 Air mix. door motor..... HA-114
 Air spoiler, rear BT-22

Alternator EL-33
 Ambient sensor HA-111
 Angular tightening application EM-2
 Antenna..... EL-128
 Anti-lock brake system - See ABS..... BR-24
 Anti-lock brake system - Wiring
 diagram..... BR-33
 ASCD (automatic speed control device) EL-140
 ASCD - Wiring diagram EL-145
 A/T - Wiring diagram AT-13
 A/T control..... EC-314
 A/T diagnosis communication line EC-422
 A/T fluid temperature sensor AT-89, 155
 A/T self-diagnoses..... AT-43
 A/T shift lock system AT-180
 A/T shift lock system - Wiring diagram AT-181
 A/T trouble diagnoses AT-54
 Audio EL-119
 AUDIO - Wiring diagram..... EL-121
 Audio and A/C control removal and
 installation - See Instrument panel BT-13
 Auto air conditioner - Wiring diagram HA-91
 Automatic speed control system - See
 ASCD EL-140
 Automatic transaxle number GI-38
 Automatic transmission fluid
 replacement..... MA-18
 Auxiliary air control (AAC) valve EC-303

B

Back-up lamp EL-53
 Back-up lamp switch (M/T) MT-8
 BACK/L - Wiring diagram EL-53
 Battery..... EL-19
 Baulk ring (M/T) MT-12
 Blower motor HA-55, 107
 Blower resistor HA-55
 Board-on lift GI-40
 Body alignment BT-44
 BPT valve..... EC-267
 Brake booster..... BR-10
 Brake control valve (Proportioning
 valve) BR-6
 Brake fluid change BR-4
 Brake fluid level MA-19
 Brake fluid level and line check BR-4
 Brake hydraulic line..... BR-5
 Brake inspection MA-19
 Brake lines and cables inspection..... MA-19
 Brake master cylinder BR-8
 Brake pedal BR-7
 Bulb specifications EL-316
 Bumper, front BT-6
 Bumper, rear BT-9
 BUZZER - Wiring diagram..... EL-87
 BYPS/V - Wiring diagram EC-399, 404

ALPHABETICAL INDEX

C

Camshaft inspection EM-39
 Camshaft position sensor (CMPS) EC-249
 Camshaft position sensor (PHASE) EC-249
 Canister - See EVAP canister EC-23
 CHARGE - Wiring diagram EL-30
 Charging system EL-29
 Chassis and body maintenance MA-17
 CIGAR - Wiring diagram EL-108
 Cigarette lighter EL-108
 Circuit breaker EL-14
 Clock EL-109
 CLOCK - Wiring diagram EL-109
 Closed loop control EC-327
 Closed throttle position switch EC-309
 Clutch cover CL-10
 Clutch disc CL-10
 Clutch fluid level MA-17
 Clutch master cylinder CL-7
 Clutch operating cylinder CL-8
 Clutch pedal CL-5
 Clutch release bearing CL-9
 Clutch release mechanism CL-9
 Clutch withdrawal lever CL-9
 Coil spring (front) FA-22
 Coil spring (rear) RA-11
 Collision diagnosis RS-53
 Combination lamp, front, removal and
 installation BT-6
 Combination lamp, rear, removal and
 installation BT-22
 Combination meter EL-68
 Combination meter removal and instal-
 lation - See Instrument panel BT-13
 Combination switch EL-34
 COMM - Wiring diagram EL-180
 Compression pressure EM-12
 Compressor clutch removal and
 installation HA-129
 Compressor description HA-13
 Compressor mounting HA-128
 Compressor precaution HA-7
 Compressor special service tool HA-7
 Connecting rod EM-58
 Connecting rod bearing clearance EM-62
 Connecting rod bushing clearance EM-63
 Console box - See Instrument panel BT-13
 CONSULT for ABS BR-39
 CONSULT for ECCS EC-63
 CONSULT general information GI-34
 Control lever (M/T) MT-10
 Control valve (A/T) AT-218
 Converter housing installation AT-191
 Coolant mixture ratio MA-9
 Coolant replacement MA-11
 Cooling circuit (engine) LC-8
 Cooling fan control EC-430
 Cooling fan control system LC-15

Cooling fan motor EC-442
 Cooling fan relay EC-442
 Coupling sleeve (M/T) MT-12
 Crankshaft EM-60
 Crankshaft position sensor (POS) EC-243
 Crankshaft position sensor (POS)
 chipping EC-341
 Crankshaft position sensor (REF) EC-336
 Cruise control - See ASCD EL-140
 Cylinder block EM-56
 Cylinder head EM-36
 Cylinder head bolt tightening EM-45

D

Daytime light system EL-42
 Daytime running light - See Daytime
 light system EL-42
 DEF - Wiring diagram EL-111
 Detonation sensor - See Knock sensor EC-240
 Diagnosis sensor unit RS-12
 Differential gear (FF A/T) AT-261
 Differential gear (FF M/T) MT-12, 26
 Dimensions GI-39
 Direct ignition system EC-32
 Distributor ignition (DI) system EC-20
 D/LOCK - Wiring diagram EL-215
 Door lock BT-11
 Door mirror BT-43
 Door trim BT-19
 Door, front BT-11
 Door, rear BT-12
 Drive belt inspection MA-10
 Drive plate runout EM-63
 Drive shaft (front) FA-13
 Dropping resistor (A/T) AT-133
 DTRL - Wiring diagram EL-44

E

ECCS basic inspection EC-82
 ECCS circuit diagram EC-11
 ECCS component parts location EC-13
 ECCS on board diagnostic system EC-41
 ECCS system diagram and chart EC-12
 ECM input/output signal EC-95
 EGR control (EGRC) - BPT valve EC-263
 EGR control (EGRC) - solenoid valve EC-347
 EGR control valve EC-261, 362
 EGR temperature sensor EC-352
 Electric sun roof EL-134
 Electrical diagnoses GI-21
 Electrical ignition system EC-20
 Electrical load signal circuit EC-465
 Electrical unit Foldout
 Engine compartment BT-44
 Engine control module (ECM) EC-318

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS)..... EC-132, 145
Engine mounting control (Front) EC-454
Engine oil filter replacement MA-14
Engine oil precautions GI-5
Engine oil replacement MA-14
Engine outer component parts EM-8
Engine removal EM-53
Engine room - See Engine compartment BT-44
Engine serial number GI-38
EVAP canister EC-23
EVAP canister purge control solenoid valve EC-415
EVAP canister purge control valve EC-409
EVAP canister purge volume control valve EC-282, 374
EVAP canister vent control valve EC-288, 381
EVAP control system purge flow monitoring diagnosis EC-386
EVAP vapor lines inspection MA-16
Evaporative emission (EVAP) system EC-23
Exhaust system FE-4
Exhaust system inspection MA-17
Exterior BT-22

F

Fan control amp. HA-119
Fan switch HA-55
Fast idle cam (FIC) inspection and adjustment EC-31
F/FOG - Wiring diagram EL-55
Final drive (FF A/T) AT-261
Final drive (FF M/T) MT-12, 26
Finisher, interior - See Trim BT-16
Floor trim BT-16
Flow charts GI-31
Fluid temperature sensor (A/T) AT-89, 155
Fluids MA-8
Flywheel (clutch) CL-11
Flywheel runout EM-63
FO2H-L - Wiring diagram EC-150, 157, 163, 169, 178
Fog lamp, front EL-54
Fog lamp, front, removal and installation BT-6
Fork rod (M/T) MT-13
Forward clutch AT-239
Freeze frame data EC-43
FRO2LH - Wiring diagram EC-184
Front axle FA-9
Front bumper BT-6
Front combination lamp removal and installation BT-6
Front disc brake BR-12
Front door BT-11
Front engine mounting control EC-454
Front fog lamp EL-54
Front fog lamp removal and installation BT-6

Front heated oxygen sensor (HO2S) EC-150, 157, 163, 169, 178
Front heated oxygen sensor (HO2S) (Left bank) EC-150, 157, 163, 169, 178
Front heated oxygen sensor (HO2S) (Right bank) EC-150, 157, 163, 169, 178
Front heated oxygen sensor (HO2S) monitor EC-57
Front heated oxygen sensor heater (Left bank) EC-184
Front heated oxygen sensor heater (Right bank) EC-184
Front passenger air bag RS-8
Front seat BT-27
Front seat belt RS-3
Front suspension FA-21
Front washer EL-95
Front wiper EL-95
Fuel cut control (at no load & high engine speed) EC-22
Fuel filler lid BT-9
Fuel filter replacement MA-12
Fuel gauge EL-68
Fuel injection system (Left bank) EC-219, 225
Fuel injection system (Right bank) EC-219, 225
Fuel line inspection MA-12
Fuel precautions GI-6
Fuel pressure check EC-29
Fuel pressure release EC-29
Fuel pump EC-453
Fuel pump relay EC-453
Fuel system FE-3
FUELLH - Wiring diagram EC-219, 225
Fuse EL-14
Fuse block Foldout
Fusible link EL-14

G

Garage jack and safety stand GI-41
Gauges EL-68
Gear components (M/T) MT-12
Generic scan tool (GST) EC-76
Ground distribution EL-15

H

Harness connector EL-3
Harness layout EL-301
Hazard warning lamp EL-57
Headlamp EL-37
Headlamp removal and installation BT-6
Headlining - See Roof trim BT-20
Heated oxygen sensor (HO2S) (front) EC-150, 157, 163, 169, 178
Heated oxygen sensor (HO2S) (Front) (Left bank) EC-150, 157, 163, 169, 178

ALPHABETICAL INDEX

Heated oxygen sensor (HO2S) (Front)
 (Right bank) EC-150, 157, 163, 169, 178
 Heated oxygen sensor (HO2S) monitor EC-57
 Heated oxygen sensor heater
 (Front)(Left bank)..... EC-184
 Heated oxygen sensor heater
 (Front)(Right bank) EC-184
 Heated oxygen sensor monitor (HO2S)
 (front) EC-57
 Heated seat..... BT-31, EL-137
 Height (Dimensions)..... GI-39
 HFC134a (R134a) system precaution HA-3
 HFC134a (R134a) system service
 procedure..... HA-121
 HFC134a (R134a) system service tools..... HA-8
 HFC134a system service equipment
 precaution..... HA-10
 High clutch..... AT-235
 H/LAMP - Wiring diagram..... EL-38
 Hood BT-6
 Horn EL-107
 HORN - Wiring diagram EL-107
 How to erase DTC for ECCS OBD
 system EC-52
 HSEAT - Wiring diagram EL-137

I

IACV - FICD solenoid valve EC-464
 IACV-AAC valve EC-308
 IACV-FICD solenoid valve EC-462
 Identification plate GI-38
 Idle air control valve (IACV) EC-303
 Idle mixture ratio EC-34
 Idle speed..... EC-34
 Ignition coil EC-335
 Ignition timing EC-34
 ILL - Wiring diagram EL-63
 Illumination..... EL-61, 278
 In vehicle sensor HA-110
 Inhibitor switch AT-82, 85
 Injector..... EC-447
 Injector removal and installation EC-30
 Input shaft (FF M/T)..... MT-12, 17
 Instrument panel..... BT-13
 INT/L - Wiring diagram EL-67
 Intake air temperature sensor EC-126
 Intake door control linkage
 adjustment..... HA-57, 108
 Intake door motor HA-118
 Intake manifold EM-10
 Intake sensor HA-112
 Integrated homelink transmitter EL-296
 Interior..... BT-16
 Interior lamp on-off control..... EL-282
 IVMS (In-Vehicle Multiplexing System) EL-164
 IVMS-System description EL-164
 IVMS-Trouble diagnoses EL-183

J

Jacking points..... GI-41
 Junction box (J/B) Foldout

K

Key illumination..... EL-282
 Keyless entry system - See Multi-re-
 mote control system..... EL-232
 Knock sensor (KS) EC-240

L

Length (Dimensions) GI-39
 License lamp..... EL-49
 Lifting points GI-42
 Line pressure solenoid valve AT-118, 129, 133
 Line pressure test (A/T) AT-62
 Liquid gasket application EM-2
 Location of electrical units EL-298
 Lock, door BT-11
 Low and reverse brake AT-245
 Lubricant (R134a) A/C HA-123
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches..... MA-21

M

Magnet clutch..... HA-129
 Main drive gear (M/T) MT-12
 Mainshaft (M/T)..... MT-12, 22
 Maintenance MA-1
 Maintenance (engine) MA-10
 MAJOR OVERHALL..... AT-193
 Malfunction indicator lamp (MIL)..... EC-54
 Manual air conditioner - Wiring diagram..... HA-40
 Manual transaxle number..... GI-38
 Manual transmission oil replacement MA-17
 MAP/BARO switch solenoid valve EC-320
 Mass air flow sensor (MAFS)..... EC-110
 Master cylinder (brake) BR-8
 Master cylinder (clutch) CL-7
 Meter..... EL-68
 METER - Wiring diagram EL-71
 MIL & Data link connectors circuit EC-468
 MIRROR - Wiring diagram EL-138
 Mirror defogger..... EL-110
 Mirror, door BT-43
 Mirror, out side BT-43
 Misfire..... EC-235
 Mode door control linkage
 adjustment..... HA-56, 108

ALPHABETICAL INDEX

Mode door motor..... HA-116
 Model variation..... GI-36
 Molding - See Exterior..... BT-22
 M/T major overhaul..... MT-11
 M/T removal and installation..... MT-8
 Mud guard - See Exterior..... BT-22
 MULTI - Wiring diagram..... EL-235
 Multi-remote control system..... EL-232
 Multiport fuel injection (MFI) system..... EC-18
 Multiport fuel injection precautions..... GI-4

N

Neutral position switch (M/T)..... MT-8
 NVH troubleshooting (BR)..... BR-3
 NVH troubleshooting (CL)..... CL-3
 NVH troubleshooting (FA)..... FA-4
 NVH troubleshooting (M/T)..... MT-5
 NVH troubleshooting (RA)..... RA-3
 NVH troubleshooting (ST)..... ST-5

O

Oil pan (engine)..... EM-13
 Oil pressure (engine)..... LC-5
 Oil pump (A/T)..... AT-214
 Oil pump (engine)..... LC-5
 Oil pump regulator valve (engine)..... LC-7
 Oil seal replacement (engine)..... EM-33
 Operating cylinder (clutch)..... CL-8
 Out side mirror..... BT-43
 Overdrive control switch..... AT-178
 Overrun clutch..... AT-239
 Overrun clutch solenoid valve..... AT-118, 129, 151
 Oxygen sensor monitor (O2S) (front)..... EC-57

P

P/ANT - Wiring diagram..... EL-129
 Park/Neutral position switch..... EC-425
 Parking brake control..... BR-22
 Parking lamp..... EL-49
 PCV (positive crankcase ventilation)..... EC-28
 PGC/V - Wiring diagram..... EC-282
 PHONE - Wiring diagram..... EL-133
 Piston assembly..... EM-64
 Piston pin inspection..... EM-57
 Piston ring inspection..... EM-58
 Piston to bore clearance..... EM-59
 POWER - Wiring diagram..... EL-7
 Power antenna..... EL-128
 Power door lock..... EL-213
 Power door mirror..... EL-138
 Power seat..... EL-135
 Power steering fluid level..... MA-20, ST-7
 Power steering gear..... ST-14
 Power steering hydraulic pressure..... ST-9

Power steering oil pressure switch..... EC-457, 461
 Power steering oil pump..... ST-24
 Power steering system bleeding..... ST-7
 Power supply routing..... EL-6
 Power transistor..... EC-335
 Power transistor & ignition coil..... EC-329
 Power window..... EL-198
 Precautions (General)..... GI-2
 Pressure plate - See Clutch cover..... CL-10
 Pressure test (A/T)..... AT-62

R

Radiator..... LC-15
 Radio - See Audio..... EL-119
 Rear air spoiler..... BT-22
 Rear axle..... RA-7
 Rear bumper..... BT-9
 Rear disc brake..... BR-16
 Rear door..... BT-12
 Rear heated oxygen sensor (HO2S)
 heater..... EC-214
 Rear seat..... BT-32
 Rear seat belt..... RS-4
 Rear suspension..... RA-10
 Rear window defogger..... EL-110
 Refrigerant connection precaution..... HA-4
 Refrigerant general precaution..... HA-3
 Refrigerant lines..... HA-125
 Release bearing (clutch)..... CL-9
 Removal and installation (A/T)..... AT-190
 Reverse clutch..... AT-232
 Reverse idler shaft (M/T)..... MT-12
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T)..... MT-8
 Reverse main gear (M/T)..... MT-12
 Revolution sensor (A/T)..... AT-92
 Road wheel size..... GI-39
 Roof trim..... BT-20
 ROOM/L - Wiring diagram..... EL-283
 RRO2LH - Wiring diagram..... EC-196
 RRO2RH - Wiring diagram..... EC-189

S

SAE J1930 terminology list..... GI-45
 SAE J1979 - Mode 1 - 7..... EC-41
 Seal - See Exterior..... BT-22
 SEAT - Wiring diagram..... EL-135
 Seat belt inspection..... MA-21, RS-5
 Seat belt, front..... RS-3
 Seat belt, rear..... RS-4
 Seat, front..... BT-27
 Seat, rear..... BT-32
 Self-diagnostic results..... EC-54
 SHIFT - Wiring diagram..... AT-181
 Shift control components (M/T)..... MT-13
 Shift fork (M/T)..... MT-13

ALPHABETICAL INDEX

Shift lever MT-10
 Shift schedule AT-284
 Shift solenoid valve A
 (A/T) AT-99, 109, 118, 129, 137
 Shift solenoid valve B
 (A/T) AT-99, 104, 118, 129, 141
 Shock absorber (rear) RA-11
 Side trim BT-16
 SMJ (super multiple junction) Foldout
 Spark plug replacement MA-15
 Speedometer EL-68
 Spiral cable RS-14
 Spot lamp EL-67
 Spring (Wheelarch) height FA-6
 SROOF - Wiring diagram EL-134
 SRS - See Supplemental Restraint
 System RS-8
 SRS - Wiring diagram RS-30
 SRS Trouble diagnoses RS-25
 Stabilizer bar (front) FA-23
 Stall test (A/T) AT-59
 Standardized relay EL-4
 START - Wiring diagram EL-25
 Starter EL-28
 Starting system EL-23
 Steering gear and linkage inspection MA-20
 Steering linkage ST-14
 Steering switch EL-36
 Steering wheel and column ST-10
 Steering wheel play ST-6
 Steering wheel turning force ST-8
 Step lamp EL-290
 STEP/L - Wiring diagram EL-291
 Stop lamp EL-51
 STOP/L - Wiring diagram EL-51
 Striking rod (M/T) MT-13
 Strut (front) FA-22
 Sunload sensor HA-111
 Sunroof BT-33
 Supplemental Restraint System RS-8
 Supplemental restraint system - Wiring
 diagram RS-30
 SW/ILL - Wiring diagram EL-279
 Symbols and abbreviations GI-7
 Synchronizer (M/T) MT-12
 System readiness test (SRT) code EC-43

T

Tachometer EL-68
 Tail lamp EL-49
 TAIL/L - Wiring diagram EL-49
 Tank fuel temperature sensor EC-231
 TCM circuit diagram AT-12
 TCM inspection table AT-77
 Telephone EL-133
 THEFT - Wiring diagram EL-256
 Theft warning system EL-250
 Thermostat LC-14
 Three way catalyst EC-268

Three way catalyst function (Left bank) EC-268
 Three way catalyst function (Right
 bank) EC-268
 Three way catalyst precautions GI-5
 Throttle bodies EM-10
 Throttle position sensor (TPS) EC-137
 Throttle position sensor adjustment EC-82
 Throttle position switch AT-147, 179
 Throwout bearing - See Clutch release
 bearing CL-9
 Tie-rod ST-18
 Tie-rod ball joints ST-18
 Tightening torque of standard bolts GI-44
 Timing chain EM-19
 Tire rotation MA-19
 Tire size GI-39
 TLID - Wiring diagram EL-139
 Torque converter installation AT-191
 Torque converter clutch solenoid
 valve AT-118, 122, 129
 Tow truck towing GI-43
 Transmission case (M/T) MT-11
 TRANSMT - Wiring diagram EL-296
 Transverse link (front) FA-24
 Tread-FR&RR (Dimensions) GI-39
 Trim BT-16
 Triple pressure switch HA-12, 56, 107
 Trunk lid BT-9
 Trunk lid opener - See Trunk lid BT-9
 Trunk lid opener, electric EL-139
 Trunk room lamp EL-67
 Trunk room trim BT-21
 TURN - Wiring diagram EL-58
 Turn signal lamp EL-57
 Two trip detection logic EC-41
 Two-pole lift GI-42

U

Under body BT-46

V

Vacuum cut valve EC-408
 Vacuum hose (brake system) BR-11
 Vacuum hose drawing (ECCS) EC-16
 Valve clearance EM-49
 Valve guide EM-40
 Valve seat EM-42
 Valve spring EM-43
 Vehicle identification number GI-37
 Vehicle recovery (freeing a stuck
 vehicle) GI-43
 Vehicle speed sensor (VSS) EC-299
 Viscosity number (SAE) MA-8
 Viscous coupling (FF M/T) MT-8, 12

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

W

WARN - Wiring diagram	EL-81
Warning buzzer	EL-86
Warning lamps	EL-80
Washer, front	EL-95
Water pump	LC-9
Water temperature gauge	EL-68
Weatherstrip - See Exterior	BT-22
Wheel alignment (front)	FA-7
Wheel alignment (rear)	RA-6
Wheel balance	MA-19
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-5
Wheel hub (rear)	RA-7
Wheel sensors (ABS)	BR-27
Wheel size	GI-39
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-39
Wide open & closed throttle position switch	EC-137
Width (Dimensions)	GI-39
WINDOW - Wiring diagram	EL-200
Window antenna	EL-130
WIPER - Wiring diagram	EL-97
Wiper, front	EL-95
Wiring Diagram (Cell code) list	EL-317
Wiring diagrams	GI-9
Withdrawal lever (clutch)	CL-9
Wrist pin - See Piston pin inspection	EM-57