

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-28
ABS - Wiring diagram	BR-37
ABS/TCS C/U signal	EC-498
Absolute pressure sensor	EC-130
A/C air flow	HA-18
A/C component location	HA-17
A/C compressor clutch removal and installation	HA-129
A/C compressor description	HA-13
A/C compressor mounting	HA-128
A/C compressor precaution	HA-7
A/C compressor special service tool	HA-7
A/C control linkage adjustment (auto A/C)	HA-107
A/C control operation (auto A/C)	HA-61
A/C control operation (manual A/C)	HA-19
A/C diagnostic work flow (auto A/C)	HA-64
A/C diagnostic work flow (manual A/C)	HA-21
A/C HFC134a (R134a) system precaution	HA-3
A/C HFC134a (R134a) system service procedure	HA-120
A/C HFC134a (R134a) system service tools	HA-8
A/C HFC134a system service equip- ment precaution	HA-10
A/C lubricant (R134a)	HA-122
A/C operational check (auto A/C)	HA-65
A/C operational check (manual A/C)	HA-22
A/C performance chart (manual A/C)	HA-33
A/C performance test diagnoses (manual A/C)	HA-31
A/C relay (auto A/C)	HA-106
A/C relay (manual A/C)	HA-56
A/C self-diagnoses (auto A/C)	HA-70
A/C service data specification	HA-133
A/C switch (manual A/C)	HA-55
A/C symptom chart (auto A/C)	HA-68
A/C symptom chart (manual A/C)	HA-24
A/C system description (auto A/C)	HA-108
A/C trouble diagnoses (auto A/C)	HA-64
A/C trouble diagnoses (manual A/C)	HA-21
A/C, A - Wiring diagram (auto A/C)	HA-90
A/C, M - Wiring diagram (manual A/C)	HA-40
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Air bag	RS-9
Air bag disposal	RS-20
Air bag precautions	GI-2
Air bleeding (hydraulic clutch)	CL-6
Air bleeding for brake system	BR-6
Air cleaner filter replacement	MA-13
Air conditioner cut control	EC-24
Air flow meter - See Mass air flow sensor	EC-122
Air mix door control linkage adjustment (auto A/C)	HA-107

Air mix door control linkage adjustment (manual A/C)	HA-57
Air mix. door motor (auto A/C)	HA-113
Air spoiler, rear	BT-22
Alternator	EL-33
Ambient sensor (auto A/C)	HA-110
Angular tightening application	EM-2
Antenna	EL-127
Anti-lock brake system - See ABS	BR-28
Anti-lock brake system - Wiring diagram	BR-37
ASCD (automatic speed control device)	EL-140
ASCD - Wiring diagram	EL-145
A/T - Wiring diagram	AT-13
A/T fluid temperature sensor	AT-87, 153
A/T self-diagnoses	AT-42
A/T shift lock system	AT-180
A/T shift lock system - Wiring diagram	AT-181
A/T trouble diagnoses	AT-53
AT/C - Wiring diagram	EC-381, 501
Audio	EL-119
AUDIO - Wiring diagram	EL-121
Audio and A/C control removal and installation - See Instrument panel	BT-13
Auto air conditioner - Wiring diagram (auto A/C)	HA-90
Automatic speed control system - See ASCD	EL-140
Automatic transaxle number	GI-40
Automatic transmission fluid replacement	MA-18
Auxiliary air control (AAC) valve	EC-369

B

Back-up lamp	EL-58
Back-up lamp switch (M/T)	MT-8
BACK/L - Wiring diagram	EL-58
Ball joint front axle	FA-6
Basic inspection	EC-92
Battery	EL-21
Baulk ring (M/T)	MT-12
Blower motor (auto A/C)	HA-106
Blower motor (manual A/C)	HA-55
Blower resistor (manual A/C)	HA-55
Board-on lift	GI-42
Body alignment	BT-44
Brake booster	BR-12
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-5
Brake fluid level	MA-19
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-7
Brake inspection	MA-19
Brake lines and cables inspection	MA-19
Brake master cylinder	BR-10
Brake pedal	BR-9
Bulb specifications	EL-330
Bumper, front	BT-6

ALPHABETICAL INDEX

Bumper, rear BT-9
 BUZZER - Wiring diagram EL-88
 BYPS/V - Wiring diagram EC-483, 488

C

Camshaft inspection EM-40
 Camshaft position sensor (CMPS) EC-311
 Camshaft position sensor (PHASE) EC-311
 Canister - See EVAP canister EC-26
 CHARGE - Wiring diagram EL-31
 Charging system EL-30
 Chassis and body maintenance MA-17
 CIGAR - Wiring diagram EL-108
 Cigarette lighter EL-108
 Circuit breaker EL-15
 Clock EL-109
 CLOCK - Wiring diagram EL-109
 Closed loop control EC-408
 Closed throttle position switch EC-376
 Clutch cover CL-10
 Clutch disc CL-10
 Clutch fluid level MA-17
 Clutch master cylinder CL-7
 Clutch operating cylinder CL-8
 Clutch pedal CL-5
 Clutch release bearing CL-9
 Clutch release mechanism CL-9
 Clutch withdrawal lever CL-9
 Coil spring (front) FA-22
 Coil spring (rear) RA-11
 Collision diagnosis RS-58
 Combination lamp, front, removal and
 installation BT-6
 Combination lamp, rear, removal and
 installation BT-22
 Combination meter EL-69
 Combination meter removal and instal-
 lation - See Instrument panel BT-13
 Combination switch EL-35
 COMM - Wiring diagram EL-180
 Component Location (auto A/C) HA-87
 Compression pressure EM-12
 Compressor clutch removal and
 installation HA-129
 Compressor description HA-13
 Compressor mounting HA-128
 Compressor precaution HA-7
 Compressor special service tool HA-7
 Connecting rod EM-59
 Connecting rod bearing clearance EM-63
 Connecting rod bushing clearance EM-64
 Connector inspection GI-19
 Console box - See Instrument panel BT-13
 CONSULT for ABS BR-44
 CONSULT for engine EC-73
 CONSULT general information GI-35
 Control lever (M/T) MT-10
 Control valve (A/T) AT-218
 Converter housing installation AT-191

Coolant mixture ratio MA-9
 Coolant replacement MA-11
 Cooling circuit (engine) LC-8
 Cooling fan control EC-504
 Cooling fan control system LC-15
 Cooling fan motor EC-516
 Cooling fan relay EC-516
 Coupling sleeve (M/T) MT-12
 Crankshaft EM-61
 Crankshaft position sensor (POS) EC-304
 Crankshaft position sensor (POS)
 chipping EC-428
 Crankshaft position sensor (REF) EC-422
 Cruise control - See ASCD EL-140
 Cylinder block EM-57
 Cylinder head EM-37
 Cylinder head bolt tightening EM-46

D

Daytime light system EL-43
 Daytime running light - See Daytime
 light system EL-43
 DEF - Wiring diagram EL-111
 Detonation sensor - See Knock sensor EC-300
 Diagnosis sensor unit RS-13
 Differential gear (FF A/T) AT-261
 Differential gear (FF M/T) MT-12, 26
 Dimensions GI-41
 Direct ignition system EC-40
 Distributor ignition (DI) system EC-23
 D/LOCK - Wiring diagram EL-215
 Door lock BT-11
 Door mirror BT-43
 Door trim BT-19
 Door, front BT-11
 Door, rear BT-12
 Drive belt inspection MA-10
 Drive plate runout EM-65
 Drive shaft (front) FA-13
 Dropping resistor (A/T) AT-131
 DTRL - Wiring diagram EL-45

E

ECM input/output signal EC-108
 ECM-ABS/TCS COMM NG EC-501
 EGR temperature sensor EC-435
 EGR valve & EVAP canister purge con-
 trol solenoid valve EC-330
 EGR volume control valve EC-325
 EGVC/V - Wiring diagram EC-325
 Electric sun roof EL-133
 Electrical diagnoses GI-22
 Electrical ignition system EC-23
 Electrical load signal circuit EC-536
 Electrical unit Foldout
 Engine compartment BT-44

ALPHABETICAL INDEX

Engine control circuit diagram..... EC-11
 Engine control component parts
 location EC-14
 Engine control module (ECM)..... EC-384
 Engine control system diagram and
 chart..... EC-12
 Engine coolant temperature sensor
 (ECTS)..... EC-145, 161
 Engine mounting control (Front) EC-528
 Engine oil filter replacement MA-14
 Engine oil precautions GI-6
 Engine oil replacement MA-14
 Engine outer component parts EM-8
 Engine removal EM-54
 Engine room - See Engine
 compartment BT-44
 Engine serial number GI-40
 EVAP canister EC-26
 EVAP canister vent control valve..... EC-354
 EVAP control system purge flow moni-
 toring diagnosis EC-471
 EVAP vapor lines inspection..... MA-16
 Evaporative emission (EVAP) system..... EC-26
 Exhaust system FE-4
 Exhaust system inspection MA-17
 Exterior..... BT-22

F

Fan control amp. (auto A/C)..... HA-118
 Fan switch (manual A/C)..... HA-55
 Fast idle cam (FIC) inspection and
 adjustment EC-39
 F/FOG - Wiring diagram EL-60
 Final drive (FF A/T) AT-261
 Final drive (FF M/T) MT-12, 26
 Finisher, interior - See Trim BT-16
 Floor trim..... BT-16
 Flow charts GI-32
 Fluid temperature sensor (A/T)..... AT-87, 153
 Fluids MA-8
 Flywheel (clutch)..... CL-11
 Flywheel runout EM-65
 FO2H-L - Wiring
 diagram..... EC-166, 174, 180, 186, 196
 Fog lamp, front EL-59
 Fog lamp, front, removal and
 installation BT-6
 Fork rod (M/T) MT-13
 Forward clutch..... AT-239
 FRO2LH - Wiring diagram EC-204
 Front axle FA-9
 Front bumper BT-6
 Front combination lamp removal and
 installation BT-6
 Front disc brake BR-14
 Front door..... BT-11
 Front engine mounting control EC-528
 Front fog lamp EL-59
 Front fog lamp removal and installation BT-6

Front heated oxygen sensor
 (HO2S)..... EC-166, 174, 180, 186, 196
 Front heated oxygen sensor (HO2S)
 (Left bank)..... EC-166, 174, 180, 186, 196
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-166, 174, 180, 186, 196
 Front heated oxygen sensor (HO2S)
 monitor..... EC-64, 67
 Front heated oxygen sensor heater
 (Left bank) EC-204
 Front heated oxygen sensor heater
 (Right bank) EC-204
 Front passenger air bag..... RS-9
 Front seat..... BT-27
 Front seat belt RS-4
 Front suspension FA-21
 Front washer..... EL-95
 Front wiper EL-95
 Fuel cut control (at no load & high
 engine speed)..... EC-25
 Fuel filler lid BT-9
 Fuel filter replacement MA-13
 Fuel gauge..... EL-69
 Fuel injection system (Left bank)..... EC-279, 285
 Fuel injection system (Right bank) EC-279
 Fuel lid opener, electric EL-139
 Fuel line inspection MA-12
 Fuel precautions GI-7
 Fuel pressure check..... EC-37
 Fuel pressure release EC-37
 Fuel pump EC-527
 Fuel pump control module EC-524
 Fuel pump relay EC-527
 Fuel system FE-3
 FUELLH - Wiring diagram EC-279, 285
 Fuse..... EL-15, Foldout
 Fuse block Foldout
 Fusible link..... EL-15, Foldout

G

Garage jack and safety stand GI-43
 Gauges EL-69
 Gear components (M/T)..... MT-12
 Generic scan tool (GST) EC-86
 Ground distribution EL-16

H

Harness connector..... EL-3
 Harness connector inspection..... GI-19
 Harness layout..... EL-315
 Hazard warning lamp..... EL-52
 Headlamp..... EL-38
 Headlamp removal and installation BT-6
 Headlining - See Roof trim BT-20

ALPHABETICAL INDEX

Heated oxygen sensor
 (HO2S) (front)..... EC-166, 174, 180, 186, 196
 Heated oxygen sensor (HO2S) (Front)
 (Left bank)..... EC-166, 174, 180, 186, 196
 Heated oxygen sensor (HO2S) (Front)
 (Right bank) EC-166, 174, 180, 196
 Heated oxygen sensor (HO2S) monitor EC-67
 Heated oxygen sensor
 (rear) EC-210, 219, 227, 235
 Heated oxygen sensor heater
 (Front)(Left bank)..... EC-204
 Heated oxygen sensor heater (Front)
 (Right bank) EC-204
 Heated oxygen sensor monitor (HO2S)
 (front) EC-67
 Heated seat..... BT-31, EL-137
 Height (Dimensions)..... GI-41
 HFC134a (R134a) system precaution HA-3
 HFC134a (R134a) system service
 procedure..... HA-120
 HFC134a (R134a) system service tools..... HA-8
 HFC134a system service equipment
 precaution..... HA-10
 High clutch..... AT-235
 H/LAMP - Wiring diagram..... EL-39
 Hood BT-6
 Horn EL-107
 HORN - Wiring diagram EL-107
 How to erase DTC for OBD system EC-62
 HSEAT - Wiring diagram EL-137

I

IACV-AAC valve EC-375
 Identification plate GI-40
 Idle air control valve (IACV) EC-369
 Idle mixture ratio EC-42
 Idle speed..... EC-42
 Ignition coil EC-421
 Ignition timing EC-42
 ILL - Wiring diagram EL-64
 Illumination..... EL-62, 277
 In vehicle sensor (auto A/C) HA-109
 Injector..... EC-521
 Injector removal and installation EC-38
 Input shaft (FF M/T) MT-12, 17
 Instrument panel..... BT-13
 INT/L - Wiring diagram EL-68
 Intake air temperature sensor..... EC-139
 Intake door control linkage adjustment
 (auto A/C) HA-107
 Intake door control linkage adjustment
 (manual A/C)..... HA-57
 Intake door motor (auto A/C)..... HA-117
 Intake manifold EM-10
 Intake sensor (auto A/C)..... HA-111
 Integrated homelink transmitter EL-310
 Interior..... BT-16
 Interior lamp on-off control..... EL-281

IVMS (In-Vehicle Multiplexing System) EL-164
 IVMS-System description EL-164
 IVMS-Trouble diagnoses EL-183

J

Jacking points..... GI-43
 Joint connector (J/C) Foldout
 Junction box (J/B) Foldout

K

Key illumination..... EL-281
 Keyless entry system - See Multi-re-
 mote control system..... EL-232
 Knock sensor (KS) EC-300

L

Length (Dimensions) GI-41
 License lamp..... EL-50
 Lifting points GI-44
 Line pressure solenoid valve AT-116, 127, 131
 Line pressure test (A/T) AT-61
 Liquid gasket application EM-2
 Location of electrical units EL-312
 Lock, door BT-11
 Low and reverse brake AT-245
 Lubricant (R134a) A/C HA-122
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches..... MA-21

M

Magnet clutch HA-129
 Main drive gear (M/T) MT-12
 Mainshaft (M/T) MT-12, 22
 Maintenance MA-1
 Maintenance (engine) MA-10
 MAJOR OVERHAUL AT-193
 Malfunction indicator lamp (MIL)..... EC-64
 Manual air conditioner - Wiring diagram
 (manual A/C)..... HA-40
 Manual transaxle number..... GI-40
 Manual transmission oil replacement MA-17
 MAP/BARO switch solenoid valve EC-386
 Mass air flow sensor (MAFS)..... EC-122
 Master cylinder (brake) BR-10
 Master cylinder (clutch) CL-7
 Meter..... EL-69
 METER - Wiring diagram EL-72
 MIL & Data link connectors circuit EC-539
 MIRROR - Wiring diagram EL-138

ALPHABETICAL INDEX

Mirror, door BT-43
 Mirror, out side BT-43
 Misfire EC-295
 Mode door control linkage adjustment
 (auto A/C) HA-107
 Mode door control linkage adjustment
 (manual A/C) HA-56
 Mode door motor (auto A/C) HA-115
 Model variation GI-38
 Molding - See Exterior BT-22
 M/T major overhaul MT-11
 M/T removal and installation MT-8
 Mud guard - See Exterior BT-22
 MULTI - Wiring diagram EL-235
 Multi-remote control system EL-232
 Multiport fuel injection (MFI) system EC-21
 Multiport fuel injection precautions GI-5

N

NATS (Nissan anti-theft system) EL-295
 NATS (Nissan anti-theft system)
 precautions GI-3
 NATS - Wiring diagram EL-297
 NVH troubleshooting (BR) BR-4
 NVH troubleshooting (CL) CL-3
 NVH troubleshooting (FA) FA-4
 NVH troubleshooting (M/T) MT-5
 NVH troubleshooting (RA) RA-3
 NVH troubleshooting (ST) ST-5
 NVIS (Nissan vehicle immobiliser
 system) EL-295
 NVIS (Nissan vehicle immobiliser sys-
 tem) precautions GI-3

O

Oil pan (engine) EM-13
 Oil pressure (engine) LC-5
 Oil pump (A/T) AT-214
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-34
 On board diagnostic system EC-50
 Operating cylinder (clutch) CL-8
 ORVR (On-board Refueling Vapor
 Recovery) EC-31
 Out side mirror BT-43
 Overdrive control switch AT-178
 Overrun clutch AT-239
 Overrun clutch solenoid valve AT-116, 127, 149
 Oxygen sensor monitor (O2S) (front) EC-67

P

P/ANT - Wiring diagram EL-128
 Park/Neutral position switch EC-493

Park/neutral position switch (M/T) MT-8
 Parking brake control BR-26
 Parking lamp EL-50
 PCV (positive crankcase ventilation) EC-36
 PGC/V - Wiring diagram EC-459
 PHONE - Wiring diagram EL-132
 Piston assembly EM-65
 Piston pin inspection EM-58
 Piston ring inspection EM-59
 Piston to bore clearance EM-60
 PNP switch AT-80
 POWER - Wiring diagram EL-8
 Power door lock EL-213
 Power door mirror EL-138
 Power seat EL-135
 Power steering fluid level MA-20, ST-7
 Power steering gear ST-14
 Power steering hydraulic pressure ST-9
 Power steering oil pressure switch EC-531
 Power steering oil pump ST-24
 Power steering system bleeding ST-7
 Power supply routing EL-7
 Power transistor EC-421
 Power transistor & ignition coil EC-415
 Power window EL-198
 Precautions (General) GI-3
 Pressure plate - See Clutch cover CL-10
 Pressure test (A/T) AT-61

R

Radiator LC-15
 Radio - See Audio EL-119
 Rear air spoiler BT-22
 Rear axle RA-7
 Rear bumper BT-9
 Rear disc brake BR-18
 Rear door BT-12
 Rear heated oxygen sensor
 (HO2S) EC-210, 219, 227, 235
 Rear heated oxygen sensor (HO2S)
 heater EC-268, 274
 Rear seat BT-32
 Rear seat belt RS-5
 Rear suspension RA-10
 Rear window defogger EL-110
 Refrigerant connection precaution HA-4
 Refrigerant general precaution HA-3
 Refrigerant lines HA-124
 Release bearing (clutch) CL-9
 Removal and installation (A/T) AT-190
 Reverse clutch AT-232
 Reverse idler shaft (M/T) MT-12
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) MT-8
 Reverse main gear (M/T) MT-12
 Revolution sensor (A/T) AT-90
 RO2H-L - Wiring diagram EC-210
 Road wheel size GI-41
 Roof trim BT-20

ALPHABETICAL INDEX

ROOM/L - Wiring diagram..... EL-282
 RRO2LH - Wiring diagram..... EC-249, 268
 RRO2RH - Wiring diagram..... EC-242

S

SAE J1930 terminology list..... GI-47
 SAE J1979 - Mode 1 - 7..... EC-50
 Seal - See Exterior..... BT-22
 SEAT - Wiring diagram..... EL-135
 Seat belt inspection..... MA-21, RS-6
 Seat belt pre-tensioner..... RS-9
 Seat belt pre-tensioner disposal..... RS-20
 Seat belt, front..... RS-4
 Seat belt, rear..... RS-5
 Seat, front..... BT-27
 Seat, rear..... BT-32
 Self-diagnostic results..... EC-64
 SHIFT - Wiring diagram..... AT-181
 Shift control components (M/T)..... MT-13
 Shift fork (M/T)..... MT-13
 Shift lever..... MT-10
 Shift lock system..... AT-180
 Shift schedule..... AT-285
 Shift solenoid valve A
 (A/T)..... AT-97, 107, 116, 127, 135
 Shift solenoid valve B
 (A/T)..... AT-97, 102, 116, 127, 139
 Shock absorber (rear)..... RA-11
 Side air bag..... RS-9
 Side trim..... BT-16
 SMJ (super multiple junction)..... Foldout
 Spare tire size..... GI-41
 Spark plug replacement..... MA-15
 Speedometer..... EL-69
 Spiral cable..... RS-15
 Spot lamp..... EL-68
 Spring (Wheelarch) height..... FA-6
 SROOF - Wiring diagram..... EL-134
 SRS - See Supplemental Restraint
 System..... RS-9
 SRS - Wiring diagram..... RS-31
 SRS Trouble diagnoses..... RS-26
 Stabilizer bar (front)..... FA-23
 Stall test (A/T)..... AT-58
 Standardized relay..... EL-5
 START - Wiring diagram..... EL-26
 Starter..... EL-28
 Starting system..... EL-25
 Steering gear and linkage inspection..... MA-20
 Steering linkage..... ST-14
 Steering switch..... EL-37
 Steering wheel and column..... ST-10
 Steering wheel play..... ST-6
 Steering wheel turning force..... ST-8
 Step lamp..... EL-289
 STEP/L - Wiring diagram..... EL-290
 Stop lamp..... EL-56
 STOP/L - Wiring diagram..... EL-56
 Striking rod (M/T)..... MT-13

Strut (front)..... FA-22
 Sun roof, electric..... EL-133
 Sunload sensor (auto A/C)..... HA-110
 Sunroof..... BT-33
 Supplemental Restraint System..... RS-9
 Supplemental restraint system - Wiring
 diagram..... RS-31
 S/VCSW - Wiring diagram..... EC-410
 SW/ILL - Wiring diagram..... EL-278
 Swirl control valve control solenoid
 valve..... EC-395
 Swirl control valve control vacuum
 check switch..... EC-410
 SWL/V - Wiring diagram..... EC-395
 Symbols and abbreviations..... GI-8
 Synchronizer (M/T)..... MT-12
 System readiness test (SRT) code..... EC-52

T

Tachometer..... EL-69
 Tail lamp..... EL-50
 TAIL/L - Wiring diagram..... EL-50
 Tank fuel temperature sensor..... EC-291
 TCM circuit diagram..... AT-12
 TCM inspection table..... AT-76
 THEFT - Wiring diagram..... EL-256
 Theft warning system..... EL-250
 Thermostat..... LC-14
 Three way catalyst..... EC-331, 334
 Three way catalyst function
 (Left bank)..... EC-331, 334
 (Right bank)..... EC-331, 334
 Three way catalyst precautions..... GI-5
 Throttle bodies..... EM-10
 Throttle position sensor (TPS)..... EC-150
 Throttle position switch..... AT-145, 179
 Throwout bearing - See Clutch release
 bearing..... CL-9
 Tie-rod..... ST-18
 Tie-rod ball joints..... ST-18
 Tightening torque of standard bolts..... GI-46
 Timing chain..... EM-20
 Tire rotation..... MA-19
 Tire size..... GI-41
 TLID - Wiring diagram..... EL-139
 Torque converter installation..... AT-191
 Torque convertor clutch solenoid
 valve..... AT-116, 120, 127
 Tow truck towing..... GI-45
 Transmission case (M/T)..... MT-11
 TRANSMT - Wiring diagram..... EL-310
 Transverse link (front)..... FA-24
 Tread-FR&RR (Dimensions)..... GI-41
 Trim..... BT-16
 Triple pressure switch..... HA-12
 Triple pressure switch (auto A/C)..... HA-106
 Triple pressure switch (manual A/C)..... HA-56
 Trouble diagnoses..... GI-32

ALPHABETICAL INDEX

Trunk lid BT-9
 Trunk lid opener - See Trunk lid..... BT-9
 Trunk lid opener, electric EL-139
 Trunk room lamp..... EL-68
 Trunk room trim BT-21
 TURN - Wiring diagram EL-53
 Turn signal lamp EL-52
 Two trip detection logic EC-50
 Two-pole lift GI-44

U

Under body BT-46

V

Vacuum cut valve EC-492
 Vacuum hose (brake system) BR-13
 Vacuum hose drawing (Engine control) EC-18
 Valve clearance..... EM-50
 Valve guide EM-41
 Valve seat EM-43
 Valve spring EM-44
 Vehicle identification number GI-39
 Vehicle recovery (freeing a stuck
 vehicle)..... GI-45
 Vehicle speed sensor (VSS) EC-365
 VENT/V - Wiring diagram EC-466, 477
 Viscosity number (SAE)..... MA-8
 Viscous coupling (FF A/T)..... AT-261
 Viscous coupling (FF M/T)..... MT-8, 12

W

WARN - Wiring diagram EL-82
 Warning buzzer..... EL-87
 Warning lamps EL-81
 Washer, front..... EL-95
 Water pump LC-10
 Water temperature gauge EL-69
 Weatherstrip - See Exterior BT-22
 Wheel alignment (front) FA-7
 Wheel alignment (rear) RA-6
 Wheel balance MA-19
 Wheel bearing (front axle) FA-7
 Wheel bearing (rear) RA-5
 Wheel hub (rear) RA-7
 Wheel sensors (ABS)..... BR-31
 Wheel size GI-41
 Wheelarch height..... FA-6
 Wheelbase (Dimensions) GI-41
 Wide open & closed throttle position
 switch..... EC-150
 Width (Dimensions) GI-41
 WINDOW - Wiring diagram EL-200
 Window antenna EL-129
 WIPER - Wiring diagram EL-97
 Wiper, front EL-95
 Wiring Diagram (Cell code) list..... EL-331
 Wiring diagrams GI-10
 Withdrawal lever (clutch) CL-9
 Wrist pin - See Piston pin inspection EM-58