

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

- A/C HFC134a (R134a) system
 - precaution HA-3, 130
- A/C HFC134a (R134a) system service
 - procedure HA-109, 200
- A/C HFC134a (R134a) system service
 - tools HA-12, 139
- A/C HFC134a system service equip-
 - ment precaution HA-8, 135
- A/C air flow HA-28, 150
- A/C component layout HA-21, 148
- A/C compressor clutch removal and
 - installation HA-114, 205
- A/C compressor description HA-142
- A/C compressor precaution HA-8, 135
- A/C compressor special service
 - tool HA-11, 138
- A/C control linkage adjustment
 - (manual A/C) HA-168, 172, 176
- A/C control operation (auto A/C) HA-25
- A/C control operation (manual A/C) HA-149
- A/C diagnostic work flow (auto A/C) HA-50
- A/C diagnostic work flow (manual
 - A/C) HA-160
- A/C harness layout (auto A/C) HA-31
- A/C harness layout (manual A/C) HA-152
- A/C lubricant (R134a) HA-111, 202
- A/C operational check HA-51, 161
- A/C performance chart HA-86, 193
- A/C performance test diagnoses HA-84, 191
- A/C relay HA-82, 189
- A/C self-diagnoses (auto A/C) HA-40
- A/C service data specification HA-129, 220
- A/C system description (auto A/C) HA-25
- A/C trouble diagnoses (auto A/C) HA-31
- A/C trouble diagnoses (manual A/C) HA-152
- A/C, A - Wiring diagram HA-34
- A/C, M - Wiring diagram HA-156
- A/T - Wiring diagram - AT - 1ST AT-147
- A/T - Wiring diagram - AT - 2ND AT-153
- A/T - Wiring diagram - AT - 3RD AT-159
- A/T - Wiring diagram - AT - 4TH AT-166
- A/T - Wiring diagram - AT -
 - BA/FTS AT-208, 258
- A/T - Wiring diagram - AT -
 - ENG SS AT-141, 264
- A/T - Wiring diagram - AT - FTS AT-130
- A/T - Wiring diagram - AT - LPSV ... AT-178, 269
- A/T - Wiring diagram - AT - MAIN AT-119
- A/T - Wiring diagram - AT -
 - NONDTC AT-277
- A/T - Wiring diagram - AT -
 - OVRCSV AT-203, 248
- A/T - Wiring diagram - AT - PNP/SW AT-124
- A/T - Wiring diagram - AT - SSV/A .. AT-184, 238
- A/T - Wiring diagram - AT - SSV/B .. AT-189, 243
- A/T - Wiring diagram - AT - TCV AT-173, 253
- A/T - Wiring diagram - AT - TPS AT-195, 230
- A/T - Wiring diagram - AT -
 - VSS/AT AT-136, 220
- A/T - Wiring diagram - AT -
 - VSSMTR AT-215, 225
- A/T - Wiring diagram AT-16
- A/T IND - Wiring diagram EL-151
- A/T control EC-482
- A/T diagnosis communication line .. EC-395, 506
- A/T fluid temperature sensor AT-128
- A/T self-diagnoses AT-40, 49, 55, 60
- A/T shift lock system - Wiring
 - diagram AT-337
- A/T shift lock system AT-336
- A/T trouble diagnoses AT-66, 73
- AAC/V - Wiring diagram EC-327, 471
- ABS (anti-lock brake system) BR-40
- ABS - Wiring diagram BR-45
- ABS sensor rotor AX-19
- AP/SEN - Wiring diagram EC-405
- ASCD (automatic speed control
 - device) EL-216
- ASCD - Wiring diagram EL-220
- AT indicator lamp EL-151
- AT/C - Wiring diagram EC-483
- ATDIAG - Wiring diagram EC-396, 507
- AUDIO - Wiring diagram EL-187
- Absolute pressure sensor EC-404
- Accelerator control system FE-3
- Air bag disposal RS-22
- Air bag precautions GI-3
- Air bag RS-10
- Air bleeding (hydraulic clutch) CL-6
- Air bleeding for brake system BR-8
- Air cleaner filter replacement MA-20
- Air conditioner cut control EC-31
- Air flow meter - See Mass air flow
 - sensor EC-134
- Air mix door control linkage
 - adjustment HA-65, 172
- Air mix. door motor HA-63, 108, 169
- Air spoiler, rear BT-32
- Alternator SC-22
- Ambient sensor HA-95
- Angular tightening application EM-3
- Antenna - See Power antenna EL-198
- Anti-lock brake system - Wiring
 - diagram BR-45
- Audio and A/C control removal and
 - installation - See Instrument panel BT-20
- Audio EL-183
- Auto air conditioner - Wiring diagram HA-34
- Automatic amplifier HA-38, 54
- Automatic speed control system - See
 - ASCD EL-216
- Automatic transmission fluid
 - replacement MA-27
- Automatic transmission number GI-41
- Auxiliary air control (AAC) valve EC-324, 469

ALPHABETICAL INDEX

B

B/COMP - Wiring diagram	EL-141
BACK/L - Wiring diagram	EL-89
Back-up lamp switch (M/T)	MT-9
Back-up lamp	EL-89
Ball joint (front)	SU-13
Basic inspection	EC-90
Battery	SC-3
Baulk ring (M/T)	MT-14
Blower motor	HA-69, 178
Blower resistor	HA-178
Board computer	EL-139
Board-on lift	GI-42
Body alignment	BT-54
Brake booster	BR-22
Brake control valve (Proportioning valve)	BR-11
Brake fluid change	BR-7
Brake fluid level and line check	BR-7
Brake fluid level	MA-29
Brake hydraulic line	BR-9
Brake inspection	MA-30
Brake lines and cables inspection	MA-29
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-417
Bumper, front	BT-5
Bumper, rear	BT-8

C

CHARGE - Wiring diagram	SC-20
CHIME - Wiring diagram	EL-155
CIGAR - Wiring diagram	EL-172
CKPS - Wiring diagram	EC-295, 452
CLOCK - Wiring diagram	EL-173
CONSULT for ABS	BR-50
CONSULT for engine	EC-70
COOL/F - Wiring diagram	EC-355
Camshaft inspection	EM-40
Camshaft position sensor (PHASE)	EC-303
Canister - See EVAP canister	EC-32
Charging system	SC-19
Chassis and body maintenance	MA-25
Cigarette lighter	EL-172
Circuit breaker	EL-17
Clearance lamp	EL-85
Clock	EL-173
Closed throttle position switch	EC-333, 477
Clutch cover	CL-18
Clutch disc	CL-18
Clutch fluid level	MA-25
Clutch master cylinder	CL-9
Clutch operating cylinder	CL-12
Clutch pedal	CL-6
Clutch release bearing	CL-16
Clutch release mechanism	CL-16
Clutch withdrawal lever	CL-16

Coil spring (front)	SU-9
Coil spring (rear)	SU-22
Collision diagnosis	RS-59
Combination lamp, rear, removal and installation	BT-32
Combination meter removal and installation - See Instrument panel	BT-20
Combination meter	EL-123
Combination switch	EL-36
Compression pressure	EM-11
Compressor clutch removal and installation	HA-114, 205
Compressor description	HA-142
Compressor precaution	HA-8, 135
Compressor special service tool	HA-11, 138
Connecting rod bearing clearance	EM-67
Connecting rod bushing clearance	EM-67
Connecting rod	EM-62
Console box - See Instrument panel	BT-20
Control valve (A/T)	AT-378
Converter housing installation	AT-350, 444
Coolant mixture ratio	MA-14
Coolant replacement	MA-16
Cooling circuit (engine)	LC-10
Cooling fan control system	LC-19
Cooling fan control	EC-351
Coupling sleeve (M/T)	MT-14
Crankcase emission control system - See Positive crankcase ventilation	EC-35
Crankshaft position sensor (POS) chipping	EC-387
Crankshaft position sensor (POS) ..	EC-295, 451
Crankshaft position sensor (REF)	EC-380
Crankshaft	EM-64
Cruise control - See ASCD	EL-216
Cylinder block	EM-59
Cylinder head bolt tightening	EM-47
Cylinder head	EM-37

D

DEF - Wiring diagram	EL-175
DTC work support	EC-82
Data link connector for Consult	EC-70
Detonation sensor - See Knock sensor	EC-289
Diagnosis sensor unit	RS-15
Diagnostic trouble code (DTC) for OBD system	EC-7, 58
Diagnostic trouble code (DTC) inspection priority chart	EC-103
Differential gear (FF A/T)	AT-423
Differential gear (FF M/T)	MT-14, 28
Dimensions	GI-41
Dome light - See Interior lamp	EL-109
Door glass	BT-12
Door lock	BT-16
Door mirror	BT-52
Door trim	BT-27

ALPHABETICAL INDEX

Door, front BT-11
 Door, rear BT-11
 Drive plate runout EM-68
 Drive shaft (front) AX-9
 Dropping resistor (A/T) AT-176, 267

E

ECM input/output signal EC-114
 ECTS - Wiring diagram EC-148
 EMNT - Wiring diagram EC-540
 EVAP canister purge volume control
 solenoid valve EC-32, 314, 459
 EVAP canister EC-33
 EVAP vapor lines inspection MA-24
 Electric sunroof EL-202
 Electrical diagnoses GI-21
 Electrical ignition system EC-30
 Electrical unit EL-425
 Electrical units location EL-369
 Engine compartment BT-55
 Engine control circuit diagram EC-24
 Engine control component parts
 location EC-20
 Engine control module (ECM) EC-341
 Engine control system diagram and
 chart EC-25
 Engine coolant temperature sensor
 (ECTS) EC-146
 Engine fail-safe system EC-104
 Engine mounting control (Front) EC-539
 Engine oil filter replacement MA-21
 Engine oil precautions GI-7
 Engine oil replacement MA-21
 Engine outer component parts EM-8
 Engine removal EM-56
 Engine room - See Engine
 compartment BT-55
 Engine serial number GI-40
 Evaporative emission (EVAP) system EC-32
 Exhaust system inspection MA-25
 Exhaust system FE-9
 Exterior BT-32

F

F/FOG - Wiring diagram EL-91
 F/PUMP - Wiring diagram EC-534
 F02H-L - Wiring diagram EC-208, 417, 426
 F02H-R - Wiring diagram EC-207, 416, 425
 FR02LH - Wiring diagram EC-162, 188, 200
 FR02RH - Wiring diagram EC-161, 187, 199
 FUELLH - Wiring diagram EC-264, 272
 FUEL RH - Wiring diagram EC-263, 271
 Fan control amp. HA-71
 Fan switch HA-178
 Final drive (FF A/T) AT-423
 Final drive (FF M/T) MT-14, 28

Finisher, interior - See Trim BT-24
 Finisher, trunk lid BT-31
 Floor trim BT-24
 Fluid temperature sensor (A/T) AT-128
 Fluids MA-13
 Flywheel (clutch) CL-18
 Flywheel runout EM-68
 Fog lamp, front, removal and
 installation BT-5
 Fog lamp, front EL-90
 Fork rod (M/T) MT-15
 Forward clutch AT-401
 Freeze frame data EC-46, 59
 Front axle AX-2
 Front bumper BT-5
 Front combination lamp removal and
 installation BT-5
 Front disc brake BR-25
 Front door BT-11
 Front fog lamp removal and
 installation BT-5
 Front fog lamp EL-90
 Front heated oxygen sensor (HO2S)
 (Left bank) EC-158, 168, 176,
 184, 197, 415
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-158, 168, 176,
 184, 197, 415
 Front heated oxygen sensor heater
 (Left bank) EC-205, 424
 Front heated oxygen sensor heater
 (Right bank) EC-205, 424
 Front seat belt RS-5
 Front seat BT-38
 Front suspension SU-2
 Front washer EL-163
 Front wiper EL-163
 Fuel cut control (at no load & high
 engine speed) EC-32
 Fuel gauge EL-123
 Fuel injection system (Left bank) EC-261, 269
 Fuel injection system (Right bank) . EC-261, 269
 Fuel line inspection MA-20
 Fuel precautions GI-8
 Fuel pressure check EC-37
 Fuel pressure regulator EC-37
 Fuel pressure release EC-36
 Fuel pump EC-533
 Fuel system FE-4
 Fuel tank vacuum relief valve EC-33
 Fuse block EL-423
 Fuse EL-17
 Fusible link EL-17

G

Garage jack and safety stand GI-43
 Gauges EL-123
 Gear components (M/T) MT-14

ALPHABETICAL INDEX

Generator - See Alternator SC-22
 Generic scan tool (GST) EC-84
 Glass BT-12
 Grease MA-13
 Ground distribution EL-18

H

H/LAMP - Wiring diagram EL-42, 49
 HFC134a.(R134a).system.precaution.. HA-3, 130
 HFC134a (R134a) system service
 procedure HA-109, 200
 HFC134a (R134a) system service
 tools HA-12, 139
 HFC134a system service equipment
 precaution HA-8, 135
 HLC - Wiring diagram EL-169
 HORN - Wiring diagram EL-171
 HSEAT - Wiring diagram EL-213
 Harness connector EL-5
 Harness layout EL-377
 Hazard warning lamp EL-95
 Headlamp aiming control EL-71
 Headlamp removal and installation BT-5
 Headlamp washer EL-168
 Headlamp EL-41, 47
 Headlining - See Roof trim BT-29
 Heated seat BT-40, EL-213
 Height (Dimensions) GI-41
 High clutch AT-396
 Hood BT-5
 Horn EL-171
 How to erase DTC for OBD system ... EC-56, 59

I

IACV-AAC valve EC-324, 469
 IATS - Wiring diagram EC-143, 411
 IGN/SG - Wiring diagram EC-371, 496
 ILL - Wiring diagram EL-104
 INJECT - Wiring diagram EC-524
 Identification plate GI-40
 Idle air control valve (IACV) EC-324, 469
 Ignition control system EC-369, 495
 Illumination EL-102
 In vehicle sensor HA-98
 Injector removal and installation EC-38
 Injector EC-523
 Input shaft (FF M/T) MT-14, 19
 Instrument panel BT-20
 Intake air temperature sensor EC-141, 410
 Intake door control linkage
 adjustment HA-68, 176
 Intake door motor HA-66, 173
 Intake manifold EM-10
 Intake sensor HA-105
 Interior lamp on-off control EL-110
 Interior lamp EL-109

Interior BT-24

J

Jacking points GI-43
 Joint connector (J/C) EL-426
 Junction box (J/B) EL-423

K

KS - Wiring diagram EC-291
 Keyless entry system - See Multi-re-
 mote control system EL-271
 Knock sensor (KS) EC-289
 Knuckle spindle AX-5

L

LOAD - Wiring diagram EC-552
 Length (Dimensions) GI-41
 License lamp EL-85
 Lifting points GI-44
 Line pressure solenoid valve AT-176, 267
 Line pressure test (A/T) AT-82
 Liquid gasket application EM-3
 Location of electrical units EL-369
 Lock, door BT-16
 Low and reverse brake AT-406
 Lubricant (R134a) A/C HA-111, 202
 Lubricants MA-13
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood
 latches MA-31

M

M/T major overhaul MT-12
 M/T removal and installation MT-10
 MAFS - Wiring diagram EC-137
 MAIN - Wiring diagram EC-127
 MAJOR OVERHALL AT-352
 METER - Wiring diagram EL-130
 MIL & Data link connectors circuit EC-558
 MIL/DL - Wiring diagram EC-558
 MIRROR - Wiring diagram EL-204
 Magnet clutch HA-77, 114, 205
 Mainshaft (M/T) MT-14, 24
 Maintenance (engine) MA-15
 Malfunction indicator lamp (MIL) EC-60
 Manual air conditioner - Wiring
 diagram HA-156
 Manual transmission oil replacement MA-26
 Mass air flow sensor (MAFS) EC-134
 Master cylinder (brake) BR-14
 Master cylinder (clutch) CL-9
 Meter EL-123

ALPHABETICAL INDEX

Mirror defogger EL-174
 Mirror, door BT-52
 Misfire EC-281
 Mode door control linkage
 adjustment HA-62, 168
 Mode door motor HA-57, 166
 Model variation GI-38
 Molding - See Exterior BT-32
 Multi-remote control system EL-271
 Multiport fuel injection (MFI) system EC-28
 Multiport fuel injection precautions GI-6

N

NATS (Nissan Anti-theft System)
 precautions GI-3
 NATS (Nissan Anti-theft System) EL-287
 NATS - Wiring diagram EL-290
 NVH troubleshooting (AX) AX-3
 NVH troubleshooting (BR) BR-6
 NVH troubleshooting (MT) MT-6
 NVH troubleshooting (ST) ST-5
 NVH troubleshooting (SU) SU-16
 NVH troubleshooting CL CL-4
 NVIS (Nissan vehicle immobiliser sys-
 tem) precautions GI-3

O

Oil change (capacity) MA-13
 Oil pan (engine) EM-12
 Oil pressure (engine) LC-4
 Oil pump (A/T) AT-374
 Oil pump (engine) LC-4
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (engine) EM-34
 On board diagnostic system EC-44
 Operating cylinder (clutch) CL-12
 Overdrive control switch AT-323
 Overrun clutch solenoid valve AT-201, 246
 Overrun clutch AT-401

P

P/ANT - Wiring diagram EL-199
 PCV (positive crankcase ventilation) EC-35
 PGC/V - Wiring diagram EC-316, 460
 PHASE - Wiring diagram EC-305
 PNP/SW - Wiring diagram EC-400, 511
 POS - Wiring diagram EC-297, 389
 POWER - Wiring diagram EL-10
 PST/SW - Wiring diagram EC-544
 Park/Neutral position switch EC-398, 510
 Park/neutral position switch (A/T) AT-122
 Park/neutral position switch (M/T) MT-9
 Parking brake control BR-38
 Parking lamp EL-85

Piston assembly EM-68
 Piston pin inspection EM-60
 Piston ring inspection EM-61
 Piston to bore clearance EM-63
 Power antenna EL-198
 Power door mirror EL-204
 Power seat EL-209
 Power steering fluid level MA-31, ST-7
 Power steering gear ST-15
 Power steering hydraulic pressure ST-9
 Power steering oil pressure switch EC-543
 Power steering oil pump ST-25
 Power steering system bleeding ST-7
 Power supply routing EL-9
 Power transistor & ignition coil EC-369, 495
 Power window EL-241
 Precautions (General) GI-4
 Pressure plate - See Clutch cover CL-18
 Pressure test (A/T) AT-82

R

R/FOG - Wiring diagram EL-93
 R02H-L - Wiring diagram EC-257
 REF - Wiring diagram EC-383
 RO2H-R - Wiring diagram EC-256
 ROOM/L - Wiring diagram EL-112
 RR02LH - Wiring diagram EC-217, 228, 239,
 249, 433, 442
 RR02RH - Wiring diagram EC-216, 227, 238,
 248, 432, 441
 Radiator LC-18, 20
 Radio - See Audio EL-183
 Rear air spoiler BT-32
 Rear axle (disc brake type) AX-19
 Rear axle AX-17
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-32
 Rear disc brake BR-29
 Rear door BT-11
 Rear fog lamp EL-93
 Rear heated oxygen sensor (HO2S)
 heater EC-254, 440
 Rear heated oxygen sensor (HO2S) EC-212,
 223, 234, 245, 431
 Rear seat belt RS-7
 Rear seat BT-41
 Rear suspension SU-16
 Rear window defogger EL-174
 Rear window BT-50
 Refrigerant connection precaution HA-5, 132
 Refrigerant discharging evacuating
 charging HA-109
 Refrigerant general precaution HA-4, 131
 Refrigerant lines HA-121, 212
 Refrigeration cycle HA-15, 142
 Release bearing (clutch) CL-16
 Removal and installation (A/T) AT-349

ALPHABETICAL INDEX

Reverse clutch AT-393
 Reverse idler shaft (M/T) MT-14
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) MT-9
 Reverse main gear (M/T) MT-14
 Revolution sensor (A/T) AT-134, 218
 Road wheel size GI-41
 Roof trim BT-29
 Room lamp - See Interior lamp EL-109

S

S/LOCK - Wiring diagram EL-254
 S/SIG - Wiring diagram EC-530
 SAE J1930 terminology list GI-48
 SEAT - Wiring diagram EL-210
 SHIFT - Wiring diagram AT-337
 SMJ (super multiple junction) EL-421
 SROOF - Wiring diagram EL-202
 SRS - See Supplemental Restraint
 System RS-10
 START - Wiring diagram SC-13
 STOP/L - Wiring diagram EL-88
 SWL/V - Wiring diagram EC-344, 488
 Seal - See Exterior BT-32
 Seat belt inspection MA-32
 Seat belt pre-tensioner disposal RS-22
 Seat belt pre-tensioner RS-3
 Seat belt, front RS-5
 Seat belt, rear RS-7
 Seat, front BT-38
 Seat, rear BT-41
 Shift control components (M/T) MT-15
 Shift fork (M/T) MT-15
 Shift lever MT-12
 Shift lock system AT-336
 Shift schedule AT-450
 Shift solenoid valve A (A/T) AT-182, 236
 Shift solenoid valve B (A/T) AT-187, 241
 Shock absorber (front) SU-10
 Shock absorber (rear) SU-22
 Side air bag RS-21
 Side trim BT-24
 Spare tire size GI-41
 Spark plug replacement MA-22
 Speedometer EL-123
 Spiral cable RS-17
 Spring (Wheelarch) height SU-6
 Stabilizer bar (front) SU-11
 Stall test (A/T) AT-78
 Standardized relay EL-7
 Start signal EC-529
 Starter SC-15
 Starting system SC-12
 Steering gear and linkage inspection MA-31
 Steering linkage ST-15
 Steering switch EL-39
 Steering wheel and column ST-10
 Steering wheel play ST-6

Steering wheel turning force ST-8
 Stop lamp EL-88
 Striking rod (M/T) MT-15
 Strut (front) SU-9
 Strut (rear) SU-20
 Sunload sensor HA-102
 Sunroof, electric EL-202
 Sunroof BT-42
 Super lock EL-251
 Supplemental Restraint System RS-10
 Supplemental restraint system - Wiring
 diagram RS-35
 Swirl control valve control solenoid
 valve EC-344, 486
 Symbols and abbreviations GI-9
 Symptom matrix chart EC-105
 Synchronizer (M/T) MT-14
 System readiness test (SRT) code EC-47

T

TAIL/L - Wiring diagram EL-86
 TCM circuit diagram AT-16
 TCM inspection table AT-115
 TFTS - Wiring diagram EC-278, 448
 TP/SW - Wiring diagram EC-336, 478
 TPS - Wiring diagram EC-154
 TURN - Wiring diagram EL-98
 Tachometer EL-123
 Tail lamp EL-85
 Tank fuel temperature sensor EC-276, 447
 Thermostat LC-16
 Three way catalyst function (Left
 bank) EC-309
 Three way catalyst function (Right
 bank) EC-309
 Three way catalyst precautions GI-6
 Throttle bodies EM-10
 Throttle position sensor (TPS) EC-151
 Throttle position sensor adjustment EC-90
 Throttle position switch AT-192, 228, 323,
 EC-333, 477
 Throwout bearing - See Clutch release
 bearing CL-16
 Tie-rod ball joints ST-19
 Tie-rod ST-15
 Tightening torque of standard bolts GI-47
 Timing chain EM-18
 Tire rotation MA-29
 Tire size GI-41
 Torque converter clutch solenoid
 valve AT-171, 251
 Torque converter installation AT-350, 444
 Tow truck towing GI-45
 Transaxle serial number GI-41
 Transmission case (M/T) MT-13
 Tread-FR&RR (Dimensions) GI-41
 Trim BT-24
 Trouble diagnoses GI-31

ALPHABETICAL INDEX

Trunk lid finisher	BT-31
Trunk lid opener - See Trunk lid	BT-8
Trunk lid trim	BT-31
Trunk lid	BT-8
Trunk room trim	BT-31
Turn signal lamp	EL-95
Two trip detection logic	EC-44
Two-pole lift	GI-44

u

Under body	BT-57
------------------	-------

v

VIAS - Wiring diagram	EC-519
VIAS	EC-517
VSS - Wiring diagram	EC-322, 466
Vacuum hose (brake system)	BR-24
Vacuum hose drawing (Engine control)	EC-26
Valve clearance	EM-51
Valve guide	EM-42
Valve seat	EM-43
Valve spring	EM-44
Variable induction air control system (VIAS)	EC-517
Vehicle speed sensor (VSS)	EC-320, 465
Viscosity number (SAE)	MA-14
Viscous coupling (FF A/T)	AT-423
Viscous coupling (FF M/T)	MT-9

w

WARN - Wiring diagram	EL-146
WINDOW - Wiring diagram	EL-244
WIPER - Wiring diagram	EL-165
Warning chime	EL-153
Warning lamps	EL-145
Washer, front	EL-163
Water pump	LC-12
Water temperature gauge	EL-123
Weatherstrip - See Exterior	BT-32
Wheel alignment (front)	SU-6
Wheel alignment (rear)	SU-18
Wheel balance	MA-27
Wheel bearing (front)	AX-3
Wheel bearing (rear)	AX-18
Wheel hub (front)	AX-5
Wheel hub (rear)	AX-19
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-41
Wide open & closed throttle position switch	EC-151
Width (Dimensions)	GI-41
Window, rear	BT-50
Windshield	BT-50
Wiper, front	EL-163
Wiring diagram (cell code) list	EL-418
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-16
Wrist pin - See Piston pin inspection	EM-60