

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-432	A/C self-diagnoses (auto A/C).....	HA-37
ABS (anti-lock brake system).....	BR-39	A/C service data specification (auto A/C).....	HA-126
ABS - Wiring diagram	BR-44	A/C service data specification (manual A/C).....	HA-215
ABS sensor rotor	AX-19	A/C system description (auto A/C)	HA-25
ABS/TCS C/U signal	EC-484	A/C trouble diagnoses (auto A/C)	HA-29
Absolute pressure sensor	EC-163	A/C trouble diagnoses (manual A/C)	HA-149
A/C air flow (auto A/C)	HA-27	A/C, A - Wiring diagram (auto A/C).....	HA-32
A/C air flow (manual A/C)	HA-147	A/C, M - Wiring diagram (manual A/C)	HA-152
A/C component layout (auto A/C)	HA-21	Accelerator control system	FE-3
A/C component layout (manual A/C)	HA-145	Air bag	RS-16
A/C compressor clutch removal and installation (auto A/C).....	HA-113	Air bag disposal.....	RS-30
A/C compressor clutch removal and installation (manual A/C).....	HA-202	Air bag precautions	GI-3
A/C compressor description (manual A/C).....	HA-139	Air bleeding (hydraulic clutch)	CL-7
A/C compressor precaution (auto A/C)	HA-8	Air bleeding for brake system	BR-9
A/C compressor precaution (manual A/C).....	HA-132	Air cleaner filter replacement.....	MA-17
A/C compressor special service tool (auto A/C).....	HA-11	Air conditioner cut control	EC-31
A/C compressor special service tool (manual A/C).....	HA-135	Air flow meter - See Mass air flow sensor	EC-155
A/C control linkage adjustment (manual A/C)	HA-165, 184, 187	Air mix door control linkage adjustment (auto A/C).....	HA-63
A/C control operation (auto A/C)	HA-25	Air mix door control linkage adjustment (manual A/C).....	HA-184
A/C control operation (manual A/C)	HA-146	Air mix. door motor (auto A/C).....	HA-61, 107
A/C diagnostic work flow (auto A/C)	HA-47	Air mix. door motor (manual A/C)	HA-181
A/C diagnostic work flow (manual A/C).....	HA-156	Air spoiler, rear.....	BT-40
A/C HFC134a (R134a) system precaution (auto A/C).....	HA-3	Alternator	SC-30
A/C HFC134a (R134a) system precaution (manual A/C).....	HA-127	Ambient sensor (auto A/C).....	HA-94
A/C HFC134a (R134a) system service procedure (auto A/C)	HA-108	Angular tightening application.....	EM-3
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-196	Antenna - See Power antenna	EL-185
A/C HFC134a (R134a) system service tools (auto A/C).....	HA-12	Anti-lock brake system - See ABS	BR-39
A/C HFC134a (R134a) system service tools (manual A/C)	HA-136	Anti-lock brake system - Wiring diagram	BR-44
A/C HFC134a system service equipment precaution (auto A/C)	HA-8	AP/SEN - Wiring diagram	EC-165
A/C HFC134a system service equipment precaution (manual A/C).....	HA-132	ASCD (automatic speed control device)	EL-203
A/C lubricant (R134a) (auto A/C)	HA-110	ASCD - Wiring diagram	EL-207
A/C lubricant (R134a) (manual A/C)	HA-198	A/T - Wiring diagram	AT-16
A/C operational check (auto A/C)	HA-48	A/T - Wiring diagram - AT - FTS	AT-110
A/C operational check (manual A/C).....	HA-157	A/T - Wiring diagram - AT - MAIN.....	AT-99
A/C performance chart (auto A/C)	HA-85	A/T - Wiring diagram - AT - PNP/SW.....	AT-104
A/C performance chart (manual A/C).....	HA-175	A/T - Wiring diagram - AT - VSS A/T	AT-116
A/C performance test diagnoses (auto A/C).....	HA-83	A/T control	EC-446
A/C performance test diagnoses (manual A/C).....	HA-173	A/T diagnosis communication line.....	EC-594
A/C relay (auto A/C)	HA-81	A/T fluid temperature sensor.....	AT-108
A/C relay (manual A/C)	HA-194	A/T self-diagnoses	AT-41, 49, 50
		A/T shift lock system	AT-270
		A/T shift lock system - Wiring diagram	AT-271
		A/T trouble diagnoses	AT-55
		A/T Wiring diagram - AT - ENG SS	AT-121
		A/T Wiring diagram AT - 1ST	AT-127
		A/T Wiring diagram AT - 2ND	AT-133
		A/T Wiring diagram AT - 3RD	AT-139
		A/T Wiring diagram AT - 4TH.....	AT-146
		A/T Wiring diagram AT - BA/FTS.....	AT-198
		A/T Wiring diagram AT - LPSV	AT-168
		A/T Wiring diagram AT - NONDTC	AT-216
		A/T Wiring diagram AT - OVRCSV	AT-193
		A/T Wiring diagram AT - SSV/A	AT-174
		A/T Wiring diagram AT - SSV/B	AT-179
		A/T Wiring diagram AT - TCCSIG	AT-159

ALPHABETICAL INDEX

A/T Wiring diagram AT - TCVAT-153
A/T Wiring diagram AT - TPS.....AT-185
A/T Wiring diagram AT - VSSMTR.....AT-205
AT/C - Wiring diagram.....EC-447
ATDIAG - Wiring diagram.....EC-595
AudioEL-171
AUDIO - Wiring diagram.....EL-174
Audio and A/C control removal and
installation - See Instrument panelBT-28
Auto air conditioner - Wiring diagram
(auto A/C).....HA-32
Automatic amplifier (auto A/C)HA-35, 51
Automatic speed control system - See
ASCDEL-203
Automatic transmission fluid
replacement.....MA-22
Automatic transmission numberGI-43
Auxiliary air control (AAC) valveEC-429

B

Back-up lampEL-66
Back-up lamp switch (M/T)MT-9
BACK/L - Wiring diagram.....EL-66
Ball joint (front)SU-13
Base idle air volume initialiging.....EC-67
Basic inspectionEC-111
BatterySC-4
Battery/Starting/Charging System
Tester.....SC-7, 13, 23
Baulk ring (M/T).....MT-14
Blower and cooling unit (auto A/C).....HA-118
Blower and cooling unit (manual A/C)HA-207
Blower motor (auto A/C).....HA-67
Blower motor (manual A/C)HA-167
Blower resistor (manual A/C)HA-167
Board-on liftGI-45
Body alignmentBT-63
Brake boosterBR-21
Brake control valve (Proportioning
valve)BR-12
Brake fluid changeBR-8
Brake fluid levelMA-25
Brake fluid level and line checkBR-8
Brake hydraulic lineBR-10
Brake inspectionMA-25
Brake lines and cables inspectionMA-25
Brake master cylinderBR-15
Brake pedalBR-13
Bulb specificationsEL-380
Bumper, frontBT-13
Bumper, rearBT-16
BYP/S/V - Wiring diagramEC-578, 585

C

Camshaft inspectionEM-41
Camshaft position sensor (PHASE).....EC-351

Canister-See EVAP canisterEC-32
CHARGE - Wiring diagramSC-22
Charging systemSC-21
Chassis and body maintenanceMA-21
CHIME - Wiring diagram.....EL-138
CIGAR - Wiring diagram.....EL-157
Cigarette lighter.....EL-157
Circuit breaker.....EL-17
Closed loop control (Left bank).....EC-476
Closed loop control (Right bank)EC-476
Closed throttle position switchEC-438
Clutch coverCL-15
Clutch discCL-15
Clutch fluid level.....MA-21
Clutch master cylinderCL-8
Clutch operating cylinderCL-10
Clutch pedal.....CL-6
Clutch release bearing.....CL-13
Clutch release mechanismCL-13
Clutch withdrawal lever.....CL-13
Coil spring (front).....SU-9
Coil spring (rear)SU-22
Collision diagnosis.....RS-67
Combination lamp, front, removal and
installationBT-13
Combination lamp, rear, removal and
installationBT-40
Combination meterEL-111
Combination meter removal and instal-
lation - See Instrument panel.....BT-28
Combination switch.....EL-30
Component Location (auto A/C).....HA-29
Component Location (manual A/C).....HA-149
Compression pressureEM-12
Compressor clutch removal and instal-
lation (auto A/C)HA-113
Compressor clutch removal and instal-
lation (manual A/C)HA-202
Compressor description (manual A/C)HA-139
Compressor precaution (auto A/C)HA-8
Compressor precaution (manual A/C).....HA-132
Compressor special service tool (auto
A/C)HA-11
Compressor special service tool
(manual A/C).....HA-135
Connecting rod.....EM-62
Connecting rod bearing clearance.....EM-67
Connecting rod bushing clearanceEM-67
Connector inspection.....GI-21
Console box - See Instrument panel.....BT-28
CONSULT for ABSBR-50
CONSULT for engineEC-91
CONSULT for TCSBR-93
Control lever (M/T)MT-12
Control valve (A/T)AT-312
Converter housing installation.....AT-375
COOL/F - Wiring diagramEC-316, 492
Coolant mixture ratio.....MA-12
Coolant replacement.....MA-14
Cooling circuit (engine).....LC-9
Cooling fan controlEC-489

ALPHABETICAL INDEX

Cooling fan control systemLC-18
Coupling sleeve (M/T)MT-14
"Crankcase emission control system -
See positive crankcase ventilation"EC-47
CrankshaftEM-64
Crankshaft position sensor (POS)EC-343
Crankshaft position sensor (POS)
chippingEC-523
Crankshaft position sensor (REF)EC-517
Crash zone sensorRS-22
Cruise control - See ASCDEL-203
Cylinder blockEM-59
Cylinder headEM-38
Cylinder head bolt tighteningEM-48

D

Data link connector for ConsultEC-91
Daytime light systemEL-45
Daytime running light - See Daytime
light systemEL-45
DEF - Wiring diagramEL-160
Desiccant Assembly (auto A/C)HA-119
Desiccant Assembly (manual A/C)HA-208
Detonation sensor - See Knock sensorEC-338
Diagnosis sensor unitRS-21
Diagnostic trouble code (DTC) for OBD
systemEC-8, 70
Diagnostic trouble code (DTC) inspec-
tion priority chartEC-124
Differential gear (FF A/T)AT-356
Differential gear (FF M/T)MT-14, 28
DimensionsGI-44
D/LOCK - Wiring diagramEL-242
Dome light - See Interior lampEL-86
Door glassBT-20
Door lockBT-24
Door mirrorBT-61
Door trimBT-35
Door, frontBT-19
Door, rearBT-19
Drive plate runoutEM-68
Drive shaft (front)AX-9
Dropping resistor (A/T)AT-166
DTC work supportEC-103
DTRL - Wiring diagramEL-49

E

ECM input/output signalEC-135
ECTS - Wiring diagramEC-176, 193
Electric sun roofEL-188
Electrical diagnosesGI-24
Electrical ignition systemEC-30
Electrical unitFoldout
Electrical units locationEL-353
EMNT - Wiring diagramEC-626
Engine compartmentBT-64

Engine control circuit diagramEC-24
Engine control component parts
locationEC-20
Engine control module (ECM)EC-449
Engine control system diagram and
chartEC-25
Engine coolant temperature sensor
(ECTS)EC-174, 191
Engine fail-safe systemEC-125
Engine mounting control (Front)EC-625
Engine oil filter replacementMA-18
Engine oil precautionsGI-7
Engine oil replacementMA-17
Engine outer component partsEM-9
Engine removalEM-56
Engine room - See Engine
compartmentBT-64
Engine serial numberGI-43
EVAP canisterEC-33
EVAP canister purge volume control
solenoid valveEC-32, 377, 533
EVAP canister vent control
valveEC-383, 545, 564
EVAP control system (small leak)
diagnosisEC-362, 402, 531
EVAP control system pressure sensorEC-390
EVAP control system purge flow moni-
toring diagnosisEC-553
EVAP vapor lines inspectionMA-20
Evaporative emission (EVAP) systemEC-32
Exhaust systemFE-10
Exhaust system inspectionMA-21
ExteriorBT-40

F

Fan control amp. (auto A/C)HA-69
Fan switch (manual A/C)HA-167
F/FOG - Wiring diagramEL-68
Final drive (FF A/T)AT-356
Final drive (FF M/T)MT-14, 28
Finisher, interior - See TrimBT-32
Finisher, trunk lidBT-39
Floor trimBT-32
Fluid temperature sensor (A/T)AT-108
FluidsMA-11
Flywheel (clutch)CL-15
Flywheel runoutEM-68
FO2H-L - Wiring diagramEC-242
FO2H-R - Wiring diagramEC-241
Fog lamp, frontEL-67
Fog lamp, front, removal and
installationBT-13
Fork rod (M/T)MT-15
Forward clutchAT-334
F/PUMP - Wiring diagramEC-620
Freeze frame dataEC-70
FRO2LH - Wiring diagramEC-200, 223, 234
FRO2RH - Wiring diagramEC-199, 222, 233
Front axleAX-2

ALPHABETICAL INDEX

Front bumperBT-13
Front combination lamp removal and
installationBT-13
Front disc brakeBR-24
Front doorBT-19
Front fog lamp.....EL-67
Front fog lamp removal and installationBT-13
Front heated oxygen sensor (HO2S)
(Left bank).....EC-196, 205, 212, 219, 231
Front heated oxygen sensor (HO2S)
(Right bank)EC-196, 205, 212, 219, 231
Front heated oxygen sensor heater
(Left bank).....EC-239
Front heated oxygen sensor heater
(Right bank)EC-239
Front seatBT-46
Front seat beltRS-5
Front suspension.....SU-2
Front washerEL-151
Front wiperEL-151
Fuel cut control (at no load & high
engine speed)EC-32
Fuel gauge.....EL-111
Fuel injection system (Left bank).....EC-292, 300
Fuel injection system (Right bank)EC-292, 300
Fuel line inspectionMA-16
Fuel precautionsGI-8
Fuel pressure check.....EC-49
Fuel pressure regulatorEC-50
Fuel pressure releaseEC-49
Fuel pumpEC-619
Fuel systemFE-4
Fuel tank temperature sensorEC-307
Fuel tank vacuum relief valveEC-33
FUELLH - Wiring diagram.....EC-295, 303
FUELRH - Wiring diagramEC-294, 302
FuseEL-17
Fuse blockFoldout
Fusible linkEL-17

G

Garage jack and safety standGI-46
GaugesEL-111
Gear components (M/T)MT-14
Generator - See Alternator.....SC-30
Generic scan tool (GST)EC-105
GlassBT-20
Grease.....MA-11
Ground distribution.....EL-18

H

Harness connector.....EL-5
Harness connector inspectionGI-21
Harness layoutEL-357
Hazard warning lamp.....EL-72
HeadlampEL-33

Headlamp removal and installationBT-13
Headlining - See Roof trimBT-37
Heated seat.....BT-49, EL-201 **GI**
Heater unit (heater core) (auto A/C).....HA-117
Heater unit (heater core) (manual A/C).....HA-206
Height (Dimensions)GI-44 **MA**
HFC134a (R134a) system precaution
(auto A/C).....HA-3 **EM**
HFC134a (R134a) system precaution
(manual A/C).....HA-127
HFC134a (R134a) system service pro-
cedure (auto A/C)HA-108 **LC**
HFC134a (R134a) system service pro-
cedure (manual A/C).....HA-196 **EC**
HFC134a (R134a) system service tools
(auto A/C).....HA-12 **FE**
HFC134a (R134a) system service tools
(manual A/C).....HA-136 **CL**
HFC134a system service equipment
precaution (auto A/C).....HA-8 **CL**
HFC134a system service equipment
precaution (manual A/C).....HA-132
High clutch.....AT-329 **MT**
H/LAMP - Wiring diagramEL-37
Hood.....BT-13
HornEL-156 **AT**
HORN - Wiring diagram.....EL-156
How to erase DTC for OBD system.....EC-82
HSEAT - Wiring diagram.....EL-201 **AX**

I

IACV-AAC valveEC-429
IATS - Wiring diagramEC-171 **BR**
Identification plate.....GI-43
Idle air control valve (IACV)EC-429
Idle mixture ratio.....EC-53 **ST**
Idle speed.....EC-53
IGN/SG - Wiring diagramEC-508
Ignition control systemEC-506 **RS**
Ignition timingEC-53
ILL - Wiring diagramEL-79 **BT**
IlluminationEL-77
In vehicle sensor (auto A/C).....HA-98
INJECT - Wiring diagramEC-610 **HA**
InjectorEC-609
Injector removal and installationEC-51
Input shaft (FF M/T)MT-14, 19 **SC**
Instrument panelBT-28
Intake air temperature sensorEC-169
Intake door control linkage adjustment
(auto A/C).....HA-66 **EL**
Intake door control linkage adjustment
(manual A/C).....HA-165
Intake door motor (auto A/C)HA-64
Intake door motor (manual A/C).....HA-162
Intake manifoldEM-11
Intake sensor (auto A/C)HA-105
Integrated homelink transmitterEL-331
InteriorBT-32

IDX

ALPHABETICAL INDEX

Interior lampEL-86
Interior lamp on-off control.....EL-88
IVIS (Infiniti vehicle immobilizer
system).....EL-334

J

Jacking pointsGI-46
Joint connector (J/C)Foldout
Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
mote control system.....EL-259
Knock sensor (KS)EC-338
Knuckle spindleAX-5
KS - Wiring diagram.....EC-339

L

Length (Dimensions)GI-44
License lampEL-57
Lifting pointsGI-47
Line pressure solenoid valveAT-166
Line pressure test (A/T)AT-65
Liquid gasket applicationEM-3
LOAD - Wiring diagram.....EC-638
Location of electrical unitsEL-353
Lock, doorBT-24
Low and reverse brakeAT-339
Lubricant (R134a) A/C (auto A/C)HA-110
Lubricant (R134a) A/C (manual A/C)HA-198
Lubricants.....MA-11
Lubrication circuit (engine)LC-4
Lubrication-locks, hinges and hood
latchesMA-27

M

MAFS - Wiring diagram.....EC-159
Magnet clutch (auto A/C).....HA-76, 113
Magnet clutch (manual A/C).....HA-202
MAIN - Wiring diagram.....EC-148
Mainshaft (M/T)MT-14, 24
Maintenance (engine)MA-13
MAJOR OVERHALL.....AT-286
Malfunction indicator lamp (MIL).....EC-84
Manual air conditioner - Wiring diagram
(manual A/C).....HA-152
Manual transmission oil replacementMA-21
Mass air flow sensor (MAFS).....EC-155
Master cylinder (brake)BR-15
Master cylinder (clutch)CL-8
Meter.....EL-111

METER - Wiring diagramEL-116
MIL & Data link connectors circuitEC-642
MIL/DL - Wiring diagramEC-642
MIRROR - Wiring diagram.....EL-193
Mirror defoggerEL-159
Mirror, door.....BT-61
MisfireEC-330
Mode door control linkage adjustment
(auto A/C).....HA-59
Mode door control linkage adjustment
(manual A/C).....HA-187
Mode door motor (auto A/C)HA-54
Mode door motor (manual A/C)HA-185
Model variationGI-41
Molding - See ExteriorBT-40
M/T major overhaulMT-12
M/T removal and installationMT-10
MULTI - Wiring diagram.....EL-263
Multi-remote control system.....EL-259
Multiport fuel injection (MFI) systemEC-28
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system)
precautionsGI-3
NATS - Wiring diagram.....EL-336
NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR).....BR-7
NVH troubleshooting (CL)CL-4
NVH troubleshooting (M/T)MT-6
NVH troubleshooting (ST).....ST-5
NVH troubleshooting (SU).....SU-16
NVIS (Nissan vehicle immobilizer
system).....EL-334
NVIS (Nissan vehicle immobilizer sys-
tem) precautionsGI-3

O

Oil change (capacity)MA-11
Oil pan (engine)EM-13
Oil pressure (engine)LC-5
Oil pump (A/T).....AT-308
Oil pump (engine)LC-5
Oil pump regulator valve (engine)LC-7
Oil seal replacement (engine).....EM-35
On board diagnostic systemEC-69
Operating cylinder (clutch).....CL-10
ORVR (On-board Refueling Vapor
Recovery).....EC-38
Overdrive control switch.....AT-260
Overrun clutch.....AT-334
Overrun clutch solenoid valve.....AT-191

ALPHABETICAL INDEX

P

P/ANT - Wiring diagram.....	EL-185
Park/Neutral position switch.....	EC-597
Park/neutral position switch (A/T)	AT-102
Park/neutral position switch (M/T).....	MT-9
Parking brake control	BR-37
Parking lamp	EL-57
PCV (positive crankcase ventilation)	EC-47
PGC/V - Wiring diagram	EC-379, 536
PHASE - Wiring diagram	EC-353
Piston assembly.....	EM-68
Piston pin inspection.....	EM-61
Piston ring inspection.....	EM-61
Piston to bore clearance	EM-63
PNP/SW - Wiring diagram	EC-599
POS - Wiring diagram.....	EC-345, 525
POWER - Wiring diagram.....	EL-10
Power antenna.....	EL-185
Power door lock.....	EL-240
Power door mirror	EL-193
Power seat.....	EL-197
Power steering fluid level.....	MA-26, ST-7
Power steering gear.....	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-629
Power steering oil pump	ST-25
Power steering system bleeding.....	ST-7
Power supply routing	EL-9
Power transistor & ignition coil.....	EC-506
Power window	EL-228
PRE/SE - Wiring diagram	EC-392
Precations for Leak detection dye (auto A/C).....	HA-4
Precations for Leak detection dye (manual A/C).....	HA-128
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-15
Pressure test (A/T).....	AT-65
PST/SW - Wiring diagram.....	EC-630

R

Radiator	LC-17, 18
Radio - See Audio.....	EL-171
Rear air spoiler	BT-40
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-40
Rear disc brake	BR-28
Rear door	BT-19
Rear heated oxygen sensor (HO2S)	EC-246, 256, 266, 276
Rear heated oxygen sensor (HO2S) heater.....	EC-285
Rear seat	BT-50

Rear seat belt.....	RS-9	
Rear suspension	SU-16	
Rear window	BT-59	GI
Rear window defogger	EL-159	
REF - Wiring diagram	EC-519	
Refrigerant pressure sensor (auto A/C).....	HA-81	MA
Refrigerant pressure sensor (manual A/C).....	HA-194	
Refrigerant connection precaution (auto A/C).....	HA-5	EM
Refrigerant connection precaution (manual A/C).....	HA-129	LC
Refrigerant discharging evacuating charging (auto A/C).....	HA-108	EC
Refrigerant general precaution (auto A/C).....	HA-4	
Refrigerant general precaution (manual A/C).....	HA-128	FE
Refrigerant lines (auto A/C).....	HA-120	
Refrigerant lines (manual A/C).....	HA-209	CL
Refrigerant pressure sensor.....	EC-634	
Refrigeration cycle (auto A/C)	HA-15	
Refrigeration cycle (manual A/C)	HA-139	MT
Release bearing (clutch).....	CL-13	
Removal and installation (A/T).....	AT-283	
Reverse clutch.....	AT-326	AT
Reverse idler shaft (M/T)	MT-14	
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-9	AX
Reverse main gear (M/T).....	MT-14	
Revolution sensor (A/T).....	AT-114	
RO2H-L - Wiring diagram.....	EC-288	SU
RO2H-R - Wiring diagram.....	EC-287	
Road wheel size	GI-44	
Roof trim	BT-37	BR
Room lamp - See Interior lamp	EL-86	
ROOM/L - Wiring diagram	EL-90	
RRO2LH - Wiring diagram...EC-250, 260, 270, 280		ST
RRO2RH - Wiring diagram..EC-249, 259, 269, 279		

S

SAE J1930 terminology list	GI-50	BT
Seal - See Exterior	BT-40	
SEAT - Wiring diagram	EL-198	HA
Seat belt inspection	MA-27, RS-11	
Seat belt pre-tensioner.....	RS-3	
Seat belt pre-tensioner disposal	RS-30	SC
Seat belt, front.....	RS-5	
Seat belt, rear.....	RS-9	
Seat, front	BT-46	EL
Seat, rear	BT-50	
SHIFT - Wiring diagram	AT-271	
Shift control components (M/T).....	MT-15	
Shift fork (M/T)	MT-15	
Shift lever	MT-12	
Shift lock system	AT-270	
Shift schedule.....	AT-382	
Shift solenoid valve A (A/T).....	AT-172	
Shift solenoid valve B (A/T)	AT-177	

ALPHABETICAL INDEX

Shock absorber (front)	SU-10
Shock absorber (rear)	SU-22
Side air bag	RS-28
Side trim	BT-32
Smart entrance control unit	EL-322
SMJ (super multiple junction)	Foldout
Spare tire size	GI-44
Spark plug replacement	MA-18
Speedometer	EL-111
Spiral cable	RS-24
Spring (Wheelarch) height	SU-6
SROOF - Wiring diagram	EL-189
SRS - See Supplemental Restraint System	RS-16
SRS - Wiring diagram	RS-43
S/SIG - Wiring diagram	EC-616
Stabilizer bar (front)	SU-11
Stall test (A/T)	AT-61
Standardized relay	EL-7
START - Wiring diagram	SC-11
Start signal	EC-615
Starter	SC-19
Starting system	SC-10
Steering gear and linkage inspection	MA-26
Steering linkage	ST-15
Steering switch	EL-32
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-65
STOP/L - Wiring diagram	EL-65
Striking rod (M/T)	MT-15
Strut (front)	SU-9
Strut (rear)	SU-20
Sun roof, electric	EL-188
Sunload sensor (auto A/C)	HA-101
Sunroof	BT-51
Supplemental Restraint System	RS-16
Supplemental restraint system - Wiring diagram	RS-43
S/VCSW - Wiring diagram	EC-480
Swirl control valve control solenoid valve	EC-453
Swirl control valve control vacuum check switch	EC-478
SWL/V - Wiring diagram	EC-457
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-126
Synchronizer (M/T)	MT-14
System readiness test (SRT) code	EC-71

T

Tachometer	EL-111
Tail lamp	EL-57
TAIL/L - Wiring diagram	EL-59
TCM circuit diagram	AT-16
TCM inspection table	AT-95
TCS (traction control system)	BR-81
TCS - Wiring diagram	BR-85

TCS component parts and connector location	BR-84
TCS control unit	BR-83
TCS self-diagnosis	BR-91
TCS system components	BR-82
TCS trouble diagnoses	BR-101
TCS wheel sensors	BR-84
TFTS - Wiring diagram	EC-309
THEFT - Wiring diagram	EL-296
Theft warning system	EL-288
Thermostat	LC-15
Three way catalyst function (Left bank)	EC-357
Three way catalyst function (Right bank)	EC-357
Three way catalyst precautions	GI-6
Throttle bodies	EM-11
Throttle position sensor (TPS)	EC-179
Throttle position sensor adjustment	EC-111
Throttle position switch	EC-438, AT-182, 260
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	ST-15
Tie-rod ball joints	ST-19
Tightening torque of standard bolts	GI-49
Timing chain	EM-19
Tire rotation	MA-24
Tire size	GI-44
Torque converter installation	AT-284, 375
Torque convertor clutch solenoid valve	AT-151
Tow truck towing	GI-48
TP/SW - Wiring diagram	EC-441
TPS - Wiring diagram	EC-184
Traction control system - See TCS	BR-81
Traction control system - Wiring diagram	BR-85
Transaxle serial number	GI-43
Transmission case (M/T)	MT-13
TRANSMT - Wiring diagram	EL-331
Tread-FR&RR (Dimensions)	GI-44
Trim	BT-32
Trouble diagnoses	GI-34
Trunk lid	BT-16
Trunk lid finisher	BT-39
Trunk lid opener - See Trunk lid	BT-16
Trunk lid trim	BT-39
Trunk room trim	BT-39
TURN - Wiring diagram	EL-74
Turn signal lamp	EL-72
Two trip detection logic	EC-69
Two-pole lift	GI-47

U

Under body	BT-66
------------------	-------

V

Vacuum cut valve	EC-32
------------------------	-------

ALPHABETICAL INDEX

Vacuum cut valve bypass valve.....EC-32, 576, 582
 Vacuum hose (brake system).....BR-23
 Vacuum hose drawing (Engine control)EC-26
 Valve clearance.....EM-51
 Valve guide.....EM-43
 Valve seat.....EM-44
 Valve spring.....EM-45
 Vehicle recovery (freeing a stuck vehicle).....GI-48
 Vehicle speed sensor (VSS)EC-425
 VENT/V - Wiring diagramEC-385, 547, 567
 VIASEC-603
 VIAS - Wiring diagramEC-605
 Viscosity number (SAE)MA-11
 Viscous coupling (FF A/T).....AT-356
 Viscous coupling (FF M/T).....MT-9, 14
 VSS - Wiring diagramEC-427

W

WARN - Wiring diagramEL-129
 Warning chimeEL-136
 Warning lampsEL-128
 Washer, front.....EL-151
 Water pump.....LC-11
 Water temperature gauge.....EL-111

Weatherstrip - See ExteriorBT-40
 Wheel alignment (front)SU-6
 Wheel alignment (rear).....SU-18 GI
 Wheel balanceMA-23
 Wheel bearing (front).....AX-4 MA
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-5
 Wheel hub (rear)AX-19 EM
 Wheel sensors (ABS).....BR-155
 Wheel sensors (TCS).....BR-155
 Wheelarch heightSU-6 LC
 Wheelbase (Dimensions)GI-44
 Wide open & closed throttle position
 switchEC-179 EC
 Width (Dimensions)GI-44
 WINDOW - Wiring diagramEL-231
 Window, rearBT-59 FE
 Windshield.....BT-59
 WIPER - Wiring diagramEL-153
 Wiper, front.....EL-151 CL
 Wiring Diagram (Cell code) list.....EL-381
 Wiring diagram - AT - LANAT-210 MT
 Wiring diagramsGI-11
 Withdrawal lever (clutch)CL-13
 Wrist pin - See Piston pin inspection.....EM-61 AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES