

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....BR-39
ABS - Wiring diagramBR-44
ABS sensor rotorAX-18
Absolute pressure sensorEC-201
A/C air flow.....HA-26, 175
A/C component layout.....HA-20, 173
A/C compressor clutch removal and
installation.....HA-143, 230
A/C compressor descriptionHA-168
A/C compressor precautionHA-8, 161
A/C compressor special service tool.....HA-11, 164
A/C control linkage adjustment (manual
A/C)HA-193, 212, 215
A/C control operation (auto A/C).....HA-24
A/C control operation (manual A/C).....HA-174
A/C diagnostic work flow (auto A/C)HA-64
A/C diagnostic work flow (manual A/C).....HA-184
A/C HFC134a (R134a) system
precaution.....HA-3, 156
A/C HFC134a (R134a) system service
procedure.....HA-138, 224
A/C HFC134a (R134a) system service
toolsHA-12, 165
A/C HFC134a system service equip-
ment precaution.....HA-8, 161
A/C lubricant (R134a)HA-140, 226
A/C operational check.....HA-65, 185
A/C performance chart.....HA-112, 203
A/C performance test diagnoses.....HA-110, 201
A/C relayHA-107, 222
A/C self-diagnoses (auto A/C).....HA-43
A/C service data specification.....HA-155, 242
A/C system description (auto A/C).....HA-24
A/C trouble diagnoses (auto A/C)HA-28
A/C trouble diagnoses (manual A/C)HA-177
A/C, A - Wiring diagramHA-31, 35
A/C, M - Wiring diagramHA-180
Accelerator control systemFE-3
Accelerator pedal position (APP)
sensorEC-304, 311, 561
Air bagRS-13
Air bag disposal.....RS-26
Air bag precautionsGI-3
Air bleeding (hydraulic clutch)CL-7
Air bleeding for brake systemBR-9
Air cleaner filter replacement.....MA-16
Air conditioner cut controlEC-35
Air flow meter - See Mass air flow
sensorEC-188, 195, 465
Air mix door control linkage
adjustmentHA-86, 212
Air mix. door motorHA-83, 135, 209
Air spoiler, rear.....BT-42
AlternatorSC-31
Ambient sensorHA-123
Angular tightening application.....EM-3
Antenna - See Power antennaEL-193

Anti-lock brake system - See ABSBR-39
Anti-lock brake system - Wiring
diagramBR-44
ASCD (automatic speed control device)EL-246
A/T - Wiring diagramAT-16
A/T - Wiring diagram - AT - FTSAT-112
A/T - Wiring diagram - AT - MAIN.....AT-101
A/T - Wiring diagram - AT - PNP/SW.....AT-106
A/T - Wiring diagram - AT - VSS A/TAT-118, 214
A/T fluid temperature sensorAT-110
A/T self-diagnosesAT-41, 51
A/T shift lock systemAT-271
A/T shift lock system - Wiring diagramAT-272
A/T trouble diagnosesAT-57
A/T Wiring diagram - AT - ENG SSAT-123
A/T Wiring diagram AT - 1STAT-129
A/T Wiring diagram AT - 2NDAT-135
A/T Wiring diagram AT - 3RDAT-141
A/T Wiring diagram AT - 4TH.....AT-148
A/T Wiring diagram AT - BA/FTSAT-198
A/T Wiring diagram AT - CANAT-210
A/T Wiring diagram AT - LPSVAT-170
A/T Wiring diagram AT - NONDTCAT-221
A/T Wiring diagram AT - OVRCSVAT-193
A/T Wiring diagram AT - SSV/AAT-176
A/T Wiring diagram AT - SSV/BAT-181
A/T Wiring diagram AT - TCCSIGAT-161
A/T Wiring diagram AT - TCVAT-155
A/T Wiring diagram AT - TPS.....AT-187
A/T Wiring diagram AT - VSSMTR.....AT-205
AudioEL-180
AUDIO - Wiring diagram.....EL-183
Audio and A/C control removal and
installation - See Instrument panelBT-29
AUT/DP - Wiring diagramEL-215
Auto air conditioner - Wiring diagramHA-31, 35
Auto anti-dazzling inside mirrorEL-202
Automatic amplifier.....HA-39, 71
Automatic drive positionerEL-210
Automatic speed control system - See
ASCDEL-246
Automatic transmission fluid
replacement.....MA-21
Automatic transmission numberGI-44

B

Back-up lampEL-74
Back-up lamp switch (M/T)MT-10
BACK/L - Wiring diagram.....EL-74
Ball joint (front)SU-13
Basic inspectionEC-123
BatterySC-4
Battery/Starting/Charging System
Tester.....SC-7, 13, 24
Baulk ring (M/T).....MT-16
B/COMP - Wiring diagramEL-132
Blower and cooling unit.....HA-148, 235
Blower motorHA-91, 195
Blower resistor.....HA-195

ALPHABETICAL INDEX

Board computerEL-130
 Board-on liftGI-46
 Body alignmentBT-65
 Brake boosterBR-20
 Brake fluid changeBR-8
 Brake fluid levelMA-24
 Brake fluid level and line checkBR-8
 Brake hydraulic lineBR-10
 Brake inspectionMA-24
 Brake lines and cables inspectionMA-24
 Brake master cylinderBR-14, 17
 Brake pedalBR-12
 Brake switchEC-693
 BRK/SW - Wiring diagramEC-694
 Bulb specificationsEL-476
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-639, 646

C

Camshaft inspectionEM-48
 Camshaft position sensor (PHASE)EC-337
 CAN (Controller Area Network)EL-429, 430, 437
 CAN - Wiring diagramEL-431, 438
 CAN communicationAT-100, BR-109,
 EL-429, 430, 437
 Canister-See EVAP canisterEC-36
 CHARGE - Wiring diagramSC-23
 Charging systemSC-22
 Chassis and body maintenanceMA-20
 CHIME - Wiring diagramEL-146
 CIGAR - Wiring diagramEL-165
 Cigarette lighterEL-165
 Circuit breakerEL-18
 Closed loop control (Bank 1)EC-526
 Closed loop control (Bank 2)EC-526
 Clutch coverCL-15
 Clutch discCL-15
 Clutch fluid levelMA-20
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-10
 Clutch pedalCL-6
 Clutch release bearingCL-13
 Clutch release mechanismCL-13
 Clutch withdrawal leverCL-13
 Coil spring (front)SU-9
 Coil spring (rear)SU-22
 Collision diagnosisRS-62
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-42
 Combination meterEL-117
 Combination meter removal and instal-
 lation - See Instrument panelBT-29
 Combination switchEL-31
 Component Location (auto A/C)HA-28
 Component Location (manual A/C)HA-177
 Compression pressureEM-13

Compressor clutch removal and
 installationHA-143, 230
 Compressor descriptionHA-168
 Compressor precautionHA-8, 161
 Compressor special service toolHA-11, 164
 Connecting rodEM-69
 Connecting rod bearing clearanceEM-73
 Connecting rod bushing clearanceEM-74
 Connector inspectionGI-21
 Console box - See Instrument panelBT-29
 CONSULT for ABSBR-48
 CONSULT for engineEC-101
 CONSULT for TCSBR-95
 Control lever (M/T)MT-11
 Control valve (A/T)AT-309
 Controller Area Network (CAN)EL-429, 430, 437
 Converter housing installationAT-370
 COOL/F - Wiring diagramEC-536
 Coolant mixture ratioMA-12
 Coolant replacementMA-14
 Cooling circuit (engine)LC-12
 Cooling fan controlEC-532
 Cooling fan control systemLC-21
 Coupling sleeve (M/T)MT-16
 Crankcase emission control system -
 See positive crankcase ventilationEC-51
 CrankshaftEM-71
 Crankshaft position sensor (POS)EC-330
 Crash zone sensorRS-18
 Cruise control - See ASCDEL-246
 Cylinder blockEM-66
 Cylinder headEM-44
 Cylinder head bolt tighteningEM-55

D

Data link connector for ConsultEC-101
 Daytime light systemEL-51
 Daytime running light - See Daytime
 light systemEL-51
 DEF - Wiring diagramEL-169
 Detonation sensor - See Knock sensorEC-325
 Diagnosis sensor unitRS-17
 Diagnostic trouble code (DTC) for OBD
 systemEC-9, 76
 Diagnostic trouble code (DTC) inspec-
 tion priority chartEC-128
 Differential gear (FF A/T)AT-353
 Differential gear (FF M/T)MT-19, 38
 DimensionsGI-45
 DLC - Wiring diagramEC-763
 D/LOCK - Wiring diagramEL-263
 Dome light - See Interior lampEL-92
 Door glassBT-21
 Door lockBT-25
 Door mirrorBT-63
 Door trimBT-37
 Door, frontBT-20
 Door, rearBT-20
 Drive plate runoutEM-75

ALPHABETICAL INDEX

Drive shaft (front).....AX-9
Dropping resistor (A/T).....AT-168
DTC work support.....EC-114
DTRL - Wiring diagram.....EL-55

E

ECM input/output signal.....EC-141
ECM power supply.....EC-461
ECM/PW - Wiring diagram.....EC-462
ECTS - Wiring diagram.....EC-209
Electric sun roof.....EL-196
Electric throttle control actuator.....EC-471, 473
Electrical diagnoses.....GI-24
Electrical ignition system.....EC-34
Electrical unit.....Foldout
Electrical units location.....EL-449
EMNT - Wiring diagram.....EC-736
Engine compartment.....BT-66
Engine control circuit diagram.....EC-28
Engine control component parts
location.....EC-24
Engine control module (ECM).....EC-455
Engine control system diagram and
chart.....EC-29
Engine coolant temperature sensor
(ECTS).....EC-207, 213
Engine fail-safe system.....EC-129
Engine mounting control (Front).....EC-735
Engine oil filter replacement.....MA-17
Engine oil precautions.....GI-7
Engine oil replacement.....MA-16
Engine outer component parts.....EM-9
Engine removal.....EM-62
Engine room - See Engine
compartment.....BT-66
Engine serial number.....GI-44
EVAP canister.....EC-37
EVAP canister purge volume control
solenoid valve.....EC-36, 376, 588
EVAP canister vent control
valve.....EC-383, 601, 609
EVAP control system (small leak)
diagnosis.....EC-361, 417, 573, 618
EVAP control system pressure
sensor.....EC-390, 396
EVAP control system purge flow moni-
toring diagnosis.....EC-351
EVAP vapor lines inspection.....MA-19
Evaporative emission (EVAP) system.....EC-36
Exhaust system.....FE-9
Exhaust system inspection.....MA-20
Exterior.....BT-42

F

Fan control amp.....HA-94
Fan switch.....HA-195

F/FOG - Wiring diagram.....EL-76
Final drive (FF A/T).....AT-353
Final drive (FF M/T).....MT-19, 38
Finisher, interior - See Trim.....BT-34
Finisher, trunk lid.....BT-41
Floor trim.....BT-34
FLS1 - Wiring diagram.....EC-433
FLS2 - Wiring diagram.....EC-439
Fluid temperature sensor (A/T).....AT-110
Fluids.....MA-11
Flywheel (clutch).....CL-15
Flywheel runout.....EM-75
Fog lamp, front.....EL-75
Fog lamp, front, removal and
installation.....BT-13
Fork rod (M/T).....MT-18
Forward clutch.....AT-331
F/PUMP - Wiring diagram.....EC-729
Freeze frame data.....EC-77
Front axle.....AX-2
Front bumper.....BT-13
Front combination lamp removal and
installation.....BT-13
Front disc brake.....BR-23
Front door.....BT-20
Front fog lamp.....EL-75
Front fog lamp removal and installation.....BT-13
Front seat.....BT-48
Front seat belt.....RS-4
Front suspension.....SU-2
Front washer.....EL-159
Front wiper.....EL-159
FTTS - Wiring diagram.....EC-287
Fuel cut control (at no load & high
engine speed).....EC-36
Fuel gauge.....EL-117
Fuel injection system (Bank 1).....EC-267, 275
Fuel injection system (Bank 2).....EC-267, 275
Fuel level sensor.....EC-432, 436
Fuel line inspection.....MA-15
Fuel precautions.....GI-8
Fuel pressure check.....EC-56
Fuel pressure release.....EC-56
Fuel pump.....EC-728
Fuel system.....FE-4
Fuel tank temperature sensor.....EC-282, 285
Fuel tank vacuum relief valve.....EC-37
FUELB1 - Wiring diagram.....EC-269, 277
FUELB2 - Wiring diagram.....EC-270, 278
Fuse.....EL-18
Fuse and fusible link box.....Foldout
Fuse block.....Foldout
Fusible link.....EL-18

G

Garage jack and safety stand.....GI-47
Gauges.....EL-117
Gear components (M/T).....MT-16
Generator - See Alternator.....SC-31

ALPHABETICAL INDEX

Generic scan tool (GST).....EC-117
GlassBT-21
Grease.....MA-11
Ground distribution.....EL-19

H

Harness connector.....EL-6
Harness connector inspectionGI-21
Harness layoutEL-453
Hazard warning lamp.....EL-80
HeadlampEL-37
Headlamp removal and installationBT-13
Headlining - See Roof trimBT-39
Heated oxygen sensor 1
(bank 1).....EC-220, 228, 240, 492, 499
Heated oxygen sensor 1
(bank 2).....EC-220, 228, 240, 492, 499
Heated oxygen sensor 1 heater
(bank 1).....EC-175
Heated oxygen sensor 1 heater
(bank 2).....EC-175
Heated oxygen sensor 2
(bank 1).....EC-249, 257, 506, 516
Heated oxygen sensor 2
(bank 2).....EC-249, 257, 506, 516
Heated oxygen sensor 2 heater
(bank 1).....EC-181
Heated oxygen sensor 2 heater
(bank 2).....EC-181
Heated seat.....BT-51, EL-208
Heated steering.....EL-34
Heater unit (heater core).....HA-147, 234
Height (Dimensions)GI-45
HFC134a (R134a) system precautionHA-3, 156
HFC134a (R134a) system service
procedure.....HA-138, 224
HFC134a (R134a) system service
toolsHA-12, 165
HFC134a system service equipment
precautionHA-8, 161
High clutch.....AT-326
H/LAMP - Wiring diagramEL-41
Homelink universal transceiverEL-353
Hood.....BT-13
HornEL-164
HORN - Wiring diagram.....EL-164
How to erase DTC for OBD system.....EC-91
HSEAT - Wiring diagram.....EL-208
H/STRG - Wiring diagram.....EL-36

I

IATS - Wiring diagramEC-204
Identification plate.....GI-44
Idle mixture ratio.....EC-59
Idle speed.....EC-59
Ignition control systemEC-707

Ignition timingEC-59
IGNSYS - Wiring diagramEC-708
ILL - Wiring diagramEL-87
IlluminationEL-85
I/MIRR - Wiring diagramEL-202
In vehicle sensorHA-126
INJECT - Wiring diagramEC-719
InjectorEC-718
Injector removal and installationEC-57
Input shaft (FF M/T)MT-16, 24
Instrument panelBT-29
Intake air temperature sensor.....EC-203, 216
Intake door control linkage adjustment..HA-90, 193
Intake door motor.....HA-87, 190
Intake manifoldEM-11
Intake sensorHA-133
Integrated homelink transmitterEL-353
InteriorBT-34
Interior lampEL-92
Interior lamp on-off control.....EL-94
IVIS (Infiniti vehicle immobilizer
system).....EL-356

J

Jacking points.....GI-47
Joint connector (J/C)Foldout
Junction box (J/B).....Foldout

K

KEYLES - Wiring diagramEL-282
Knock sensor (KS)EC-325
Knuckle spindleAX-5
KS - Wiring diagram.....EC-326

L

Length (Dimensions)GI-45
License lampEL-65
Lifting pointsGI-48
Line pressure solenoid valveAT-168
Line pressure test (A/T)AT-67
Liquid gasket applicationEM-3
LOAD - Wiring diagramEC-759
Location of electrical unitsEL-449
Lock, doorBT-25
Low and reverse brakeAT-336
Lubricant (R134a) A/CHA-140, 226
Lubricants.....MA-11
Lubrication circuit (engine)LC-4
Lubrication-locks, hinges and hood
latchesMA-26

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagramEC-191, 197, 467
Magnet clutch.....HA-101, 143, 230
MAIN - Wiring diagram.....EC-157
Mainshaft (M/T)MT-16, 29
Maintenance (engine)MA-13
MAJOR OVERHALL.....AT-283
Malfunction indicator lamp (MIL).....EC-457
Manual air conditioner - Wiring diagram.....HA-180
Manual transmission oil replacementMA-20
Mass air flow sensor (MAFS)EC-188, 195, 465
Master cylinder (brake)BR-14, 17
Master cylinder (clutch)CL-8
MeterEL-117
METER - Wiring diagram.....EL-121
MIL - Wiring diagram.....EC-458
MIRROR - Wiring diagram.....EL-201
Mirror defoggerEL-167
Mirror, door.....BT-63
MisfireEC-317
Mode door control linkage adjustment...HA-81, 215
Mode door motor.....HA-75, 213
Model variationGI-42
Molding - See Exterior.....BT-42
M/T major overhaulMT-15
M/T removal and installationMT-13
MULTI - Wiring diagram.....EL-282
Multi-remote control system.....EL-277
Multiplex communicationHA-136
Multiport fuel injection (MFI) systemEC-32
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system)
 precautionsGI-3
NATS - Wiring diagram.....EL-358
NAVI - wiring diagram.....EL-384
Navigation System.....EL-376
NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR).....BR-7
NVH troubleshooting (CL)CL-4
NVH troubleshooting (M/T)MT-7
NVH troubleshooting (ST).....ST-5
NVH troubleshooting (SU).....SU-4
NVIS (Nissan vehicle immobilizer
 system).....EL-356
NVIS (Nissan vehicle immobilizer sys-
 tem) precautionsGI-3

O

O2H1B1 - Wiring diagram.....EC-177
O2H1B2 - Wiring diagram.....EC-178
O2H2B1 - Wiring diagram.....EC-183
O2H2B2 - Wiring diagram.....EC-184

O2S1B1 - Wiring diagram.....EC-222, 231, 243
O2S1B2 - Wiring diagram.....EC-223, 232, 244
O2S2B1 - Wiring diagram ...EC-251, 260, 509, 519
O2S2B2 - Wiring diagram ...EC-252, 261, 510, 520
Oil change (capacity)MA-11
Oil cooler (engine)LC-9
Oil pan (engine)EM-14
Oil pressure (engine)LC-6
Oil pump (A/T).....AT-305
Oil pump (engine)LC-6
Oil pump regulator valve (engine)LC-8
Oil seal replacement (engine).....EM-41
On board diagnostic systemEC-75
Operating cylinder (clutch).....CL-10
ORVR (On-board Refueling Vapor
 Recovery).....EC-42
Overheat.....EC-532
Overrun clutch.....AT-331
Overrun clutch solenoid valve.....AT-191

P

P/ANT - Wiring diagram.....EL-193
Park/Neutral position switch.....EC-682
Park/neutral position switch (A/T)AT-104
Park/neutral position switch (M/T).....MT-10
Parking brake controlBR-35, 37
Parking lampEL-65
PCV (positive crankcase ventilation)EC-51
PGC/V - Wiring diagramEC-378, 591
PHASE - Wiring diagramEC-339
Piston assembly.....EM-76
Piston pin inspection.....EM-68
Piston ring inspection.....EM-68
Piston to bore clearance.....EM-70
PNP/SW - Wiring diagramEC-684
POS - Wiring diagramEC-332
POWER - Wiring diagram.....EL-11
Power antenna.....EL-193
Power door lock.....EL-261
Power door mirrorEL-201
Power seat.....EL-205
Power steering fluid level.....MA-25, ST-7
Power steering gear.....ST-14
Power steering hydraulic pressureST-9
Power steering oil pump.....ST-24
Power steering pressure (PSP) sensorEC-450
Power steering system bleeding.....ST-7
Power supply routingEL-10
Power transistor & ignition coil.....EC-707
Power window.....EL-247
PRE/SE - Wiring diagramEC-392, 398
Precations for Leak detection dyeHA-4, 157
Precautions (General)GI-4
Pressure plate - See Clutch coverCL-15
Pressure test (A/T).....AT-67
PS/SEN - Wiring diagramEC-451

ALPHABETICAL INDEX

R

Radiator	LC-20, 21
Radio - See Audio.....	EL-180
Rear air spoiler	BT-42
Rear axle	AX-16
Rear axle (disc brake type)	AX-18
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-42
Rear disc brake	BR-27
Rear door	BT-20
Rear seat	BT-52
Rear seat belt.....	RS-6
Rear suspension	SU-16
Rear window	BT-61
Rear window defogger.....	EL-167
Refrigerant pressure sensor	HA-107, 222
Refrigerant connection precaution	HA-5, 158
Refrigerant discharging evacuating charging	HA-138
Refrigerant general precaution	HA-4, 157
Refrigerant lines	HA-149, 236
Refrigerant pressure sensor.....	EC-739
Refrigeration cycle	HA-15, 168
Release bearing (clutch).....	CL-13
Remote keyless entry system.....	EL-277
Removal and installation (A/T).....	AT-280
Reverse clutch.....	AT-323
Reverse idler shaft (M/T)	MT-16, 37
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-10
Reverse main gear (M/T).....	MT-16, 37
Revolution sensor (A/T).....	AT-116
Road wheel size	GI-45
Roof trim	BT-39
Room lamp - See Interior lamp	EL-92
ROOM/L - Wiring diagram	EL-96
RP/SEN - Wiring diagram	EC-740

S

SAE J1930 terminology list	GI-52
Seal - See Exterior	BT-42
SEAT - Wiring diagram	EL-205
Seat belt inspection	MA-27, RS-8
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-26
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-6
Seat, front	BT-48
Seat, rear	BT-52
SHIFT - Wiring diagram	AT-272
Shift control components (M/T)	MT-18
Shift fork (M/T)	MT-18
Shift lever.....	MT-11
Shift lock system	AT-271
Shift schedule.....	AT-376

Shift solenoid valve A (A/T).....	AT-174	
Shift solenoid valve B (A/T)	AT-179	
Shock absorber (front)	SU-10	GI
Shock absorber (rear)	SU-22	
Side air bag	RS-24	
Side trim.....	BT-34	MA
Smart entrance control unit	EL-342	
SMJ (super multiple junction)	Foldout	
Spare tire size	GI-45	EM
Spark plug replacement.....	MA-17	
Speedometer	EL-117	
Spiral cable.....	RS-20	LC
Spring (Wheelarch) height	SU-6	
SROOF - Wiring diagram	EL-197	
SRS - See Supplemental Restraint System	RS-13	EC
SRS - Wiring diagram	RS-38	
S/SIG - Wiring diagram	EC-725	FE
Stabilizer bar (front)	SU-11	
Stall test (A/T)	AT-63	CL
Standardized relay	EL-8	
START - Wiring diagram.....	SC-11	
Start signal	EC-724	MT
Starter	SC-19	
Starting system.....	SC-10	
Steering gear and linkage inspection	MA-25	AT
Steering linkage	ST-14	
Steering switch.....	EL-33	AX
Steering wheel and column	ST-10	
Steering wheel play	ST-6	
Steering wheel turning force.....	ST-8	
Stop lamp.....	EL-73	SU
STOP/L - Wiring diagram.....	EL-73	
Strut (front)	SU-9	
Strut (rear)	SU-20	BR
Sun roof, electric.....	EL-196	
Sunload sensor	HA-129	
Sunroof.....	BT-53	ST
Supplemental Restraint System	RS-13	
Supplemental restraint system - Wiring diagram	RS-38	RS
Symbols and abbreviations	GI-10	
Symptom matrix chart	EC-131	
Synchronizer (M/T)	MT-16	BT
System readiness test (SRT) code	EC-77	

T

Tachometer.....	EL-117	SC
Tail lamp.....	EL-65	
TAIL/L - Wiring diagram	EL-68	EL
TCM circuit diagram	AT-16	
TCM inspection table	AT-97	
TCS (traction control system)	BR-86	
TCS - Wiring diagram	BR-90	
TCS component parts and connector location	BR-89	
TCS control unit	BR-88	
TCS system components	BR-87	
TCS trouble diagnoses.....	BR-103	

ALPHABETICAL INDEX

TCS wheel sensorsBR-89
 THEFT - Wiring diagram.....EL-316
 Theft warning system.....EL-308
 Thermostat.....LC-18
 Three way catalyst precautions.....GI-6
 Throttle bodyEM-11
 Throttle control motorEC-487
 Throttle control motor relayEC-481
 Throttle position sensor
 (TPS).....EC-290, 297, 550, 557, 559
 Throttle position switchAT-184, 264
 Throwout bearing - See Clutch release
 bearingCL-13
 Tie-rodST-14
 Tie-rod ball joints.....ST-18
 Tightening torque of standard bolts.....GI-50
 Timing chain.....EM-21
 Tire rotationMA-23
 Tire sizeGI-45
 Torque converter installationAT-281, 370
 Torque convertor clutch solenoid valve.....AT-153
 Tow truck towingGI-49
 Traction control system - See TCSBR-86
 Traction control system - Wiring
 diagram.....BR-90
 Transaxle serial numberGI-44
 Transmission case (M/T).....MT-15
 TRANSMT - Wiring diagramEL-353
 Tread-FR&RR (Dimensions).....GI-45
 TrimBT-34
 TRNSCV - Wiring diagramEL-353
 Trouble diagnosesGI-34
 Trunk lidBT-16
 Trunk lid finisher.....BT-41
 Trunk lid opener - See Trunk lidBT-16
 Trunk lid trimBT-41
 Trunk room trim.....BT-41
 Turbine revolution sensor.....AT-212
 TURN - Wiring diagramEL-82
 Turn signal lampEL-80
 Two trip detection logicEC-75
 Two-pole liftGI-48

U

Under bodyBT-68

V

Vacuum cut valveEC-36

Vacuum cut valve bypass valve.....EC-36, 637, 643
 Vacuum hose (brake system).....BR-22
 Vacuum hose drawing (Engine control)EC-30
 Valve clearance.....EM-58
 Valve guide.....EM-50
 Valve seat.....EM-51
 Valve spring.....EM-52
 Vehicle recovery (freeing a stuck
 vehicle).....GI-49
 VEHICLE SECURITY (THEFT WARN-
 ING) SYSTEM.....EL-308
 Vehicle speed sensor (VSS)EC-442
 VENT/V - Wiring diagramEC-385, 603, 612
 Ventilation air filter.....HA-154, 241
 VIASEC-688, 699
 VIAS - Wiring diagramEC-701
 Viscosity number (SAE)MA-11
 VSS - Wiring diagramEC-444

W

WARN - Wiring diagramEL-137
 Warning chimeEL-144
 Warning lampsEL-136
 Washer, front.....EL-159
 Water pumpLC-14
 Water temperature gaugeEL-117
 Weatherstrip - See ExteriorBT-42
 Wheel alignment (front)SU-6
 Wheel alignment (rear).....SU-18
 Wheel balanceMA-22
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-17
 Wheel hub (front).....AX-5
 Wheel hub (rear)AX-18
 Wheel sensors (ABS).....BR-138
 Wheel sensors (TCS).....BR-138
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-45
 Width (Dimensions)GI-45
 WINDOW - Wiring diagramEL-251
 Window, rearBT-61
 Windshield.....BT-61
 WIPER - Wiring diagramEL-161
 Wiper, front.....EL-159
 Wiring Diagram (Cell code) list.....EL-477
 Wiring Diagram - VEHSEC -EL-316
 Wiring diagrams.....GI-11
 Withdrawal lever (clutch)CL-13
 Wrist pin - See Piston pin inspection.....EM-68