

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....BR-37
ABS - Wiring diagramBR-41, 42, 46
ABS sensor rotorAX-19
Absolute pressure sensorEC-201
A/C air flow.....HA-26, 176
A/C component layout.....HA-20, 174
A/C compressor clutch removal and
installation.....HA-144, 231
A/C compressor descriptionHA-169
A/C compressor precautionHA-8, 162
A/C compressor special service tool.....HA-11, 165
A/C control linkage adjustment (manual
A/C)HA-194, 204, 207
A/C control operation (auto A/C).....HA-24
A/C control operation (manual A/C).....HA-175
A/C diagnostic work flow (auto A/C)HA-64
A/C diagnostic work flow (manual A/C).....HA-185
A/C HFC134a (R134a) system
precaution.....HA-3, 157
A/C HFC134a (R134a) system service
procedure.....HA-139, 225
A/C HFC134a (R134a) system service
toolsHA-12, 166
A/C HFC134a system service equip-
ment precaution.....HA-8, 162
A/C lubricant (R134a)HA-141, 227
A/C operational check.....HA-65, 186
A/C performance chart.....HA-112, 218
A/C performance test diagnoses.....HA-110, 216
A/C relayHA-107, 214
A/C self-diagnoses (auto A/C).....HA-43
A/C service data specification.....HA-156, 243
A/C system description (auto A/C).....HA-24
A/C trouble diagnoses (auto A/C)HA-28
A/C trouble diagnoses (manual A/C)HA-178
A/C, A - Wiring diagramHA-31, 35
A/C, M - Wiring diagramHA-181
Accelerator control systemFE-3
Accelerator pedal position (APP)
sensor.....EC-649, 656, 669
Air bagRS-14
Air bag disposal.....RS-26
Air bag precautionsGI-3
Air bleeding (hydraulic clutch)CL-6
Air bleeding for brake systemBR-9
Air cleaner filter replacement.....MA-16
Air conditioner cut controlEC-36
Air flow meter - See Mass air flow
sensor.....EC-188, 195, 450
Air mix door control linkage
adjustmentHA-86, 204
Air mix. door motorHA-83, 136, 201
Air spoiler, rear.....BT-42
AlternatorSC-31
Ambient sensorHA-124
Angular tightening application.....EM-3
Antenna - See Power antennaEL-197

Anti-lock brake system - See ABS.....BR-37
Anti-lock brake system - Wiring
diagram.....BR-42, 46
ASCD (automatic speed control device)EL-250
A/T - Wiring diagramAT-16
A/T - Wiring diagram - AT - FTSAT-117
A/T - Wiring diagram - AT - MAIN.....AT-102
A/T - Wiring diagram - AT - PNP/SWAT-111
A/T - Wiring diagram - AT - VSS A/T...AT-123, 215
A/T fluid temperature sensorAT-115
A/T IND - Wiring diagramEL-146
AT indicator lampEL-146
A/T self-diagnosesAT-42, 53
A/T shift lock systemAT-276
A/T shift lock system - Wiring diagramAT-277
A/T trouble diagnosesAT-59
A/T Wiring diagram - AT - ENG SSAT-128
A/T Wiring diagram AT - 1STAT-134
A/T Wiring diagram AT - 2NDAT-140
A/T Wiring diagram AT - 3RDAT-146
A/T Wiring diagram AT - 4TH.....AT-153
A/T Wiring diagram AT - BA/FTSAT-203
A/T Wiring diagram AT - CANAT-107
A/T Wiring diagram AT - LPSVAT-175
A/T Wiring diagram AT - NONDTCAT-222
A/T Wiring diagram AT - OVRCSVAT-198
A/T Wiring diagram AT - SSV/AAT-181
A/T Wiring diagram AT - SSV/BAT-186
A/T Wiring diagram AT - TCCSIGAT-166
A/T Wiring diagram AT - TCVAT-160
A/T Wiring diagram AT - TPS.....AT-192
A/T Wiring diagram AT - VSSMTR.....AT-210
AudioEL-184
AUDIO - Wiring diagram.....EL-187
Audio and A/C control removal and
installation - See Instrument panelBT-29
AUT/DP - Wiring diagramEL-219
Auto air conditioner - Wiring diagramHA-31, 35
Auto anti-dazzling inside mirrorEL-206
Automatic amplifier.....HA-39, 71
Automatic drive positionerEL-214
Automatic speed control system - See
ASCDEL-250
Automatic transmission fluid
replacement.....MA-21
Automatic transmission numberGI-44

B

Back-up lampEL-75
Back-up lamp switch (M/T).....MT-11
BACK/L - Wiring diagram.....EL-75
Ball joint (front)SU-13
Basic inspectionEC-122
BatterySC-4
Battery/Starting/Charging System
Tester.....SC-7, 13, 24
Baulk ring (M/T).....MT-17
B/COMP - Wiring diagramEL-133
Blower and cooling unit.....HA-149, 236

ALPHABETICAL INDEX

Blower motorHA-91, 196
 Blower resistor.....HA-196
 Board computerEL-131
 Board-on liftGI-46
 Body alignmentBT-65
 Brake boosterBR-20
 Brake fluid changeBR-8
 Brake fluid levelMA-24
 Brake fluid level and line checkBR-8
 Brake hydraulic line.....BR-10
 Brake inspectionMA-24
 Brake lines and cables inspectionMA-24
 Brake master cylinderBR-14, 17
 Brake pedalBR-12
 Brake switchEC-643
 BRK/SW - Wiring diagramEC-644
 Bulb specificationsEL-480
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-594, 601

C

Camshaft inspectionEM-55
 Camshaft position sensor (PHASE).....EC-322
 CAN (Controller Area Network)EL-433, 434, 440
 CAN - Wiring diagramEL-435, 441
 CAN communication.....AT-105, BR-111,
 EL-433, 434, 440
 Canister - See EVAP canisterEC-37
 CHARGE - Wiring diagramSC-23
 Charging systemSC-22
 Chassis and body maintenanceMA-20
 CHIME - Wiring diagram.....EL-150
 CIGAR - Wiring diagram.....EL-169
 Cigarette lighter.....EL-169
 Circuit breaker.....EL-19
 CLOCK - Wiring diagram.....EL-170
 Closed loop control (Bank 1)EC-509
 Closed loop control (Bank 2)EC-509
 Clutch cover.....CL-15
 Clutch discCL-15
 Clutch fluid level.....MA-20
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-10
 Clutch release bearing.....CL-13
 Clutch release mechanismCL-13
 Clutch withdrawal lever.....CL-13
 Coil spring (front).....SU-9
 Coil spring (rear)SU-22
 Collision diagnosis.....RS-63
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-42
 Combination meterEL-118
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-29
 Combination switch.....EL-32
 COMPAS - Wiring diagramEL-139

CompassEL-137
 Component Location (auto A/C).....HA-28
 Component Location (manual A/C).....HA-178 GI
 Compression pressureEM-13
 Compressor clutch removal and
 installation.....HA-144, 231 MA
 Compressor descriptionHA-169
 Compressor precaution.....HA-8, 162
 Compressor special service toolHA-11, 165 EM
 Connecting rod.....EM-76
 Connecting rod bearing clearance.....EM-80
 Connecting rod bushing clearanceEM-81 LC
 Connector inspection.....GI-21
 Console box - See Instrument panel.....BT-29
 CONSULT for ABSBR-50 EC
 CONSULT for engineEC-101
 CONSULT for TCSBR-97
 Control lever (M/T)MT-12 FE
 Control valve (A/T)AT-314
 Controller Area Network (CAN)EL-433, 434, 440
 Converter housing installation.....AT-375
 COOL/F - Wiring diagramEC-519
 Coolant mixture ratio.....MA-12 MT
 Coolant replacement.....MA-14
 Cooling circuit (engine).....LC-12
 Cooling fan controlEC-515 AT
 Cooling fan control systemLC-21
 Coupling sleeve (M/T)MT-17
 Crankcase emission control system -
 See positive crankcase ventilationEC-52 AX
 Crankshaft.....EM-78
 Crankshaft position sensor (POS)EC-315 SU
 Crash zone sensorRS-19
 Cruise control - See ASCD.....EL-250
 Cylinder blockEM-73 BR
 Cylinder head.....EM-50
 Cylinder head bolt tighteningEM-62

D

Data link connector for Consult.....EC-101
 Daytime light system.....EL-52
 Daytime running light - See Daytime
 light systemEL-52
 DEF - Wiring diagramEL-173
 Detonation sensor - See Knock sensorEC-310 HA
 Diagnosis sensor unit.....RS-18
 Diagnostic trouble code (DTC) for OBD
 systemEC-9, 77 SC
 Diagnostic trouble code (DTC) inspec-
 tion priority chart.....EC-128
 Differential gear (FF A/T)AT-358
 Differential gear (FF M/T).....MT-20, 40
 DimensionsGI-45
 DLC - Wiring diagramEC-736
 D/LOCK - Wiring diagram.....EL-267
 Dome light - See Interior lampEL-93
 Door glass.....BT-21
 Door lock.....BT-25
 Door mirror.....BT-63

ALPHABETICAL INDEX

Door trimBT-37
 Door, frontBT-20
 Door, rearBT-20
 Drive plate runoutEM-82
 Drive shaft (front).....AX-9
 Dropping resistor (A/T).....AT-173
 DTC work support.....EC-113
 DTRL - Wiring diagram.....EL-56

E

ECM input/output signalEC-140
 ECM power supplyEC-446
 ECM/PW - Wiring diagram.....EC-447
 ECTS - Wiring diagramEC-209
 Electric sun roof.....EL-200
 Electric throttle control actuatorEC-456, 458
 Electrical diagnoses.....GI-24
 Electrical ignition system.....EC-35
 Electrical unitFoldout
 Electrical units locationEL-453
 EMNT - Wiring diagram.....EC-713
 Engine compartment.....BT-66
 Engine control circuit diagram.....EC-28
 Engine control component parts
 locationEC-24
 Engine control module (ECM).....EC-440
 Engine control system diagram and
 chart.....EC-30
 Engine coolant temperature sensor
 (ECTS).....EC-207, 219
 Engine fail-safe systemEC-129
 Engine mounting control (Front)EC-712
 Engine oil filter replacementMA-17
 Engine oil precautionsGI-7
 Engine oil replacementMA-16
 Engine outer component partsEM-9
 Engine removalEM-69
 Engine room - See Engine
 compartment.....BT-66
 Engine serial numberGI-44
 EVAP canister.....EC-38
 EVAP canister purge volume control
 solenoid valve.....EC-37, 361, 543
 EVAP canister vent control
 valveEC-368, 556, 564
 EVAP control system (small leak)
 diagnosisEC-346, 402, 573
 EVAP control system pressure
 sensorEC-375, 381
 EVAP control system purge flow moni-
 toring diagnosis.....EC-336
 EVAP vapor lines inspectionMA-19
 Evaporative emission (EVAP) system.....EC-37
 Exhaust systemFE-9
 Exhaust system inspectionMA-20
 ExteriorBT-42

F

Fan control amp.HA-94
 Fan switchHA-196
 F/FOG - Wiring diagramEL-77
 Final drive (FF A/T)AT-358
 Final drive (FF M/T)MT-20, 40
 Finisher, interior - See TrimBT-34
 Finisher, trunk lid.....BT-41
 Floor trimBT-34
 FLS1 - Wiring diagramEC-418
 FLS2 - Wiring diagramEC-424
 Fluid temperature sensor (A/T)AT-115
 FluidsMA-11
 Flywheel (clutch).....CL-15
 Flywheel runout.....EM-82
 Fog lamp, front.....EL-76
 Fog lamp, front, removal and
 installationBT-13
 Fork rod (M/T)MT-19
 Forward clutch.....AT-336
 F/PUMP - Wiring diagramEC-706
 Freeze frame data.....EC-78
 Front axle.....AX-2
 Front bumperBT-13
 Front combination lamp removal and
 installationBT-13
 Front disc brakeBR-23
 Front doorBT-20
 Front fog lamp.....EL-76
 Front fog lamp removal and installationBT-13
 Front seat.....BT-48
 Front seat beltRS-5
 Front suspension.....SU-2
 Front washerEL-163
 Front wiperEL-163
 FTTS - Wiring diagram.....EC-292
 Fuel cut control (at no load & high
 engine speed).....EC-37
 Fuel gaugeEL-118
 Fuel injection system (Bank 1)EC-272, 280
 Fuel injection system (Bank 2)EC-272, 280
 Fuel level sensorEC-417, 421
 Fuel line inspectionMA-16
 Fuel precautionsGI-8
 Fuel pressure check.....EC-56
 Fuel pressure releaseEC-56
 Fuel pumpEC-705
 Fuel systemFE-4
 Fuel tank temperature sensor.....EC-287, 290
 Fuel tank vacuum relief valveEC-38
 FUELB1 - Wiring diagram.....EC-274, 282
 FUELB2 - Wiring diagram.....EC-275, 283
 FuseEL-19
 Fuse and fusible link boxFoldout
 Fuse blockFoldout
 Fusible linkEL-19

ALPHABETICAL INDEX

G

Garage jack and safety standGI-47
 GaugesEL-118
 Gear components (M/T)MT-17
 Generator - See AlternatorSC-31
 Generic scan tool (GST)EC-116
 GlassBT-21
 GreaseMA-11
 Ground distributionEL-20

H

Harness connectorEL-7
 Harness connector inspectionGI-21
 Harness layoutEL-457
 Hazard warning lampEL-81
 HeadlampEL-38
 Headlamp removal and installationBT-13
 Headlining - See Roof trimBT-39
 Heated oxygen sensor 1
 (bank 1)EC-226, 234, 246, 477, 484
 Heated oxygen sensor 1
 (bank 2)EC-226, 234, 246, 477, 484
 Heated oxygen sensor 1 heater
 (bank 1)EC-175
 Heated oxygen sensor 1 heater
 (bank 2)EC-175
 Heated oxygen sensor 2
 (bank 1)EC-255, 263, 491, 500
 Heated oxygen sensor 2
 (bank 2)EC-255, 263, 491, 500
 Heated oxygen sensor 2 heater
 (bank 1)EC-182
 Heated oxygen sensor 2 heater
 (bank 2)EC-182
 Heated seatBT-51, EL-212
 Heated steeringEL-35
 Heater unit (heater core)HA-148, 235
 Height (Dimensions)GI-45
 HFC134a (R134a) system precautionHA-3, 157
 HFC134a (R134a) system service
 procedureHA-139, 225
 HFC134a (R134a) system service
 toolsHA-12, 166
 HFC134a system service equipment
 precautionHA-8, 162
 High clutchAT-331
 H/LAMP - Wiring diagramEL-42
 Homelink universal transceiverEL-357
 HoodBT-13
 HornEL-168
 HORN - Wiring diagramEL-168
 How to erase DTC for OBD systemEC-90
 HSEAT - Wiring diagramEL-212
 H/STRG - Wiring diagramEL-37

I

IATS - Wiring diagramEC-204
 Identification plateGI-44
 Idle mixture ratioEC-59
 Idle speedEC-59
 Ignition control systemEC-684
 Ignition timingEC-59
 IGNSYS - Wiring diagramEC-685
 ILL - Wiring diagramEL-88
 IlluminationEL-86
 I/MIRR - Wiring diagramEL-206
 In vehicle sensorHA-127
 In-cabin MicrofilterHA-155, 242
 INJECT - Wiring diagramEC-696
 InjectorEC-695
 Injector removal and installationEC-57
 Input shaft (FF M/T)MT-17, 26
 Instrument panelBT-29
 Intake air temperature sensorEC-203, 222
 Intake door control linkage
 adjustmentHA-90, 194
 Intake door motorHA-87, 191
 Intake manifoldEM-11
 Intake sensorHA-134
 Integrated homelink transmitterEL-357
 InteriorBT-34
 Interior lampEL-93
 Interior lamp on-off controlEL-95
 IVIS (Infiniti vehicle immobilizer
 system)EL-360

J

Jacking pointsGI-47
 Joint connector (J/C)Foldout
 Junction box (J/B)Foldout

K

KEYLES - Wiring diagramEL-286
 Knock sensor (KS)EC-310
 Knuckle spindleAX-5
 KS - Wiring diagramEC-311

L

Length (Dimensions)GI-45
 License lampEL-66
 Lifting pointsGI-48
 Line pressure solenoid valveAT-173
 Line pressure test (A/T)AT-69
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-732
 Location of electrical unitsEL-453

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Lock, doorBT-25
Low and reverse brakeAT-341
Lubricant (R134a) A/CHA-141, 227
LubricantsMA-11
Lubrication circuit (engine)LC-4
Lubrication-locks, hinges and hood
latchesMA-26

M

MAFS - Wiring diagramEC-191, 197, 452
Magnet clutch.....HA-101, 144, 231
MAIN - Wiring diagram.....EC-156
Mainshaft (M/T)MT-17, 31
Maintenance (engine)MA-13
MAJOR OVERHALL.....AT-288
Malfunction indicator lamp (MIL).....EC-442
Manual air conditioner - Wiring diagram.....HA-181
Manual transmission oil replacementMA-20
Mass air flow sensor (MAFS)EC-188, 195, 450
Master cylinder (brake)BR-14, 17
Master cylinder (clutch)CL-8
MeterEL-118
METER - Wiring diagram.....EL-122
MIL - Wiring diagram.....EC-443
MIRROR - Wiring diagram.....EL-205
Mirror defoggerEL-171
Mirror, door.....BT-63
MisfireEC-302
Mode door control linkage adjustment...HA-81, 207
Mode door motor.....HA-75, 205
Model variationGI-42
Molding - See ExteriorBT-42
M/T major overhaulMT-16
M/T removal and installationMT-14
MULTI - Wiring diagram.....EL-286
Multi-remote control system.....EL-281
Multiplex communicationHA-137
Multiport fuel injection (MFI) systemEC-33
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system)
precautionsGI-4
NATS - Wiring diagramEL-362
NAVI - wiring diagram.....EL-388
Navigation System.....EL-380
NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR).....BR-7
NVH troubleshooting (CL)CL-4
NVH troubleshooting (M/T)MT-7
NVH troubleshooting (ST).....ST-5
NVH troubleshooting (SU).....SU-16
NVIS (Nissan vehicle immobilizer
system).....EL-360

NVIS (Nissan vehicle immobilizer sys-
tem) precautionsGI-4

O

O2H1B1 - Wiring diagramEC-177
O2H1B2 - Wiring diagramEC-178
O2H2B1 - Wiring diagramEC-184
O2H2B2 - Wiring diagramEC-185
O2S1B1 - Wiring diagram.....EC-228, 237, 249
O2S1B2 - Wiring diagram.....EC-229, 238, 250
O2S2B1 - Wiring diagram ...EC-257, 266, 494, 503
O2S2B2 - Wiring diagram ...EC-258, 267, 495, 504
Oil change (capacity)MA-11
Oil cooler (engine)LC-9
Oil pan (engine)EM-14
Oil pressure (engine)LC-6
Oil pump (A/T).....AT-310
Oil pump (engine)LC-6
Oil pump regulator valve (engine)LC-8
Oil seal replacement (engine).....EM-47
On board diagnostic systemEC-76
Operating cylinder (clutch).....CL-10
ORVR (On-board Refueling Vapor
Recovery).....EC-43
OverheatEC-515
Overrun clutchAT-336
Overrun clutch solenoid valve.....AT-196

P

P/ANT - Wiring diagram.....EL-197
Park/Neutral position switch.....EC-632
Park/neutral position switch (A/T)AT-109
Park/neutral position switch (M/T)MT-11
Parking brake controlBR-35
Parking lampEL-66
PCV (positive crankcase ventilation)EC-52
PGC/V - Wiring diagramEC-363, 546
PHASE - Wiring diagramEC-324
PHONE - Wiring diagramEL-208
Piston assembly.....EM-83
Piston pin inspection.....EM-75
Piston ring inspection.....EM-75
Piston to bore clearance.....EM-77
PNP/SW - Wiring diagramEC-634
POS - Wiring diagramEC-317
POWER - Wiring diagram.....EL-12
Power antenna.....EL-197
Power door lock.....EL-265
Power door mirrorEL-205
Power seatEL-209
Power steering fluid level.....MA-25, ST-7
Power steering gear.....ST-14
Power steering hydraulic pressureST-9
Power steering oil pumpST-24
Power steering pressure (PSP) sensorEC-435
Power steering system bleeding.....ST-7

ALPHABETICAL INDEX

Power supply routing.....EL-11
 Power transistor & ignition coil.....EC-684
 Power windowEL-251
 PRE/SE - Wiring diagramEC-377, 383
 Precautions for Leak detection dyeHA-4, 158
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-15
 Pressure test (A/T).....AT-69
 PS/SEN - Wiring diagramEC-436

R

RadiatorLC-20, 21
 Radio - See Audio.....EL-184
 Rear air spoilerBT-42
 Rear axleAX-17
 Rear axle (disc brake type)AX-19
 Rear bumperBT-16
 Rear combination lamp removal and
 installationBT-42
 Rear disc brakeBR-27
 Rear doorBT-20
 Rear seatBT-52
 Rear seat belt.....RS-7
 Rear suspensionSU-16
 Rear windowBT-61
 Rear window defogger.....EL-171
 Refrigerant pressure sensorHA-107, 214
 Refrigerant connection precautionHA-5, 159
 Refrigerant discharging evacuating
 chargingHA-139
 Refrigerant general precautionHA-4, 158
 Refrigerant linesHA-150, 237
 Refrigerant pressure sensor.....EC-716
 Refrigeration cycleHA-15, 169
 Release bearing (clutch).....CL-13
 Remote keyless entry system.....EL-281
 Removal and installation (A/T).....AT-285
 Reverse clutch.....AT-328
 Reverse idler shaft (M/T)MT-17, 39
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T)MT-11
 Reverse main gear (M/T).....MT-17, 39
 Revolution sensor (A/T)AT-121
 Road wheel sizeGI-45
 Roof trimBT-39
 Room lamp - See Interior lampEL-93
 ROOM/L - Wiring diagramEL-97
 RP/SEN - Wiring diagramEC-717

S

SAE J1930 terminology listGI-52
 Seal - See ExteriorBT-42
 SEAT - Wiring diagramEL-209
 Seat belt inspectionMA-27, RS-9
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-26

Seat belt, front.....RS-5
 Seat belt, rear.....RS-7
 Seat, frontBT-48
 Seat, rearBT-52
 SHIFT - Wiring diagramAT-277
 Shift control components (M/T).....MT-19
 Shift fork (M/T)MT-19
 Shift leverMT-12
 Shift lock systemAT-276
 Shift schedule.....AT-381
 Shift solenoid valve A (A/T).....AT-179
 Shift solenoid valve B (A/T)AT-184
 Shock absorber (front)SU-10
 Shock absorber (rear)SU-22
 Side air bagRS-25
 Side trim.....BT-34
 Smart entrance control unitEL-346
 SMJ (super multiple junction).....Foldout
 Spare tire sizeGI-45
 Spark plug replacement.....MA-18
 SpeedometerEL-118
 Spiral cable.....RS-21
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-201
 SRS - See Supplemental Restraint
 SystemRS-14
 SRS - Wiring diagramRS-39
 S/SIG - Wiring diagramEC-702
 Stabilizer bar (front)SU-11
 Stall test (A/T)AT-65
 Standardized relayEL-9
 START - Wiring diagram.....SC-11
 Start signalEC-701
 StarterSC-19
 Starting system.....SC-10
 Steering gear and linkage inspectionMA-25
 Steering linkageST-14
 Steering switch.....EL-34
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning force.....ST-8
 Stop lamp.....EL-74
 STOP/L - Wiring diagram.....EL-74
 Strut (front)SU-9
 Strut (rear)SU-20
 Sunload sensorHA-130
 Sunroof.....BT-53
 Sunroof, electricEL-200
 Supplemental Restraint SystemRS-14
 Supplemental restraint system - Wiring
 diagramRS-39
 Symbols and abbreviationsGI-10
 Symptom matrix chartEC-130
 Synchronizer (M/T).....MT-17
 System readiness test (SRT) codeEC-78

T

Tachometer.....EL-118
 Tail lamp.....EL-66

ALPHABETICAL INDEX

TAIL/L - Wiring diagram	EL-69
TCM circuit diagram	AT-16
TCM inspection table	AT-99
TCS (traction control system)	BR-88
TCS - Wiring diagram	BR-92, 93
TCS component parts and connector location	BR-91
TCS control unit	BR-90
TCS system components	BR-89
TCS trouble diagnoses	BR-105
TCS wheel sensors	BR-91
Telephone	EL-208
THEFT - Wiring diagram	EL-320
Theft warning system	EL-312
Thermometer	EL-137
Thermostat	LC-18
Three way catalyst precautions	GI-6
Throttle body	EM-11
Throttle control motor	EC-472
Throttle control motor relay	EC-466
Throttle position sensor (TPS)	EC-212, 295, 533, 535, 662
Throttle position switch	AT-189
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	ST-14
Tie-rod ball joints	ST-18
Tightening torque of standard bolts	GI-50
Timing chain	EM-29
Tire rotation	MA-23
Tire size	GI-45
Torque converter clutch solenoid valve	AT-158
Torque converter installation	AT-286, 375
Tow truck towing	GI-49
Traction control system - See TCS	BR-88
Traction control system - Wiring diagram	BR-92
Transaxle serial number	GI-44
Transmission case (M/T)	MT-16
TRANSMT - Wiring diagram	EL-357
Tread-FR&RR (Dimensions)	GI-45
Trim	BT-34
TRNSCV - Wiring diagram	EL-357
Trouble diagnoses	GI-34
Trunk lid	BT-16
Trunk lid finisher	BT-41
Trunk lid opener - See Trunk lid	BT-16
Trunk lid trim	BT-41
Trunk room trim	BT-41
Turbine revolution sensor	AT-213
TURN - Wiring diagram	EL-83
Turn signal lamp	EL-81
Two trip detection logic	EC-76
Two-pole lift	GI-48

U

Under body	BT-68
------------------	-------

V

Vacuum cut valve	EC-37
Vacuum cut valve bypass valve	EC-37, 592, 598
Vacuum hose (brake system)	BR-22
Vacuum hose drawing (Engine control)	EC-31
Valve clearance	EM-66
Valve guide	EM-57
Valve seat	EM-58
Valve spring	EM-59
Vehicle recovery (freeing a stuck vehicle)	GI-49
Vehicle security (theft warning) system	EL-312
Vehicle speed sensor (VSS)	EC-427
VEHSEC - Wiring Diagram	EL-320
VENT/V - Wiring diagram	EC-370, 558, 567
VIAS	EC-638, 676
VIAS - Wiring diagram	EC-678
Viscosity number (SAE)	MA-11
VSS - Wiring diagram	EC-429

W

WARN - Wiring diagram	EL-141
Warning chime	EL-148
Warning lamps	EL-140
Washer, front	EL-163
Water pump	LC-14
Water temperature gauge	EL-118
Weatherstrip - See Exterior	BT-42
Wheel alignment (front)	SU-6
Wheel alignment (rear)	SU-18
Wheel balance	MA-22
Wheel bearing (front)	AX-4
Wheel bearing (rear)	AX-18
Wheel hub (front)	AX-5
Wheel hub (rear)	AX-19
Wheel sensors (ABS)	BR-140
Wheel sensors (TCS)	BR-140
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-45
Width (Dimensions)	GI-45
WINDOW - Wiring diagram	EL-255
Window, rear	BT-61
Windshield	BT-61
WIPER - Wiring diagram	EL-165
Wiper, front	EL-163
Wiring Diagram (Cell code) list	EL-481
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-13
Wrist pin - See Piston pin inspection	EM-75