

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-27	A/T Wiring diagram AT - TCCSIG	AT-155 , AT-512
A/C compressor clutch removal and installation ..	ATC-120	A/T Wiring diagram AT - TCV	AT-150
A/C compressor mounting	ATC-119	A/T Wiring diagram AT - TPS	AT-180
A/C compressor precaution	ATC-9	A/T Wiring diagram AT - VSS A/T	AT-119
A/C compressor special service tool	ATC-12	A/T Wiring diagram AT ? PC/A	AT-515
A/C control operation (auto A/C)	ATC-24	A/T Wiring diagram AT ? PC/B	AT-546
A/C diagnostic work flow (auto A/C)	ATC-87	A/T Wiring diagram AT ? PC/C	AT-553
A/C evaporator	ATC-124	A/T Wiring diagram AT ? PC/CS	AT-557
A/C HFC134a (R134a) system identification	ATC-6	A/T Wiring diagram AT ? PWR/IN	AT-567
A/C HFC134a (R134a) system precaution	ATC-4	A/T Wiring diagram AT ? SFTFNC	AT-550
A/C HFC134a (R134a) system service procedure	ATC-116	A/T Wiring diagram AT ? TRSC	AT-482
A/C HFC134a (R134a) system service tools ...	ATC-12	A/T Wiring diagram AT ? VSSATC	AT-486
A/C HFC134a system service equipment precaution ...	ATC-9	A/T Wiring diagram AT - VSSMTR ..	AT-199 , AT-204
A/C lubricant (R134a)	ATC-18	Accelerator control system	ACC-2
A/C lubrication oil	ATC-18	Accelerator pedal position (APP) sensor	EC-589 , EC-595 , EC-607
A/C operational check	ATC-50	Accelerator pedal released position learning	EC-45
A/C self-diagnoses (auto A/C)	ATC-42 , ATC-87	Active damper suspension system - Wiring diagram	FSU-4
A/C service data specification	ATC-130	AF1B1-Wiring diagram	EC-469 , EC-476 , EC-483 , EC-492 , EC-502 , EC-509 , EC-520
A/C system description (auto A/C)	ATC-21	AF1B2-Wiring diagram	EC-471 , EC-478 , EC-485 , EC-494 , EC-504 , EC-511 , EC-522
A/C trouble diagnoses (auto A/C)	ATC-30	AF1HB1-Wiring diagram	EC-386
A/C, A - Wiring diagram	ATC-36	AF1HB2-Wiring diagram	EC-388
A/T - Wiring diagram	AT-18	Aiming adjustment	LT-39
A/T fluid checking	AT-393 , AT-432	Air bag	SRS-3
A/T fluid replacement	AT-393	Air bag disposal	SRS-52
A/T fluid temperature sensor	AT-111 , AT-471 , AT-476	Air bag precautions	GI-3
A/T IND - Wiring diagram	DI-54	Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
A/T indicator	DI-54	Air bleeding for brake systemAir bleeding for brake system	BR-8
A/T self-diagnoses	AT-43 , AT-53 , AT-54 , AT-452 , AT-457	Air cleaner and air duct	EM-15
A/T shift lock system	AT-260 , AT-592	Air cleaner filter replacement	MA-16
A/T shift lock system - Wiring diagram	AT-261 , AT-593	Air conditioner cut control	EC-30
A/T trouble diagnoses	AT-422	Air flow meter - See Mass air flow sensor	EC-160 , EC-168
A/T Wiring diagram AT - 1ST	AT-128 , AT-492	Air fuel ratio sensor 1 ..	EC-467 , EC-474 , EC-481 , EC-490 , EC-499 , EC-507 , EC-518
A/T Wiring diagram AT - 2ND	AT-133 , AT-496	Air fuel ratio sensor 1 heater	EC-384
A/T Wiring diagram AT - 3RD	AT-138 , AT-501	Air mix. door motor	ATC-61
A/T Wiring diagram AT - 4TH	AT-143 , AT-505	Ambient sensor	ATC-89 , ATC-101
A/T Wiring diagram AT - 5TH	AT-509	Angular tightening application	EM-4
A/T Wiring diagram AT - BA/FTS	AT-193	APPS1 - Wiring diagram	EC-591
A/T Wiring diagram AT - CAN	AT-189 , AT-460	APPS2 - Wiring diagram	EC-597
A/T Wiring diagram AT - ENG SS	AT-123	APPS3 - Wiring diagram	EC-609
A/T Wiring diagram AT - FTS	AT-113 , AT-472	ASC/BS - Wiring diagram	EC-560
A/T Wiring diagram AT - FTSP	AT-477	ASC/SW - Wiring diagram	EC-553
A/T Wiring diagram AT - LPSV	AT-163	ASCSOF - Wiring diagram	EC-657
A/T Wiring diagram AT - MAIN	AT-102	ASCD	EC-686
A/T Wiring diagram AT - MMSW	AT-561	ASCD brake switch	EC-558 , EC-656
A/T Wiring diagram AT - NONDTC	AT-211	ASCD clutch switch	EC-558 , EC-656
A/T Wiring diagram AT - OVRCSV	AT-185	ASCD indicator lamp	EC-666
A/T Wiring diagram AT - PNP/SW	AT-107 , AT-467	ASCD steering switch	EC-551
A/T Wiring diagram AT - SSV/A	AT-169 , AT-519	ASCIND - Wiring diagram	EC-667
A/T Wiring diagram AT - SSV/B	AT-174 , AT-523	AUDIO - Wiring diagram	AV-13
A/T Wiring diagram AT - SSV/C	AT-527	AUT/DP - Wiring diagram	SE-18
A/T Wiring diagram AT - SSV/CS	AT-532	Auto air conditioner - Wiring diagram	ATC-36
A/T Wiring diagram AT - SSV/D	AT-537		
A/T Wiring diagram AT - SSV/E	AT-542		

ALPHABETICAL INDEX

Auto anti-dazzling inside mirror [GW-92](#), [GW-93](#)
 Automatic amplifier [ATC-40](#), [ATC-52](#)
 Automatic transaxle number [GI-44](#)
 Automatic transmission fluid replacement [MA-22](#)
 AV and NAVI control unit [AV-95](#)
 AV communication line [AV-75](#), [AV-118](#)

B

Back door trim [EI-30](#)
 BACK/L - Wiring diagram [LT-132](#)
 Back-up lamp [LT-132](#)
 Back-up lamp switch (M/T)Back-up lamp switch [MT-12](#)
 Basic inspection [EC-82](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-14](#),
[SC-26](#)
 Baulk ring (M/T) [MT-20](#)
 BCM (Body control module) [BCS-3](#)
 Block heater [EM-118](#)
 Blower motor [ATC-67](#), [ATC-106](#)
 Blower unit [ATC-105](#)
 Board computer [AV-65](#)
 Board-on lift [GI-38](#)
 Body alignment [BL-133](#)
 Body component parts [BL-122](#)
 Body construction [BL-132](#)
 Body exterior paint color [BL-121](#)
 Body repair [BL-121](#)
 Body sealing [BL-129](#)
 Bose speaker amp. [AV-8](#)
 Brake boosterBrake booster [BR-18](#)
 Brake control valve (Proportioning valve)Brake control
 valve (Proportioning valve) [BR-36](#)
 Brake fluid changeBrake fluid change [BR-8](#)
 Brake fluid level [MA-25](#)
 Brake fluid level and line checkBrake fluid level and line
 check [BR-8](#)
 Brake hydraulic lineBake hydraulic line [BR-9](#)
 Brake inspection [MA-26](#)
 Brake lines and cables inspection [MA-25](#)
 Brake master cylinderBrake master cylinder [BR-12](#)
 Brake pedalBrake pedal [BR-6](#)
 Brake switch [EC-558](#), [EC-584](#), [EC-656](#)
 BRK/SW - Wiring diagram [EC-585](#)
 Bulb specifications [LT-187](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-16](#)

C

Camshaft [EM-77](#)
 Camshaft inspection [EM-83](#)
 Camshaft position sensor (PHASE) [EC-270](#)
 CAN - Wiring diagram [EC-146](#), [LAN-23](#), [LAN-41](#), [LAN-60](#),
[LAN-79](#), [LAN-99](#), [LAN-121](#), [LAN-143](#), [LAN-167](#),
[LAN-191](#), [LAN-211](#), [LAN-233](#), [LAN-255](#), [LAN-279](#), [LAN-303](#),
[LAN-323](#), [LAN-345](#)
 CAN (Controller Area Network) [BRC-11](#), [BRC-52](#),

[BRC-96](#), [LAN-8](#), [LAN-21](#), [LAN-39](#), [LAN-58](#), [LAN-77](#),
[LAN-97](#), [LAN-119](#), [LAN-141](#), [LAN-165](#), [LAN-189](#), [LAN-209](#),
[LAN-231](#), [LAN-253](#), [LAN-277](#), [LAN-301](#), [LAN-321](#),
[LAN-343](#)
 CAN communication . [EC-31](#), [EC-145](#), [AT-31](#), [AT-188](#),
[AT-413](#), [AT-459](#), [BRC-11](#), [BRC-52](#), [BRC-96](#), [LAN-8](#),
[LAN-21](#), [LAN-39](#), [LAN-58](#), [LAN-77](#), [LAN-97](#), [LAN-119](#),
[LAN-141](#), [LAN-165](#), [LAN-189](#), [LAN-209](#), [LAN-231](#), [LAN-253](#),
[LAN-277](#), [LAN-301](#), [LAN-321](#), [LAN-343](#)
 Canister-See EVAP canister [EC-674](#)
 CHARGE - Wiring diagram [SC-25](#)
 Charging system [SC-24](#)
 Chassis and body maintenance [MA-20](#)
 Chassis and body maintenanceSchedule 1 [MA-7](#)
 Chassis and body maintenanceSchedule 2 [MA-8](#)
 CHIME - Wiring diagram [DI-61](#)
 CIGAR - Wiring diagram [WW-31](#)
 Cigarette lighter [WW-31](#)
 Circuit breaker [PG-60](#)
 Closed loop control [EC-28](#)
 Closed loop control (Bank 1) [EC-445](#)
 Closed loop control (Bank 2) [EC-445](#)
 Clutch coverClutch cover [CL-15](#)
 Clutch discClutch disc [CL-15](#)
 Clutch fluid level [MA-20](#)
 Clutch master cylinderClutch master cylinder [CL-8](#)
 Clutch operating cylinderClutch operating cylinder [CL-10](#)
 Clutch pedalClutch pedal [CL-5](#)
 Clutch release mechanismClutch release mechanism .
[CL-13](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear)Coil spring [RSU-9](#)
 Collision diagnosis [SRS-59](#)
 Combination lamp, front, removal and installation .. [LT-41](#)
 Combination lamp, rear, removal and installation .. [LT-148](#)
 Combination meter [DI-5](#)
 Combination switch [LT-123](#)
 COMM - Wiring diagram [AV-75](#), [AV-118](#)
 COMPAS - Wiring diagram [DI-42](#)
 Component Location (auto A/C) [ATC-33](#)
 Compressor clutch removal and installation .. [ATC-120](#)
 Compressor mounting [ATC-119](#)
 Compressor precaution [ATC-9](#)
 Compressor special service tool [ATC-12](#)
 Condenser [ATC-123](#)
 Connector inspection [GI-22](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-24](#), [BRC-65](#), [BRC-112](#)
 CONSULT general information [GI-35](#)
 CONSULT-áU for engine [EC-110](#)
 Control unit [ATC-100](#)
 Control units (terminal arrangement) [PG-64](#)
 Controller Area Network (CAN) [BRC-11](#), [BRC-52](#),
[BRC-96](#), [LAN-8](#), [LAN-21](#), [LAN-39](#), [LAN-58](#), [LAN-77](#),
[LAN-97](#), [LAN-119](#), [LAN-141](#), [LAN-165](#), [LAN-189](#), [LAN-209](#),
[LAN-231](#), [LAN-253](#), [LAN-277](#), [LAN-301](#), [LAN-321](#),

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

LAN-343

Converter housing installation	AT-370
COOL/F - Wiring diagram	EC-451
Coolant mixture ratio	MA-11
Coolant replacementVQ35DE	MA-14
Cooling fan control	EC-448
Cooling fan motor	EC-448
Cooling unit (A/C evaporator)	ATC-109 , ATC-124
Cornering lamp	LT-108
Corrosion protection	BL-126
Coupling sleeve (M/T)	MT-20
Crankcase ventilation system - See Positive crankcase ventilation	EC-684
Crankshaft position sensor (POS)	EC-264
Crash zone sensor	SRS-48
Cylinder block	EM-118
Cylinder head	EM-96

D

Data link connector for Consult	EC-112 , EC-124
Daytime light system	LT-43
Daytime running light - See Daytime light system ..	LT-43
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system .	EC-8 , EC-55
Diagnostic trouble code (DTC) inspection priority chart	EC-79
Differential gear (FF M/T)	MT-24
Dimensions	GI-44
Display and amp.assembly	ATC-40 , ATC-52
Door glass	GW-87 , GW-90
Door glass Fitting Adjustment(Front)	GW-88
Door glass Fitting Adjustment(Rear)	GW-91
Door lock	BL-68
Door trim	EI-30
Door, front	BL-65 , GW-87
Door, rear	BL-65 , GW-90
Drive shaft (front)	FAX-11
Driver air bag	SRS-40
Dropping resistor (A/T)	AT-161
DTC work support	EC-122
DTRL - Wiring diagram	LT-46
Duct and grilles	ATC-114

E

ECM input/output signal	EC-101 , EC-127
ECM power supply	EC-138 , EC-392
ECM/PW - Wiring diagram	EC-393
ECTS - Wiring diagram	EC-181
EGR function	EC-278 , EC-529
EGR temperature sensor	EC-293
EGR volume control valve	EC-286
EGR/TS - Wiring diagram	EC-296
EGRC1 - Wiring diagram	EC-282 , EC-533
EGVC/V - Wiring diagram	EC-288
Electric sunroof	RF-10

Electric throttle control actuator	EC-403 , EC-405
Electrical diagnoses	GI-22
Electrical load signal circuit	EC-655
Electronic ignition (EI) system	EC-29
EMNT - Wiring diagram	EC-646
Engine control circuit diagram	EC-99
Engine control component parts location	EC-91
Engine control module (ECM)	EC-381
Engine control system diagram and chart	EC-24
Engine coolant temperature sensor (ECTS) ..	EC-179 , EC-190
Engine mounting control (Front)	EC-645
Engine oil	LU-6
Engine oil filter replacementQR25DE	MA-17
Engine oil precautions	GI-3 , GI-6
Engine oil replacementQR25DE	MA-16
Engine removal	EM-113
Engine serial number	GI-44
ETC1 - Wiring diagram	EC-406
ETC2 - Wiring diagram	EC-413
ETC3 - Wiring diagram	EC-417
EVAP canister	EC-674
EVAP canister purge volume control solenoid valve	EC-318 , EC-536
EVAP canister vent control valve	EC-325 , EC-544
EVAP control system (small leak) diagnosis ..	EC-308 , EC-346 , EC-354
EVAP control system pressure sensor	EC-332 , EC-338
EVAP control system purge flow monitoring diagnosis .	EC-303
EVAP vapor lines inspection	MA-19
Evaporative emission (EVAP) system	EC-671
Evaporator	ATC-124
Exhaust manifold	EM-27
Exhaust system inspection	EX-3 , MA-20
Expansion valve	ATC-125

F

F/FOG - Wiring diagram	LT-79
F/PUMP - Wiring diagram	EC-640
Fan control amp.	ATC-113
Final drive (FF M/T)	MT-24
Flow charts	GI-25
Fluid temperature sensor (A/T) ..	AT-111 , AT-471 , AT-476
Fluids	MA-10
Fluorescent leak detector	ATC-126
Flywheel (clutch)Flywheel (clutch)	CL-15
Fog lamp, front	LT-77
Fork rod (M/T)	MT-22
Freeze frame data	EC-56 , EC-114
Front bumper	EI-14
Front combination lamp removal and installation	LT-41
Front disc brakeFront disc brake	BR-23
Front door	BL-65 , BL-68 , GW-87
Front Door Trim	EI-30
Front fog lamp	LT-77
Front passenger air bag	SRS-44

ALPHABETICAL INDEX

Front seat	SE-103
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-50
Front side air bag	SRS-45
FTTS - Wiring diagram	EC-239 , EC-243
Fuel cut control (at no load high engine speed)	EC-30
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-220 , EC-229
Fuel injection system (Bank 2)	EC-220 , EC-229
Fuel injector and fuel tube	EM-40
Fuel level sensor	EC-364 , EC-366 , EC-368
Fuel line inspection	FL-3 , MA-16
Fuel precautions	GI-3 , GI-5
Fuel pressure check	EC-48
Fuel pressure release	EC-48
Fuel pump	EC-639
Fuel system	FL-3
Fuel systemCommercial Service Tools	FL-2
Fuel systemPREPARATION	FL-2
Fuel tank temperature sensor	EC-237 , EC-242
Fuel tank vacuum relief valve	EC-674
FUELB1 - Wiring diagram	EC-222 , EC-231
FUELB2 - Wiring diagram	EC-223 , EC-232
Fuse	PG-60 , PG-68
Fuse block	PG-67
Fusible link	PG-60 , PG-68

G

Garage jack and safety stand	GI-38
Gauges	DI-5
Gear components (M/T)	MT-20
Generic scan tool (GST)	EC-124
Glass	GW-11 , GW-14 , GW-87 , GW-90
GPS antenna	AV-94
Grease	MA-10
Ground distribution	PG-27

H

H/LAMP - Wiring diagram	LT-11
Handling precautions for plastics	BL-144
Harness connector	PG-61
Harness connector inspection	GI-22
Harness layout	PG-36
Hazard warning lamp	LT-90 , LT-108
Headlamp	LT-6
Headlamp removal and installation	LT-41
Heated oxygen sensor 2 (bank 1)	EC-198 , EC-208 , EC-421 , EC-433
Heated oxygen sensor 2 (bank 2)	EC-198 , EC-208 , EC-421 , EC-433
Heated oxygen sensor 2 heater (bank 1)	EC-151
Heated oxygen sensor 2 heater (bank 2)	EC-151
Heated seat	SE-92
Heater and cooling unit (Heater core) .	ATC-109 , ATC-110
Heater unit (heater core)	ATC-109 , ATC-110
Height (Dimensions)	GI-44

HFC134a (R134a) system identification	ATC-6
HFC134a (R134a) system precaution	ATC-4
HFC134a (R134a) system service procedure	ATC-116
HFC134a (R134a) system service tools	ATC-12
HFC134a system service equipment precaution	ATC-9
Horn	WW-35
HORN - Wiring diagram	WW-35
How to erase DTC for OBD system	EC-65
HSEAT - Wiring diagram	SE-93 , SE-95

I

IATS - Wiring diagram	EC-176
Identification plate	GI-44
Idle air volume learning	EC-46
Idle mixture ratio	EC-34
Idle speed	EC-34 , EC-82
Idle speed control (ISC)	EC-372 , EC-374
Ignition coil	EM-37 , EC-613
Ignition control system	EC-613
Ignition timing	EC-34 , EC-82
IGNSYS - Wiring diagram	EC-614
Illumination control	LT-186
In vehicle sensor	ATC-92 , ATC-102
INF/D - Wring diagram	AV-70
INJECT - Wiring diagram	EC-634
Injector	EC-633
Input shaft (FF M/T)	MT-20
Instrument panel	IP-10
Intake air temperature sensor	EC-175 , EC-193
Intake door control linkage adjustment	ATC-66
Intake door motor	ATC-64 , ATC-107
Intake manifold	EM-25
Intake sensor	ATC-98 , ATC-104
Intake valve timing control (Bank 1)	EC-148
Intake valve timing control (Bank 2)	EC-148
Intake valve timing control solenoid valve (Bank 1)	EC-396
Intake valve timing control solenoid valve (Bank 2)	EC-396
Interior	EI-32
Interior lamp	LT-149
IPDM (Intelligent power distribution module engine room)	PG-14
IVCB1 - Wiring diagram	EC-397
IVCB2 - Wiring diagram	EC-399

J

Jacking points	GI-38
Junction box (J/B)	PG-67

K

Keyless entry system - See Multi-remote control system	BL-37
Knock sensor (KS)	EC-259
KS - Wiring diagram	EC-260

ALPHABETICAL INDEX

L

LAN system circuit	ATC-55
Length (Dimensions)	GI-44
Lifting points	GI-38
Line pressure solenoid valve	AT-161
Line pressure test (A/T)	AT-71 , AT-434
Liquid gasket application	EM-4
Location of electrical units	PG-57
Lubricant (R134a) A/C	ATC-18
Lubricants	MA-10
Lubrication circuit (engine)	LU-4
Lubrication oil A/C	ATC-18
Lubrication-locks, hinges and hood latches	MA-30
Luggage compartment trim	EI-42

M

M/T major overhaul	MT-24
M/T oil replacementM/T oil replacement	MT-10
MAFS - Wiring diagram	EC-163 , EC-170
Magnet clutch	ATC-72 , ATC-120
MAIN - Wiring diagram	EC-138
Mainshaft (M/T)	MT-20
Maintenance	MA-4
Malfunction indicator lamp (MIL)	EC-67
Manual transaxle number	GI-44
Manual transmission oil replacement	MA-20
Mass air flow sensor (MAFS)	EC-160 , EC-168
Master cylinder (brake)Master cylinder (brake) .	BR-12
Master cylinder (clutch)Master cylinder (clutch) ..	CL-8
Meter	DI-5
METER - Wiring diagram	DI-11
MIL data link connectors circuit	EC-669
MIL/DL - Wiring diagram	EC-669
Misfire	EC-252
Mode door control linkage adjustment	ATC-60
Mode door motor	ATC-58 , ATC-111
Model variation	GI-44
Multiport fuel injection (MFI) system	EC-27
Multiport fuel injection precautions	GI-3 , GI-5
Multi-remote control system	BL-37

N

NATS - Wiring diagram	BL-102
NAVI - Wiring diagram	AV-110
Navigation system	AV-93
NVH troubleshooting (BR)NVH troubleshooting (BR) ...	BR-5
NVH troubleshooting (CL)NVH troubleshooting (CL) ...	CL-4
NVH troubleshooting (EM)	EM-10
NVH troubleshooting (FA)	FAX-4
NVH troubleshooting (RA)	RAX-4
NVH troubleshooting (RSU)NVH Troubleshooting (RSU)	RSU-4
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (WT)NVH troubleshooting (WT) .	

WT-2

O

O2H2B1 - Wiring diagram	EC-153
O2H2B2 - Wiring diagram	EC-155
O2S2B1 - Wiring diagram ..	EC-200 , EC-211 , EC-424 , EC-436
O2S2B2 - Wiring diagram ..	EC-202 , EC-213 , EC-426 , EC-438
Oil filter	LU-8
Oil pump (engine)	LU-9
Oil seal replacement (engine)	EM-90
On board diagnostic system	EC-50
Operating cylinder (clutch)Operating cylinder (clutch) ..	CL-10
ORVR (On-board Refueling Vapor Recovery)	EC-678
Overdrive control switch	AT-255
Overheat	EC-448
Overrun clutch solenoid valve	AT-183

P

Park/Neutral position switch	EC-571
Park/neutral position switch (A/T)	AT-105 , AT-466
Park/neutral position switch (M/T)Park/neutral position switch (M/T)	MT-12
Parking brake controlParking brake control	PB-2
Parking drum brakeParking drum brake	PB-5
PCV (positive crankcase ventilation)	EC-684
Periodic maintenance	MA-6
PGC/V - Wiring diagram	EC-320 , EC-538
PHSB1 - Wiring diagram	EC-271
PHSB2 - Wiring diagram	EC-273
Piston ring inspection	EM-136
PNP/SW - Wiring diagram	EC-573
POS - Wiring diagram	EC-265
POWER - Wiring diagram	PG-5
Power seat	SE-88
Power steering fluid level	MA-27
Power steering pressure (PSP) sensor	EC-376
Power supply routing	PG-3
Power transistor	EC-613
Power window	GW-19
PRE/SE - Wiring diagram	EC-334 , EC-340
Precautions (General)	GI-3
Precautions in repairing high strength steel	BL-147
Pressure control solenoid valve A	AT-514
Pressure control solenoid valve B	AT-545
Pressure control solenoid valve C	AT-552
Pressure test (A/T)	AT-71 , AT-434
PS/SEN - Wiring diagram	EC-377

R

Rear bumper	EI-16
Rear combination lamp removal and installation ...	LT-148
Rear disc brakeRear disc brake	BR-29

ALPHABETICAL INDEX

Rear door	BL-65 , GW-90
Rear seat	SE-108
Rear seat belt	SB-5
Rear suspensionRear suspension	RSU-5
Rear window	GW-14
Rear window defogger	GW-94
Refrigerant connection precaution	ATC-6
Refrigerant discharging evacuating charging	ATC-116
Refrigerant general precaution	ATC-5
Refrigerant lines	ATC-116
Refrigerant pressure sensor ...	EC-650 , ATC-77 , ATC-123
Remote keyless entry system	BL-37
Removal and installation (A/T)	AT-274 , AT-600
Reverse idler shaft (M/T)	MT-20
Reverse main gear (M/T)	MT-20
Revolution sensor (A/T)	AT-117 , AT-485
Road wheel size	GI-44
Rocker cover	EM-43
Room lamp - See Interior lamp	LT-149
ROOM/L - Wiring diagram	LT-154
RP/SEN - Wiring diagram	EC-651

S

SAE J1930 terminology list	GI-48
SEAT - Wiring diagram	SE-88 , SE-89
Seat belt inspection	SB-6 , MA-30
Seat belt pre-tensioner disposal	SRS-52
Seat belt, front	SB-4
Seat belt, rear	SB-5
Seat, front	SE-103
Seat, rear	SE-108
SEN/PW - Wiring diagram	EC-464
SHIFT - Wiring diagram	AT-261 , AT-593
Shift control components (M/T)	MT-22
Shift control components (M/T)Shift control components (M/T)	MT-13
Shift fork (M/T)	MT-22
Shift lock system	AT-260 , AT-592
Shift schedule	AT-377 , AT-441
Shift solenoid valve A (A/T)	AT-167 , AT-518
Shift solenoid valve B (A/T)	AT-172 , AT-522
Shift solenoid valve C (A/T)	AT-526
Shift solenoid valve D (A/T)	AT-536
Shift solenoid valve E (A/T)	AT-541
Shock absorber (front)	FSU-10
Shock absorber (rear)Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-49
Side curtain air bag	SRS-46
Side trim	EI-32
Spare tire size	GI-44
Spark plug	EM-38
Spark plug replacementQR25DE	MA-18
Specification value	EC-133
Speedometer	DI-5
Spiral cable	SRS-42
SROOF - Wiring diagram	RF-12
SRS - See Supplemental Restraint System	SRS-6

SRS - Wiring diagram	SRS-13
SRS Trouble diagnoses	SRS-9
Stabilizer bar (front)	FSU-11
Stall test (A/T)	AT-68 , AT-432
Standardized relay	PG-65
START - Wiring diagram	SC-11
Starting system	SC-10
Steering gear and linkage inspection	MA-27
Steering knuckle	FAX-6
Stop lamp	LT-129
Stop lamp switch	EC-558 , EC-584 , EC-656
STOP/L - Wiring diagram	LT-130
Strut (front)	FSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-95 , ATC-103
Sunroof	RF-21
Supplemental Restraint System	SRS-6
Supplemental restraint system - Wiring diagram .	SRS-13
Symbols and abbreviations	GI-8 , GI-9 , GI-20
Symptom matrix chart	EC-87
Synchronizer (M/T)	MT-20
System readiness test (SRT) code	EC-57

T

Tachometer	DI-5
TCM circuit diagram	AT-18 , AT-431
TCM inspection table	AT-99 , AT-448
TCS - Wiring diagram	BRC-16 , BRC-57 , BRC-101
TCS component parts and connector location	BRC-15 , BRC-56 , BRC-100
TCS wheel sensors	BRC-15 , BRC-56 , BRC-100
Three way catalyst	EM-27
Three way catalyst function (Bank 1)	EC-299
Three way catalyst function (Bank 2)	EC-299
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor	EC-416
Throttle control motor relay	EC-411
Throttle position sensor (TPS) ...	EC-184 , EC-246 , EC-459 , EC-461 , EC-601
Throttle position switch	AT-255
Throttle valve closed position learning	EC-45
Tightening torque of standard bolts	GI-42
Time lag test	AT-433
Timing chain	EM-55
Tire rotation	MA-25
Tire size	GI-44
Torque converter installation	AT-275 , AT-370 , AT-600
Torque convertor clutch solenoid valve	AT-148 , AT-511
Tow truck towing	GI-41
Towing point	GI-41
TPS1 - Wiring diagram	EC-248
TPS2 - Wiring diagram	EC-186
TPS3 - Wiring diagram	EC-603
Traction control system - Wiring diagram	BRC-16 , BRC-57 , BRC-101
Transaxle serial number	GI-44

IDX

ALPHABETICAL INDEX

Transmission case (M/T)	MT-19	Wiring diagrams	GI-8 , GI-12
TRANSMT - Wiring diagram	BL-118		
Tread-FR&RR (Dimensions)	GI-44		
Trim	EI-32		
Trouble diagnoses	GI-9		
Trunk lid trim	EI-42		
Trunk room trim	EI-42		
Turbine revolution sensor	AT-481		
TURN - Wiring diagram	LT-94 , LT-111		
Turn signal lamp	LT-90 , LT-108		
Two trip detection logic	EC-50		
Two-pole lift	GI-38		

U

Unified meter and A/C amp.	DI-32
---------------------------------	-----------------------

V

Vacuum hose (brake system)Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-25
Valve clearance	EM-86
Valve guide	EM-108 , EM-109
Valve seat	EM-110
Valve spring	EM-111
Variable induction air control system (VIAS) ..	EC-579 , EC-625
Vehicle identification number	GI-44
Vehicle recovery (freeing a stuck vehicle)	GI-41
Vehicle speed sensor (VSS)	EC-370
VENT/V - Wiring diagram	EC-327 , EC-546
VIAS - Wiring diagram	EC-627
VIAS/V - Wiring diagram	EC-580
Viscosity number (SAE)	MA-11

W

W/ANT - Wiring diagram	AV-61
WARN - Wiring diagram	DI-46
Warning chime	DI-59
Warning lamps	DI-45
Water temperature gauge	DI-5
Wheel alignment (rear)Wheel alignment (rear) .	RSU-6
Wheel balance	MA-23
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5
Wheel size	GI-44
Wheelarch heightWheelarch height	RSU-12
Wheelbase (Dimensions)	GI-44
Width (Dimensions)	GI-44
WINDOW - Wiring diagram	GW-28
Window, door	GW-87 , GW-90
Window, rear	GW-14
Windshield	GW-11
Wiper and washer	WW-4
Wiring Diagram (Cell code) list	PG-54