

A

B

C

SECTION

RSU

REAR SUSPENSION

CONTENTS

RSU

PRECAUTIONS	2	
Precautions	2	
PREPARATION	3	
Commercial Service Tools	3	
NOISE, VIBRATION, AND HARSHNESS (NVH)		
TROUBLESHOOTING	4	
NVH Troubleshooting Chart	4	
REAR SUSPENSION ASSEMBLY	5	
Components	5	
On-vehicle Service	6	
Rear Wheel Alignment	6	
PRELIMINARY INSPECTION	6	
CAMBER	6	
TOE-IN	7	
Removal and Installation	8	
REAR SUSPENSION ASSEMBLY	8	
SHOCK ABSORBER	9	
SUSPENSION ARM	9	
RADIUS ROD	9	F
FRONT LOWER LINK	9	
REAR LOWER LINK AND COIL SPRING	9	
STABILIZER BAR	10	G
Inspection	10	
SHOCK ABSORBER ASSEMBLY	10	
SUSPENSION ARM	11	H
RADIUS ROD	11	
FRONT LOWER LINK	11	
UPPER RUBBER SEAT AND BUSHING	11	
REAR LOWER LINK AND COIL SPRING	11	I
STABILIZER BAR	11	
SERVICE DATA AND SPECIFICATIONS (SDS)	12	
General Specifications (Rear)	12	J
Rear Wheel Alignment (Unladen*)	12	
Ball Joint	12	
Wheelarch Height (Unladen*)	12	K

L

M

PRECAUTIONS


PRECAUTIONS

PFP:00001

Precautions

EES000N7

- When installing each rubber part, final tightening must be carried out under unladen condition* with tires on ground. Oil will shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- Use flare nut wrench when removing or installing brake tubes.
- After installing removed suspension parts, check wheel alignment.
- Do not jack up at the trailing arm and lateral link.
- Always torque brake lines when installing.
- Lock nuts are unreusable parts; always use new ones.
When replacing, do not wipe the oil off of the new lock nut before tightening.

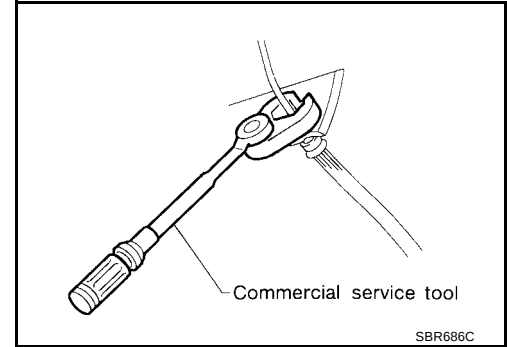




PREPARATION

PREPARATION

PFP:00002

Commercial Service Tools

 EES000N8

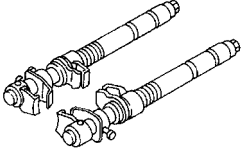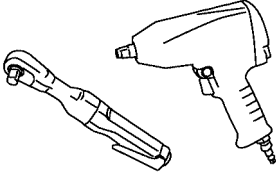Tool name	Description
Equivalent to GG94310000 1. Flare nut crowfoot 2. Torque wrench  S-NT360	Removing and installing brake piping a:10 mm (0.39 in)
Spring compressor  NT717	Removing and installing coil spring
Power tool  PBIC0190E	Loosening bolts and nuts

A

B

C

D

RSU

F

G

H

I

J

K

L

M

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

PFP:00003

NVH Troubleshooting Chart

EES000N9

Use the following chart to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Possible Cause and SUSPECTED PARTS		Reference page																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																								
ROAD WHEEL		SUSPENSION				Possible Cause and SUSPECTED PARTS												Reference page																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
		Noise	Shake	Vibration	Shimmy	Judder	Poor quality ride or han- dling	Improper installation, looseness	Shock absorber deformation, damage or deflection	Bushing or mounting	Parts interference	Spring fatigue	Suspension looseness	Incorrect wheel alignment	Stabilizer bar fatigue	Out-of-round	Imbalance			Incorrect air pressure	Uneven tire wear	Deformation or damage	Non-uniformity	Incorrect tire size	DRIVE SHAFT	AXLE	SUSPENSION	TIRES	ROAD WHEEL	BRAKES	STEERING																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																													
Noise	Shake	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x: Applicable

Components

SEC. 430 - 431

EES000NA

A

B

C

D

RSU

F

G

H


1

J

K

L

M

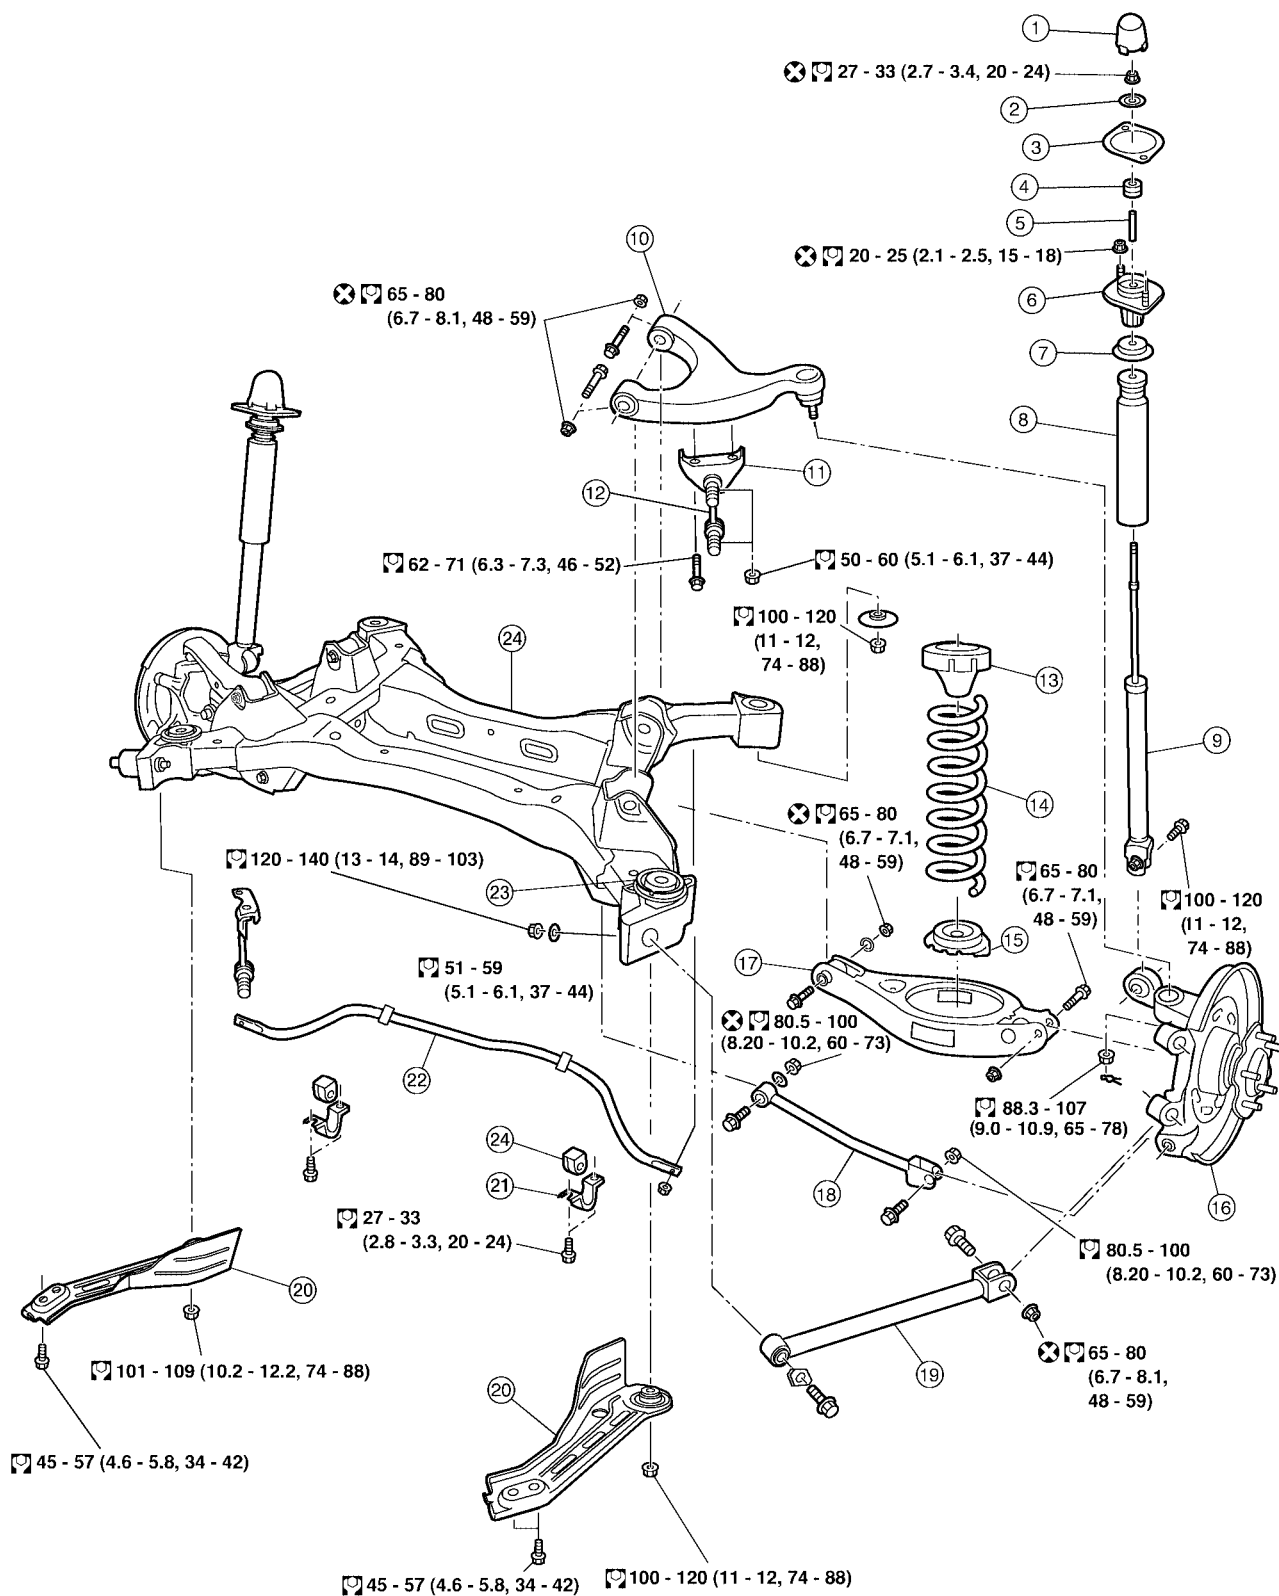

⊗: Always replace after every disassembly.

 : N·m (kg-m, ft-lb)

WEIA0021E

RSU-5


REAR SUSPENSION ASSEMBLY

- | | | |
|------------------------------------|----------------------------------|---------------------------------|
| 1. Cap | 2. Washer | 3. Gasket |
| 4. Bushing | 5. Distance tube | 6. Shock absorber mount bracket |
| 7. Bound bumper cover | 8. Bound bumper | 9. Shock absorber |
| 10. Suspension arm | 11. Connecting rod mount bracket | 12. Connecting rod |
| 13. Upper rubber seat | 14. Coil spring | 15. Lower rubber seat |
| 16. Wheel hub and spindle assembly | 17. Rear lower link | 18. Front lower link |
| 19. Radius rod | 20. Member stay | 21. Stabilizer bar clamp |
| 22. Stabilizer bar | 23. Member stopper | 24. Rear suspension member |

On-vehicle Service

EES000NB

- Check suspension parts for excessive play, cracks, wear or damage. Shake each rear wheel to check for excessive play.
- Retighten all nuts and bolts to the specified torque.
- Make sure that cotter pin is inserted.
- Check shock absorber for oil leakage or other damage.
- Check wheelarch height. Refer to [RSU-12, "Wheelarch Height \(Unladen*\)"](#).
- Check suspension ball joint for grease leakage and ball joint dust cover for cracks or other damage.

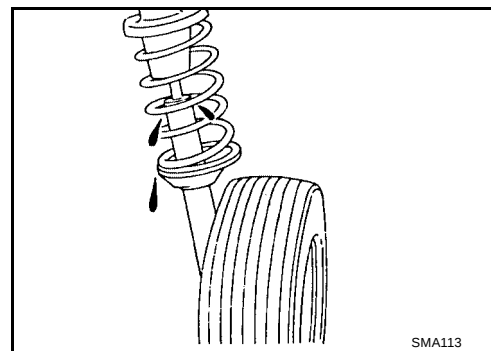

Rear Wheel Alignment

EES000NC

Before checking rear wheel alignment, be sure to make a preliminary inspection.


PRELIMINARY INSPECTION

- Check tires for wear and for improper inflation.
- Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout. Refer to [WT-3, "Inspection"](#).
- Check rear wheel bearings for looseness.
- Check rear suspension for looseness.
- Check that rear shock absorber works properly.
- Check wheelarch height (Unladen*). Refer to [RSU-12, "Wheelarch Height \(Unladen*\)"](#).

CAMBER

- Measure camber of both right and left wheels with a suitable alignment gauge and adjust in accordance with the following procedures.

Camber : Refer to [RSU-12, "Rear Wheel Alignment \(Unladen*\)"](#).

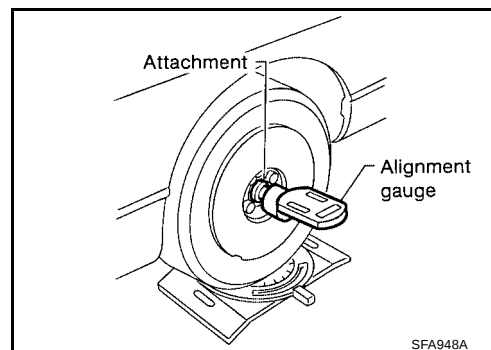



- If camber is not within specification, adjust by turning the adjusting bolts in the same direction.

REAR SUSPENSION ASSEMBLY

1. Turn the adjusting bolts in the same direction to calibrate.

NOTE:

Camber changes about 5° with each graduation of the adjusting bolt.

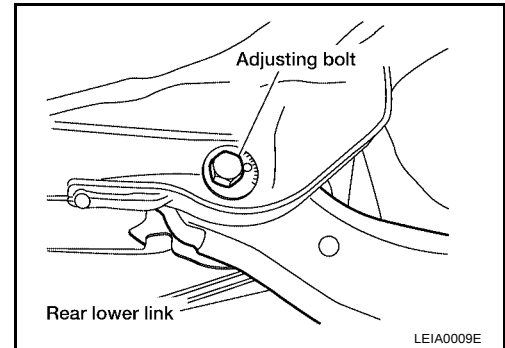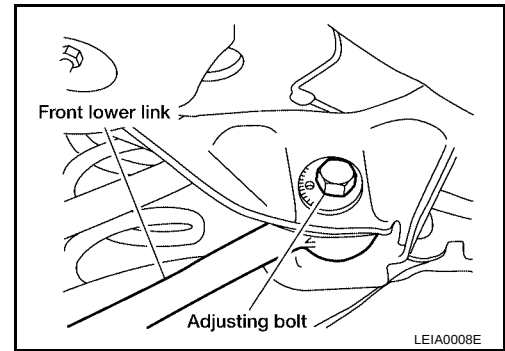

2. Tighten adjusting bolts to specification.

Front lower link adjusting bolt : 65 – 80 N·m (6.7 – 7.1 kg-m, 48 – 59 ft-lb)

Rear lower link adjusting bolt : 80.5 – 100 N·m (8.20 – 10.2 kg-m, 60 – 73 ft-lb)


TOE-IN

Measure toe-in using following procedure. If out of specification, inspect and replace any damaged or worn rear suspension parts.

WARNING:

- Always perform the following procedure on a flat surface.
- Make sure that no person is in front of the vehicle before pushing it.


1. Bounce rear of vehicle up and down to stabilize the posture.
2. Push the vehicle straight ahead about 5 m (16 ft).
3. Put a mark on base line of the tread (rear side) of both tires at the same height of hub center. This mark is a measuring point.

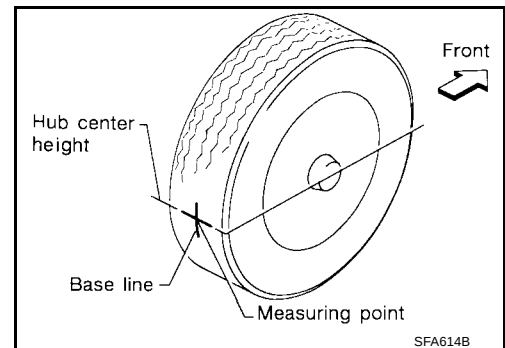

REAR SUSPENSION ASSEMBLY

4. Measure distance "A" (rear side).
5. Push the vehicle slowly ahead to rotate the wheels 180 degrees (1/2 turn).
If the wheels have rotated more than 180 degrees (1/2 turn), try the above procedure again from the beginning. Never push vehicle backward.
6. Measure distance "B" (front side).



Total toe-in : Refer to [RSU-12, "Rear Wheel Alignment \(Unladen*\)"](#) .

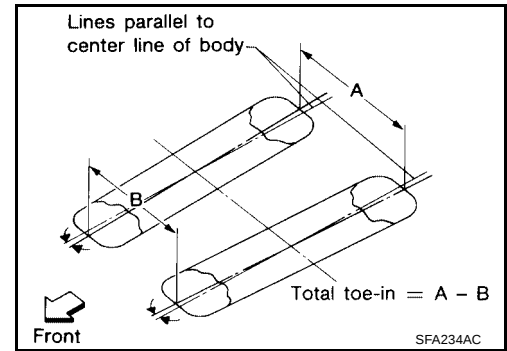

7. Adjust toe-in by turning adjusting bolt.

NOTE:

Toe changes about 1.5 mm (0.059 in) [One side] with each graduation of the adjusting bolt.

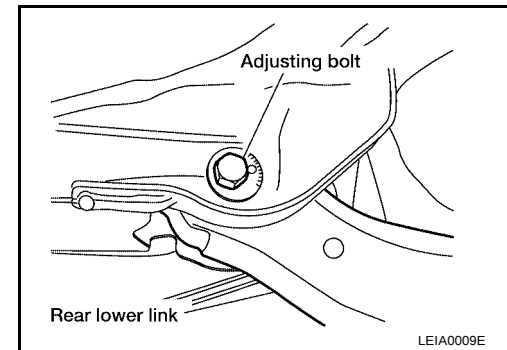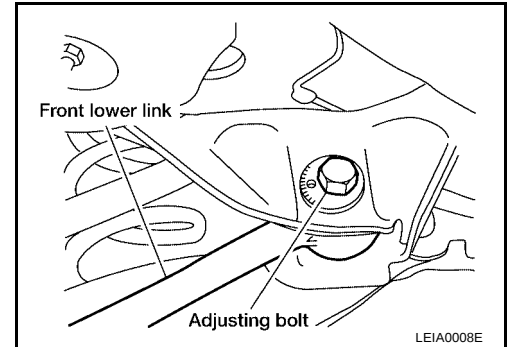

8. Tighten the adjusting bolts to specification.

Front lower link adjusting bolt : 65 – 80 N·m (6.7 – 7.1 kg-m, 48 – 59 ft-lb)

Rear lower link adjusting bolt : 80.5 – 100 N·m (8.20 – 10.2 kg-m, 60 – 73 ft-lb)

Removal and Installation REAR SUSPENSION ASSEMBLY

EES000ND

CAUTION:

Before removing the rear suspension assembly, disconnect the ABS wheel sensor from the assembly. Failure to do so may result in damage to the sensor wires and the sensor becoming inoperative.

1. Remove center exhaust tube with muffler(s). Refer to [EX-3, "Removal and Installation"](#) .
2. Disconnect parking brake cable assemblies from front cable. Refer to [PB-2, "Removal and Installation"](#) .
3. Remove brake caliper assembly, using power tools. Refer to [BR-30, "Removal and Installation of Caliper Assembly and Disc Rotor"](#) .
- Leave brake line connected to brake caliper.
Be careful not to depress brake pedal, or piston will pop out.
Do not pull or twist brake hose.
4. Remove upper end nuts of shock absorber.
5. Remove suspension member mounting nuts. Then draw out rear suspension member assembly.
6. Installation is in the reverse order of removal.

REAR SUSPENSION ASSEMBLY

SHOCK ABSORBER

1. Set the transmission jack on the rear lower link to remove the fitting bolt and nut in the lower side of shock absorber. A
2. Remove the transmission jack from rear lower link.
3. Remove the fitting nuts in the upper side of shock absorber. B
4. Installation is in the reverse order of removal.

SUSPENSION ARM

1. Remove the connecting rod mounting bracket from suspension arm. C
2. Remove the fixing bolts and nuts in the suspension member side of suspension arm.
3. Remove the cotter pin and lock nut. D
4. Remove the suspension arm from the wheel hub and spindle assembly using a puller.

CAUTION:

- Do not damage ball joint with puller.
 - While using puller, temporarily tighten the nut so as not to damage screw part.
5. Installation is in the reverse order of removal.

RADIUS ROD

1. Jack up and support radius rod. F
2. Remove radius rod, using power tools. G
3. Installation is in the reverse order of removal.

FRONT LOWER LINK

1. Jack up and support front lower link. H
2. Remove front lower link, using power tools.
3. Installation is in the reverse order of removal.
- After installing front lower link, check wheel alignment and adjust if necessary. I

REAR LOWER LINK AND COIL SPRING

Removal

1. Jack up and support rear lower link. J
2. Loosen the mounting bolt and nut of the rear lower link from the suspension member, using power tool.
3. Remove the mounting bolt and nut from the side of the suspension member. K
4. Slowly lower jack, then remove upper rubber seat, coil spring and rubber seat from rear lower link.
5. Remove the mounting bolt and nut from wheel hub and spindle assembly to remove rear lower link. L

M


RSU

REAR SUSPENSION ASSEMBLY

Installation

Installation is in the reverse order of removal.

- Check that the projecting part inside the upper seat and the flange part of bracket are attached as shown.
- Check that the projection part outside the upper seat directs to vehicle front.
- Position the hollow of the rubber seat with the groove part of rear lower link to install.
- Install coil spring with the side of two paint markers directing to lower side.
- After installing rear lower link and coil spring, check wheel alignment and adjust if necessary.

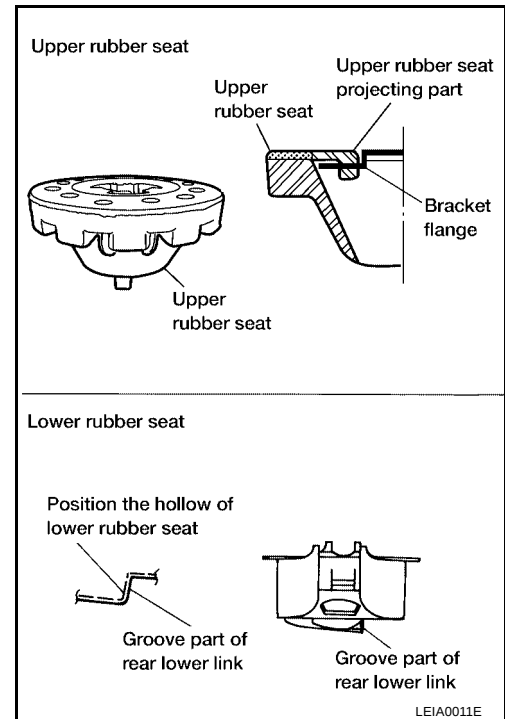


STABILIZER BAR

Removal

1. Remove stabilizer from connecting rod, using power tools.
2. Remove clamps, using power tools, and bushings.
3. Remove the stabilizer bar.

Installation

- Install stabilizer bar with ball joint socket properly placed.
- When the bushing and clamp are installed to stabilizer bar, position the bushing and clamp inside of the sideslip prevention clamp.

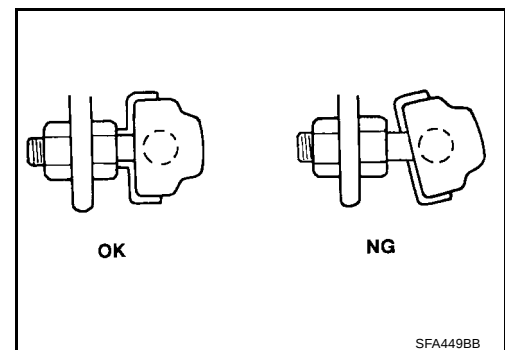

Inspection

SHOCK ABSORBER ASSEMBLY


- Check for smooth operation through a full stroke, both compression and extension.
- Check for oil leakage on welded or gland packing portions.
- Check piston rod for cracks, deformation or other damage and replace if necessary.

EES000NE

REAR SUSPENSION ASSEMBLY

SUSPENSION ARM

- Check suspension arm for damage, cracks, deformation and replace if necessary.
- Check rubber bushing for damage, cracks and deformation. Replace suspension arm assembly if necessary.
- Check ball joint. Replace suspension arm assembly if any of the following exists:
 - a. Ball stud is worn.
 - b. Joint is hard to swing.
 - c. Play in axial direction is excessive.Before checking, turn ball joint at least 10 revolutions so that ball joint is properly broken in.

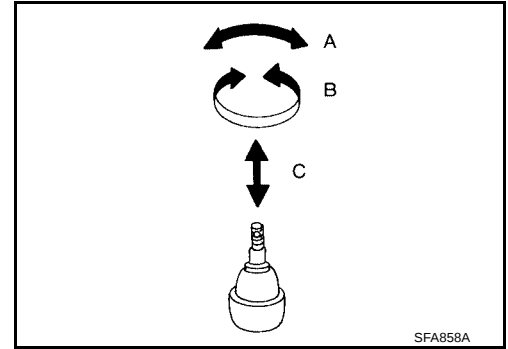

Swinging force: Refer to [RSU-12, "Ball Joint"](#) .

Turning force: Refer to [RSU-12, "Ball Joint"](#) .

Vertical end play: Refer to [RSU-12, "Ball Joint"](#) .

RADIUS ROD

- Check radius rod for any deformation, cracks, or damage and replace if necessary.
- After installing radius rod, check wheel alignment and adjust if necessary.

FRONT LOWER LINK

Check front lower link for any deformation, cracks, or damage and replace if necessary.

UPPER RUBBER SEAT AND BUSHING

Check rubber parts for deterioration, or cracks and replace if necessary.

REAR LOWER LINK AND COIL SPRING

Check for deformation, cracks, or other damage and replace if necessary.

STABILIZER BAR

- Check stabilizer bar for any deformation, cracks, or damage and replace if necessary.
- Check rubber bushings for deterioration, or cracks and replace if necessary.

A
B
C
D

F
G
H
I
J
K
L
M

RSU

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

General Specifications (Rear)

EES000NF

Suspension type	Multi-link independent suspension
Shock absorber type	Double-acting hydraulic

Rear Wheel Alignment (Unladen*)

EES000NG

Camber Degree minute (Decimal degree)		Minimum	-0°10' (-0.17°)
		Nominal	-0°40' (-0.67°)
		Maximum	-0°70' (-1.17°)
Total toe-in	Distance (A – B) mm (in)	Minimum	2.5 (0.10)
		Nominal	4.0 (0.16)
		Maximum	5.5 (0.22)
	Angle (left plus right) Degree minute (Decimal degree)	Minimum	6' (0.1°)
		Nominal	10' (0.167°)
		Maximum	14' (0.233°)

*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

Ball Joint


EES000NH

Swinging force "A" (Measuring point: cotter pin hole of ball stud) N (kg-f, lb-f)	7.8 - 54.9 (0.8 - 5.6, 1.8 - 12.3)
Turning torque "B" N·m (kg-cm, in-lb)	0.49 - 3.43 (5.0 - 35.0, 4.3 - 30.4)
Vertical end play "C" mm (in)	0 (0)

Wheelarch Height (Unladen*)

EES000NI

Unit: mm (in)

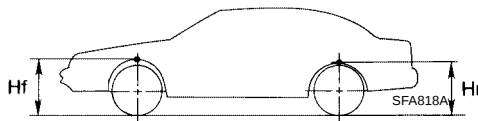

Tire	245/45R18	225/55R17
Front (Hf)	737 (29.02)	739 (29.09)
Rear (Hr)	705 (27.76)	705 (27.76)

*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.