

SECTION **IDX**

ALPHABETICAL INDEX

A
B
C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

1ST - Wiring diagram	AT-119
2ND - Wiring diagram	AT-123
2nd brake	AT-275
2nd coast brake	AT-275
2nd coast brake hub	AT-281
3RD - Wiring diagram	AT-129
4TH - Wiring diagram	AT-135
5TH - Wiring diagram	AT-140

A

A/C air flow	ATC-27
A/C compressor clutch removal and installation ..	ATC-121
A/C compressor mounting	ATC-121
A/C compressor precaution	ATC-9
A/C compressor special service tool	ATC-12
A/C control operation (auto A/C)	ATC-25
A/C diagnostic work flow (auto A/C)	ATC-88
A/C evaporator	ATC-126
A/C HFC134a (R134a) system identification	ATC-5
A/C HFC134a (R134a) system precaution	ATC-4
A/C HFC134a (R134a) system service procedure	ATC-118
A/C HFC134a (R134a) system service tools ...	ATC-12
A/C HFC134a system service equipment precaution ...	ATC-9
A/C lubricant (R134a)	ATC-18
A/C lubrication oil	ATC-18
A/C operational check	ATC-50
A/C self-diagnoses (auto A/C)	ATC-42 , ATC-88
A/C service data specification	ATC-132
A/C system description (auto A/C)	ATC-21
A/C trouble diagnoses (auto A/C)	ATC-30
A/C, A - Wiring diagram	ATC-36
A/T fluid checking	AT-57
A/T fluid cooler cleaning	AT-16
A/T fluid temperature sensor	AT-98 , AT-103
A/T IND - Wiring diagram	DI-50
A/T indicator	DI-50
A/T self-diagnoses	AT-78 , AT-83
A/T shift lock system	AT-234
A/T shift lock system - Wiring diagram	AT-235
A/T trouble diagnoses	AT-47
ABS - Wiring diagram	BRC-15 , BRC-59
ABS (anti-lock brake system)	BRC-6 , BRC-49
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-599 , EC-606 , EC-620
Accelerator pedal released position learning	EC-79
Active damper suspension system - Wiring diagram	FSU-4
AF1B1-Wiring diagram	EC-235 , EC-244 , EC-253 , EC-263 , EC-630
AF1B2-Wiring diagram	EC-237 , EC-246 , EC-255 , EC-265 , EC-632
AF1HB1-Wiring diagram	EC-169

AF1HB2-Wiring diagram	EC-171
Aiming adjustment	LT-39
Air bag	SRS-3
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake systemAir bleeding for brake system	BR-8
Air cleaner and air duct	EM-14
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-191 , EC-200
Air fuel ratio sensor 1 ..	EC-232 , EC-242 , EC-251 , EC-260 , EC-628
Air fuel ratio sensor 1 heater	EC-168
Air mix. door motor	ATC-61
Ambient sensor	ATC-90 , ATC-102
Angular tightening application	EM-4
Anti-lock brake system - See ABS	BRC-6 , BRC-49
Anti-lock brake system - Wiring diagram	BRC-15 , BRC-59
APPS1 - Wiring diagram	EC-601
APPS2 - Wiring diagram	EC-608
APPS3 - Wiring diagram	EC-622
ASC/BS - Wiring diagram	EC-559
ASC/SW - Wiring diagram	EC-552
ASCSOF - Wiring diagram	EC-640
ASCD	EC-29
ASCD brake switch	EC-557 , EC-639
ASCD clutch switch	EC-557 , EC-639
ASCD indicator lamp	EC-649
ASCD steering switch	EC-550
ASCIND - Wiring diagram	EC-650
Audio	AV-6
AUDIO - Wiring diagram	AV-13
AUT/DP - Wiring diagram	SE-18
Auto air conditioner - Wiring diagram	ATC-36
Auto anti-dazzling inside mirror	GW-91
Autolamp	LT-60
Automatic amplifier	ATC-40 , ATC-51
Automatic drive positioner	SE-11
Automatic transaxle number	GI-46
Automatic transmission fluid replacement	AT-15 , MA-23
AV communication line	AV-106 , AV-138

B

B5 brake	AT-283
Back door trim	EI-30
BACK/L - Wiring diagram	LT-135
Back-up lamp	LT-135
Back-up lamp switch (M/T)Back-up lamp switch	MT-12
Basic inspection	EC-72
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-11 , SC-18
Baulk ring (M/T)	MT-20

ALPHABETICAL INDEX

BCM (Body control module) [BCS-3](#)
 Block heater [EM-123](#)
 Blower motor [ATC-67](#), [ATC-107](#)
 Blower unit [ATC-106](#)
 Board computer [AV-96](#)
 Board-on lift [GI-40](#)
 Body alignment [BL-136](#)
 Body component parts [BL-125](#)
 Body construction [BL-135](#)
 Body exterior paint color [BL-123](#)
 Body repair [BL-123](#)
 Body sealing [BL-132](#)
 Bose speaker amp. [AV-7](#)
 Brake boosterBrake booster [BR-18](#)
 Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) [BR-36](#)
 Brake fluid changeBrake fluid change [BR-8](#)
 Brake fluid level [MA-26](#)
 Brake fluid level and line checkBrake fluid level and line check [BR-8](#)
 Brake hydraulic lineBake hydraulic line [BR-9](#)
 Brake inspection [MA-27](#)
 Brake lines and cables inspection [MA-26](#)
 Brake master cylinderBrake master cylinder [BR-12](#)
 Brake pedalBrake pedal [BR-6](#)
 Brake switch [EC-557](#), [EC-575](#), [EC-639](#)
 BRK/SW - Wiring diagram [EC-576](#)
 Bulb specifications [LT-193](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-16](#)

C

Cabin air filter [MA-21](#)
 Camshaft [EM-82](#)
 Camshaft inspection [EM-87](#)
 Camshaft position sensor (PHASE) [EC-373](#)
 CAN - Wiring diagram . [EC-160](#), [AT-87](#), [LAN-27](#), [LAN-40](#), [LAN-53](#), [LAN-68](#), [LAN-83](#), [LAN-98](#), [LAN-115](#), [LAN-132](#), [LAN-150](#)
 CAN communication [EC-31](#), [EC-159](#), [EC-162](#)
 Canister-See EVAP canister [EC-35](#)
 CHARGE - Wiring diagram [SC-17](#)
 Charging system [SC-16](#)
 Chassis and body maintenance [MA-21](#)
 Chassis and body maintenanceSchedule 1 [MA-7](#)
 Chassis and body maintenanceSchedule 2 [MA-8](#)
 CHIME - Wiring diagram [DI-56](#)
 Circuit breaker [PG-16](#)
 Closed loop control [EC-25](#)
 Closed loop control (Bank 1) [EC-524](#)
 Closed loop control (Bank 2) [EC-524](#)
 Clutch coverClutch cover [CL-16](#)
 Clutch discClutch disc [CL-16](#)
 Clutch fluid level [MA-21](#)
 Clutch master cylinderClutch master cylinder [CL-8](#)
 Clutch operating cylinderClutch operating cylinder [CL-11](#)
 Clutch pedalClutch pedal [CL-5](#)

Clutch release mechanismClutch release mechanism . [CL-14](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear)Coil spring [RSU-10](#)
 Collision diagnosis [SRS-55](#)
 Combination lamp, front, removal and installation .. [LT-41](#)
 Combination lamp, rear, removal and installation .. [LT-151](#)
 Combination meter [DI-5](#)
 Combination switch [LT-125](#)
 COMBSW - Wiring diagram [LT-125](#)
 COMM - Wiring diagram [AV-106](#), [AV-138](#)
 COMPAS - Wiring diagram [DI-37](#)
 Component Location (auto A/C) [ATC-33](#)
 Compressor clutch removal and installation .. [ATC-121](#)
 Compressor mounting [ATC-121](#)
 Compressor precaution [ATC-9](#)
 Compressor special service tool [ATC-12](#)
 Condenser [ATC-125](#)
 Connector inspection [GI-23](#)
 Console box - See Instrument panel [IP-10](#)
 Console box lamp [LT-177](#)
 CONSULT for ABS [BRC-22](#), [BRC-69](#)
 CONSULT for TCS [BRC-22](#), [BRC-69](#)
 CONSULT for VDC [BRC-69](#)
 CONSULT general information [GI-36](#)
 CONSULT-II for engine [EC-117](#)
 Control units (terminal arrangement) [PG-67](#)
 COOL/F - Wiring diagram [EC-531](#)
 Coolant mixture ratio [MA-10](#)
 Coolant replacementVQ35DE [CO-10](#), [MA-14](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-15](#)
 Cooling fan control [EC-527](#)
 Cooling fan motor [EC-527](#)
 Cooling unit (A/C evaporator) [ATC-110](#), [ATC-126](#)
 CORNER - Wiring diagram [LT-113](#)
 Cornering lamp [LT-110](#)
 Corrosion protection [BL-129](#)
 Coupling sleeve (M/T) [MT-20](#)
 Courtesy lamp [LT-152](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-45](#)
 Crankshaft position sensor (POS) [EC-366](#)
 Crash zone sensor [SRS-50](#)
 Cylinder block [EM-123](#)
 Cylinder head [EM-99](#)
 Cylinder head bolt tightening [EM-105](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Data link connector for Consult [GI-39](#)
 Daytime light system [LT-44](#)
 Daytime running light - See Daytime light system .. [LT-44](#)
 DEF - Wiring diagram [GW-96](#)
 Diagnosis sensor unit [SRS-53](#)

ALPHABETICAL INDEX

Diagnostic trouble code (DTC) [EC-52](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-89](#)
 Differential gear (FF A/T) [AT-288](#)
 Dimensions [GI-46](#)
 Display and amp.assembly [ATC-40](#), [ATC-51](#)
 Dome light - See Interior lamp [LT-152](#)
 Door glass [GW-85](#), [GW-88](#)
 Door glass Fitting Adjustment(Front) [GW-86](#)
 Door glass Fitting Adjustment(Rear) [GW-89](#)
 Door lock [BL-70](#)
 Door trim [EI-30](#)
 Door, front [BL-67](#), [GW-85](#)
 Door, rear [BL-67](#), [GW-88](#)
 Drive shaft (front) [FAX-11](#)
 Driver air bag [SRS-43](#)
 DTC work support [EC-128](#)
 DTRL - Wiring diagram [LT-47](#)
 Duct and grilles [ATC-115](#)

E

ECM input/output signal [EC-107](#)
 ECM power supply [EC-150](#), [EC-506](#)
 ECM/PW - Wiring diagram [EC-507](#)
 ECTS - Wiring diagram [EC-214](#)
 EGR function [EC-383](#), [EC-543](#)
 EGR temperature sensor [EC-398](#)
 EGR volume control valve [EC-391](#)
 EGR/TS - Wiring diagram [EC-401](#)
 EGRC1 - Wiring diagram [EC-387](#), [EC-547](#)
 EGVC/V - Wiring diagram [EC-393](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-586](#), [EC-597](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-652](#)
 Electronic ignition (EI) system [EC-26](#)
 EMNT - Wiring diagram [EC-655](#)
 Engine control circuit diagram [EC-105](#)
 Engine control component parts location [EC-96](#)
 Engine control module (ECM) [EC-510](#)
 Engine control system diagram and chart [EC-23](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) ... [EC-212](#),
[EC-224](#)
 Engine fail-safe system [EC-91](#)
 Engine mounting control (Front) [EC-654](#)
 Engine oil [LU-7](#)
 Engine oil filter replacementQR25DE [MA-17](#)
 Engine oil precautions [GI-3](#), [GI-7](#)
 Engine oil replacementQR25DE [MA-16](#)
 Engine removal [EM-118](#)
 Engine serial number [GI-46](#)
 ETC1 - Wiring diagram [EC-587](#)
 ETC2 - Wiring diagram [EC-582](#)
 ETC3 - Wiring diagram [EC-593](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve

[EC-426](#), [EC-434](#)
 EVAP canister vent control valve [EC-441](#), [EC-448](#)
 EVAP control system (small leak) diagnosis .. [EC-417](#),
[EC-471](#), [EC-479](#)
 EVAP control system pressure sensor ... [EC-455](#), [EC-458](#), [EC-464](#)
 EVAP control system purge flow monitoring diagnosis .
[EC-411](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-126](#)
 Exhaust manifold [EM-27](#)
 Exhaust system inspection [EX-3](#), [MA-21](#)
 Expansion valve [ATC-127](#)

F

F/FOG - Wiring diagram [LT-81](#)
 F/LID - Wiring diagram [BL-76](#)
 F/PUMP - Wiring diagram [EC-668](#)
 Fan control amp. [ATC-114](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-98](#), [AT-103](#)
 Fluids [MA-9](#)
 Fluorescent leak detector [ATC-128](#)
 Flywheel (clutch)Flywheel (clutch) [CL-16](#)
 Fog lamp, front [LT-79](#)
 Foot lamp [LT-152](#)
 Fork rod (M/T) [MT-22](#)
 Freeze frame data [EC-53](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-41](#)
 Front disc brakeFront disc brake [BR-23](#)
 Front door [BL-67](#), [BL-70](#), [GW-85](#)
 Front Door Trim [EI-30](#)
 Front fog lamp [LT-79](#)
 Front passenger air bag [SRS-47](#)
 Front seat [SE-100](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
 Front washer [WW-3](#)
 Front wiper [WW-3](#)
 FTS - Wiring diagram [AT-99](#)
 FTSP - Wiring diagram [AT-104](#)
 FTTS - Wiring diagram [EC-336](#), [EC-341](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-310](#), [EC-322](#)
 Fuel injection system (Bank 2) [EC-310](#), [EC-322](#)
 Fuel injector and fuel tube [EM-40](#)
 Fuel level sensor [EC-489](#), [EC-491](#), [EC-493](#)
 Fuel lid opener, electric [BL-76](#)
 Fuel line inspection [FL-4](#), [MA-16](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-81](#)
 Fuel pressure release [EC-81](#)
 Fuel pump [EC-667](#)
 Fuel system [FL-4](#)
 Fuel systemCommercial Service Tools [FL-3](#)

ALPHABETICAL INDEX

Fuel systemPREPARATION	FL-3
Fuel tank temperature sensor	EC-334 , EC-340
Fuel tank vacuum relief valve	EC-35
FUELB1 - Wiring diagram	EC-312 , EC-324
FUELB2 - Wiring diagram	EC-314 , EC-326
Fuse	PG-16 , PG-71
Fuse block	PG-70
Fusible link	PG-16 , PG-71

G

Garage jack and safety stand	GI-40
Gauges	DI-5
Gear components (M/T)	MT-20
Generic scan tool (GST)	EC-130
Glass	GW-12 , GW-14 , GW-85 , GW-88
Glove box lamp	LT-177 , LT-178
GPS antenna	AV-124
Grease	MA-9
Ground distribution	PG-31

H

H/LAMP - Wiring diagram	LT-11
H/PHON - Wiring diagram	AV-86
H/STRG - Wiring diagram	PS-12
Handling precautions for plastics	BL-147
Harness connector	PG-64
Harness connector inspection	GI-23
Harness layout	PG-40
Hazard warning lamp	LT-92
Headlamp	LT-6
Headlamp removal and installation	LT-41
Heated oxygen sensor 2 (bank 1)	EC-272 , EC-284 , EC-298
Heated oxygen sensor 2 (bank 2)	EC-272 , EC-284 , EC-298
Heated oxygen sensor 2 heater (bank 1)	EC-175
Heated oxygen sensor 2 heater (bank 2)	EC-175
Heated seat	SE-89
Heated steering	PS-10
Heater and cooling unit (Heater core) .	ATC-110 , ATC-111
Heater unit (heater core)	ATC-110 , ATC-111
Height (Dimensions)	GI-46
HFC134a (R134a) system identification	ATC-5
HFC134a (R134a) system precaution	ATC-4
HFC134a (R134a) system service procedure	ATC-118
HFC134a (R134a) system service tools	ATC-12
HFC134a system service equipment precaution	ATC-9
Homelink universal transceiver	BL-120
Horn	WW-31
HORN - Wiring diagram	WW-31
How to erase DTC for OBD system	EC-61
HSEAT - Wiring diagram	SE-90 , SE-92

I

I/MIRR - Wiring diagram	GW-91
-------------------------------	-----------------------

IATS - Wiring diagram	EC-209
Identification plate	GI-46
Idle air volume learning	EC-79
Idle speed	EC-72 , EC-77
Idle speed control (ISC)	EC-497 , EC-499
Ignition coil	EM-37 , EC-673
Ignition control system	EC-673
Ignition key hole illumination	LT-152
Ignition timing	EC-72 , EC-77
IGNSYS - Wiring diagram	EC-674
ILL - Wiring diagram	LT-183
Illuminated entry system	LT-152
Illumination	LT-177
Illumination control	LT-177
In vehicle sensor	ATC-93 , ATC-103
In-cabin Microfilter	MA-21
INF/D - Wring diagram	AV-98
INJECT - Wiring diagram	EC-660
Injector	EC-659
Input shaft (FF M/T)	MT-20
Instrument panel	IP-10
INT/L - Wiring diagram	LT-158
Intake air temperature sensor	EC-208 , EC-227
Intake door control linkage adjustment	ATC-66
Intake door motor	ATC-64 , ATC-108
Intake manifold	EM-22
Intake sensor	ATC-99 , ATC-105
Intake valve timing control (Bank 1)	EC-164
Intake valve timing control (Bank 2)	EC-164
Intake valve timing control solenoid valve (Bank 1)	EC-184
Intake valve timing control solenoid valve (Bank 2)	EC-184
Integrated homelink transmitter	BL-120
Integrated homelink transmitter - See Homelink univer-	BL-120
sal transceiver	BL-120
Interior	EI-33
Interior lamp	LT-152
Interior lamp on-off control	LT-152
IPDM (Intelligent power distribution module engine	PG-17
room)	PG-17
IVCB1 - Wiring diagram	EC-185
IVCB2 - Wiring diagram	EC-187
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

J

Jacking points	GI-40
Junction box (J/B)	PG-70

K

Key illumination	LT-152
KEYLES - Wiring diagram	BL-43
Knock sensor (KS)	EC-361
KS - Wiring diagram	EC-362

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

L

LAN system circuit	ATC-55
Length (Dimensions)	GI-46
License lamp	LT-137
Lifting points	GI-40
Line pressure test (A/T)	AT-59
Liquid gasket application	EM-4 , LU-2 , CO-2
Location of electrical units	PG-61
Lubricant (R134a) A/C	ATC-18
Lubricants	MA-9
Lubrication circuit (engine)	LU-5
Lubrication oil A/C	ATC-18
Lubrication-locks, hinges and hood latches	MA-31
Luggage compartment trim	EI-43
Luggage room lamp	LT-152

M

M/T major overhaul	MT-23
M/T oil replacementM/T oil replacement	MT-10
MAFS - Wiring diagram	EC-194 , EC-202
Magnet clutch	ATC-73 , ATC-121
MAIN - Wiring diagram	EC-150
Mainshaft (M/T)	MT-20
Maintenance	MA-4
Malfunction indicator lamp (MIL)	EC-63
Manual transaxle number	GI-46
Manual transmission oil replacement	MA-22
Map lamp	LT-152
Mass air flow sensor (MAFS)	EC-191 , EC-200
Master cylinder (brake)Master cylinder (brake) ..	BR-12
Master cylinder (clutch)Master cylinder (clutch) ..	CL-8
Meter	DI-5
METER - Wiring diagram	DI-11
MIL data link connectors circuit	EC-699
MIL/DL - Wiring diagram	EC-699
MIRROR - Wiring diagram	GW-119 , GW-120
Misfire	EC-352
MMSW - Wiring diagram	AT-202
Mode door control linkage adjustment	ATC-60
Mode door motor	ATC-58 , ATC-112
Model variation	GI-46
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-3 , GI-6
Multi-remote control system - See Remote keyless entry system	BL-39

N

NATS - Wiring diagram	BL-104
NAVI - Wiring diagram	AV-129
NAVI Control Unit	AV-125
Navigation system	AV-123
NVH troubleshooting (BR)NVH troubleshooting (BR) ...	BR-5
NVH troubleshooting (CL)NVH troubleshooting (CL) ...	CL-4
NVH troubleshooting (EM)	EM-11

NVH troubleshooting (FA)	FAX-4
NVH troubleshooting (RA)	RAX-4
NVH troubleshooting (RSU)NVH Troubleshooting (RSU) ..	RSU-4
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (WT)NVH troubleshooting (WT) ..	WT-3
NVIS (Nissan vehicle immobilizer system)	BL-101
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H2B1 - Wiring diagram	EC-177
O2H2B2 - Wiring diagram	EC-179
O2S2B1 - Wiring diagram ...	EC-275 , EC-287 , EC-301
O2S2B2 - Wiring diagram ...	EC-277 , EC-289 , EC-303
Oil filter	LU-10
Oil pump (A/T)	AT-275
Oil pump (engine)	LU-11
Oil seal replacement (engine)	EM-95
On board diagnostic system	EC-48
One-way clutch No.1	AT-281
One-way clutch outer race sub assembly	AT-281
Operating cylinder (clutch)Operating cylinder (clutch) ..	CL-11
ORVR (On-board Refueling Vapor Recovery) ..	EC-39
Overheat	EC-527

P

P/SCKT - Wiring diagram	WW-29
Park/Neutral position switch	EC-518
Park/neutral position switch (A/T)	AT-93
Park/neutral position switch (M/T)Park/neutral position switch (M/T)	MT-12
Parking brake controlParking brake control	PB-4
Parking drum brakeParking drum brake	PB-7
Parking lamp	LT-137
PC/A - Wiring diagram	AT-148
PC/B - Wiring diagram	AT-183
PC/C - Wiring diagram	AT-192
PC/CS - Wiring diagram	AT-197
PCV (positive crankcase ventilation)	EC-45
Periodic maintenance	MA-6
Personal lamp	LT-152
PGC/V - Wiring diagram	EC-428 , EC-436
PHSB1 - Wiring diagram	EC-375
PHSB2 - Wiring diagram	EC-377
Piston ring inspection	EM-134
PNP/SW - Wiring diagram	EC-520 , AT-94
POS - Wiring diagram	EC-368
POWER - Wiring diagram	PG-7
Power door lock	BL-17
Power seat	SE-85
Power socket	WW-29
Power steering fluid level	MA-28
Power steering pressure (PSP) sensor	EC-501
Power supply routing	PG-4

ALPHABETICAL INDEX

Power transistor [EC-673](#)
 Power window [GW-19](#)
 PRE/SE - Wiring diagram [EC-460](#), [EC-466](#)
 Precautions (General) [GI-3](#), [GI-4](#)
 Precautions in repairing high strength steel [BL-150](#)
 Pressure control solenoid valve A [AT-147](#)
 Pressure control solenoid valve B [AT-182](#)
 Pressure control solenoid valve C [AT-191](#)
 Pressure test (A/T) [AT-59](#)
 PS/SEN - Wiring diagram [EC-502](#)
 PWR/IN - Wiring diagram [AT-208](#)

R

Radiator fan - See Cooling fan [CO-15](#)
 Radio - See Audio [AV-6](#)
 Rear bumper [EI-16](#)
 Rear combination lamp removal and installation ... [LT-151](#)
 Rear disc brakeRear disc brake [BR-29](#)
 Rear door [BL-67](#), [GW-88](#)
 Rear seat [SE-106](#)
 Rear seat belt [SB-5](#)
 Rear sunshade [EI-36](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-14](#)
 Rear window defogger [GW-93](#)
 Refrigerant connection precaution [ATC-6](#)
 Refrigerant discharging evacuating charging [ATC-118](#)
 Refrigerant general precaution [ATC-5](#)
 Refrigerant lines [ATC-118](#)
 Refrigerant pressure sensor [EC-686](#), [ATC-125](#)
 REMOTE - Wiring diagram [BL-43](#)
 Remote keyless entry system [BL-39](#)
 Reverse idler shaft (M/T) [MT-20](#)
 Reverse main gear (M/T) [MT-20](#)
 Revolution sensor (A/T) [AT-112](#)
 Road wheel size [GI-46](#)
 Rocker cover [EM-43](#)
 Room lamp [LT-152](#)
 Room lamp - See Interior lamp [LT-152](#)
 ROOM/L - Wiring diagram [LT-158](#)
 RP/SEN - Wiring diagram [EC-687](#)

S

SAE J1930 terminology list [GI-51](#)
 SEAT - Wiring diagram [SE-85](#), [SE-86](#)
 Seat belt inspection [SB-7](#), [MA-31](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-100](#)
 Seat, rear [SE-106](#)
 SEN/PW - Wiring diagram [EC-514](#)
 SFTFNC - Wiring diagram [AT-188](#)
 SHADE - Wiring diagram [EI-37](#)
 SHIFT - Wiring diagram [AT-235](#)
 Shift control components (M/T) [MT-22](#)
 Shift control components (M/T)Shift control components

(M/T) [MT-13](#)
 Shift fork (M/T) [MT-22](#)
 Shift lock system [AT-234](#)
 Shift schedule [AT-66](#)
 Shift solenoid valve A (A/T) [AT-152](#)
 Shift solenoid valve B (A/T) [AT-157](#)
 Shift solenoid valve C (A/T) [AT-162](#)
 Shift solenoid valve D (A/T) [AT-172](#)
 Shift solenoid valve E (A/T) [AT-177](#)
 Shock absorber (front) [FSU-10](#)
 Shock absorber (rear)Shock absorber (rear) ... [RSU-9](#)
 Side air bag (satellite) sensor [SRS-51](#)
 Side curtain air bag [SRS-48](#)
 Side trim [EI-33](#)
 Spare tire size [GI-46](#)
 Spark plug [EM-38](#)
 Spark plug replacementQR25DE [MA-18](#)
 Specification value [EC-139](#)
 Speedometer [DI-5](#)
 Spiral cable [SRS-45](#)
 SROOF - Wiring diagram [RF-12](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-13](#)
 SRS Trouble diagnoses [SRS-9](#)
 SSV/A - Wiring diagram [AT-153](#)
 SSV/B - Wiring diagram [AT-158](#)
 SSV/C - Wiring diagram [AT-163](#)
 SSV/CS - Wiring diagram [AT-168](#)
 SSV/D - Wiring diagram [AT-173](#)
 SSV/E - Wiring diagram [AT-178](#)
 Stabilizer bar (front) [FSU-11](#)
 Stall test (A/T) [AT-57](#)
 Standardized relay [PG-68](#)
 START - Wiring diagram [SC-9](#)
 Starting system [SC-8](#)
 Steering gear and linkage inspection [MA-27](#)
 Steering knuckle [FAX-6](#)
 Step lamp [LT-152](#)
 Stop lamp [LT-132](#)
 Stop lamp switch [EC-557](#), [EC-575](#), [EC-639](#)
 STOP/L - Wiring diagram [LT-133](#)
 Strut (front) [FSU-9](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-96](#), [ATC-104](#)
 Sunroof [RF-24](#)
 Sunshade [EI-36](#)
 Supplemental Restraint System [SRS-5](#)
 Symbols and abbreviations [GI-8](#), [GI-10](#), [GI-21](#)
 Symptom matrix chart [EC-92](#)
 Synchronizer (M/T) [MT-20](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-137](#)
 TAIL/L - Wiring diagram [LT-140](#)
 TCCSIG - Wiring diagram [AT-145](#)
 TCM circuit diagram [AT-56](#)
 TCM inspection table [AT-75](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

TCS - Wiring diagram [BRC-15](#), [BRC-59](#)
TCS (traction control system) [BRC-6](#), [BRC-49](#)
TCS system components [BRC-13](#), [BRC-57](#)
TCS wheel sensors [BRC-7](#), [BRC-51](#)
Telephone [AV-81](#)
Theft warning system - See Vehicle security (Theft warn-
ing) system [BL-81](#)
Three way catalyst [EM-27](#)
Three way catalyst function (Bank 1) [EC-405](#)
Three way catalyst function (Bank 2) [EC-405](#)
Three way catalyst precautions [GI-3](#), [GI-5](#)
Throttle control motor [EC-592](#)
Throttle control motor relay [EC-580](#)
Throttle position sensor (TPS) .. [EC-217](#), [EC-345](#), [EC-539](#), [EC-541](#), [EC-613](#)
Throttle valve closed position learning [EC-79](#)
Tightening torque of standard bolts [GI-44](#)
Time lag test [AT-58](#)
Timing chain [EM-55](#)
Tire rotation [MA-25](#)
Tire size [GI-46](#)
TLID - Wiring diagram [BL-76](#)
Torque convertor clutch solenoid valve [AT-144](#)
Tow truck towing [GI-43](#)
Towing point [GI-43](#)
TPS1 - Wiring diagram [EC-347](#)
TPS2 - Wiring diagram [EC-219](#)
TPS3 - Wiring diagram [EC-615](#)
Traction control system - See TCS [BRC-6](#), [BRC-49](#)
Traction control system - Wiring diagram [BRC-15](#), [BRC-59](#)
Transaxle case cover [AT-283](#)
Transaxle serial number [GI-46](#)
Transmission case (M/T) [MT-19](#)
Tread-FR&RR (Dimensions) [GI-46](#)
Trim [EI-33](#)
TRNSCV - Wiring diagram [BL-120](#)
Trouble diagnoses [GI-10](#)
TRSC - Wiring diagram [AT-109](#)
Trunk lid opener, electric [BL-76](#)
Trunk lid trim [EI-43](#)
Trunk room lamp [LT-152](#)
Trunk room trim [EI-43](#)
Turbine revolution sensor [AT-108](#)
TURN - Wiring diagram [LT-97](#)
Turn signal lamp [LT-92](#)
Two trip detection logic [EC-48](#)
Two-pole lift [GI-40](#)

U

Unified meter and A/C amp. [DI-29](#)

V

Vacuum hose (brake system)Vacuum hose (brake sys-
tem) [BR-21](#)
Vacuum hose drawing (Engine control) [EC-104](#)
Valve clearance [EM-91](#)

Valve guide [EM-114](#), [EM-115](#)
Valve seat [EM-116](#)
Valve spring [EM-117](#)
Vanity mirror lamp [LT-152](#)
Variable induction air control system (VIAS) .. [EC-570](#), [EC-691](#)
VDC (vehicle dynamics control) [BRC-49](#)
VDC -Wiring diagram [BRC-59](#)
Vehicle identification number [GI-46](#)
Vehicle recovery (freeing a stuck vehicle) [GI-43](#)
Vehicle security (theft warning) system [BL-81](#)
Vehicle speed sensor (VSS) [EC-495](#)
VEHSEC - Wiring diagram [BL-85](#)
VENT/V - Wiring diagram [EC-443](#), [EC-450](#)
VIAS - Wiring diagram [EC-693](#)
VIAS/V - Wiring diagram [EC-571](#)
VIN registration [EC-78](#)
Viscosity number (SAE) [MA-10](#)
VSSATC - Wiring diagram [AT-113](#)

W

W/ANT - Wiring diagram [AV-78](#)
WARN - Wiring diagram [DI-41](#)
Warning chime [DI-53](#)
Warning lamps [DI-40](#)
Washer, front [WW-3](#)
Water pump [CO-16](#)
Water temperature gauge [DI-5](#)
Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
Wheel balance [MA-24](#)
Wheel bearing (front axle) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (front) [FAX-5](#), [FAX-6](#)
Wheel hub (rear) [RAX-5](#)
Wheel sensor (VDC) [BRC-51](#)
Wheel sensors (ABS) [BRC-7](#), [BRC-51](#)
Wheel sensors (TCS) [BRC-7](#), [BRC-51](#)
Wheel size [GI-46](#)
Wheelbase (Dimensions) [GI-46](#)
Width (Dimensions) [GI-46](#)
WINDOW - Wiring diagram [GW-27](#)
Window, door [GW-85](#), [GW-88](#)
Window, rear [GW-14](#)
Windshield [GW-12](#)
Windshield washer - See Front washer [WW-3](#)
Windshield wiper - See Front wiper [WW-3](#)
WIPER - Wiring diagram [WW-7](#)
Wiper and washer [WW-3](#)
Wiper, front [WW-3](#)
Wiring Diagram (Cell code) list [PG-58](#)
Wiring diagrams [GI-8](#), [GI-14](#)