

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-27](#)
A/C compressor clutch removal and installation .. [ATC-133](#)
A/C compressor mounting [ATC-133](#)
A/C compressor precaution [ATC-9](#)
A/C compressor special service tool [ATC-12](#)
A/C control operation (auto A/C) [ATC-25](#)
A/C diagnostic work flow (auto A/C) [ATC-94](#)
A/C evaporator [ATC-138](#)
A/C HFC134a (R134a) system identification [ATC-5](#)
A/C HFC134a (R134a) system precaution [ATC-4](#)
A/C HFC134a (R134a) system service procedure [ATC-130](#)
A/C HFC134a (R134a) system service tools ... [ATC-12](#)
A/C HFC134a system service equipment precaution ... [ATC-9](#)
A/C lubricant (R134a) [ATC-18](#)
A/C lubrication oil [ATC-18](#)
A/C operational check [ATC-49](#)
A/C self-diagnoses (auto A/C) [ATC-41](#), [ATC-94](#)
A/C service data specification [ATC-144](#)
A/C system description (auto A/C) [ATC-21](#)
A/C trouble diagnoses (auto A/C) [ATC-30](#)
A/C, A - Wiring diagram [ATC-36](#)
ABS - Wiring diagram [BRC-16](#), [BRC-60](#)
ABS (anti-lock brake system) [BRC-6](#), [BRC-49](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor . [EC-565](#), [EC-572](#), [EC-586](#)
Accelerator pedal released position learning [EC-79](#)
Active damper suspension system - Wiring diagram [FSU-4](#)
AF1B1-Wiring diagram [EC-232](#), [EC-241](#), [EC-250](#), [EC-260](#), [EC-596](#)
AF1B2-Wiring diagram [EC-234](#), [EC-243](#), [EC-252](#), [EC-262](#), [EC-598](#)
AF1HB1-Wiring diagram [EC-167](#)
AF1HB2-Wiring diagram [EC-169](#)
Aiming adjustment [LT-33](#)
Air bag [SRS-3](#)
Air bag precautions [GI-3](#)
Air bleeding for brake systemAir bleeding for brake system [BR-8](#)
Air cleaner and air duct [EM-16](#)
Air cleaner filter replacement [MA-15](#)
Air conditioner cut control [EC-28](#)
Air flow meter - See Mass air flow sensor [EC-188](#), [EC-197](#)
Air fuel ratio sensor 1 .. [EC-229](#), [EC-239](#), [EC-248](#), [EC-257](#), [EC-594](#)
Air fuel ratio sensor 1 heater [EC-166](#)
Air mix. door motor [ATC-61](#)
Ambient sensor [ATC-97](#), [ATC-114](#)
Angular tightening application [EM-4](#)
Anti-lock brake system - See ABS [BRC-6](#), [BRC-49](#)
Anti-lock brake system - Wiring diagram [BRC-16](#), [BRC-60](#)

APPS1 - Wiring diagram [EC-567](#)
APPS2 - Wiring diagram [EC-574](#)
APPS3 - Wiring diagram [EC-588](#)
ASC/BS - Wiring diagram [EC-526](#)
ASC/SW - Wiring diagram [EC-519](#)
ASCSOF - Wiring diagram [EC-606](#)
ASCD [EC-29](#)
ASCD brake switch [EC-524](#), [EC-605](#)
ASCD clutch switch [EC-524](#), [EC-605](#)
ASCD indicator lamp [EC-612](#)
ASCD steering switch [EC-517](#)
ASCIND - Wiring diagram [EC-613](#)
Audio [AV-7](#)
AUDIO - Wiring diagram [AV-14](#)
AUT/DP - Wiring diagram [SE-16](#)
Auto air conditioner - Wiring diagram [ATC-36](#)
Auto anti-dazzling inside mirror [GW-81](#)
Autolamp [LT-50](#)
Automatic amplifier [ATC-41](#), [ATC-51](#)
Automatic drive positioner [SE-11](#)
Automatic transaxle number [GI-47](#)
AV communication line [AV-115](#), [AV-137](#)

B

Back door trim [EI-30](#)
Back sonar [DI-67](#)
BACK/L - Wiring diagram [LT-111](#)
Back-up lamp [LT-111](#)
Basic inspection [EC-72](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-20](#)
BCM (Body control module) [BCS-3](#)
Block heater [EM-113](#)
Blower motor [ATC-69](#), [ATC-119](#)
Blower unit [ATC-118](#)
Board computer [AV-108](#)
Board-on lift [GI-41](#)
Body alignment [BL-187](#)
Body component parts [BL-176](#)
Body construction [BL-186](#)
Body exterior paint color [BL-174](#)
Body repair [BL-174](#)
Body sealing [BL-183](#)
Bose speaker amp. [AV-8](#)
Brake boosterBrake booster [BR-18](#)
Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) [BR-36](#)
Brake fluid changeBrake fluid change [BR-8](#)
Brake fluid level [MA-24](#)
Brake fluid level and line checkBrake fluid level and line check [BR-8](#)
Brake hydraulic lineBake hydraulic line [BR-9](#)
Brake inspection [MA-25](#)
Brake lines and cables inspection [MA-24](#)
Brake master cylinderBrake master cylinder [BR-12](#)
Brake pedalBrake pedal [BR-6](#)
Brake switch [EC-524](#), [EC-541](#), [EC-605](#)

ALPHABETICAL INDEX

BRK/SW - Wiring diagram [EC-542](#)
 Bulb specifications [LT-162](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-16](#)

C

Cabin air filter [MA-20](#)
 Camshaft [EM-73](#)
 Camshaft inspection [EM-78](#)
 Camshaft position sensor (PHASE) [EC-368](#)
 CAN - Wiring diagram [EC-158](#)
 CAN (Controller Area Network) [BL-53](#)
 CAN communication [EC-31](#), [EC-157](#), [EC-160](#), [CVT-24](#),
[CVT-64](#), [BL-53](#)
 Canister-See EVAP canister [EC-35](#)
 CHARGE - Wiring diagram [SC-19](#)
 Charging system [SC-18](#)
 Chassis and body maintenance [MA-20](#)
 Chassis and body maintenanceSchedule 1 [MA-7](#)
 Chassis and body maintenanceSchedule 2 [MA-8](#)
 CHIME - Wiring diagram [DI-56](#)
 Circuit breaker [PG-17](#)
 Closed loop control [EC-25](#)
 Closed loop control (Bank 1) [EC-496](#)
 Closed loop control (Bank 2) [EC-496](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear)Coil spring [RSU-10](#)
 Collision diagnosis [SRS-53](#)
 Combination lamp, front, removal and installation . [LT-36](#)
 Combination lamp, rear, removal and installation .. [LT-125](#)
 Combination meter [DI-5](#)
 Combination switch [LT-101](#)
 COMBSW - Wiring diagram [LT-101](#)
 COMM - Wiring diagram [AV-115](#), [AV-137](#)
 COMPAS - Wiring diagram [DI-36](#)
 Component Location (auto A/C) [ATC-33](#)
 Compressor clutch removal and installation . [ATC-133](#)
 Compressor mounting [ATC-133](#)
 Compressor precaution [ATC-9](#)
 Compressor special service tool [ATC-12](#)
 Condenser [ATC-137](#)
 Connector inspection [GI-23](#)
 Console box - See Instrument panel [IP-10](#)
 Console box lamp [LT-150](#)
 CONSULT for ABS [BRC-23](#), [BRC-70](#)
 CONSULT for TCS [BRC-23](#), [BRC-70](#)
 CONSULT for VDC [BRC-70](#)
 CONSULT general information [GI-36](#)
 CONSULT-II for engine [EC-117](#)
 CONSULT-II Reference value (CVT) [CVT-53](#)
 Control units (terminal arrangement) [PG-74](#)
 Control valve (CVT) [CVT-28](#)
 Controller Area Network (CAN) [BL-53](#)
 COOL/F - Wiring diagram [EC-503](#)
 Coolant mixture ratio [MA-10](#)
 Coolant replacementVQ35DE [CO-10](#), [MA-13](#)

Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-15](#)
 Cooling fan control [EC-499](#)
 Cooling fan motor [EC-499](#)
 Cooling unit (A/C evaporator) [ATC-122](#), [ATC-138](#)
 CORNER - Wiring diagram [LT-92](#)
 Cornering lamp [LT-89](#)
 Corrosion protection [BL-180](#)
 Courtesy lamp [LT-126](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-45](#)
 Crankshaft position sensor (POS) [EC-361](#)
 Crash zone sensor [SRS-48](#)
 CVT air breather hose [CVT-197](#)
 CVT control system [CVT-21](#)
 CVT cross-sectional view [CVT-20](#)
 CVT Electrical parts location [CVT-39](#)
 CVT fluid checking [CVT-15](#), [CVT-41](#), [MA-20](#)
 CVT fluid cooler cleaning [CVT-16](#)
 CVT fluid replacement [CVT-16](#), [MA-21](#)
 CVT fluid temperature sensor [CVT-80](#)
 CVT hydraulic control system [CVT-22](#)
 CVT indicator [DI-50](#)
 CVT self-diagnoses [CVT-57](#), [CVT-63](#)
 CVT shift lock system [CVT-191](#)
 CVT shift lock system - Wiring diagram [CVT-192](#)
 CVT trouble diagnoses [CVT-33](#)
 CVTIND - Wiring diagram [DI-50](#)
 Cylinder block [EM-113](#)
 Cylinder head [EM-90](#)
 Cylinder head bolt tightening [EM-96](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Daytime light system [LT-38](#)
 Daytime running light - See Daytime light system .. [LT-38](#)
 DEF - Wiring diagram [GW-86](#)
 Diagnosis sensor unit [SRS-51](#)
 Diagnostic trouble code (DTC) [EC-52](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-90](#), [CVT-33](#)
 Differential side oil seal [CVT-198](#)
 Dimensions [GI-47](#)
 Display and amp.assembly [ATC-41](#), [ATC-51](#)
 Dome light - See Interior lamp [LT-126](#)
 Door glass [GW-75](#), [GW-78](#)
 Door glass Fitting Adjustment(Front) [GW-76](#)
 Door glass Fitting Adjustment(Rear) [GW-79](#)
 Door lock [BL-120](#)
 Door trim [EI-30](#)
 Door, front [BL-117](#), [GW-75](#)
 Door, rear [BL-117](#), [GW-78](#)
 Drive shaft (front) [FAX-11](#)
 Driver air bag [SRS-41](#)
 DTC work support [EC-127](#)
 DTRL - Wiring diagram [LT-41](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Duct and grilles [ATC-127](#)

E

ECM input/output signal [EC-107](#)
 ECM power supply [EC-148](#), [EC-479](#)
 ECM/PW - Wiring diagram [EC-480](#)
 ECTS - Wiring diagram [EC-211](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-552](#), [EC-563](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-615](#)
 Electronic ignition (EI) system [EC-26](#)
 Electronic key [BL-41](#)
 EMNT - Wiring diagram [EC-618](#)
 Engine control circuit diagram [EC-105](#)
 Engine control component parts location [EC-97](#)
 Engine control module (ECM) [EC-483](#)
 Engine control system diagram and chart [EC-23](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) .. [EC-209](#),
[EC-221](#)
 Engine fail-safe system [EC-92](#)
 Engine mounting control (Front) [EC-617](#)
 Engine oil [LU-7](#)
 Engine oil filter replacementQR25DE [MA-16](#)
 Engine oil precautions [GI-3](#), [GI-7](#)
 Engine oil replacementQR25DE [MA-15](#)
 Engine removal [EM-109](#)
 Engine serial number [GI-47](#)
 ETC1 - Wiring diagram [EC-553](#)
 ETC2 - Wiring diagram [EC-548](#)
 ETC3 - Wiring diagram [EC-559](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-399](#), [EC-407](#)
 EVAP canister vent control valve [EC-414](#), [EC-421](#)
 EVAP control system (small leak) diagnosis .. [EC-390](#),
[EC-444](#), [EC-452](#)
 EVAP control system pressure sensor [EC-428](#), [EC-431](#),
[EC-437](#)
 EVAP control system purge flow monitoring diagnosis
[EC-384](#)
 EVAP vapor lines inspection [MA-19](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-138](#)
 Exhaust manifold [EM-27](#)
 Exhaust system inspection [EX-3](#), [MA-20](#)
 Expansion valve [ATC-139](#)

F

F/FOG - Wiring diagram [LT-66](#)
 F/LID - Wiring diagram [BL-126](#)
 F/PUMP - Wiring diagram [EC-631](#)
 Fan control amp. [ATC-126](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (CVT) [CVT-80](#)
 Fluids [MA-9](#)

Fluorescent leak detector [ATC-140](#)
 Fog lamp, front [LT-64](#)
 Foot lamp [LT-126](#)
 Freeze frame data [EC-53](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-36](#)
 Front disc brakeFront disc brake [BR-23](#)
 Front door [BL-117](#), [BL-120](#), [GW-75](#)
 Front Door Trim [EI-30](#)
 Front fog lamp [LT-64](#)
 Front passenger air bag [SRS-45](#)
 Front seat [SE-96](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-50](#)
 Front washer [VW-3](#)
 Front wiper [VW-3](#)
 FTTS - Wiring diagram [EC-331](#), [EC-336](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-305](#), [EC-317](#)
 Fuel injection system (Bank 2) [EC-305](#), [EC-317](#)
 Fuel injector and fuel tube [EM-40](#)
 Fuel level sensor [EC-462](#), [EC-464](#), [EC-466](#)
 Fuel lid opener, electric [BL-126](#)
 Fuel line inspection [FL-4](#), [MA-15](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-81](#)
 Fuel pressure release [EC-81](#)
 Fuel pump [EC-630](#)
 Fuel system [FL-4](#)
 Fuel systemCommercial Service Tools [FL-3](#)
 Fuel systemPREPARATION [FL-3](#)
 Fuel tank temperature sensor [EC-329](#), [EC-335](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-307](#), [EC-319](#)
 FUEL B2 - Wiring diagram [EC-309](#), [EC-321](#)
 Fuse [PG-17](#), [PG-78](#)
 Fuse block [PG-77](#)
 Fusible link [PG-17](#), [PG-78](#)

G

Garage jack and safety stand [GI-41](#)
 Gauges [DI-5](#)
 Generic scan tool (GST) [EC-129](#)
 Glass [GW-12](#), [GW-14](#), [GW-75](#), [GW-78](#)
 Glove box lamp [LT-150](#), [LT-151](#)
 GPS antenna [AV-124](#)
 Grease [MA-9](#)
 Ground distribution [PG-32](#)

H

H/LAMP - Wiring diagram [LT-10](#)
 H/PHON - Wiring diagram [AV-98](#)
 H/STRG - Wiring diagram [PS-11](#)
 Handling precautions for plastics [BL-198](#)
 Harness connector [PG-70](#)
 Harness connector inspection [GI-23](#)

ALPHABETICAL INDEX

[Harness layout](#) [PG-41](#)
[Hazard warning lamp](#) [LT-75](#)
[Headlamp](#) [LT-5](#)
[Headlamp removal and installation](#) [LT-36](#)
[Heated oxygen sensor 2 \(bank 1\)](#) [EC-269](#), [EC-280](#), [EC-293](#)
[Heated oxygen sensor 2 \(bank 2\)](#) [EC-269](#), [EC-280](#), [EC-293](#)
[Heated oxygen sensor 2 heater \(bank 1\)](#) [EC-173](#)
[Heated oxygen sensor 2 heater \(bank 2\)](#) [EC-173](#)
[Heated seat](#) [SE-85](#)
[Heated steering](#) [PS-10](#)
[Heater and cooling unit \(Heater core\)](#) . [ATC-122](#), [ATC-123](#)
[Heater unit \(heater core\)](#) [ATC-122](#), [ATC-123](#)
[Height \(Dimensions\)](#) [GI-47](#)
[HFC134a \(R134a\) system identification](#) [ATC-5](#)
[HFC134a \(R134a\) system precaution](#) [ATC-4](#)
[HFC134a \(R134a\) system service procedure](#) [ATC-130](#)
[HFC134a \(R134a\) system service tools](#) [ATC-12](#)
[HFC134a system service equipment precaution](#) [ATC-9](#)
[Homelink universal transceiver](#) [BL-171](#)
[Horn](#) [WW-26](#)
[HORN - Wiring diagram](#) [WW-26](#)
[How to erase DTC for OBD system](#) [EC-61](#)
[HSEAT - Wiring diagram](#) [SE-86](#), [SE-88](#)

I

[I/MIRR - Wiring diagram](#) [GW-81](#)
[IATS - Wiring diagram](#) [EC-206](#)
[Identification plate](#) [GI-47](#)
[Idle air volume learning](#) [EC-79](#)
[Idle speed](#) [EC-72](#), [EC-77](#)
[Idle speed control \(ISC\)](#) [EC-470](#), [EC-472](#)
[Ignition coil](#) [EM-37](#), [EC-636](#)
[Ignition control system](#) [EC-636](#)
[Ignition key hole illumination](#) [LT-126](#)
[Ignition timing](#) [EC-72](#), [EC-77](#)
[IGNSYS - Wiring diagram](#) [EC-637](#)
[ILL - Wiring diagram](#) [LT-155](#)
[Illuminated entry system](#) [LT-126](#)
[Illumination](#) [LT-150](#)
[Illumination control](#) [LT-150](#)
[In vehicle sensor](#) [ATC-100](#), [ATC-115](#)
[In-cabin Microfilter](#) [MA-20](#)
[INF/D - Wring diagram](#) [AV-110](#)
[INJECT - Wiring diagram](#) [EC-623](#)
[Injector](#) [EC-622](#)
[Input/Output signal of TCM](#) [CVT-24](#)
[Instrument panel](#) [IP-10](#)
[INT/L - Wiring diagram](#) [LT-132](#)
[Intake air temperature sensor](#) [EC-205](#), [EC-224](#)
[Intake door control linkage adjustment](#) [ATC-68](#)
[Intake door motor](#) [ATC-65](#), [ATC-120](#)
[Intake manifold](#) [EM-22](#)
[Intake sensor](#) [ATC-106](#), [ATC-117](#)
[Intake valve timing control \(Bank 1\)](#) [EC-162](#)
[Intake valve timing control \(Bank 2\)](#) [EC-162](#)

[Intake valve timing control solenoid valve \(Bank 1\)](#) [EC-181](#)
[Intake valve timing control solenoid valve \(Bank 2\)](#) [EC-181](#)
[Integrated homelink transmitter](#) [BL-171](#)
[Integrated homelink transmitter - See Homelink universal transceiver](#) [BL-171](#)
[Interior](#) [EI-34](#)
[Interior lamp](#) [LT-126](#)
[Interior lamp on-off control](#) [LT-126](#)
[IPDM \(Intelligent power distribution module engine room\)](#) [PG-18](#)
[IVCB1 - Wiring diagram](#) [EC-182](#)
[IVCB2 - Wiring diagram](#) [EC-184](#)
[IVIS \(Infiniti vehicle immobilizer system\) precautions](#) ... [GI-3](#)

J

[Jacking points](#) [GI-41](#)
[Junction box \(J/B\)](#) [PG-77](#)

K

[Key illumination](#) [LT-126](#)
[Knock sensor \(KS\)](#) [EC-356](#)
[KS - Wiring diagram](#) [EC-357](#)

L

[LAN system circuit](#) [ATC-55](#)
[Length \(Dimensions\)](#) [GI-47](#)
[License lamp](#) [LT-113](#)
[Lifting points](#) [GI-41](#)
[Line pressure and secondary pressure control](#) [CVT-25](#)
[Line pressure solenoid valve](#) [CVT-108](#), [CVT-113](#)
[Liquid gasket application](#) [EM-4](#), [LU-2](#), [CO-2](#)
[Location of electrical units](#) [PG-65](#)
[Lock-up and select control](#) [CVT-27](#)
[Lock-up select solenoid valve](#) [CVT-158](#)
[Low tire pressure warning system](#) [WT-9](#)
[Low tire pressure warning system - trouble diagnoses](#) [WT-13](#)
[Low tire pressure warning system - Wiring diagram](#) [WT-14](#)
[Lubricant \(R134a\) A/C](#) [ATC-18](#)
[Lubricants](#) [MA-9](#)
[Lubrication circuit \(engine\)](#) [LU-5](#)
[Lubrication oil A/C](#) [ATC-18](#)
[Lubrication-locks, hinges and hood latches](#) [MA-28](#)
[Luggage compartment trim](#) [EI-44](#)
[Luggage room lamp](#) [LT-126](#)

M

[MAFS - Wiring diagram](#) [EC-191](#), [EC-199](#)
[Magnet clutch](#) [ATC-76](#), [ATC-133](#)
[MAIN - Wiring diagram](#) [EC-148](#)
[Maintenance](#) [MA-4](#)

ALPHABETICAL INDEX

Malfunction indicator lamp (MIL) [EC-63](#)
 Manual transaxle number [GI-47](#)
 Map lamp [LT-126](#)
 Mass air flow sensor (MAFS) [EC-188](#), [EC-197](#)
 Master cylinder (brake)Master cylinder (brake) . [BR-12](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-10](#)
 MIL data link connectors circuit [EC-662](#)
 MIL/DL - Wiring diagram [EC-662](#)
 MIRROR - Wiring diagram [GW-107](#), [GW-108](#)
 Misfire [EC-347](#)
 Mode door control linkage adjustment [ATC-60](#)
 Mode door motor [ATC-57](#), [ATC-124](#)
 Model variation [GI-47](#)
 Multiplex communication [ATC-108](#), [ATC-110](#), [ATC-112](#)
 Multiport fuel injection (MFI) system [EC-24](#)
 Multiport fuel injection precautions [GI-3](#), [GI-6](#)

N

NATS - Wiring diagram [BL-154](#)
 NAVI - Wiring diagram [AV-129](#)
 NAVI Control Unit [AV-125](#)
 Navigation system [AV-123](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
 NVH troubleshooting (EM) [EM-11](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-4](#)
 NVIS (Nissan vehicle immobilizer system) [BL-151](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-175](#)
 O2H2B2 - Wiring diagram [EC-177](#)
 O2S2B1 - Wiring diagram ... [EC-272](#), [EC-283](#), [EC-296](#)
 O2S2B2 - Wiring diagram ... [EC-274](#), [EC-285](#), [EC-298](#)
 Oil filter [LU-10](#)
 Oil pump (engine) [LU-11](#)
 Oil seal replacement (engine) [EM-86](#)
 On board diagnostic system [EC-48](#)
 ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)
 Overheat [EC-499](#)

P

P/SCKT - Wiring diagram [WW-24](#)
 Park/Neutral position switch [EC-491](#)
 Park/neutral position switch (CVT) [CVT-73](#)
 Parking brake controlParking brake control [PB-4](#)
 Parking drum brakeParking drum brake [PB-7](#)
 Parking lamp [LT-113](#)

PCV (positive crankcase ventilation) [EC-45](#)
 Periodic maintenance [MA-6](#)
 Personal lamp [LT-126](#)
 PGC/V - Wiring diagram [EC-401](#), [EC-409](#)
 PHSB1 - Wiring diagram [EC-370](#)
 PHSB2 - Wiring diagram [EC-372](#)
 Piston ring inspection [EM-124](#)
 PNP/SW - Wiring diagram [EC-493](#)
 POS - Wiring diagram [EC-363](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-17](#)
 Power seat [SE-81](#)
 Power socket [WW-24](#)
 Power steering fluid level [MA-26](#)
 Power steering pressure (PSP) sensor [EC-474](#)
 Power supply routing [PG-4](#)
 Power transistor [EC-636](#)
 Power window [GW-19](#)
 PRE/SE - Wiring diagram [EC-433](#), [EC-439](#)
 Precautions (General) [GI-3](#), [GI-4](#)
 Precautions in repairing high strength steel [BL-201](#)
 Pressure control solenoid valve A . [CVT-108](#), [CVT-113](#)
 Pressure control solenoid valve B . [CVT-116](#), [CVT-119](#)
 Pressure test (CVT) [CVT-42](#)
 Primary pressure sensor [CVT-137](#)
 Primary Speed Sensor [CVT-85](#)
 PS/SEN - Wiring diagram [EC-475](#)

R

Radiator fan - See Cooling fan [CO-15](#)
 Radio - See Audio [AV-7](#)
 Rear bumper [EI-16](#)
 Rear combination lamp removal and installation ... [LT-125](#)
 Rear disc brakeRear disc brake [BR-29](#)
 Rear door [BL-117](#), [GW-78](#)
 Rear seat [SE-102](#)
 Rear seat belt [SB-5](#)
 Rear sunshade [EI-37](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-14](#)
 Rear window defogger [GW-83](#)
 Refrigerant connection precaution [ATC-6](#)
 Refrigerant discharging evacuating charging [ATC-130](#)
 Refrigerant general precaution [ATC-5](#)
 Refrigerant lines [ATC-130](#)
 Refrigerant pressure sensor [EC-649](#), [ATC-137](#)
 Road test [CVT-44](#)
 Road wheel size [GI-47](#)
 Rocker cover [EM-43](#)
 Room lamp [LT-126](#)
 Room lamp - See Interior lamp [LT-126](#)
 ROOM/L - Wiring diagram [LT-132](#)
 RP/SEN - Wiring diagram [EC-650](#)

S

SAE J1930 terminology list [GI-51](#)

ALPHABETICAL INDEX

SEAT - Wiring diagram	SE-81 , SE-82	TCS - Wiring diagram	BRC-16 , BRC-60
Seat belt inspection	SB-6 , MA-28	TCS (traction control system)	BRC-6 , BRC-49
Seat belt, front	SB-4	TCS system components	BRC-13 , BRC-57
Seat belt, rear	SB-5	TCS wheel sensors	BRC-7 , BRC-51
Seat, front	SE-96	Telephone	AV-94
Seat, rear	SE-102	Theft warning system - See Vehicle security (Theft warning) system	BL-131
Secondary pressure sensor	CVT-129	Three way catalyst	EM-27
Secondary Speed Sensor	CVT-90	Three way catalyst function (Bank 1)	EC-378
SEN/PW - Wiring diagram	EC-487	Three way catalyst function (Bank 2)	EC-378
SHADE - Wiring diagram	EI-38	Three way catalyst precautions	GI-3 , GI-5
SHIFT - Wiring diagram	CVT-192	Throttle control motor	EC-558
Shift control	CVT-25	Throttle control motor relay	EC-546
Shift control system	CVT-186	Throttle position sensor (TPS) ...	EC-214 , EC-340 , EC-511 , EC-513 , EC-579
Shift schedule	CVT-48 , CVT-204	Throttle valve closed position learning	EC-79
Shock absorber (front)	FSU-10	Tightening torque of standard bolts	GI-45
Shock absorber (rear)Shock absorber (rear) ...	RSU-9	Timing chain	EM-54
Side air bag (satellite) sensor	SRS-49	Tire rotation	MA-23
Side curtain air bag	SRS-46	Tire size	GI-47
Side trim	EI-34	TLID - Wiring diagram	BL-126
SONAR - Wiring diagram	DI-69	Torque converter installation	EM-111 , CVT-201 , CVT-202
Spare tire size	GI-47	Torque convertor clutch solenoid valve	CVT-100 , CVT-105
Spark plug	EM-38	Tow truck towing	GI-44
Spark plug replacementQR25DE	MA-17	Towing point	GI-44
Specification value	EC-137	TPS1 - Wiring diagram	EC-342
Speedometer	DI-5	TPS2 - Wiring diagram	EC-216
Spiral cable	SRS-43	TPS3 - Wiring diagram	EC-581
SROOF - Wiring diagram	RF-12	Traction control system - See TCS	BRC-6 , BRC-49
SRS - See Supplemental Restraint System	SRS-5	Traction control system - Wiring diagram	BRC-16 , BRC-60
SRS - Wiring diagram	SRS-13	Transaxle serial number	GI-47
SRS Trouble diagnoses	SRS-9	Tread-FR&RR (Dimensions)	GI-47
Stabilizer bar (front)	FSU-12	Trim	EI-34
Stall Test	CVT-41	TRNSCV - Wiring diagram	BL-171
Standardized relay	PG-75	Trouble diagnoses	GI-10
START - Wiring diagram	SC-11	Trunk lid opener, electric	BL-126
Starting system	SC-10	Trunk lid trim	EI-44
Steering gear and linkage inspection	MA-25	Trunk room lamp	LT-126
Steering knuckle	FAX-6	Trunk room trim	EI-44
Step lamp	LT-126	TURN - Wiring diagram	LT-79
Step motor	CVT-164 , CVT-168	Turn signal lamp	LT-75
Stop lamp	LT-108	Two trip detection logic	EC-48
Stop lamp switch	EC-524 , EC-541 , EC-605	Two-pole lift	GI-41
STOP/L - Wiring diagram	LT-109		
Strut (front)	FSU-9		
Sun roof, electric	RF-10		
Sunload sensor	ATC-103 , ATC-116		
Sunroof	RF-23		
Sunshade	EI-37		
Supplemental Restraint System	SRS-5		
Symbols and abbreviations	GI-8 , GI-10 , GI-21		
Symptom matrix chart	EC-93		

T

Tachometer

[DI-5](#)

Tail lamp

[LT-113](#)

TAIL/L - Wiring diagram

[LT-116](#)

TCM circuit diagram

[CVT-40](#)

TCM function

[CVT-23](#)

TCM inspection table

[CVT-50](#)

T

Tachometer

[DI-5](#)

Tail lamp

[LT-113](#)

TAIL/L - Wiring diagram

[LT-116](#)

TCM circuit diagram

[CVT-40](#)

TCM function

[CVT-23](#)

TCM inspection table

[CVT-50](#)

U

Unified meter and A/C amp.

[DI-27](#)

V

Vacuum hose (brake system)Vacuum hose (brake system)

[BR-21](#)

Vacuum hose drawing (Engine control)

[EC-104](#)

Valve clearance

[EM-82](#)

Valve guide

[EM-105](#), [EM-106](#)

Valve seat

[EM-107](#)

V

Vacuum hose (brake system)Vacuum hose (brake system)

[BR-21](#)

Vacuum hose drawing (Engine control)

[EC-104](#)

Valve clearance

[EM-82](#)

Valve guide

[EM-105](#), [EM-106](#)

Valve seat

[EM-107](#)

ALPHABETICAL INDEX

Valve spring	EM-108	Wiring diagram - CVT - SESCOVT	CVT-91
Vanity mirror lamp	LT-126	Wiring diagram - CVT - STM	CVT-165
Variable induction air control system (VIAS) ..	EC-536 , EC-654	Wiring diagram - CVT - STSIG	CVT-68
VDC (vehicle dynamics control)	BRC-49	Wiring diagram - CVT - TCV	CVT-101
VDC -Wiring diagram	BRC-60	Wiring Diagram (Cell code) list	PG-62
Vehicle identification number	GI-47	Wiring diagrams	GI-8 , GI-14
Vehicle recovery (freeing a stuck vehicle)	GI-44		
Vehicle security (theft warning) system	BL-131		
Vehicle speed sensor (VSS)	EC-468 , EC-534		
VEHSEC - Wiring diagram	BL-135		
VENT/V - Wiring diagram	EC-416 , EC-423		
VIAS - Wiring diagram	EC-656		
VIAS/V - Wiring diagram	EC-537		
VIN registration	EC-78		
Viscosity number (SAE)	MA-10		

W

W/ANT - Wiring diagram	AV-91
WARN - Wiring diagram	DI-40
Warning chime	DI-53
Warning lamps	DI-39
Washer, front	WW-3
Water pump	CO-16
Water temperature gauge	DI-5
Wheel alignment (rear)Wheel alignment (rear) .	RSU-6
Wheel balance	MA-22
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5
Wheel sensor (VDC)	BRC-51
Wheel sensors (ABS)	BRC-7 , BRC-51
Wheel sensors (TCS)	BRC-7 , BRC-51
Wheel size	GI-47
Wheelbase (Dimensions)	GI-47
Width (Dimensions)	GI-47
WINDOW - Wiring diagram	GW-27
Window, door	GW-75 , GW-78
Window, rear	GW-14
Windshield	GW-12
Windshield washer - See Front washer	WW-3
Windshield wiper - See Front wiper	WW-3
WIPER - Wiring diagram	WW-7
Wiper and washer	WW-3
Wiper, front	WW-3
Wiring diagram - CVT - CAN	CVT-65
Wiring diagram - CVT - FTS	CVT-81
Wiring diagram - CVT - L/USSV	CVT-159
Wiring diagram - CVT - LPSV	CVT-109
Wiring diagram - CVT - MMSW	CVT-125
Wiring diagram - CVT - NONDTC	CVT-171
Wiring diagram - CVT - PNP/SW	CVT-75
Wiring diagram - CVT - POWER	CVT-146
Wiring diagram - CVT - PRIPS	CVT-138
Wiring diagram - CVT - PRSCVT	CVT-86
Wiring diagram - CVT - SECPS	CVT-130
Wiring diagram - CVT - SECPSV	CVT-120