
ALPHABETICAL INDEX

A

A-BAG BRANCH LINE CIRCUIT [LAN-73](#), [LAN-104](#),
[LAN-122](#), [LAN-141](#), [LAN-165](#), [LAN-198](#),
[LAN-233](#)
A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT [SRC-145](#)
A/C AUTO AMP. [HAC-30](#), [HAC-102](#), [ST-9](#)
A/C SWITCH ASSEMBLY [HAC-100](#)
A/C SWITCH ASSEMBLY SIGNAL CIRCUIT
[HAC-86](#)
ABBREVIATIONS [GI-14](#)
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) [BRC-46](#), [BRC-168](#), [BRC-221](#),
[BRC-366](#)
ABS BRANCH LINE CIRCUIT [LAN-66](#), [LAN-97](#),
[LAN-115](#), [LAN-134](#), [LAN-158](#), [LAN-191](#),
[LAN-226](#)
ABS WARNING LAMP [BRC-151](#), [BRC-344](#)
ACCELERATOR CONTROL SYSTEM [ACC-3](#)
ACCELERATOR PEDAL RELEASED POSITION
LEARNING [EC-158](#)
ACTION TEST [BRC-263](#), [CCS-66](#), [DAS-143](#)
ACTIVE NOISE CONTROL MICROPHONE [AV-200](#)
ADAS CONTROL UNIT [BRC-229](#), [CCS-35](#), [DAS-20](#),
[DAS-80](#), [DAS-112](#)
ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL [PWC-28](#)
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) [BRC-63](#), [BRC-246](#)
ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNIT [DAS-36](#)
ADDITIONAL SERVICE WHEN REPLACING
AROUND VIEW MONITOR CONTROL UNIT ..
[AV-238](#)
ADDITIONAL SERVICE WHEN REPLACING AV
CONTROL UNIT [AV-89](#)
ADDITIONAL SERVICE WHEN REPLACING BCM
[DLK-71](#)
ADDITIONAL SERVICE WHEN REPLACING
CHASSIS CONTROL MODULE [DAS-217](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT [PWC-29](#), [SEC-54](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT (A/C AUTO AMP.) [HAC-48](#)
ADDITIONAL SERVICE WHEN REPLACING ECM
[EC-156](#)
ADDITIONAL SERVICE WHEN REPLACING ICC
SENSOR [BRC-247](#), [CCS-56](#), [DAS-142](#)
ADDITIONAL SERVICE WHEN REPLACING TCM
[TM-76](#)
ADDITIONAL SERVICE WHEN REPLACING TCM
AND TRANSAXLE ASSEMBLY [TM-79](#)

ADDITIONAL SERVICE WHEN REPLACING TCU
[AV-91](#)
ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY [TM-77](#)
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION [BRC-64](#), [BRC-248](#)
ADP BRANCH LINE CIRCUIT ... [LAN-79](#), [LAN-203](#),
[LAN-239](#)
ADP STEERING SWITCH [ADP-134](#)
ADP SYSTEM SYMPTOMS [ADP-128](#)
AIR BREATHER HOSE [TM-193](#)
AIR CLEANER AND AIR DUCT [EM-26](#)
AIR CLEANER FILTER [EM-19](#)
AMBIENT SENSOR [HAC-103](#)
ANTENNA AMP. [AV-197](#)
ANTI-PINCH FUNCTION DOES NOT OPERATE ..
[PWC-60](#), [RF-41](#)
AROUND VIEW MONITOR CONTROL UNIT
[AV-225](#), [AV-273](#)
AROUND VIEW MONITOR SYSTEM [AV-211](#),
[AV-231](#), [AV-271](#)
ASCD INDICATOR [EC-534](#)
AUDIO SYSTEM [AV-22](#)
AUTO LIGHT SYSTEM [EXL-38](#), [EXL-158](#)
AUTO OPERATION DOES NOT OPERATE. [RF-40](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY [PWC-59](#)
AUTOMATIC AIR CONDITIONING SYSTEM
[HAC-36](#)
AUTOMATIC DRIVE POSITIONER CONTROL UNIT
[ADP-34](#), [ADP-131](#)
AUTOMATIC DRIVE POSITIONER SYSTEM
[ADP-38](#)
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
[CCS-141](#)
AUXILIARY INPUT JACK [AV-173](#)
AV BRANCH LINE CIRCUIT [LAN-74](#), [LAN-105](#),
[LAN-123](#), [LAN-142](#), [LAN-166](#), [LAN-199](#),
[LAN-234](#)
AV CONTROL UNIT [AV-44](#), [AV-183](#), [AV-293](#), [AV-306](#)
AVM BRANCH LINE CIRCUIT ... [LAN-83](#), [LAN-207](#),
[LAN-243](#)

B

B TERMINAL CIRCUIT [CHG-22](#), [STR-16](#)
B0001 DRIVER AIRBAG MODULE [SRC-44](#)
B0010, B0011 PASSENGER AIRBAG MODULE
[SRC-48](#)
B0020 SIDE AIRBAG MODULE LH [SRC-51](#)
B0021 SIDE CURTAIN AIR BAG MODULE LH
[SRC-57](#)
B0028 SIDE AIRBAG MODULE RH [SRC-54](#)
B0029 SIDE CURTAIN AIR BAG MODULE RH
[SRC-60](#)

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH.....	SRC-67	B2128 UART COMMUNICATION LINE.....	ADP-66
B0092 REAR SIDE AIR BAG SATELLITE SENSOR LH.....	SRC-77	B2130 EEPROM.....	ADP-68
B0093 FRONT DOOR SATELLITE SENSOR LH.... SRC-86		B2192 ID DISCORD, IMMU-ECM	SEC-65
B0094 CRASH ZONE SENSOR	SRC-63	B2193 CHAIN OF ECM-IMMU	SEC-67
B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	SRC-72	B2195 ANTI-SCANNING	SEC-69
B0097 REAR SIDE AIR BAG SATELLITE SENSOR RH	SRC-81	B2196 DONGLE UNIT	SEC-71
B0098 FRONT DOOR SATELLITE SENSOR RH... SRC-90		B2198 NATS ANTENNA AMP.....	SEC-73
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT	SRC-95	B219B SVT ID ERROR	BCS-70
B00D5 PASSENGER AIR BAG OFF INDICATOR .. SRC-102		B2205 VEHICLE SPEED	MWI-47
B1400, B1401, B1402, B1403, B1404, B1405 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-130	B2267 ENGINE SPEED	MWI-48
B1406, B1407, B1408, B1409, B1410 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-132	B2268 WATER TEMP	MWI-49
B1411, B1412, B1413, B1414, B1415 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-134	B2555 STOP LAMP	SEC-75
B1416, B1417, B1418, B1419, B1420 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-136	B2556 PUSH-BUTTON IGNITION SWITCH.....	SEC-79
B1427 CONFIG SETTING.....	SRC-129	B2557 VEHICLE SPEED	SEC-82
B1428 SEAT BELT BUCKLE SWITCH LH.....	SRC-105	B2560 STARTER CONTROL RELAY	SEC-84
B1429 SEAT BELT BUCKLE SWITCH RH.....	SRC-108	B2562 LOW VOLTAGE.....	BCS-72
B142A IGNITION VOLTAGE	SRC-126	B2578, B2579 IN-VEHICLE SENSOR.....	HAC-56
B142X COLLISION DETECTION.....	SRC-138	B257B, B257C AMBIENT SENSOR.....	HAC-59
B1430 SEAT BELT PRE-TENSIONER.....	SRC-111	B2581, B2582 INTAKE SENSOR	HAC-62
B1431 SEAT BELT PRE-TENSIONER.....	SRC-114	B259A ROOM LAMP FUSE	BCS-73
B1432 LAP PRE-TENSIONER.....	SRC-117	B2601 SHIFT POSITION	SEC-86
B1433 LAP PRE-TENSIONER.....	SRC-120	B2602 SHIFT POSITION	SEC-89
B1436 ACTIVE VENT.....	SRC-123	B2603 SHIFT POSITION	SEC-92
B14XX AIR BAG DIAGNOSIS SENSOR UNIT	SRC-140	B2604 SHIFT POSITION	SEC-96
B1F01 ENGINE SPEED SIGNAL.....	AV-96	B2605 SHIFT POSITION	SEC-99
B1F02 DOOR STATUS SIGNAL	AV-98	B2608 STARTER RELAY	SEC-102
B1F0B, B1F0C, B1F0D, B1F0E ANC MIC1 CIRCUIT AV-100		B260A IGNITION RELAY	PCS-62
B1F10, B1F11, B1F12, B1F13 ANC MIC2 CIRCUIT AV-103		B260F ENGINE STATUS.....	SEC-110
B1F15, B1F16, B1F17, B1F18 ANC MIC3 CIRCUIT AV-106		B2614 ACC RELAY CIRCUIT.....	PCS-64
B2098 IGNITION RELAY ON STUCK	PCS-31	B2615 FRONT BLOWER MOTOR RELAY CIRCUIT PCS-67	
B2099 IGNITION RELAY OFF STUCK	PCS-33	B2616 IGNITION RELAY CIRCUIT	PCS-70
B210B STARTER CONTROL RELAY	SEC-112	B2618 BCM	PCS-73
B210C STARTER CONTROL RELAY	SEC-113	B261A PUSH-BUTTON IGNITION SWITCH.....	PCS-74
B210D STARTER RELAY.....	SEC-114	B261B REMOTE ENGINE START	DLK-74
B210E STARTER RELAY	SEC-116	B261E VEHICLE TYPE	SEC-104
B210F TRANSMISSION RANGE SWITCH.....	SEC-118	B2622 INSIDE ANTENNA	DLK-75
B2110 TRANSMISSION RANGE SWITCH.....	SEC-121	B2623 INSIDE ANTENNA	DLK-78
B2112 SLIDING MOTOR.....	ADP-60	B2626 OUTSIDE ANTENNA	DLK-89
B2113 RECLINING MOTOR.....	ADP-62	B2627 OUTSIDE ANTENNA	DLK-92
B2116 TILT MOTOR	ADP-64	B2628 OUTSIDE ANTENNA	DLK-95
		B2630, B2631 SUNLOAD SENSOR	HAC-65
		B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE).....	HAC-68
		B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE).....	HAC-70
		B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR.....	HAC-72
		B263D, B263E, B263F INTAKE DOOR MOTOR..... HAC-74	
		B26F1 IGNITION RELAY	PCS-77
		B26F2 IGNITION RELAY	PCS-79
		B26F3 STARTER CONTROL RELAY.....	SEC-106
		B26F4 STARTER CONTROL RELAY.....	SEC-107
		B26F6 BCM	PCS-81
		B26F7 BCM	SEC-109

B26FC KEY REGISTRATIONSEC-108
 B26FD SHIFT LOCK SOLENOIDDLK-81
 B26FE HOOD SWITCHDLK-83
 B26FF REMOTE KEYLESS ENTRY RECEIVER...
 DLK-85
 B2720 CORNER SENSOR [RL]SN-29
 B2723 CORNER SENSOR [RR].....SN-31
 B2724 SONAR CONTROL UNITSN-33
 B2729 CORNER SENSOR [FL].....SN-34
 B272C CORNER SENSOR [FR].....SN-36
 B27B0 A/C AUTO AMPHAC-76
 BACK-UP LAMPEXL-61, EXL-127, EXL-181,
 EXL-245
 BACK-UP LAMP ASSEMBLY ... EXL-122, EXL-240
 BASIC INSPECTIONEC-164
 BATTERYPG-92, PG-101, PG-107
 BATTERY CURRENT SENSOR...EC-535, PG-106
 BATTERY TERMINAL WITH FUSIBLE LINKPG-105
 BATTERY TRAY.....PG-103
 BCMDEF-10, DLK-41, INL-13, WT-17
 BCM (BODY CONTROL MODULE).....ADP-37,
 BCS-31, BCS-56, BCS-82, MWI-30, PCS-90,
 PWC-14, RF-17
 BCM BRANCH LINE CIRCUIT ..LAN-82, LAN-107,
 LAN-125, LAN-145, LAN-172, LAN-206,
 LAN-242
 BCM, COMBINATION METERWCS-17
 BCM, IPDM E/REXL-29, EXL-149, PCS-48, WW-22
 BLIND SPOT WARNING INDICATORDAS-178
 BLOWER MOTORHAC-87, HAC-111
 BLOWER UNITVTL-15
 BODY ALIGNMENTBRM-53
 BODY COMPONENT PARTSBRM-12
 BODY CONSTRUCTIONBRM-24
 BODY EXTERIOR PAINT COLORBRM-2
 BODY SEALINGBRM-20
 BODY SIDE TRIMINT-32
 BOSE AMPAV-48
 BOSE SPEAKER AMPAV-194
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES.....DEF-38
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON.....EXL-102, EXL-220
 BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
 ON.....EXL-99, EXL-217
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON.....EXL-100, EXL-218
 BRAKE BOOSTERBR-8, BR-32
 BRAKE CONTROL SYSTEM.....BRC-54, BRC-236
 BRAKE FLUID.....BR-14
 BRAKE MASTER CYLINDER.....BR-7, BR-30
 BRAKE PEDALBR-12, BR-20
 BRAKE PEDAL POSITION SWITCH.....EC-537
 BRAKE PEDAL VIBRATION OR OPERATION
 SOUND OCCURSBRC-161, BRC-359

BRAKE PIPINGBR-22
 BRAKE WARNING LAMPBRC-152, BRC-345
 BUZZERSN-42

C

C10B7 YAW RATE SENSORCCS-103
 C1101, C1102, C1103, C1104 WHEEL SENSOR...
 BRC-70, BRC-264
 C1105, C1106, C1107, C1108 WHEEL SENSOR...
 BRC-75, BRC-269
 C1109 POWER AND GROUND SYSTEM BRC-82,
 BRC-276
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT)BRC-84, BRC-278
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
 BRC-86, BRC-280
 C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
 SENSORBRC-89, BRC-283
 C1115 WHEEL SENSORBRC-91, BRC-285
 C1116 STOP LAMP SWITCH....BRC-98, BRC-292
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEMBRC-102, BRC-296
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEMBRC-104, BRC-298
 C1130 ENGINE SIGNALBRC-106, BRC-300
 C1140 ACTUATOR RELAY SYSTEMBRC-108,
 BRC-302
 C1142 PRESS SENSOR.....BRC-110, BRC-304
 C1143 STEERING ANGLE SENSORBRC-113,
 BRC-307, STC-20
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENTBRC-117, BRC-311
 C1154 TRANSMISSION RANGE SWITCHBRC-119,
 BRC-313
 C1155 BRAKE FLUID LEVEL SWITCH..BRC-121,
 BRC-315
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATIONBRC-125, BRC-319
 C1164, C1165 CV SYSTEM....BRC-127, BRC-321
 C1166, C1167 SV SYSTEMBRC-129, BRC-323
 C1170 VARIANT CODINGBRC-131, BRC-325
 C1197 VACUUM SENSOR.....BRC-133, BRC-327
 C1198 VACUUM SENSOR.....BRC-136, BRC-330
 C1199 BRAKE BOOSTERBRC-138, BRC-332
 C119A VACUUM SENSORBRC-141, BRC-335
 C1601 BATTERY POWER SUPPLYSTC-21
 C1602 NO TUNING SET.....STC-24
 C1606 EPS MOTORSTC-25
 C1607, C1608 POWER STEERING CONTROL
 MODULESTC-26
 C1609 VEHICLE SPEED SIGNALSTC-27
 C160A HEAT PROTECTIONSTC-29
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSUREWT-29
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSORWT-31

C1716, C1717, C1718, C1719 TIRE PRESSURE SENSOR	WT-35	C1BAB-00 STOP LAMP SWITCH	DAS-234
C1729 VEHICLE SPEED SIGNAL	WT-37	C1BB2-00 CONTROL MODULE	DAS-236
C1730, C1731, C1732, C1733 FLAT TIRE... WT-39		C1BB3-00 CONTROL MODULE	DAS-237
C1734 CONTROL UNIT	WT-41	C1BB4-00 CONTROL MODULE	DAS-238
C1735 IGNITION SIGNAL	WT-43	C1BB5-00 IGNITION POWER SUPPLY... DAS-239	
C1761, C1762, C1763, C1764 TIRE PRESSURE SENSOR	WT-45	C1BB6-00 IGNITION POWER SUPPLY... DAS-241	
C1769 CONFIGURATION SETTING	WT-47	C1BB7-00 CONTROL MODULE	DAS-243
C1770, C1771, C1772, C1773 G SENSOR . WT-49		C1BB8-00 CONTROL MODULE	DAS-244
C1A00 CONTROL UNIT	CCS-70, DAS-39	C1BB9-00 CONTROL MODULE	DAS-245
C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2 CCS-71, DAS-40		C1BBA-00 CONTROL MODULE	DAS-246
C1A03 VEHICLE SPEED SENSOR	CCS-72, DAS-41	C1BBB-00 CONTROL MODULE	DAS-247
C1A04 ABS/TCS/VDC SYSTEM	CCS-74	C1BBC-00 CONTROL MODULE	DAS-248
C1A05 BRAKE SW/STOP LAMP SW	CCS-75	C1BBD-00 VARIANT CODING	DAS-249
C1A06 OPERATION SW	CCS-79	C1BC0-00 FRONT RIGHT WHEEL SENSOR	DAS-250
C1A07 CVT	CCS-114	C1BC1-00 FRONT LEFT WHEEL SENSOR	DAS-252
C1A0C ADAS MESSAGE COUNTER FAILURE..... CCS-117		C1BC2-00 REAR RIGHT WHEEL SENSOR	DAS-254
C1A0D MRR CAN FAILURE	CCS-118	C1BC3-00 REAR LEFT WHEEL SENSOR	DAS-256
C1A12 LASER BEAM OFF CENTER	CCS-82	C1BC4-00 DECEL G SENSOR	DAS-258
C1A13 STOP LAMP RELAY	CCS-83, DAS-43	C1BC5-00 SIDE G SENSOR	DAS-260
C1A14 ECM	CCS-85, DAS-49	C1BC6-00 PRESSURE SENSOR	DAS-262
C1A15 GEAR POSITION	CCS-87	CALIBRATION OF DECEL G SENSOR BRC-66, BRC-250	
C1A16 RADAR BLOCKED OR STAINED .. CCS-89		CAMERA IMAGE SIGNAL CIRCUIT (WITH REAR VIEW MONITOR)	AV-302
C1A17 ICC SENSOR	CCS-91, DAS-51	CAMSHAFT	EM-79
C1A18 RADAR AIMING INCOMP	CCS-92	CAMSHAFT VALVE CLEARANCE	EM-20
C1A21 UNIT HIGH TEMP	CCS-93	CAN COMMUNICATION CIRCUIT	LAN-88, LAN-108, LAN-127, LAN-147, LAN-177, LAN-212, LAN-248
C1A24 NP RANGE	CCS-94	CAN COMMUNICATION SYSTEM	LAN-8
C1A26 ECD MODE MALFUNCTION	CCS-96	CAN SYSTEM (WITH DRIVER ASSISTANCE SYSTEM)	LAN-42
C1A27 ECD POWER SUPPLY CIRCUIT ... CCS-98		CAN SYSTEM (WITHOUT DRIVER ASSISTANCE SYSTEM)	LAN-36
C1A34 COMMAND ERROR	DAS-52	CCM BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	LAN-75, LAN-143, LAN-167, LAN-200, LAN-235
C1A39 STEERING ANGLE SENSOR	CCS-100	CCM BRANCH LINE CIRCUIT (ITS COMMUNICATION CIRCUIT)	LAN-76, LAN-168, LAN-201, LAN-236
C1A50 ADAS CONTROL UNIT	CCS-102	CENTER CONSOLE ASSEMBLY	IP-20
C1B50 SIDE RADAR MALFUNCTION	DAS-145	CENTER SPEAKER	AV-188
C1B51 BLIND SPOT WARNING INDICATOR SHORT CIRCUIT	DAS-146	CHARGING SYSTEM	CHG-9, CHG-27
C1B52 BLIND SPOT WARNING INDICATOR OPEN CIRCUIT	DAS-148	CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-19
C1B53 SIDE RADAR RIGHT MALFUNCTION	DAS-53	CHASSIS AND BODY MAINTENANCE	MA-33
C1B54 SIDE RADAR LEFT MALFUNCTION	DAS-54	CHASSIS CONTROL	DAS-212, DAS-286
C1B55 RADAR BLOCKAGE	DAS-150	CHASSIS CONTROL MODULE	DAS-205, DAS-290
C1B5D FEB OPE COUNT LIMIT	CCS-101	CHECK ANTI-PINCH FUNCTION	PWC-31
C1B92-00 BRAKE CONTROL SYSTEM	DAS-220	CHIME DOES NOT SOUND ... CCS-126, DAS-166	
C1B93-00 ENGINE SYSTEM	DAS-222	CLIMATE CONTROLLED SEAT	SE-36
C1B94-00 TRANSMISSION SYSTEM	DAS-224	CLIMATE CONTROLLED SEAT BLOWER FILTER	SE-63
C1B95-00 CONTROL MODULE	DAS-226		
C1B99-00 CONTROL MODULE	DAS-227		
C1BA0-00 ADAS/CHASSIS CONTROL BRAKE SYSTEM	DAS-228		
C1BA2-00 STEERING ANGLE SENSOR	DAS-230		
C1BA5-00 ADAS/CHASSIS CONTROL ENGINE SYSTEM	DAS-232		

CLIMATE CONTROLLED SEAT BLOWER MOTOR
SE-58

CLIMATE CONTROLLED SEAT CONTROL UNIT .
SE-19

CLIMATE CONTROLLED SEAT SWITCH
INDICATOR..... SE-61

CLIMATE CONTROLLED SEAT SYSTEM ... SE-64

CLUSTER LID AIP-22

COLLISION DIAGNOSIS SR-5

COMBINATION METER MWI-23, MWI-68, MWI-70

COMBINATION SWITCH.....BCS-83

COMBINATION SWITCH INPUT CIRCUIT.BCS-76

COMBINATION SWITCH OUTPUT CIRCUIT.....
BCS-78

COMBINATION SWITCH SYSTEM SYMPTOMS...
BCS-80

COMPRESSION PRESSUREEM-24

COMPRESSOR HA-34, HAC-112

COMPRESSOR DOES NOT OPERATE ... HAC-98

CONDENSERDEF-45, HA-41

CONFIGURATION (ADAS CONTROL UNIT)DAS-37

CONFIGURATION (AROUND VIEW MONITOR
CONTROL UNIT)..... AV-239

CONFIGURATION (AV CONTROL UNIT) AV-94

CONFIGURATION (CHASSIS CONTROL
MODULE)DAS-218

CONFIGURATION (HVAC) HAC-49

CONFIGURATION (TIRE PRESSURE
MONITORING SYSTEM)..... WT-28

CONFIGURATION [ABS ACTUATOR AND
ELECTRIC UNIT (CONTROL UNIT)] . BRC-68,
BRC-252

CONTROL CABLE.....TM-187

CONTROL VALVE.....TM-195

COOLER PIPE AND HOSE HA-36

COOLING FAN.....CO-16, CO-27, EC-541

COOLING SYSTEM.....CO-8

CORROSION PROTECTION BRM-17

COWL TOPEXT-24

CRASH ZONE SENSOR SR-25

CVT CONTROL SYSTEM..... TM-60, TM-180

CVT FLUID..... TM-81, TM-184

CVT OIL WARMER SYSTEM TM-206

CVT POSITION.....TM-85

CVT SHIFT LOCK SYSTEM TM-70

CVT SHIFT SELECTOR TM-185

CYLINDER BLOCK.....EM-115

CYLINDER HEADEM-91

D

DAYTIME RUNNING LIGHT RELAY CIRCUIT
EXL-74, EXL-193

DAYTIME RUNNING LIGHT SYSTEM EXL-34,
EXL-154

DEFOGGER SYSTEM SYMPTOMSDEF-35

DIAG ON CAN LAN-10

DIAGNOSIS AND REPAIR WORK FLOW ADP-50,
BRC-60, BRC-243, CCS-54, DAS-139,
DAS-214, DEF-16, DLK-68, DMS-15, EXL-66,
EXL-186, HA-16, INL-36, INT-14, MIR-11,
MWI-42, PCS-55, SE-44, SEC-51, SRC-35,
ST-12, STC-17, TM-73, WT-23, WW-27

DIAGNOSIS SENSOR UNIT SR-30, SRC-18

DIAGNOSIS SYSTEM (A/C AUTO AMP.).. HAC-26

DIAGNOSIS SYSTEM (ADAS CONTROL UNIT) ...
CCS-25, DAS-14, DAS-98

DIAGNOSIS SYSTEM (AIR BAG)..... SRC-15

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR
CONTROL UNIT)..... AV-222

DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-34,
AV-285

DIAGNOSIS SYSTEM (BCM) BCS-16, DEF-7,
DLK-35, EXL-19, EXL-141, INL-9, PCS-43,
PWC-11, RF-14, SEC-18, WCS-14, WT-12,
WW-15

DIAGNOSIS SYSTEM (CHASSIS CONTROL
MODULE)..... DAS-201

DIAGNOSIS SYSTEM (COMBINATION METER) ..
MWI-18, WCS-9

DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL
UNIT)..... ADP-24

DIAGNOSIS SYSTEM (ECM) EC-63

DIAGNOSIS SYSTEM (ICC SENSOR)... BRC-217,
CCS-31, DAS-104

DIAGNOSIS SYSTEM (IPDM E/R) EXL-25,
EXL-145, PCS-9, SEC-25, WW-18

DIAGNOSIS SYSTEM (POWER STEERING
CONTROL MODULE).....STC-10

DIAGNOSIS SYSTEM (SIDE RADAR LH)DAS-108

DIAGNOSIS SYSTEM (SIDE RADAR RH)DAS-110

DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)
SN-10

DIAGNOSIS SYSTEM (TCM) TM-40

DIAGNOSIS SYSTEM (TCU)..... AV-42

DIAGNOSIS SYSTEM (TIRE PRESSURE
MONITORING SYSTEM)..... WT-15

DIAGNOSIS SYSTEM [ABS ACTUATOR AND
ELECTRIC UNIT (CONTROL UNIT)].. BRC-41,
BRC-212

DIFFERENTIAL SIDE OIL SEALTM-204

DLC BRANCH LINE CIRCUIT ...LAN-70, LAN-101,
LAN-119, LAN-138, LAN-162, LAN-195,
LAN-230

DOES NOT OPERATE..... BRC-160, BRC-358

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
KEY CYLINDER OPERATIONDLK-140

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
LOCK AND UNLOCK SWITCH.....DLK-137

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
REQUEST SWITCH.....DLK-141

DOOR DOES NOT LOCK/UNLOCK WITH
INTELLIGENT KEYDLK-143

DOOR KEY CYLINDER SWITCH [DLK-109](#), [PWC-48](#)
DOOR KEY CYLINDER SWITCH DOES NOT
OPERATE POWER WINDOWS [PWC-62](#)
DOOR LOCK ACTUATOR [DLK-102](#)
DOOR LOCK AND UNLOCK SWITCH [DLK-100](#)
DOOR LOCK OPERATION WARNING DOES NOT
OPERATE [DLK-150](#)
DOOR MIRROR [MIR-5](#), [MIR-21](#)
DOOR MIRROR ACTUATOR [MIR-25](#)
DOOR MIRROR DEFOGGER LH (WITH
AUTOMATIC DRIVE POSITIONER) [DEF-29](#)
DOOR MIRROR DEFOGGER LH (WITHOUT
AUTOMATIC DRIVE POSITIONER) [DEF-27](#)
DOOR MIRROR DEFOGGER RH (WITH
AUTOMATIC DRIVE POSITIONER) [DEF-33](#)
DOOR MIRROR DEFOGGER RH (WITHOUT
AUTOMATIC DRIVE POSITIONER) [DEF-31](#)
DOOR MIRROR GLASS [MIR-23](#)
DOOR MIRROR MOTOR [ADP-123](#)
DOOR MIRROR REAR FINISHER [MIR-24](#)
DOOR MIRROR REMOTE CONTROL SWITCH
[ADP-87](#), [MIR-13](#), [MIR-26](#)
DOOR MIRROR TURN SIGNAL LAMP ... [EXL-112](#),
[EXL-230](#)
DOOR MOTOR [HAC-83](#), [HAC-108](#)
DOOR MOTOR COMMUNICATION CIRCUIT
[HAC-85](#)
DOOR OUTSIDE MOLDING [EXT-32](#)
DOOR REQUEST SWITCH [DLK-113](#), [DLK-200](#)
DOOR SWITCH [DLK-98](#), [DLK-197](#), [PWC-46](#), [RF-36](#)
DRIVE BELTS [EM-16](#)
DRIVE MODE INDICATOR DOES NOT TURN ON
[DMS-19](#)
DRIVE MODE SELECTOR [DMS-8](#), [DMS-9](#), [DMS-20](#)
DRIVE MODE SELECTOR CIRCUIT [DMS-16](#)
DRIVER AIR BAG MODULE [SR-12](#)
DRIVER ASSISTANCE SYSTEM SYMPTOMS
[BRC-350](#), [DAS-164](#)
DRIVER ASSISTANCE SYSTEMS [DAS-27](#),
[DAS-130](#)
DRIVER SEAT CONTROL UNIT [ADP-27](#), [ADP-130](#)
DRIVER SIDE DOOR MIRROR DEFOGGER DOES
NOT OPERATE. [DEF-40](#)
DRIVER SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-55](#)
DRIVING FORCE IS HUNTING [CCS-128](#)
DUCTS AND GRILLES [VTL-8](#)

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE ...
[WT-59](#)
ECM BRANCH LINE CIRCUIT [LAN-65](#), [LAN-96](#),
[LAN-114](#), [LAN-133](#), [LAN-157](#), [LAN-190](#),
[LAN-225](#)
ECM, IPDM E/R, BCM [HAC-35](#), [SEC-27](#)
ECV (ELECTRICAL CONTROL VALVE) [HAC-91](#)

ELECTRICAL LOAD SIGNAL [EC-545](#)
ELECTRICAL UNITS LOCATION [PG-5](#)
ELECTRONIC CONTROLLED ENGINE MOUNT ...
[EC-547](#)
ENCODER [PWC-41](#)
ENGINE ASSEMBLY [EM-107](#)
ENGINE CONTROL SYSTEM [EC-124](#)
ENGINE CONTROL SYSTEM SYMPTOMS [EC-575](#)
ENGINE COOLANT [CO-10](#)
ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE [SEC-129](#)
ENGINE MAINTENANCE (VQ35DE) [MA-20](#)
ENGINE MOUNT [EM-101](#)
ENGINE OIL [LU-8](#)
ENGINE ROOM COVER [EM-25](#)
EPS/DAST 3 BRANCH LINE CIRCUIT [LAN-67](#),
[LAN-98](#), [LAN-116](#), [LAN-135](#), [LAN-159](#), [LAN-192](#),
[LAN-227](#)
EVAP CANISTER [FL-15](#)
EVAP CANISTER FILTER [FL-17](#)
EVAP CANISTER VENT CONTROL VALVE . [FL-18](#)
EVAP CONTROL SYSTEM PRESSURE SENSOR
[FL-19](#)
EVAP LEAK CHECK [EC-583](#)
EXCESSIVE OPERATION FREQUENCY [BRC-156](#),
[BRC-354](#)
EXHAUST MANIFOLD AND THREE WAY
CATALYST [EM-32](#)
EXHAUST SYSTEM [EX-4](#), [EX-5](#)
EXTERIOR LIGHTING SYSTEM SYMPTOMS
[EXL-95](#), [EXL-213](#)

F

FENDER PROTECTOR [EXT-28](#)
FILAMENT [DEF-43](#)
FLOOR TRIM [INT-44](#)
FOOT LAMP [INL-59](#)
FORWARD EMERGENCY BRAKING [BRC-349](#)
FREQUENTLY CANNOT DETECT THE VEHICLE
AHEAD / DETECTION ZONE IS SHORT
[CCS-129](#), [DAS-167](#)
FRONT BUMPER [EXT-16](#)
FRONT CAMERA [AV-274](#)
FRONT COIL SPRING AND STRUT [FSU-10](#),
[FSU-19](#)
FRONT COMBINATION LAMP [EXL-108](#), [EXL-124](#),
[EXL-226](#), [EXL-242](#)
FRONT DISC BRAKE [BR-10](#), [BR-16](#), [BR-37](#), [BR-47](#)
FRONT DOOR [DLK-166](#)
FRONT DOOR FINISHER [INT-26](#)
FRONT DOOR GLASS [GW-14](#)
FRONT DOOR LOCK [DLK-179](#)
FRONT DOOR SPEAKER [AV-162](#), [AV-190](#)
FRONT DRIVE SHAFT [FAX-7](#), [FAX-18](#), [FAX-24](#)
FRONT DRIVE SHAFT BOOT [FAX-11](#)
FRONT FENDER [DLK-164](#)

FRONT FOG LAMP	EXL-110, EXL-228
FRONT FOG LAMP AIMING ADJUSTMENT	EXL-106, EXL-224
FRONT FOG LAMP CIRCUIT	EXL-85, EXL-203
FRONT FOG LAMP SYSTEM	EXL-43, EXL-163
FRONT GRILLE	EXT-22
FRONT LOWER LINK	RSU-13
FRONT PASSENGER AIR BAG MODULE ...	SR-19
FRONT PASSENGER AIR BAG OFF INDICATOR	SR-45
FRONT PASSENGER SIDE POWER WINDOW	
DOES NOT OPERATE	PWC-56
FRONT PILLAR MOLDING	EXT-34
FRONT POWER WINDOW MOTOR	GW-19
FRONT REGULATOR	GW-16
FRONT ROOM/MAP LAMP ASSEMBLY	INL-50
FRONT SEAT	SE-71, SE-94
FRONT SEAT BELT	SB-8
FRONT SEAT BELT BUCKLE SWITCH	SR-33
FRONT SIDE MARKER LAMP CIRCUIT ...	EXL-79, EXL-197
FRONT STABILIZER	FSU-15
FRONT STEP LAMP	INL-54
FRONT SUNROOF GLASS	RF-64
FRONT SUSPENSION ASSEMBLY	FSU-6
FRONT SUSPENSION MEMBER	FSU-18
FRONT TIMING CHAIN CASE	EM-58
FRONT TWEETER	AV-189
FRONT UNDER COVER	EXT-26
FRONT WASHER MOTOR	WW-52
FRONT WHEEL HUB	FAX-6, FAX-8
FRONT WIPER	WW-45
FRONT WIPER DOES NOT OPERATE	WW-43
FRONT WIPER MOTOR GROUND CIRCUIT	WW-35
FRONT WIPER MOTOR HI CIRCUIT	WW-32
FRONT WIPER MOTOR LO CIRCUIT	WW-30
FRONT WIPER STOP POSITION SIGNAL CIRCUIT	WW-34
FUEL FILLER LID OPENER	DLK-192
FUEL INJECTOR	EC-550
FUEL INJECTOR AND FUEL TUBE	EM-46
FUEL LEVEL SENSOR SIGNAL CIRCUIT ..	MWI-54
FUEL LEVEL SENSOR UNIT	FL-20
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND	
FUEL PUMP ASSEMBLY	FL-5
FUEL PRESSURE	EC-168
FUEL PUMP	EC-553
FUEL SYSTEM	FL-4
FUEL TANK	FL-10
FUSE BLOCK - JUNCTION BOX (J/B)	PG-89
FUSE INSPECTION	PG-96
FUSE, FUSIBLE LINK AND RELAY BOX	PG-90
FUSIBLE LINK INSPECTION	PG-100

G

GENERAL MAINTENANCE	MA-6
GENERATOR	CHG-28
GLASS LID	RF-49
GLOVE BOX ASSEMBLY	IP-24
GLOVE BOX LAMP	INL-53
GPS ANTENNA	AV-198
GROUND	PG-58

H

HANDLING PRECAUTION	AV-221, BRC-211, CCS-22, DAS-96, DAS-200
HANDLING PRECAUTIONS FOR PLASTICS	BRM-4
HANDS-FREE PHONE SYSTEM	AV-26
HARNESS	PG-70
HAZARD FUNCTION	DLK-119
HAZARD SWITCH	EXL-93, EXL-116, EXL-211, EXL-234
HEADLAMP	EXL-30, EXL-150
HEADLAMP (HI) CIRCUIT	EXL-70, EXL-189
HEADLAMP (LO) CIRCUIT	EXL-72, EXL-191
HEADLAMP AIMING ADJUSTMENT	EXL-103, EXL-221
HEADLINING	INT-47
HEATED SEAT	SE-29
HEATED STEERING WHEEL	ST-10
HEATED STEERING WHEEL SWITCH	ST-46
HEATED STEERING WHEEL SWITCH INDICATOR	
LAMP	ST-25
HEATED STEERING WHEEL SYSTEM	ST-21
HEATER & COOLING UNIT ASSEMBLY	HA-44
HEATER AND AIR CONDITIONING SYSTEM	
CONTROL SYMPTOMS	HAC-93
HIGH-MOUNTED STOP LAMP	EXL-119, EXL-237
HOLE COVER	ST-37
HOMELINK UNIVERSAL TRANSCEIVER ..	DLK-66
HOOD	DLK-158
HOOD LOCK	DLK-176
HOOD SWITCH	DLK-120, SEC-139
HORN	HRN-4, HRN-7
HORN FUNCTION	SEC-128
HOW TO ERASE PERMANENT DTC	EC-176, TM-86
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS	GI-9
HOW TO SET SRT CODE	EC-170
HOW TO USE THIS MANUAL	GI-3
HOW TO USE THIS SECTION	LAN-22
HVAC BRANCH LINE CIRCUIT	LAN-77, LAN-106, LAN-124, LAN-144, LAN-169, LAN-202, LAN-237
HYDRAULIC LINE	ST-44
HYDRAULIC PUMP ELECTRIC POWER	
STEERING SYSTEM	STC-14

HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP	STC-31
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP DOES NOT TURN OFF	STC-33
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP DOES NOT TURN ON	STC-32

I

ICC BRAKE SWITCH	EC-539
ICC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT) LAN-80, LAN-170, LAN-204, LAN-240	
ICC BRANCH LINE CIRCUIT (ITS COMMUNICATION CIRCUIT) LAN-81, LAN-171, LAN-205, LAN-241	
ICC SENSOR	CCS-42, CCS-136, DAS-119, DAS-172
ICC SENSOR ALIGNMENT	BRC-256, CCS-59
ICC SENSOR INITIAL VERTICAL ALIGNMENT	BRC-254, CCS-57
ICC STEERING SWITCH	CCS-138, DAS-174
ICC STEERING SWITCH (OTHER THAN MAIN SWITCH) DOES NOT FUNCTION	CCS-124
ICC SYSTEM CANNOT BE SET (MAIN SWITCH TURNS ON/OFF)	CCS-122
ICC SYSTEM DOES NOT CANCEL WHEN CVT SELECTOR LEVER SETS ON	
ID REGISTRATION CANNOT BE COMPLETED	WT-61
ID REGISTRATION PROCEDURE	WT-25
IDENTIFICATION INFORMATION	GI-32
IDLE AIR VOLUME LEARNING	EC-160
IDLE SPEED	EC-581
IGNITION COIL	EM-45
IGNITION POSITION WARNING FUNCTION DOES NOT OPERATE	DLK-144
IGNITION SIGNAL	EC-555
IGNITION TIMING	EC-582
ILLUMINATION	INL-23
IMMOBILIZER CONTROL MODULE	SEC-138
IN-CABIN MICROFILTER	VTL-7
IN-VEHICLE SENSOR	HAC-104
INFORMATION DISPLAY (ASCD)	EC-560
INPUT SPEED SENSOR	TM-201
INSIDE KEY ANTENNA	DLK-198
INSIDE MIRROR	MIR-8, MIR-20
INSTRUMENT LOWER PANEL LH	IP-23
INSTRUMENT PANEL ASSEMBLY	IP-14
INSTRUMENT PANEL TWEETER	AV-187
INSUFFICIENT COOLING	HAC-95
INSUFFICIENT HEATING	HAC-97
INTAKE MANIFOLD	EM-30
INTAKE MANIFOLD COLLECTOR	EM-27
INTAKE SENSOR	HAC-106

INTEGRATED HOMELINK TRANSMITTER	DLK-122
INTEGRATED HOMELINK TRANSMITTER DOES NOT OPERATE	DLK-151
INTELLIGENT CRUISE CONTROL	CCS-49
INTELLIGENT CRUISE CONTROL SYSTEM SYMPTOMS	CCS-119
INTELLIGENT KEY	DLK-117
INTELLIGENT KEY BATTERY	DLK-203
INTELLIGENT KEY LOW BATTERY WARNING DOES NOT OPERATE	DLK-149
INTELLIGENT KEY SYSTEM	DLK-51
INTELLIGENT KEY SYSTEM SYMPTOMS	DLK-136
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION	SEC-28
INTELLIGENT KEY WARNING BUZZER	DLK-115, DLK-201
INTERIOR LIGHTING SYSTEM SYMPTOMS	INL-49
INTERIOR ROOM LAMP	INL-14
INTERIOR ROOM LAMP CONTROL CIRCUIT	INL-41
INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT	INL-39
INTERMITTENT INCIDENT	SRC-41
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) ..	PCS-13, PCS-23, PCS-36, PG-91
IPDM-E BRANCH LINE CIRCUIT	LAN-68, LAN-99, LAN-117, LAN-136, LAN-160, LAN-193, LAN-228
ITS COMMUNICATION CIRCUIT	LAN-90, LAN-179, LAN-214, LAN-250

K

KEY CYLINDER	DLK-195
KEY ID WARNING DOES NOT OPERATE	DLK-148
KEY WARNING LAMP	DLK-118
KEYLESS POWER WINDOW DOWN DOES NOT OPERATE	PWC-63

L

L TERMINAL CIRCUIT (OPEN)	CHG-23
L TERMINAL CIRCUIT (SHORT)	CHG-25
LASER BRANCH LINE CIRCUIT	LAN-85, LAN-174, LAN-209, LAN-245
LATCH SYSTEM FOR CHILDREN	SB-14
LED HEADLAMP	EXL-76
LED HEADLAMP OPERATION INSPECTION	EXL-69
LICENSE LAMP FINISHER	EXT-40
LICENSE PLATE LAMP	EXL-121, EXL-239
LICENSE PLATE LAMP CIRCUIT	EXL-83, EXL-201
LIFTING MOTOR (FRONT)	ADP-115
LIFTING MOTOR (REAR)	ADP-117
LIFTING POINT	GI-28
LIFTING SENSOR (FRONT)	ADP-98

LIFTING SENSOR (REAR).....ADP-101
 LIFTING SWITCH (FRONT)ADP-76
 LIFTING SWITCH (REAR).....ADP-78
 LIGHTING & TURN SIGNAL SWITCH EXL-115,
 EXL-233
 LOW TIRE PRESSURE WARNING LAMP .. WT-53
 LOW TIRE PRESSURE WARNING LAMP BLINKS
 WT-58
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN ON WT-56
 LOW TIRE PRESSURE WARNING LAMP STAYS
 ON..... WT-57
 LOWER JOINT..... ST-35
 LUBRICATION SYSTEM LU-6
 LUMBAR SUPPORT SYSTEM SE-33

M

M&A BRANCH LINE CIRCUIT...LAN-71, LAN-102,
 LAN-120, LAN-139, LAN-163, LAN-196,
 LAN-231
 MAGNET CLUTCH HAC-90
 MAIN LINE BETWEEN ADP AND ICC CIRCUIT....
 LAN-61, LAN-186, LAN-221
 MAIN LINE BETWEEN AV AND HVAC CIRCUIT ...
 LAN-58, LAN-95, LAN-113, LAN-132, LAN-152,
 LAN-184, LAN-219
 MAIN LINE BETWEEN DLC AND M&A CIRCUIT ..
 LAN-56, LAN-93, LAN-111, LAN-130, LAN-150,
 LAN-182, LAN-217
 MAIN LINE BETWEEN HVAC AND ADP CIRCUIT
 LAN-60, LAN-185, LAN-220
 MAIN LINE BETWEEN HVAC AND ICC CIRCUIT .
 LAN-59, LAN-153
 MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT
 LAN-55, LAN-92, LAN-110, LAN-129, LAN-149,
 LAN-181, LAN-216
 MAIN LINE BETWEEN LASER AND RDR-L
 CIRCUITLAN-63, LAN-155, LAN-188, LAN-223
 MAIN LINE BETWEEN M&A AND AV CIRCUIT.....
 LAN-57, LAN-94, LAN-112, LAN-131, LAN-151,
 LAN-183, LAN-218
 MAIN LINE BETWEEN SONAR AND LASER
 CIRCUITLAN-62, LAN-154, LAN-187, LAN-222
 MAIN POWER SUPPLY AND GROUND CIRCUIT.
 TM-174
 MAIN POWER WINDOW AND DOOR LOCK/
 UNLOCK SWITCH..... PWC-15, PWC-67
 MAIN SWITCH DOES NOT TURN ON, MAIN
 SWITCH DOES NOT TURN OFF CCS-120
 MALFUNCTION AREA CHART LAN-53
 MALFUNCTION INDICATOR LAMP EC-561
 METER BUZZER CIRCUIT..... WCS-27
 METER CONTROL SWITCH..... INL-58, MWI-69
 METER CONTROL SWITCH SIGNAL CIRCUIT
 MWI-52
 METER SYSTEM.....MWI-31

MICROPHONE..... AV-199
 MICROPHONE SIGNAL CIRCUIT AV-160
 MIRROR SENSOR..... ADP-107
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR
 EC-162
 MOOD LAMP INL-57
 MOONROOF DOES NOT OPERATE PROPERLY .
 RF-38
 MOONROOF MOTOR ASSEMBLY .. RF-18, RF-52
 MOONROOF SWITCH..... RF-33, RF-74
 MOONROOF SYSTEM RF-20
 MOONROOF UNIT ASSEMBLY RF-57
 MUDGUARD EXT-30
 MULTI AV (WITH BOSE AUDIO SYSTEM)... AV-69
 MULTI AV (WITHOUT BOSE AUDIO SYSTEM).....
 AV-57
 MULTI AV SYSTEM SYMPTOMS AV-174
 MULTIFUNCTION SWITCH AV-204

N

NATS ANTENNA AMP..... SEC-135
 NAVIGATION SYSTEM AV-29
 NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
 SEC-36
 NOISE HA-22
 NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTINGBR-6, FSU-5, RSU-4,
 ST-28, WT-62
 NOISE, VIBRATION, AND HARSHNESS(NVH)
 TROUBLESHOOTING RAX-4
 NORMAL OPERATING CONDITION..... ADP-129,
 AV-177, AV-272, AV-305, BCS-81, BRC-163,
 BRC-361, CCS-133, DAS-170, DAS-289,
 EC-580, EXL-98, EXL-216, WW-42

O

OCCUPANT CLASSIFICATION SYSTEMSR-34
 OFF POSITION WARNING DOES NOT OPERATE
 DLK-145
 OIL..... HA-27
 OIL COOLER LU-15
 OIL FILTER LU-10
 OIL PAN AND OIL STRAINER..... EM-39
 OIL PUMP LU-12
 OIL SEAL EM-87
 ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-62,
 TM-39
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR) EC-562
 OPERATION ..BRC-209, CCS-18, DAS-95, EC-60,
 HAC-23, MWI-17
 OPERATION INSPECTION HAC-46
 OPTICAL SENSOR.... EXL-90, EXL-114, EXL-208,
 EXL-232
 OUTPUT SPEED SENSOR TM-203

OUTSIDE KEY ANTENNA	DLK-199
OVERHEATING CAUSE ANALYSIS	CO-6

P

P0011, P0021 IVT CONTROL	EC-197
P0014, P0024 EVT CONTROL	EC-201
P0030, P0031, P0032, P0036, P0051, P0052 A/F SENSOR 1 HEATER	EC-207
P0037, P0038, P0057, P0058 HO2S2 HEATER.....	EC-210
P0075, P0081 IVT CONTROL SOLENOID VALVE .	EC-213
P0078, P0084 EVT CONTROL SOLENOID VALVE	EC-218
P0101 MAF SENSOR	EC-221
P0102, P0103 MAF SENSOR	EC-226
P0111 IAT SENSOR	EC-232
P0112, P0113 IAT SENSOR	EC-234
P0116 ECT SENSOR	EC-236
P0117, P0118 ECT SENSOR	EC-238
P0122, P0123 TP SENSOR	EC-241
P0125 ECT SENSOR	EC-244
P0127 IAT SENSOR	EC-247
P0128 THERMOSTAT FUNCTION	EC-249
P0130, P0150 A/F SENSOR 1	EC-252
P0131, P0151 A/F SENSOR 1	EC-256
P0132, P0152 A/F SENSOR 1	EC-259
P0137, P0157 HO2S2	EC-262
P0138, P0158 HO2S2	EC-268
P0139, P0159 HO2S2	EC-276
P014C, P014D, P014E, P014F, P015A, P015B, P015C, P015D A/F SENSOR 1	EC-282
P0171, P0174 FUEL INJECTION SYSTEM FUNCTION	EC-289
P0172, P0175 FUEL INJECTION SYSTEM FUNCTION	EC-294
P0181 FTT SENSOR	EC-299
P0182, P0183 FTT SENSOR	EC-303
P0196 EOT SENSOR	EC-306
P0197, P0198 EOT SENSOR	EC-310
P0222, P0223 TP SENSOR	EC-312
P0300, P0301, P0302, P0303, P0304, P0305, P0306 MISFIRE	EC-315
P0327, P0328, P0332, P0333 KS	EC-323
P0335 CKP SENSOR (POS)	EC-326
P0340, P0345 CMP SENSOR (PHASE)	EC-330
P0420, P0430 THREE WAY CATALYST FUNCTION	EC-335
P0441 EVAP CONTROL SYSTEM	EC-341
P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-347
P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-352
P0447 EVAP CANISTER VENT CONTROL VALVE	EC-355

P0448 EVAP CANISTER VENT CONTROL VALVE	EC-359
P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-363
P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-367
P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-370
P0456 EVAP CONTROL SYSTEM	EC-374
P0460 FUEL LEVEL SENSOR	EC-380
P0461 FUEL LEVEL SENSOR	EC-382
P0462, P0463 FUEL LEVEL SENSOR	EC-384
P0500 VSS	EC-386
P0506 ISC SYSTEM	EC-389
P0507 ISC SYSTEM	EC-391
P050A, P050E COLD START CONTROL ..	EC-393
P0520 EOP SENSOR	EC-396
P0524 ENGINE OIL PRESSURE	EC-400
P052A, P052B, P052C, P052D INTAKE VALVE TIMING CONTROL	EC-404
P0603, P062F ECM	EC-411
P0604 ECM	EC-413
P0605 ECM	EC-415
P0606 ECM	EC-417
P0607 ECM	EC-419
P060A ECM	EC-420
P060B ECM	EC-422
P062F EEPROM	TM-96
P0643 SENSOR POWER SUPPLY	EC-424
P0705 TRANSMISSION RANGE SENSOR	ATM-98
P0706 TRANSMISSION RANGE SENSOR A	TM-103
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-106
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-111
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-113
P0715 INPUT SPEED SENSOR A	TM-115
P0717 INPUT SPEED SENSOR A	TM-118
P0740 TORQUE CONVERTER	TM-121
P0743 TORQUE CONVERTER	TM-123
P0744 TORQUE CONVERTER	TM-125
P0746 PRESSURE CONTROL SOLENOID A	TM-127
P0776 PRESSURE CONTROL SOLENOID B	TM-129
P0778 PRESSURE CONTROL SOLENOID B	TM-131
P0779 PRESSURE CONTROL SOLENOID B	TM-133
P0826 UP AND DOWN SHIFT SW	TM-135
P0841 TRANSMISSION FLUID PRESSURE SEN/ SW A	TM-141
P0847 TRANSMISSION FLUID PRESSURE SEN/ SW B	TM-143

P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B.....	TM-145	P2118 THROTTLE CONTROL MOTOR	EC-507
P084C TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-147	P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-509
P084D TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-149	P2122, P2123 APP SENSOR	EC-511
P0850 PNP SWITCH	EC-427	P2127, P2128 APP SENSOR	EC-514
P0863 TCM COMMUNICATION	TM-151	P2135 TP SENSOR	EC-518
P0890 TCM	TM-152	P2138 APP SENSOR.....	EC-521
P0962 PRESSURE CONTROL SOLENOID A	TM-154	P219A, P219B AIR FUEL RATIO	EC-525
P0963 PRESSURE CONTROL SOLENOID A	TM-156	P2610 ECM INTERNAL TIMER	EC-531
P0965 PRESSURE CONTROL SOLENOID B	TM-158	P2765 INPUT SPEED SENSOR B	TM-164
P0966 PRESSURE CONTROL SOLENOID B	TM-160	P2813 SELECT SOLENOID	TM-168
P0967 PRESSURE CONTROL SOLENOID B	TM-162	P2814 SELECT SOLENOID	TM-170
P1078, P1084 EVT CONTROL POSITION SENSOR	EC-430	P2815 SELECT SOLENOID	TM-172
P1148, P1168 CLOSED LOOP CONTROL	EC-434	PADDLE SHIFTER.....	TM-189
P1212 TCS COMMUNICATION LINE.....	EC-435	PANIC ALARM FUNCTION DOES NOT OPERATE	SEC-134
P1217 ENGINE OVER TEMPERATURE.....	EC-437	PARKING BRAKE CONTROL.....	PB-7
P1225 TP SENSOR	EC-440	PARKING BRAKE FRONT CABLE	PB-9
P1226 TP SENSOR	EC-442	PARKING BRAKE REAR CABLE	PB-10
P1550 BATTERY CURRENT SENSOR.....	EC-444	PARKING BRAKE SHOE	PB-4, PB-12
P1551, P1552 BATTERY CURRENT SENSOR	EC-447	PARKING BRAKE SWITCH ...	BRC-147, BRC-340, PB-11
P1553 BATTERY CURRENT SENSOR.....	EC-450	PARKING BRAKE SWITCH SIGNAL CIRCUIT	WCS-30
P1554 BATTERY CURRENT SENSOR.....	EC-453	PARKING BRAKE SYSTEM	PB-5
P1556, P1557 BATTERY TEMPERATURE SENSOR.....	EC-456	PARKING LAMP CIRCUIT	EXL-77, EXL-195
P1564 ASCD STEERING SWITCH	EC-459	PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM	EXL-53, EXL-173
P1564 ICC STEERING SWITCH	EC-462	PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON	EXL-101, EXL-219
P1568 ICC FUNCTION	EC-465	PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.	DEF-41
P1572 ASCD BRAKE SWITCH	EC-467	PERFORMANCE TEST	HA-32
P1572 ICC BRAKE SWITCH	EC-475	PERIODIC MAINTENANCE	MA-10
P1574 ASCD VEHICLE SPEED SENSOR	EC-482	PERSONAL LAMP	INL-55
P1574 ICC VEHICLE SPEED SENSOR.....	EC-484	PLUG.....	TM-211
P1610 LOCK MODE	SEC-58	POSITIVE CRANKCASE VENTILATION	EC-585
P1611 ID DISCORD, IMMU-ECM	SEC-60	POWER DISTRIBUTION SYSTEM.....	PCS-49
P1612 CHAIN OF ECM-IMMU	SEC-62	POWER DOOR LOCK SYSTEM	DLK-42
P1615 DIFFERENCE OF KEY	SEC-64	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION	
P1700 CVT CONTROL SYSTEM	EC-486	INSPECTION	CHG-20
P1800 VIAS CONTROL SOLENOID VALVE 1	EC-487	POWER SEAT FOR DRIVER SIDE	SE-22
P1801 VIAS CONTROL SOLENOID VALVE 2	EC-490	POWER SEAT FOR PASSENGER SIDE.....	SE-26
P1805 BRAKE SWITCH	EC-493	POWER SEAT SWITCH	ADP-133
P2096, P2097, P2098, P2099 A/F SENSOR 1.....	EC-497	POWER SEAT SWITCH GROUND CIRCUIT	ADP-92
P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-502	POWER SOCKET	PWO-5, PWO-8
P2101 ELECTRIC THROTTLE CONTROL FUNCTION	EC-504	POWER STEERING CONTROL MODULE	STC-11, STC-39
		POWER STEERING FLUID	ST-14, ST-29
		POWER STEERING OIL PUMP	ST-18, ST-43, ST-54
		POWER SUPPLY ROUTING CIRCUIT	PG-15

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RHPWC-17, PWC-68
 POWER WINDOW LOCK SWITCH DOES NOT FUNCTIONPWC-64
 POWER WINDOW MOTORPWC-36
 POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY ... PWC-61
 POWER WINDOW SERIAL LINKPWC-50
 POWER WINDOW SWITCH DOES NOT ILLUMINATEPWC-65
 POWER WINDOW SYSTEMPWC-19
 POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH PWC-54
 PRE-INSPECTION FOR DIAGNOSTIC PWC-66
 PRECAUTIONSN-3
 PRECAUTIONS..... ACC-2, ADP-4, AV-7, AV-205, AV-277, BCS-3, BR-3, BRC-7, BRC-173, BRM-3, CCS-4, CCS-140, CHG-3, CO-2, DAS-7, DAS-81, DAS-179, DEF-3, DLK-6, DMS-2, EC-9, EM-3, EX-2, EXL-6, EXL-130, EXT-3, FAX-2, FL-2, FSU-2, GI-23, GW-2, HA-3, HAC-4, HRN-2, INL-3, INT-3, IP-2, LAN-7, LAN-23, LU-2, MA-3, MIR-2, MWI-3, PB-2, PCS-4, PCS-37, PG-3, PWC-4, PWO-2, RAX-2, RF-3, RSU-2, SB-2, SE-3, SEC-4, SR-2, SRC-4, ST-3, STC-3, STR-2, TM-6, VTL-3, WCS-3, WT-3, WW-3
 PRIMARY SPEED SENSOR TM-202
 PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM PCS-58
 PUSH BUTTON IGNITION SWITCH..... PCS-91, SEC-137
 PUSH-BUTTON IGNITION SWITCH..... PCS-83
 PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE PCS-88
 PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT INL-47
 PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE PCS-89

R

RADIATOR CO-14
 RADIATOR CORE SUPPORTDLK-163
 RAIN SENSOR WW-37, WW-57
 RDR-L BRANCH LINE CIRCUIT LAN-86, LAN-175, LAN-210, LAN-246
 RDR-R BRANCH LINE CIRCUIT LAN-87, LAN-176, LAN-211, LAN-247
 REAR BUMPEREXT-20
 REAR CAMERAAV-276
 REAR COMBINATION LAMP ... EXL-117, EXL-126, EXL-235, EXL-244
 REAR DISC BRAKE . BR-11, BR-18, BR-42, BR-50
 REAR DOORDLK-171
 REAR DOOR FINISHER INT-29

REAR DOOR GLASS GW-20
 REAR DOOR LOCK DLK-183
 REAR DOOR SPEAKER AV-164, AV-191
 REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATEPWC-57
 REAR LOWER LINK & COIL SPRINGRSU-9
 REAR PARCEL SHELF FINISHERINT-39
 REAR PILLAR MOLDING EXT-35
 REAR POWER WINDOW MOTOR GW-25
 REAR POWER WINDOW SWITCHPWC-69
 REAR REGULATOR GW-22
 REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATEPWC-58
 REAR SEAT SE-88, SE-112
 REAR SEAT BELTSB-12
 REAR SHOCK ABSORBER RSU-11, RSU-19
 REAR SPEAKER AV-166, AV-192
 REAR SPOILER EXT-42
 REAR STABILIZERRSU-14
 REAR SUNROOF GLASSRF-67
 REAR SUNSHADEINT-12, INT-41
 REAR SUNSHADE DOES NOT OPERATE .INT-19
 REAR SUNSHADE SWITCHINT-17, INT-42
 REAR SUSPENSION ARMRSU-15
 REAR SUSPENSION ASSEMBLY RSU-5
 REAR SUSPENSION MEMBERRSU-16
 REAR TIMING CHAIN CASE EM-74
 REAR UNDER COVER EXT-27
 REAR VIEW CAMERAAV-307
 REAR VIEW MONITOR SYSTEM AV-282, AV-296, AV-304
 REAR WHEEL ALIGNMENT INSPECTION .RSU-6
 REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGERS DO NOT OPERATE ... DEF-36
 REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE DEF-37
 REAR WINDOW DEFOGGER POWER SUPPLY AND GROUND CIRCUIT DEF-25
 REAR WINDOW DEFOGGER RELAY DEF-23
 REAR WINDOW DEFOGGER SWITCH ... DEF-19
 REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFOGGER OPERATES DEF-42
 REAR WINDOW DEFOGGER SYSTEM DEF-11
 REAR WINDOW GLASS GW-26
 RECLINING MOTOR ADP-113
 RECLINING SENSORADP-96
 RECLINING SWITCHADP-74
 RECOMMENDED CHEMICAL PRODUCTS AND SEALANTSGI-22
 RECOMMENDED FLUIDS AND LUBRICANTS MA-16
 REFRIGERANT HA-23

REFRIGERANT PRESSURE SENSOR [EC-567](#),
[HAC-107](#)
 REFRIGERATION SYSTEM [HA-13](#), [HA-30](#)
 REFRIGERATION SYSTEM SYMPTOMS.... [HA-18](#)
 REMOTE KEYLESS ENTRY RECEIVER .[DLK-111](#),
[DLK-202](#)
 REPAIRING HIGH STRENGTH STEEL..... [BRM-7](#)
 REPAIRING MATERIAL [BRM-11](#)
 REPLACEMENT OPERATIONS [BRM-26](#)
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLY [RF-42](#)
 RIGHT/LEFT SWITCHING SIGNAL CIRCUIT
[DAS-163](#)
 ROAD WHEEL TIRE ASSEMBLY [WT-64](#)
 ROCKER COVER [EM-51](#)
 ROOF FINISHER [EXT-38](#), [RF-63](#)
 ROOF LINK ASSEMBLY [RF-56](#)
 ROOF SIDE MOLDING [EXT-36](#)

S

S CONNECTOR CIRCUIT [STR-17](#)
 S TERMINAL CIRCUIT [CHG-26](#)
 SATELLITE RADIO ANTENNA [AV-196](#)
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
[WCS-28](#)
 SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG
 INDCTR IS ON OR OFF [SRC-146](#)
 SEAT BELT PRE-TENSIONER [SR-32](#)
 SEAT BELT WARNING SYSTEM [SRC-144](#)
 SEAT CUSHION THERMAL ELECTRIC DEVICE ..
[SE-54](#)
 SEAT CUSHION THERMAL ELECTRIC DEVICE
 SENSOR [SE-56](#)
 SEAT MEMORY INDICATOR [ADP-126](#)
 SEAT MEMORY SWITCH [ADP-84](#), [ADP-132](#)
 SEATBACK THERMAL ELECTRIC DEVICE [SE-50](#)
 SEATBACK THERMAL ELECTRIC DEVICE
 SENSOR [SE-52](#)
 SECURITY INDICATOR LAMP [SEC-126](#)
 SECURITY INDICATOR LAMP DOES NOT TURN
 ON OR BLINK [SEC-130](#)
 SENSOR POWER SUPPLY2 CIRCUIT [EC-569](#)
 SENSOR ROTOR [BRC-167](#), [BRC-365](#)
 SERVICE AFTER REPLACING OR REMOVING
 ENGINE PARTS [EC-155](#)
 SERVICE DATA AND SPECIFICATIONS (SDS)
[ACC-5](#), [BR-53](#), [CHG-30](#), [CO-28](#), [EC-587](#),
[EM-139](#), [EXL-129](#), [EXL-247](#), [FAX-37](#), [FL-22](#),
[FSU-23](#), [HA-47](#), [INL-60](#), [LU-17](#), [PB-14](#), [RAX-8](#),
[RSU-20](#), [ST-55](#), [TM-218](#), [VTL-17](#), [WT-73](#),
[WW-60](#)
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT [GI-37](#)
 SHIFT LOCK SYSTEM [TM-177](#)
 SHIFT POSITION INDICATOR CIRCUIT [TM-176](#)
 SHIPPING MODE CANCEL OPERATION.. [BCS-66](#)

SIDE AIR BAG (SATELLITE) SENSOR [SR-27](#)
 SIDE AIR BAG MODULE [SR-24](#)
 SIDE CAMERA [AV-275](#)
 SIDE CURTAIN AIR BAG MODULE [SR-22](#)
 SIDE RADAR [DAS-177](#)
 SIDE RADAR LH [DAS-126](#)
 SIDE RADAR RH [DAS-128](#)
 SLIDING MOTOR [ADP-111](#)
 SLIDING SENSOR [ADP-94](#)
 SLIDING SWITCH [ADP-72](#)
 SONAR BRANCH LINE CIRCUIT [LAN-84](#), [LAN-126](#),
[LAN-146](#), [LAN-173](#), [LAN-208](#), [LAN-244](#)
 SONAR CONTROL UNIT [SN-13](#), [SN-41](#)
 SONAR SENSOR [SN-40](#)
 SONAR SYSTEM [SN-17](#), [SN-39](#)
 SPARK PLUG [EM-14](#)
 SPIRAL CABLE [SR-16](#)
 SQUEAK AND RATTLE TROUBLE DIAGNOSES..
[DLK-152](#), [EXT-10](#), [GW-5](#), [INT-20](#), [IP-8](#), [MIR-14](#),
[RF-43](#), [SE-65](#)
 SRS AIR BAG SYSTEM [SRC-23](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFF [SRC-143](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ON [SRC-142](#)
 STALL TEST [TM-84](#)
 STARTER MOTOR [STR-19](#), [STR-20](#)
 STARTING SYSTEM [STR-5](#), [STR-6](#), [STR-18](#)
 STEERING ANGLE SENSOR. [BRC-172](#), [BRC-370](#)
 STEERING COLUMN [ST-17](#), [ST-27](#), [ST-32](#)
 STEERING COLUMN COVERS [IP-18](#)
 STEERING GEAR AND LINKAGE... [ST-19](#), [ST-39](#),
[ST-48](#), [ST-51](#)
 STEERING KNUCKLE [FSU-17](#)
 STEERING SWITCH [AV-170](#), [MWI-57](#)
 STEERING SWITCHES [AV-184](#)
 STEERING WHEEL [ST-15](#), [ST-30](#)
 STEERING WHEEL TURNING FORCE IS HEAVY
 OR LIGHT [STC-34](#)
 STEP LAMP CIRCUIT [INL-45](#)
 STOP LAMP [EXL-58](#), [EXL-178](#)
 STRG BRANCH LINE CIRCUIT. [LAN-72](#), [LAN-103](#),
[LAN-121](#), [LAN-140](#), [LAN-164](#), [LAN-197](#),
[LAN-232](#)
 STRUCTURE AND OPERATION..... [EC-31](#), [TM-20](#)
 SUBWOOFER [AV-193](#)
 SUNLOAD SENSOR [HAC-105](#)
 SUNSHADE [RF-72](#)
 SUNSHADE MOTOR ASSEMBLY [RF-19](#), [RF-54](#)
 SUNSHADE SYSTEM DOES NOT OPERATE
 PROPERLY [RF-39](#)
 SYSTEM (INTEGRATED HOMELINK
 TRANSMITTER) [DLK-33](#)
 SYSTEM (INTELLIGENT KEY SYSTEM)... [DLK-21](#)
 SYSTEM INITIALIZATION [PWC-30](#)
 SYSTEM SETTING [HAC-51](#)

SYSTEM SETTINGS CANNOT BE TURNED ON/
OFF ON THE INTEGRAL SWITCH...[BRC-351](#),
[DAS-165](#)

T

TAIL LAMP CIRCUIT[EXL-81](#), [EXL-199](#)
TAKE AWAY WARNING DOES NOT OPERATE
[DLK-146](#)
TCM..... [TM-47](#), [TM-191](#)
TCM BRANCH LINE CIRCUIT .. [LAN-69](#), [LAN-100](#),
[LAN-118](#), [LAN-137](#), [LAN-161](#), [LAN-194](#),
[LAN-229](#)
TCU [AV-53](#), [AV-201](#)
TCU BRANCH LINE CIRCUIT ... [LAN-78](#), [LAN-238](#)
TEL ANTENNA [AV-202](#)
TELEMATICS SWITCH [AV-203](#)
TELEMATICS SYSTEM..... [AV-32](#)
TELESCOPIC MOTOR..... [ADP-121](#)
TELESCOPIC SENSOR..... [ADP-105](#)
TELESCOPIC SWITCH..... [ADP-82](#)
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-67](#)
THE BRAKING DISTANCE IS LONG.....[BRC-159](#),
[BRC-357](#)
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY[MWI-64](#)
THE FUEL GAUGE INDICATOR DOES NOT
OPERATE..... [MWI-59](#)
THE LIGHT REMINDER WARNING DOES NOT
SOUND [WCS-32](#)
THE LOW WASHER FLUID WARNING
CONTINUES DISPLAYING, or DOES NOT
DISPLAY..... [MWI-63](#)
THE METER CONTROL SWITCH IS INOPERATIVE
[MWI-60](#)
THE OIL PRESSURE WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY[MWI-61](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES DISPLAYING, OR DOES NOT
DISPLAY..... [MWI-62](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND [WCS-34](#)
THE SEAT BELT WARNING CONTINUES
SOUNDING, OR DOES NOT SOUND [WCS-33](#)
THE STEERING SWITCHES ARE INOPERATIVE.
[MWI-66](#)
THE SYSTEM DOES NOT DETECT THE VEHICLE
AHEAD AT ALL [CCS-131](#), [DAS-169](#)
THE TRUNK OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY[MWI-65](#)
THERMOSTAT AND THERMOSTAT HOUSING.....
[CO-23](#)
THREE WAY CATALYST [EM-36](#)
THROTTLE VALVE CLOSED POSITION
LEARNING[EC-159](#)

TIGHTENING TORQUE OF STANDARD BOLTS ...
[GI-19](#)
TILT &TELESCOPIC SWITCH GROUND CIRCUIT
[ADP-93](#)

TILT MOTOR [ADP-119](#)
TILT SENSOR [ADP-103](#)
TILT SWITCH [ADP-80](#)
TIMING CHAIN [EM-66](#)
TIRE PRESSURE MONITORING SYSTEM. [WT-18](#)
TIRE PRESSURE RECEIVER [WT-72](#)
TIRE PRESSURE SENSOR..... [WT-68](#)
TOP TETHER STRAP CHILD RESTRAINT ..[SB-15](#)
TORQUE CONVERTER AND CONVERTER
HOUSING OIL SEAL [TM-215](#)
TOW TRUCK TOWING [GI-30](#)
TPMS [WT-54](#)
TRANSAXLE ASSEMBLY [TM-212](#)
TRANSVERSE LINK [FSU-13](#)
TROUBLE DIAGNOSIS [LAN-11](#)
TROUBLE DIAGNOSIS - SPECIFICATION VALUE
[EC-182](#)
TRUNK LAMP SWITCH [DLK-133](#)
TRUNK LID [DLK-186](#)
TRUNK LID OPENER ACTUATOR [DLK-131](#)
TRUNK LID OPENER CANCEL SWITCH [DLK-126](#),
[DLK-204](#)
TRUNK LID OPENER SWITCH [DLK-124](#), [DLK-205](#)
TRUNK LID OPENER SYSTEM..... [DLK-62](#)
TRUNK OPENER REQUEST SWITCH... [DLK-128](#),
[DLK-207](#)
TRUNK ROOM LAMP [INL-43](#), [INL-56](#)
TRUNK ROOM TRIM & TRUNK LID FINISHER
[INT-51](#)
TURN SIGNAL AND HAZARD WARNING LAMP
SYSTEM.....[EXL-47](#), [EXL-167](#)
TURN SIGNAL LAMP CIRCUIT ..[EXL-87](#), [EXL-205](#)
TWEETER [AV-168](#)

U

U0073 COMMUNICATION BUS A OFF [TM-87](#)
U0100 LOST COMMUNICATION (ECM A) .. [TM-88](#)
U0101 CAN COMM CIRCUIT [EC-194](#)
U0104 ADAS CAN 1 [DAS-152](#)
U0121 VDC CAN 2 [CCS-104](#), [DAS-55](#)
U0126 STRG SEN CAN 1 [CCS-106](#)
U0140 LOST COMMUNICATION (BCM) [TM-89](#)
U0141 LOST COMMUNICATION (BCM A) .. [TM-90](#)
U0155 LOST COMMUNICATION (IPC) [TM-91](#)
U0235 ICC SENSOR CAN 1 [DAS-57](#)
U0300 CAN COMMUNICATION DATA..... [TM-92](#)
U0401 ECM CAN 1..... [CCS-107](#), [DAS-58](#)
U0402 TCM CAN 1 [DAS-60](#)
U0405 ADAS CAN 2 [DAS-154](#)
U0415 VDC CAN 1 [CCS-108](#), [DAS-62](#)
U0415 VEHICLE SPEED SIG [BCS-69](#)
U0428 STEERING ANGLE SENSOR [AV-246](#)

U0428 STRG SEN CAN 2.....CCS-110
 U0433 DIST SEN CAN CIRC 2.....DAS-64
 U1000 CAN COMM CIRCUITADP-58, AV-109,
 AV-248, BCS-67, BRC-144, BRC-338, CCS-111,
 DAS-65, DAS-156, DLK-72, EC-195, HAC-54,
 MWI-45, PCS-28, PCS-59, SEC-56, SN-27,
 SRC-42, STC-30, TM-94, WT-51
 U1000-00 CAN COMM CIRCUITDAS-264
 U1001 CAN COMM CIRCUITEC-196
 U1010 CONTROL UNIT (CAN)....ADP-59, AV-111,
 AV-250, BCS-68, CCS-112, DAS-159, DLK-73,
 HAC-55, MWI-46, PCS-30, PCS-61, SEC-57,
 SN-28, SRC-43, WT-52
 U1117 LOST COMMUNICATION (ABS)TM-95
 U111A REAR CAMERA IMAGE SIGNAL CIRCUIT
 AV-251
 U111B SIDE CAMERA RH IMAGE SIGNAL
 CIRCUITAV-254
 U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT
 AV-257
 U111D SIDE CAMERA LH IMAGE SIGNAL
 CIRCUITAV-260
 U1223 CONFIG UNFINISH.....AV-112
 U1231 BOSE AMP.AV-113
 U1232 STEERING ANGLE SENSOR.....AV-114,
 AV-263
 U1234 AV CONTROL UNITAV-115
 U1244 GPS ANTENNA CONNAV-116
 U1258 SATELLITE RADIO ANTENNAAV-117
 U1267 METER CONNAV-119
 U12B7 USB CONNAV-121
 U12BE RADIO ANTENNA CONN.....AV-122
 U1302 CAMERA POWER VOLTAV-264
 U1304 CAMERA IMAGE CALIBRATION....AV-268
 U1305 CONFIG UNFINISH.....AV-269
 U1321 CONFIGURATION.....DAS-67
 U1503 SIDE RDR L CAN 2.....DAS-68
 U1504 SIDE RDR L CAN 1.....DAS-70
 U1505 SIDE RDR R CAN 2.....DAS-72
 U1506 SIDE RDR R CAN 1.....DAS-74
 U1507 LOST COMM(SIDE RDR R).....DAS-76
 U1508 LOST COMM(SIDE RDR L)DAS-77
 U153A CVT MESSAGE COUNTER FAILURE
 CCS-115
 U153B CVT CHECK SUM FAILURECCS-116
 U1601, U1609 FRONT DOOR SPEAKER..AV-139
 U1603, U160B FRONT DOOR TWEETER. AV-142
 U1626, U162E TWEETERAV-145
 U162A CENTER SPEAKERAV-148
 U170A, U170E REAR DOOR SPEAKER ...AV-150
 U1721, U1729 REAR SUBWOOFERAV-153
 U1A01 TCUAV-124
 U1A02 TCUAV-125
 U1A05 TCUAV-126
 U1A07 TEL ANTENNAAV-128
 U1A08 TEL ANTENNAAV-129

U1A0B MICROPHONEAV-131
 U1A0C MICROPHONEAV-133
 U1A0E TELEMATICS SWITCHAV-135
 U1A0F TELEMATICS SWITCH.....AV-137
 U1A34-00 BRAKE CONTROL COMMUNICATION
 DAS-265
 U1A35-00 BRAKE CONTROL COMMUNICATION
 DAS-267
 U1A36-00 BCM/IPDM COMMUNICATIONDAS-269
 U1A39-00 COMBINATION METER
 COMMUNICATIONDAS-271
 U1A3B-00 TCM COMMUNICATIONDAS-273
 U1A42-00 STEERING ANGLE SENSOR
 COMMUNICATIONDAS-275
 U1A43-00 STEERING ANGLE SENSOR
 COMMUNICATIONDAS-277
 U1A48-00 ECM COMMUNICATIONDAS-279
 U1A4A-00 CONTROL MODULE (CAN)...DAS-281
 U1A4B-00 CONTROL MODULE (CAN)...DAS-282
 U1A4E-00 ECM COMMUNICATION.....DAS-283
 UNBALANCE STEERING WHEEL TURNING
 FORCE (TORQUE VARIATION).....STC-37
 UNBALANCE STEERING WHEEL TURNING
 FORCE AND RETURN BETWEEN RIGHT AND
 LEFTSTC-36
 UNEXPECTED BRAKE PEDAL REACTION
 BRC-158, BRC-356
 UNLOCK SENSORDLK-107
 USB CONNECTOR.....AV-172
 USB INTERFACE AND AUX IN JACK.....AV-186

V

VACUUM LINES.....BR-9, BR-34
 VALVE TIMING CONTROLEM-55
 VANITY MIRROR LAMPINL-52
 VARIABLE INDUCTION AIR SYSTEMEC-571
 VDC OFF INDICATOR LAMP . BRC-155, BRC-348
 VDC OFF SWITCH BRC-149, BRC-170, BRC-342,
 BRC-368
 VDC WARNING LAMPBRC-154, BRC-347
 VEHICLE JERKS DURINGBRC-162, BRC-360
 VEHICLE SECURITY ALARM DOES NOT
 ACTIVATESEC-133
 VEHICLE SECURITY SYSTEMSEC-42
 VEHICLE SECURITY SYSTEM CANNOT BE SET
 SEC-131
 VENTILATION SYSTEMVTL-6
 VIN REGISTRATION.....EC-163

W

WARNING BUZZER.....DAS-176
 WARNING CHIME SYSTEM.....WCS-18
 WARNING CHIME SYSTEM SYMPTOMS WCS-31
 WASHER FLUID LEVEL SWITCH.....WW-53
 WASHER FLUID LEVEL SWITCH CIRCUITMWI-56

WASHER MOTOR CIRCUIT	WW-36
WASHER NOZZLE AND TUBE.....	WW-54
WASHER SWITCH.....	WW-39
WASHER TANK.....	WW-50
WATER OUTLET AND WATER PIPING	CO-25
WATER PUMP.....	CO-18
WHEEL.....	WT-63
WHEEL ALIGNMENT.....	FSU-7
WHEEL AND TIRE.....	WT-67
WHEEL HUB.....	RAX-5, RAX-6
WHEEL SENSOR.....	BRC-164, BRC-362
WIND DEFLECTOR.....	RF-70
WINDSHIELD GLASS.....	GW-11
WIPER AND WASHER FUSE.....	WW-29
WIPER AND WASHER SWITCH.....	WW-59
WIPER AND WASHER SYSTEM.....	WW-23
WIPER AND WASHER SYSTEM SYMPTOMS	WW-40