

SECTION

PWO

POWER OUTLET

CONTENTS

COMPONENT DIAGNOSIS	2	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	6
CIGARETTE LIGHTER	2	ON-VEHICLE REPAIR	7
Wiring Diagram - CIGARETTE LIGHTER -	2	CIGARETTE LIGHTER	7
POWER SOCKET	4	Exploded View	7
Wiring Diagram - POWER SOCKET -	4	Removal and Installation	7
PRECAUTION	6	POWER SOCKET	8
PRECAUTIONS	6	Exploded View	8
		Removal and Installation	8

CIGARETTE LIGHTER


< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

CIGARETTE LIGHTER

Wiring Diagram - CIGARETTE LIGHTER -

INFOID:000000003792628

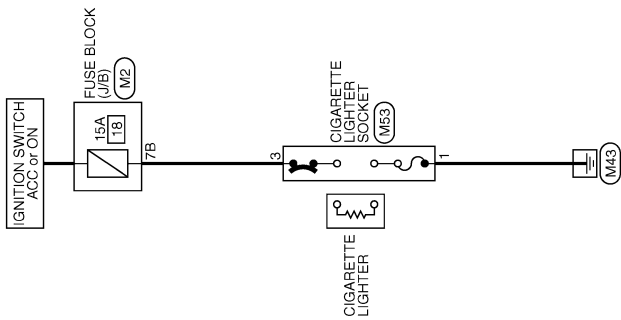

CIGARETTE LIGHTER

2008/01/23

JCMWM1667G

CIGARETTE LIGHTER

< COMPONENT DIAGNOSIS >

CIGARETTE LIGHTER

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
7B	G/W	-

Connector No.	M53
Connector Name	CIGARETTE LIGHTER SOCKET
Connector Type	NSGFW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	B/Y	-
3	G/W	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

JCMWM1668GI


POWER SOCKET

< COMPONENT DIAGNOSIS >

POWER SOCKET

Wiring Diagram - POWER SOCKET -

INFOID:0000000003792629

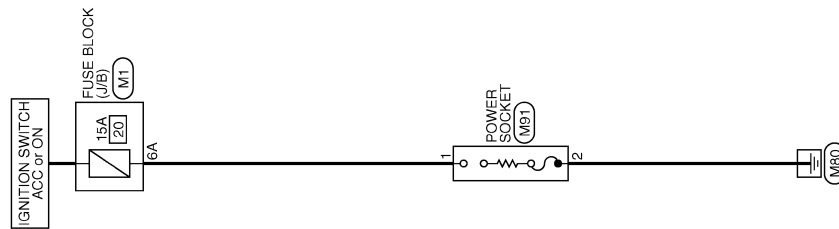

POWER SOCKET

2008/01/23

JCMWM1669G

POWER SOCKET

< COMPONENT DIAGNOSIS >

POWER SOCKET

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NSDFW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
6A	R/W	-

Connector No.	M81
Connector Name	POWER SOCKET
Connector Type	P02FB-Z



Terminal No.	Color of Wire	Signal Name [Specification]
1	R/W	-
2	B/Y	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

JCMWM1670GI

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003844336

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

CIGARETTE LIGHTER

< ON-VEHICLE REPAIR >


ON-VEHICLE REPAIR

CIGARETTE LIGHTER

Exploded View

INFOID:000000003792643

- 1 : Cigarette lighter
- 2 : Cigarette lighter socket
- 3 : Cigarette lighter ring

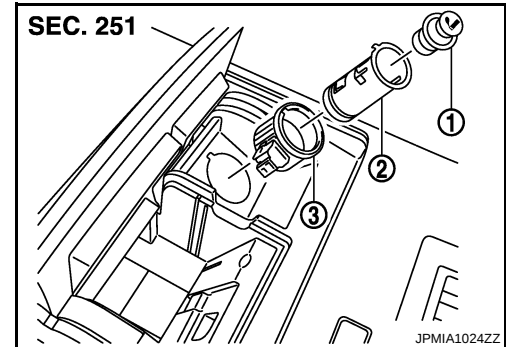


Removal and Installation

INFOID:000000003792644

REMOVAL


1. Remove console ashtray assembly. Refer to [IP-22, "Exploded View"](#).
2. Remove the screws (A) from reverse side cigarette lighter socket (1).
3. Disconnect illumination connector (B) (Models with illumination connector).

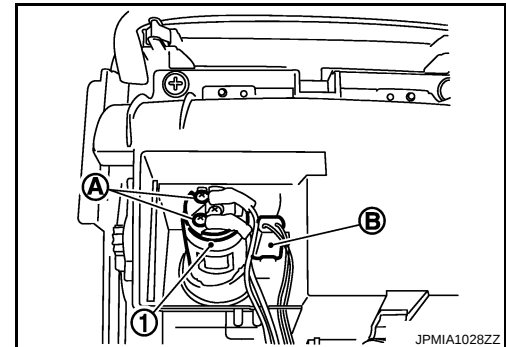

4. Pull out cigarette lighter (1).

C : Cut out

5. Pull out cigarette lighter socket (2) by pushing the cigarette lighter ring pawl (A) from the cigarette lighter socket hole (square) (B).
6. Remove cigarette lighter ring (3) from console ashtray assembly while pressing pawls.

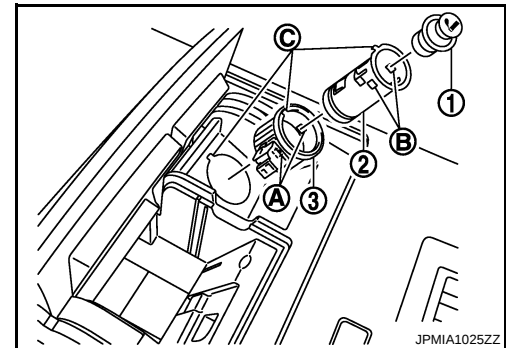

INSTALLATION

Install in the reverse order of removal.

NOTE:

Align cigarette lighter socket, cigarette lighter ring and console ashtray assembly cut out.

POWER SOCKET


< ON-VEHICLE REPAIR >

POWER SOCKET

Exploded View

INFOID:000000003792636

- 1 : Inner socket
- 2 : Ring

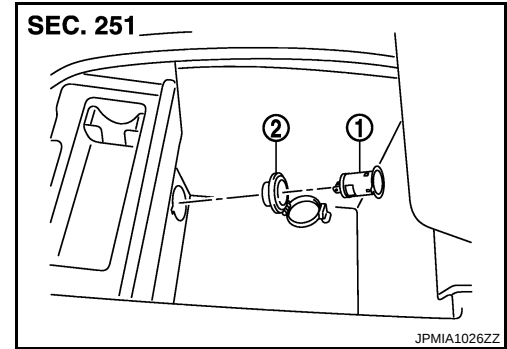

Removal and Installation


INFOID:000000003792637

REMOVAL

1. Remove center console assembly. Refer to [IP-22, "Exploded View"](#).
2. Disconnect power socket connector (A).

D : Cut out

3. Pull out inner socket (1) by pushing the ring pawl (B) from the inner socket hole (square) (C).
4. Remove ring (2) from center console assembly while pressing pawls.

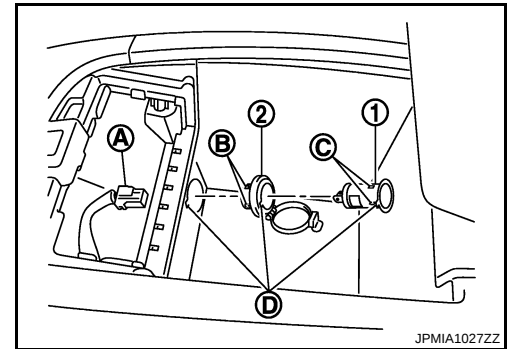

INSTALLATION

Install in the reverse order of removal.

NOTE:

Align inner socket, ring and center console assembly cut out.