

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-23
ABS actuator	BR-26
ABS circuit diagram	BR-44
ABS component parts and connector locations	BR-41
ABS control unit	BR-24
ABS hydraulic circuit	BR-23
ABS self-diagnosis	BR-32
ABS symptom chart	BR-34
ABS system components	BR-24
ABS trouble diagnoses	BR-31
ABS wiring diagram	BR-27
A/C air flow	HA-15
A/C circuit diagram (auto A/C)	HA-55
A/C component layout	HA-14
A/C compressor clutch removal and installation	HA-100
A/C compressor description	HA-10
A/C compressor mounting	HA-99
A/C compressor precaution	HA-4
A/C compressor special service tool	HA-4
A/C control linkage adjustment (auto A/C)	HA-80
A/C control operation (auto A/C)	HA-17
A/C diagnostic work flow (auto A/C)	HA-22
A/C harness layout (auto A/C)	HA-53
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-94
A/C HFC134a (R134a) system service tools	HA-5
A/C HFC134a system service equip- ment precaution	HA-7
A/C lubricant (R134a)	HA-96
A/C operational check	HA-23
A/C performance chart	HA-48
A/C performance test diagnoses	HA-46
A/C relay	HA-79
A/C self-diagnoses (auto A/C)	HA-28
A/C service data specification	HA-103
A/C symptom chart (auto A/C)	HA-26
A/C system description (auto A/C)	HA-82
A/C trouble diagnoses (auto A/C)	HA-20
A/C wiring diagram (auto A/C)	HA-56
A/T control DTC:P0600	EC-231
Absolute pressure sensor	EC-271
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Air bag	RS-5
Air bag disposal	RS-13
Air bag module	RS-8
Air bag precautions	GI-2
Air bag removal and installation	RS-8

Air bleeding for brake system	BR-5
Air cleaner filter replacement	MA-13
Air conditioner cut control	EC-21
Air flow meter - See Mass air flow sensor	EC-124
Air mix door control linkage adjustment	HA-80
Air mix. door motor	HA-87
Air spoiler, rear - See Rear air spoiler	BT-20
Ambient sensor	HA-84
Angular tightening application	EM-2
Antenna	EL-108
Anti-freeze coolant	MA-8
Anti-freeze coolant mixture ratio	MA-9
ASCD (automatic speed control device)	EL-124
AT control unit	AT-101
AT diagnosis communication line	EC-278
AT fluid temperature sensor	AT-105
AT removal and installation	AT-127
AT self-diagnoses	AT-47
AT shift lock system	AT-116
Audio	EL-103
Audio and A/C control removal and installation - See Instrument panel	BT-12
Automatic transaxle number	GI-35
Automatic transmission fluid	MA-8
Automatic transmission fluid replacement	MA-18
Auxiliary air control (AAC)	EC-165

B

Back-up lamp	EL-61
Back-up lamp switch (MT) -See reverse lamp switch	MT-6
Battery	EL-21
Baulk ring (MT)	MT-10
Belt inspection (drive belt)	MA-10
Bi-level door control linkage adjustment	HA-81
Blower motor	HA-79
Board-on lift	GI-37
Body alignment	BT-35
Brake booster	BR-9
Brake control valve (Proportioning valve)	BR-4
Brake fluid	MA-8
Brake fluid change	BR-5
Brake fluid level	MA-19
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-3
Brake inspection	MA-19
Brake lines and cables inspection	MA-19
Brake master cylinder	BR-7
Brake pedal	BR-6

ALPHABETICAL INDEX

Bumper, front - See Front bumper..... BT-5
 Bumper, rear - See Rear bumper..... BT-8

C

Camshaft inspection..... EM-37
 Camshaft position sensor (CMPS)..... EC-120
 Camshaft position sensor (PHASE)..... EC-120
 Camshaft position sensor inspection..... EC-123
 Charging system..... EL-31
 Cigarette lighter..... EL-97
 Clearance lamp..... EL-51
 Clock..... EL-97
 Closed loop control..... EC-207
 Closed throttle position switch..... EC-161
 Clutch cover..... CL-9
 Clutch disc..... CL-9
 Clutch fluid..... MA-8
 Clutch fluid level..... MA-17
 Clutch master cylinder..... CL-6
 Clutch operating cylinder..... CL-7
 Clutch pedal..... CL-4
 Clutch pedal free play..... CL-4
 Clutch pedal height..... CL-4
 Clutch release bearing..... CL-8
 Clutch withdrawal lever..... CL-8
 Coil spring (front)..... FA-21
 Coil spring (rear)..... RA-10
 Combination lamp, front, removal
 and installation..... BT-5
 Combination lamp, rear, removal and
 installation..... BT-20
 Combination meter..... EL-78
 Combination meter removal and
 installation - See Instrument panel..... BT-12
 Compression pressure..... EM-10
 Compressor clutch removal and
 installation..... HA-100
 Compressor description..... HA-10
 Compressor mounting..... HA-99
 Compressor precaution..... HA-4
 Compressor special service tool..... HA-4
 Connecting rod..... EM-56
 Connecting rod bearing clearance..... EM-60
 Connecting rod bushing clearance..... EM-61
 Console box - See Instrument panel..... BT-12
 CONSULT for ABS..... BR-35
 Consult for ECCS..... EC-55
 Consult general information..... GI-32
 Control lever (MT)..... MT-8
 Control valve (AT)..... AT-152
 Converter housing installation..... AT-128
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-7
 Cooling fan control..... EC-337
 Cooling fan control system..... LC-14
 Cooling fan motor inspection..... EC-348

Cooling fan relay inspection..... EC-348
 Cornering lamp..... EL-65, 66
 Coupling sleeve (MT)..... MT-10
 Crankshaft assembly..... EM-62
 Crankshaft bearing clearance..... EM-59
 Crankshaft inspection..... EM-58
 Crankshaft position sensor (POS)..... EC-266
 Crankshaft position sensor (POS)
 chipping..... EC-297
 Crankshaft position sensor (REF)..... EC-222
 Cylinder block..... EM-54
 Cylinder head..... EM-34
 Cylinder head bolt tightening..... EM-43

D

Daytime light system..... EL-42
 Detonation sensor - See Knock
 sensor..... EC-198
 Device (FICD) solenoid valve..... EC-369
 Diagnostic trouble code (DTC) for
 ECCS OBD system..... EC-43
 Differential gear (FF AT) (RE4F04A)..... AT-195
 Differential gear (FF AT) (RE4F04V)..... AT-199
 Differential gear (FF MT)..... MT-10
 Dimensions..... GI-36
 Direct ignition system..... EC-34
 Distributor ignition (DI) system..... EC-20
 Door mirror - LAN..... EL-121
 Door mirror..... BT-34
 Door trim..... BT-17
 Door, front - See Front door..... BT-10
 Door, rear - See Rear door..... BT-11
 Drive plate runout..... EM-61
 Drive shaft (front)..... FA-12
 Dropping resistor (AT)..... AT-107

E

ECCS basic inspection..... EC-94
 ECCS circuit diagram..... EC-8
 ECCS component parts location..... EC-11
 ECCS on-board diagnostic system..... EC-43
 ECCS system diagram and chart..... EC-9
 ECCS trouble diagnoses..... EC-70
 ECM input/output signal inspection..... EC-108
 EGR control (EGRC) - BPT valve..... EC-205
 EGR control (EGRC) - solenoid valve..... EC-314
 EGR temperature sensor..... EC-201
 EGR temperature sensor inspection..... EC-204
 EGR valve inspection..... EC-191
 EGRC - BPT valve inspection..... EC-206
 EGRC valve and canister control
 solenoid valve inspection..... EC-318
 Electrical load signal circuit..... EC-373
 Electronic ignition system..... EC-20

ALPHABETICAL INDEX

Engine compartment BT-35
 Engine control module (ECM)..... EC-181
 Engine coolant temperature sensor
 (ECTS) EC-129
 Engine coolant temperature sensor
 (ECTS) DTC0103, P0115 EC-129
 Engine coolant temperature sensor
 (ECTS) DTC0103, P0115 inspection EC-132
 Engine coolant temperature sensor
 (ECTS) DTC0908, P0125 EC-302
 Engine coolant temperature sensor
 (ECTS) DTC0908, P0125 inspection EC-306
 Engine mounting control (Front)..... EC-362
 Engine oil MA-8
 Engine oil filter replacement MA-14
 Engine oil precautions GI-4
 Engine oil replacement MA-14
 Engine outer component parts EM-6
 Engine removal EM-51
 Engine room - See Engine
 compartment BT-35
 Engine serial number GI-35
 EVAP canister EC-24, 28
 EVAP canister control EC-24
 EVAP canister inspection EC-24, 28
 EVAP canister purge control solenoid
 valve EC-281
 EVAP canister purge control valve EC-281
 EVAP canister purge volume control
 valve EC-319
 EVAP canister vent control valve EC-292
 EVAP control system (small leak)
 diagnosis EC-245
 EVAP control system purge flow
 monitoring diagnosis EC-137
 EVAP vapor purge lines inspection MA-16
 Evaporative emission (EVAP) system EC-24
 Evaporative emission system - for
 California models EC-24
 Evaporative emission system - for
 Non-California models EC-28
 Exhaust gas recirculation (EGR)
 system EC-183
 Exhaust system FE-4
 Exhaust system inspection MA-17
 Exterior BT-20
 Exterior lamp EL-51

F

Fan control amp. HA-93
 Fast idle cam (FIC) inspection and
 adjustment EC-33
 Final drive (FF AT) (RE4F04A) AT-195
 Final drive (FF AT) (RE4F04V) AT-199
 Final drive (FF MT) MT-10
 Floor trim BT-15

Fluid temperature sensor (AT) AT-105
 Fluids MA-8
 Flywheel runout EM-61
 Fog lamp, front EL-62, 63
 Fog lamp, front, removal and
 installation BT-5
 Fork rod (MT) MT-11
 Forward clutch AT-173
 Freeze frame data EC-45
 Front axle FA-8
 Front bumper BT-5
 Front combination lamp removal and
 installation BT-5
 Front disc brake BR-11
 Front door BT-10
 Front engine mounting control EC-362
 Front fog lamp EL-63
 Front fog lamp removal and
 installation BT-5
 Front heated oxygen sensor (HO2S)
 (Left bank) EC-193
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-226
 Front heated oxygen sensor (HO2S) EC-226
 Front heated oxygen sensor (HO2S)
 monitor EC-46
 Front heated oxygen sensor heater
 (Left bank) EC-307
 Front heated oxygen sensor heater
 (Right bank) EC-289
 Front seat BT-26
 Front seat belt RS-3
 Front suspension FA-20
 Fuel check valve inspection EC-29
 Fuel cut control
 (at no load & high engine speed) EC-22
 Fuel filler lid BT-8
 Fuel filter replacement MA-12
 Fuel gauge EL-79
 Fuel injection system (Left bank) EC-171, 176
 Fuel injection system (Right bank) ... EC-144, 149
 Fuel lid opener, electric EL-123
 Fuel line inspection MA-12
 Fuel precautions GI-5
 Fuel pressure check EC-31
 Fuel pressure release EC-31
 Fuel pump control EC-355
 Fuel pump control module EC-331
 Fuel pump inspection EC-361
 Fuel pump relay inspection EC-361
 Fuel system FE-3
 Fuel tank vacuum relief valve
 inspection EC-25, 29
 Fuse EL-20
 Fusible link EL-20

ALPHABETICAL INDEX

G

Garage jack and safety stand..... GI-38
Gears (MT) MT-10
Generic scan tool (GST) EC-68
Grille - See Exterior BT-20

H

Harness connector EL-5
Harness layout EL-279
Hazard warning lamp EL-53, 54
Headlamp EL-39
Headlamp removal and installation BT-5
Headlining - See Roof trim BT-18
Heated oxygen sensor (HO2S) (Front)
(Left bank) EC-193
Heated oxygen sensor (HO2S) (Front)
(Right bank)..... EC-226
Heated oxygen sensor (HO2S) (front) EC-226
Heated oxygen sensor (HO2S) heater
(rear)..... EC-259
Heated oxygen sensor (rear)..... EC-255
Heated oxygen sensor heater
(Front)(Left bank) EC-307
Heated oxygen sensor heater
(Front)(Right bank)..... EC-289
Heated seat BT-27, EL-120
Height (Dimensions)..... GI-36
HFC134a (R134a) system precaution HA-2
HFC134a (R134a) system service
procedure..... HA-94
HFC134a (R134a) system service
tools HA-5
HFC134a system service equipment
precaution..... HA-7
High clutch AT-169
Hood..... BT-5
Horn..... EL-97
How to erase DTC for ECCS OBD
system EC-43
How to follow flow chart in trouble
diagnoses..... GI-29
How to perform efficient diagnosis
for an electrical incident GI-18
How to read wiring diagrams..... GI-8
How to use this manual GI-6

I

IACV - FICD solenoid valve
inspection EC-372
IACV-AAC valve inspection..... EC-170
Identification plate GI-35

Idle air control valve (IACV) EC-165
Idle mixture ratio inspection..... EC-36
Idle speed inspection EC-36
Ignition coil inspection EC-160
Ignition timing inspection..... EC-36
Illumination..... EL-69, 71
Illumination-IVMS..... EL-260
In vehicle sensor..... HA-83
Inhibitor switch AT-106
Injector inspection..... EC-352
Injector removal and installation..... EC-32
Input shaft..... MT-10
Instrument panel..... BT-12
Intake air temperature sensor EC-209
Intake air temperature sensor
inspection..... EC-213
Intake door control linkage
adjustment HA-80
Intake door motor..... HA-91
Intake sensor..... HA-85
Interior..... BT-15
Interior lamp EL-69
Interior lamp on-off control-IVMS..... EL-263
IVMS
(In-Vehicle Multiplexing System)..... EL-149
IVMS-System description EL-149
IVMS-Trouble diagnoses system EL-154

J

Jacking points..... GI-38

K

Knock sensor (KS)..... EC-198
Knock sensor (KS) inspection EC-200

L

LAN trouble diagnoses EL-165
Length (Dimensions) GI-36
License lamp..... EL-51
Lifting points GI-39
Line pressure solenoid valve AT-105
Line pressure test (AT) AT-111
Liquid gasket application EM-2
Location of electrical units EL-276
Low and reverse brake AT-179
Lubricant (R134a) A/C..... HA-96
Lubricants MA-8
Lubrication circuit (engine)..... LC-3
Lubrication-locks, hinges and hood
latches MA-21

ALPHABETICAL INDEX

M

Magnet clutch	HA-100
Main drive gear (MT)	MT-10
Mainshaft (MT)	MT-10
Maintenance (engine)	MA-10
Maintenance	MA-1
Maintenance general	MA-3
Maintenance periodic	MA-5
Maintenance schedule (1)	MA-6
Maintenance schedule (2)	MA-7
Malfunction indicator lamp (MIL)	EC-45
Manual transaxle number	GI-35
Manual transmission oil	MA-8
Manual transmission oil replacement	MA-17
MAP/BARO switch solenoid valve	EC-325
Mass air flow sensor (MAFS)	EC-124
Mass air flow sensor inspection	EC-128
Master cylinder (clutch)	CL-6
Meter and gauges	EL-77
MIL & Data link connectors circuit	EC-376
Mirror, door - See Door mirror	BT-34
Mirror, out side - See Out side mirror	BT-34
Misfire	EC-234
Mode door control linkage adjustment	HA-80
Mode door motor	HA-89
Model variation	GI-33
Molding - See Exterior	BT-20
MT removal and installation	MT-6
Multi purpose grease	MA-8
Multi-remote control system-IVMS	EL-210
Multiport fuel injection (MFI) system	EC-17
Multiport fuel injection precautions	GI-4
Neutral position switch (MT)	MT-6

O

Oil pan (engine)	EM-11
Oil pressure (engine)	LC-4
Oil pump (AT)	AT-148
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-31
Operating cylinder (clutch)	CL-7
Out side mirror	BT-34
Overdrive switch	AT-106
Overrun clutch	AT-173
Overrun clutch solenoid valve	AT-105

P

Park/Neutral position switch	EC-310
------------------------------------	--------

Parking brake control	BR-21
PCV (positive crankcase ventilation) inspection	EC-30
Piston assembly	EM-62
Piston pin inspection	EM-55
Piston ring inspection	EM-56
Piston to bore clearance	EM-57
Power antenna	EL-103, 108
Power door lock-IVMS	EL-192
Power seat	EL-118
Power steering fluid	MA-8
Power steering fluid level	MA-20, ST-5
Power steering gear	ST-12
Power steering hydraulic pressure	ST-7
Power steering oil pressure switch	EC-365
Power steering oil pressure switch inspection	EC-368
Power steering oil pump	ST-22
Power steering system bleeding	ST-5
Power supply routing	EL-7
Power transistor & ignition coil	EC-154
Power transistor inspection	EC-160
Power window-IVMS	EL-181
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-9
Pressure test (AT)	AT-111

R

Radiator	LC-14
Rear air spoiler	BT-20
Rear axle	RA-6
Rear bumper	BT-8
Rear combination lamp removal and installation	BT-20
Rear disc brake	BR-15
Rear door	BT-11
Rear heated oxygen sensor (HO2S)	EC-255
Rear heated oxygen sensor (HO2S) heater	EC-259
Rear seat	BT-28
Rear seat belt	RS-4
Rear suspension	RA-9
Rear window	BT-33
Rear window defogger	EL-99
Refrigerant connection precaution	HA-3
Refrigerant general precaution	HA-2
Refrigerant lines	HA-98
Release bearing (clutch)	CL-8
Reverse clutch	AT-166
Reverse gear (MT)	MT-10
Reverse idler shaft (MT)	MT-10
Reverse lamp switch	MT-6
Revolution sensor (AT)	AT-107
Road wheel size	GI-36
Roof trim	BT-18

ALPHABETICAL INDEX

S

SAE J1930 terminology list GI-42
 Seal - See Exterior BT-20
 Seat belt inspection MA-21
 Seat belt, front - See Front seat belt RS-3
 Seat belt, rear - See Rear seat belt RS-4
 Seat, front - See Front seat BT-26
 Seat, rear - See Rear seat BT-28
 Self-diagnostic results EC-46
 Shift control (MT) MT-11
 Shift fork (MT) MT-11
 Shift lock system AT-116
 Shift schedule AT-37
 Shift solenoid valve (AT) AT-105
 Shock absorber (rear) RA-10
 Side trim BT-15
 Spark plug replacement MA-15
 Speedometer EL-79
 Spiral cable RS-8
 Spot lamp EL-70
 Spring (Wheelarch) height FA-5
 SRS - See Supplemental Restraint
 System RS-5
 SRS Trouble diagnoses RS-17
 SRS Wiring diagram RS-18
 Stabilizer bar (front) FA-22
 Stall test (AT) AT-108
 Standardized relay EL-6
 Starting system EL-25
 Steering gear and linkage inspection MA-20
 Steering linkage ST-12
 Steering switch EL-38
 Steering wheel and column ST-8
 Steering wheel play ST-4
 Steering wheel turning force ST-6
 Step lamp-IVMS EL-269
 Stop lamp EL-59
 Striking rod (MT) MT-11
 Strut (front) FA-21
 Sun roof BT-29
 Sunload sensor HA-84
 Supplemental Restraint System RS-5
 Symbols and abbreviations GI-7
 Synchronizer (MT) MT-10

T

Tachometer EL-79
 Tail lamp EL-51
 Tank fuel temperature sensor EC-214
 Telephone EL-114
 Theft warning system-IVMS EL-240
 Thermostat LC-13
 Three way catalyst EC-238
 Three way catalyst function

(Left bank) EC-238
 Three way catalyst function
 (Right bank) EC-238
 Three way catalyst precautions GI-4
 Throttle position sensor (TPS) EC-217
 Throttle position sensor inspection EC-94, 221
 Throwout bearing - See Clutch
 release bearing CL-8
 Tie-rod ST-16
 Tie-rod ball joints ST-16
 Tightening torque of standard bolts GI-41
 Time control system-IVMS EL-226
 Timing chain EM-17
 Tire rotation MA-19
 Tire size GI-36
 Torque converter clutch solenoid
 valve AT-105
 Torque converter installation AT-127
 Tow truck towing GI-40
 Transmission case (MT) MT-9
 Transverse link (front) FA-23
 Tread-FR&RR (Dimensions) GI-36
 Trim BT-15
 Triple pressure switch HA-9, 79
 Trunk lid BT-8
 Trunk lid opener - See Trunk lid BT-8
 Trunk lid opener, electric EL-123
 Trunk lid trim BT-19
 Trunk room lamp EL-70
 Trunk room trim BT-19
 Turn signal lamp EL-53
 Turn signal lamp EL-54
 Two trip detection logic EC-43
 Two-pole lift GI-39

U

Under body BT-37

V

Vacuum cut valve EC-265
 Vacuum cut valve bypass valve EC-260
 Vacuum hose (brake system) BR-10
 Vacuum hose drawing (ECCS) EC-14
 Valve clearance EM-47
 Valve guide inspection EM-38
 Valve seat inspection EM-39
 Valve spring inspection EM-40
 Vehicle identification number GI-34
 Vehicle Recovery. (Freeing a stuck
 vehicle) GI-40
 Vehicle speed sensor (VSS) EC-133
 Viscosity number (SAE) MA-8
 Viscous coupling (FF AT) AT-199

ALPHABETICAL INDEX

Viscous coupling (FF MT)..... MT-10

W

Warning lamps..... EL-83
Washer, front..... EL-92
Water pump LC-8
Water temperature gauge EL-79
Weatherstrip - See Exterior BT-20
Wheel alignment (front) FA-6
Wheel alignment (rear)..... RA-5
Wheel balance MA-19
Wheel bearing (front axle)..... FA-6
Wheel bearing (rear) RA-4
Wheel hub (rear)..... RA-6

Wheel hub and steering knuckle..... FA-8
Wheel sensors (ABS)..... BR-25
Wheel size GI-36
Wheelarch height FA-5
Wheelbase (Dimensions) GI-36
Wide open & closed throttle position
(CTP) switch EC-217
Width (Dimensions) GI-36
Window antenna..... EL-113
Window, rear - See Rear window..... BT-33
Windshield BT-33
Wiper and washer..... EL-90
Wiper, front EL-92
Withdrawal lever (clutch) CL-8
Wrist pin - See Piston pin inspection EM-55