

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-23
 ABS - Wiring diagram BR-32
 A/C air flow HA-17
 A/C component layout HA-16
 A/C compressor clutch removal and
 installation HA-101
 A/C compressor description HA-12
 A/C compressor mounting HA-100
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment HA-79
 A/C control operation HA-19
 A/C diagnostic work flow HA-22
 A/C harness layout HA-53
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure HA-92
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service equip-
 ment precaution HA-9
 A/C lubricant (R134a) HA-94
 A/C operational check HA-23
 A/C performance chart HA-48
 A/C performance test diagnoses HA-46
 A/C relay HA-78
 A/C self-diagnoses HA-28
 A/C service data specification HA-104
 A/C symptom chart HA-26
 A/C system description HA-80
 A/C trouble diagnoses HA-22
 A/C, A - Wiring diagram HA-56
 Absolute pressure sensor EC-109
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-5
 Air bag disposal RS-13
 Air bleeding (hydraulic clutch) CL-5
 Air bleeding for brake system BR-5
 Air cleaner filter replacement MA-13
 Air conditioner cut control EC-19
 Air flow meter - See Mass air flow
 sensor EC-103
 Air mix door control linkage adjustment HA-79
 Air mix. door motor HA-85
 Air spoiler, rear BT-20
 Alternator EL-39
 Ambient sensor HA-82
 Angular tightening application EM-2
 Antenna EL-132
 Anti-lock brake system - See ABS BR-23
 Anti-lock brake system - Wiring
 diagram BR-32
 ASCD (automatic speed control device) EL-148
 ASCD - Wiring diagram EL-153
 A/T control EC-264

AT control unit AT-55
 AT diagnosis communication line EC-336
 AT fluid temperature sensor AT-67
 AT removal and installation AT-141
 AT self-diagnoses AT-26
 AT shift lock system AT-131
 A/T shift lock system - Wiring diagram AT-132
 A/T - Wiring diagram AT-11
 AUDIO - Wiring diagram EL-129
 Audio EL-127
 Audio and A/C control removal and
 installation - See Instrument panel BT-12
 Auto air conditioner - Wiring diagram HA-56
 Auto anti-dazzling inside mirror EL-146
 Automatic amplifier HA-83
 Automatic speed control system - See
 ASCD EL-148
 Automatic transaxle number GI-37
 Automatic transmission fluid
 replacement MA-18
 Auxiliary air control (AAC) EC-254

B

Back-up lamp EL-65
 Back-up lamp switch (MT) MT-7
 BACK/L - Wiring diagram EL-65
 Battery EL-25
 Baulk ring (MT) MT-11
 Blower motor HA-78
 Board-on lift GI-39
 Body alignment BT-35
 BPT valve EC-220
 Brake booster BR-9
 Brake control valve
 (Proportioning valve) BR-4
 Brake fluid change BR-5
 Brake fluid level MA-19
 Brake fluid level and line check BR-5
 Brake hydraulic line BR-3
 Brake inspection MA-19
 Brake lines and cables inspection MA-19
 Brake master cylinder BR-7
 Brake pedal BR-6
 Bumper, front BT-5
 Bumper, rear BT-8
 BUZZER - Wiring diagram EL-96

C

Camshaft inspection EM-37
 Camshaft position sensor (CMPS) EC-204
 Camshaft position sensor (PHASE) EC-204
 Canister-See EVAP canister EC-21
 CHARGE - Wiring diagram EL-36
 Charging system EL-35
 Chassis and body maintenance MA-17
 Cigarette lighter EL-116

ALPHABETICAL INDEX

Circuit breaker	EL-19
Clock	EL-116
Closed loop control	EC-137
Closed throttle position switch	EC-260
Clutch cover.....	CL-9
Clutch disc.....	CL-9
Clutch fluid level	MA-17
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-4
Clutch release bearing	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front)	FA-21
Coil spring (rear)	RA-10
Collision diagnosis	RS-36
Combination lamp, front, removal and installation	BT-5
Combination lamp, rear, removal and installation	BT-20
Combination meter	EL-82
Combination meter removal and instal- lation - See Instrument panel.....	BT-12
Combination switch.....	EL-40
COMM - Wiring diagram.....	EL-199
Compression pressure.....	EM-10
Compressor clutch removal and installation.....	HA-101
Compressor description	HA-12
Compressor mounting.....	HA-100
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod	EM-56
Connecting rod bearing clearance	EM-60
Connecting rod bushing clearance.....	EM-61
Console box - See Instrument panel.....	BT-12
CONSULT for ABS	BR-39
CONSULT for ECCS	EC-59
CONSULT general information.....	GI-34
Control lever (MT)	MT-9
Control valve (AT)	AT-168
Converter housing installation.....	AT-142
Coolant mixture ratio	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan control	EC-339
Cooling fan control system.....	LC-15
Cooling fan motor.....	EC-351
Cooling fan relay	EC-351
CORNER - Wiring diagram	EL-70
Cornering lamp	EL-69
Coupling sleeve (MT)	MT-11
Crankshaft.....	EM-58
Crankshaft position sensor (POS)	EC-198
Crankshaft position sensor (POS) chipping	EC-301
Crankshaft position sensor (REF).....	EC-296
Cruise control - See ASCD.....	EL-148
Cylinder block	EM-54
Cylinder head.....	EM-34
Cylinder head bolt tightening	EM-43

D

Daytime light system	EL-46
Daytime running light - See Daytime light system	EL-46
DEF - Wiring diagram	EL-119
Detonation sensor - See Knock sensor	EC-195
Diagnosis sensor unit.....	RS-8
Differential gear (FF AT).....	AT-211, 215
Differential gear (FF MT).....	MT-11, 25
Dimensions.....	GI-38
Direct ignition system.....	EC-29
Distributor ignition (DI) system.....	EC-18
D/LOCK - Wiring diagram.....	EL-221
Door mirror.....	BT-34
Door trim	BT-17
Door, front	BT-10
Door, rear	BT-11
Drive belt inspection	MA-10
Drive plate runout	EM-61
Drive shaft (front)	FA-12
Dropping resistor (AT)	AT-96
DTRL - Wiring diagram.....	EL-48

E

ECCS basic inspection	EC-78
ECCS circuit diagram.....	EC-9
ECCS component parts location	EC-11
ECCS on board diagnostic system.....	EC-38
ECCS system diagram and chart	EC-10
ECM input/output signal.....	EC-90
EGR control (EGRC) - BPT valve.....	EC-219
EGR control (EGRC) - solenoid valve	EC-307
EGR control valve	EC-218
EGR temperature sensor	EC-312
EGR valve & EVAP canister purge control solenoid valve	EC-311
Electric sun roof.....	EL-141
Electrical load signal circuit.....	EC-375
Electrical unit	Foldout
Electronic ignition system	EC-18
Engine compartment.....	BT-35
Engine control module (ECM).....	EC-268
Engine coolant temperature sensor (ECTS).....	EC-122, 132
Engine mounting control (Front)	EC-364
Engine oil filter replacement	MA-14
Engine oil replacement	MA-14
Engine outer component parts	EM-6
Engine removal.....	EM-51
Engine room - See Engine compartment	BT-35
Engine serial number	GI-37
EVAP canister	EC-21
EVAP canister purge control valve	EC-232
EVAP canister purge control valve inspection.....	EC-322

ALPHABETICAL INDEX

EVAP canister vent control valve.....	EC-240
EVAP control system (small leak) diagnosis.....	EC-224
EVAP control system purge flow moni- toring diagnosis.....	EC-329
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-21
Exhaust system.....	FE-4
Exhaust system inspection.....	MA-17
Exterior.....	BT-20
Exterior lamp.....	EL-55

F

Fan control amp.....	HA-91
Fast idle cam (FIC) inspection and adjustment.....	EC-28
F/FOG - Wiring diagram.....	EL-67
Final drive (FF AT).....	AT-211, 215
Final drive (FF MT).....	MT-11, 25
Floor trim.....	BT-15
Fluid temperature sensor (AT).....	AT-67
Fluids.....	MA-8
Flywheel (clutch).....	CL-10
Flywheel runout.....	EM-61
Fog lamp, front.....	EL-66
Fog lamp, front, removal and installation.....	BT-5
Fork rod (MT).....	MT-12
Forward clutch.....	AT-189
Freeze frame data.....	EC-40
Front axle.....	FA-8
Front bumper.....	BT-5
Front combination lamp removal and installation.....	BT-5
Front disc brake.....	BR-11
Front door.....	BT-10
Front engine mounting control.....	EC-364
Front fog lamp.....	EL-66
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S) (Left bank).....	EC-158
Front heated oxygen sensor (HO2S) (Right bank).....	EC-139
Front heated oxygen sensor (HO2S).....	EC-139
Front heated oxygen sensor (HO2S) monitor.....	EC-50, 53
Front heated oxygen sensor heater (Left bank).....	EC-164
Front heated oxygen sensor heater (Right bank).....	EC-144
Front passenger air bag.....	RS-5
Front seat.....	BT-26
Front seat belt.....	RS-3
Front suspension.....	FA-20
Front washer.....	EL-104
Front wiper.....	EL-104
Fuel cut control (at no load & high engine speed).....	EC-20
Fuel filler lid.....	BT-8

Fuel filter replacement.....	MA-12
Fuel gauge.....	EL-83
Fuel injection system (Left bank).....	EC-178, 183
Fuel injection system (Right bank).....	EC-168, 173
Fuel lid opener, electric.....	EL-147
Fuel line inspection.....	MA-12
Fuel pressure check.....	EC-26
Fuel pressure release.....	EC-26
Fuel pump.....	EC-363
Fuel pump control module.....	EC-281, 359
Fuel pump relay.....	EC-363
Fuel system.....	FE-3
Fuse.....	EL-19
Fusible link.....	EL-19

G

Garage jack and safety stand.....	GI-40
Gears (MT).....	MT-11
Generic scan tool (GST).....	EC-72
Grille - See Exterior.....	BT-20
Ground distribution.....	EL-20

H

Harness connector.....	EL-3
Harness layout.....	EL-307
Hazard warning lamp.....	EL-57
Headlamp.....	EL-43
Headlamp removal and installation.....	BT-5
Headlining - See Roof trim.....	BT-18
Heated oxygen sensor (HO2S) (Front) (Left bank).....	EC-158
Heated oxygen sensor (HO2S) (Front) (Right bank).....	EC-139
Heated oxygen sensor (HO2S) (front).....	EC-139
Heated oxygen sensor (HO2S) monitor.....	EC-53
Heated oxygen sensor (rear).....	EC-148
Heated oxygen sensor heater (Front)(Left bank).....	EC-164
Heated oxygen sensor heater (Front)(Right bank).....	EC-144
Heated oxygen sensor monitor (HO2S) (front).....	EC-53
Heated seat.....	BT-27, EL-144
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-92
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-185
H/LAMP - Wiring diagram.....	EL-44
Hood.....	BT-5
HORN - Wiring diagram.....	EL-116
Horn.....	EL-116

ALPHABETICAL INDEX

How to erase DTC for ECCS OBD
system EC-48
H/PHON - Wiring diagram EL-139
HSEAT - Wiring diagram EL-144

I

IACV - FICD solenoid valve EC-374
IACV - AAC valve inspection EC-259
IACV - FICD solenoid valve EC-372
Identification plate GI-37
Idle air control valve (IACV) EC-254
Idle mixture ratio EC-31
Idle speed EC-31
Ignition coil EC-295
Ignition timing EC-31
ILL - Wiring diagram EL-75
Illumination EL-73, 284
I/MIRR - Wiring diagram EL-146
In vehicle sensor HA-81
Inhibitor switch AT-63
Injector EC-356
Injector removal and installation EC-27
Input shaft MT-11, 16
Instrument panel BT-12
INT/L - Wiring diagram EL-79
Intake air temperature sensor EC-116
Intake door control linkage adjustment HA-79
Intake door motor HA-89
Intake manifold EM-8
Intake sensor HA-83
Integrated homelink transmitter EL-302
Interior BT-15
Interior lamp EL-73
Interior lamp on-off control EL-288
IVMS (In-Vehicle Multiplexing System) EL-172
IVMS-System description EL-172
IVMS-Trouble diagnoses EL-188
IVMS-Trouble diagnoses system EL-177

J

Jacking points GI-40
Junction box (J/B) Foldout

K

Key illumination EL-288
Keyless entry system -
See Multi-remote control system EL-238
Knock sensor (KS) EC-195

L

Length (Dimensions) GI-38

License lamp EL-55
Lifting points GI-41
Line pressure solenoid valve AT-85, 93, 96
Line pressure test (AT) AT-129
Liquid gasket application EM-2
Location of electrical units EL-304
Low and reverse brake AT-195
Lubricant (R134a) A/C HA-94
Lubricants MA-8
Lubrication circuit (engine) LC-4
Lubrication-locks, hinges and hood
latches MA-21

M

Magnet clutch HA-101
Main drive gear (MT) MT-11
Mainshaft (MT) MT-11, 21
Maintenance (engine) MA-10
Maintenance MA-1
Malfunction indicator lamp (MIL) EC-50
Manual transaxle number GI-37
Manual transmission oil replacement MA-17
MAP/BARO switch solenoid valve EC-275
Mass air flow sensor (MAFS) EC-103
Master cylinder (brake) BR-7
Master cylinder (clutch) CL-6
METER - Wiring diagram EL-83
Meter EL-81
MIL & Data link connectors circuit EC-378
MIRROR - Wiring diagram EL-145
Mirror, door BT-34
Mirror, out side BT-34
Misfire EC-191
Mode door control linkage adjustment HA-79
Mode door motor HA-87
Model variation GI-35
Molding - See Exterior BT-20
MT removal and installation MT-7
MULTI - Wiring diagram EL-241
Multi-remote control system EL-238
Multiport fuel injection (MFI) system EC-16

N

Neutral position switch (MT) MT-7

O

Oil pan (engine) EM-11
Oil pressure (engine) LC-5
Oil pump (AT) AT-164
Oil pump (engine) LC-5
Oil pump regulator valve (engine) LC-7
Oil seal replacement (engine) EM-31
Operating cylinder (clutch) CL-7
Out side mirror BT-34

ALPHABETICAL INDEX

Overdrive control switch..... AT-63
 Overrun clutch..... AT-189
 Overrun clutch solenoid valve..... AT-85, 93, 107
 Oxygen sensor monitor (O2S) (front)..... EC-53

P

P/ANT - Wiring diagram..... EL-133
 Park/Neutral position switch..... EC-270
 Parking brake control..... BR-21
 Parking lamp..... EL-55
 PCV (positive crankcase ventilation)..... EC-25
 PHONE - Wiring diagram..... EL-138
 Piston assembly..... EM-62
 Piston pin inspection..... EM-55
 Piston ring inspection..... EM-56
 Piston to bore clearance..... EM-57
 POWER - Wiring diagram..... EL-7
 Power antenna..... EL-132
 Power door lock..... EL-219
 Power door mirror..... EL-145
 Power seat..... EL-142
 Power steering fluid level..... MA-20, ST-5
 Power steering gear..... ST-12
 Power steering hydraulic pressure..... ST-7
 Power steering oil pressure switch..... EC-367, 371
 Power steering oil pump..... ST-22
 Power steering system bleeding..... ST-5
 Power supply routing..... EL-6
 Power transistor & ignition coil..... EC-288
 Power transistor..... EC-295
 Power window..... EL-205
 Pressure plate - See Clutch cover..... CL-9
 Pressure test (AT)..... AT-129

R

Radiator..... LC-15
 Radio - See Audio..... EL-127
 Rear air spoiler..... BT-20
 Rear axle..... RA-6
 Rear bumper..... BT-8
 Rear combination lamp removal and
 installation..... BT-20
 Rear disc brake..... BR-15
 Rear door..... BT-11
 Rear heated oxygen sensor (HO2S)..... EC-148
 Rear heated oxygen sensor (HO2S)
 heater..... EC-153
 Rear seat..... BT-28
 Rear seat belt..... RS-4
 Rear suspension..... RA-9
 Rear window..... BT-33
 Rear window defogger..... EL-118
 Refrigerant connection precaution..... HA-3
 Refrigerant general precaution..... HA-2
 Refrigerant lines..... HA-96
 Refrigeration cycle..... HA-11

Release bearing (clutch)..... CL-8
 Reverse clutch..... AT-182
 Reverse gear (MT)..... MT-11
 Reverse idler shaft (MT)..... MT-11
 Reverse lamp switch (MT) - See
 Back-up lamp switch (MT)..... MT-7
 Revolution sensor (AT)..... AT-69
 Road wheel size..... GI-38
 Roof trim..... BT-18
 ROOM/L - Wiring diagram..... EL-289

S

SAE J1979 - Mode 1 ~ 7..... EC-38, 73
 Seal - See Exterior..... BT-20
 SEAT - Wiring diagram..... EL-142
 Seat belt inspection..... MA-21
 Seat belt, front..... RS-3
 Seat belt, rear..... RS-4
 Seat, front..... BT-26
 Seat, rear..... BT-28
 Self-diagnostic results..... EC-50
 SHIFT - Wiring diagram..... AT-132
 Shift control (MT)..... MT-12
 Shift fork (MT)..... MT-12
 Shift lock system..... AT-131
 Shift schedule..... AT-49
 Shift solenoid valve
 (AT)..... AT-73, 76, 79, 85, 93, 99, 102
 Shock absorber (rear)..... RA-10
 Side trim..... BT-15
 SMJ (super multiple junction)..... Foldout
 Spark plug replacement..... MA-15
 Speedometer..... EL-83
 Spiral cable..... RS-8
 Spot lamp..... EL-79
 Spring (Wheelarch) height..... FA-5
 SROOF - Wiring diagram..... EL-141
 SRS - See Supplemental Restraint
 System..... RS-5
 SRS - Wiring diagram..... RS-20
 SRS Trouble diagnoses..... RS-17
 Stabilizer bar (front)..... FA-22
 Stall test (AT)..... AT-126
 Standardized relay..... EL-4
 START - Wiring diagram..... EL-30
 Starter..... EL-34
 Starting system..... EL-29
 Steering gear and linkage inspection..... MA-20
 Steering linkage..... ST-12
 Steering switch..... EL-42
 Steering wheel and column..... ST-8
 Steering wheel play..... ST-4
 Steering wheel turning force..... ST-6
 Step lamp..... EL-296
 STEP/L - Wiring diagram..... EL-297
 Stop lamp..... EL-63
 STOP/L - Wiring diagram..... EL-63
 Striking rod (MT)..... MT-12
 Strut (front)..... FA-21

ALPHABETICAL INDEX

Sunload sensor HA-82
 Sunroof BT-29
 Supplemental Restraint System RS-5
 SW/ILL - Wiring diagram EL-285
 Synchronizer (MT) MT-11
 System readiness test (SRT) code EC-40

T

Tachometer EL-83
 Tail lamp EL-55
 TAIL/L - Wiring diagram EL-55
 Tank fuel temperature sensor EC-188
 Telephone EL-138
 THEFT - Wiring diagram EL-264
 Theft warning system EL-258
 Thermostat LC-14
 Three way catalyst EC-221
 Three way catalyst function
 (Left bank) EC-221
 Three way catalyst function
 (Right bank) EC-221
 Throttle bodies EM-8
 Throttle position sensor (TPS) EC-126
 Throttle position switch AT-64
 Throwout bearing - See Clutch release
 bearing CL-8
 Tie-rod ST-16
 Tie-rod ball joints ST-16
 Timing chain EM-17
 Tire rotation MA-19
 Tire size GI-38
 TLID - Wiring diagram EL-147
 Torque converter clutch solenoid
 valve AT-85, 88, 93
 Torque converter installation AT-141
 Tow truck towing GI-42
 Transmission case (MT) MT-10
 TRANSMT - Wiring diagram EL-302
 Transverse link (front) FA-23
 Tread-FR&RR (Dimensions) GI-38
 Trim BT-15
 Triple pressure switch HA-11, 78
 Trunk lid BT-8
 Trunk lid opener - See Trunk lid BT-8
 Trunk lid opener, electric EL-147
 Trunk lid trim BT-19
 Trunk room lamp EL-79
 Trunk room trim BT-19
 TURN - Wiring diagram EL-59
 Turn signal lamp EL-57
 Two trip detection logic EC-38
 Two-pole lift GI-41

U

Under body BT-37

V

Vacuum cut valve EC-321
 Vacuum cut valve bypass valve EC-316 GI
 Vacuum hose (brake system) BR-10
 Vacuum hose drawing (ECCS) EC-14
 Valve clearance EM-47 MA
 Valve guide EM-38
 Valve seat EM-40
 Valve spring EM-40 EM
 Vehicle identification number GI-36
 Vehicle Recovery. (Freeing a stuck
 vehicle) GI-42 LC
 Vehicle speed sensor (VSS) EC-250
 Viscosity number (SAE) MA-8 EC
 Viscous coupling (FF AT) AT-215
 Viscous coupling (FF MT) MT-7, 11
 FE

W

WARN - Wiring diagram EL-90
 Warning buzzer EL-95
 Warning lamps EL-89 MT
 Washer, front EL-104
 Water pump LC-9 AT
 Water temperature gauge EL-83
 Weatherstrip - See Exterior BT-20
 Wheel alignment (front) FA-6 FA
 Wheel alignment (rear) RA-5
 Wheel balance MA-19
 Wheel bearing (front axle) FA-6 RA
 Wheel bearing (rear) RA-4
 Wheel hub (rear) RA-6
 Wheel hub and steering knuckle FA-8 BR
 Wheel sensors (ABS) BR-26
 Wheel size GI-38 ST
 Wheelarch height FA-5
 Wheelbase (Dimensions) GI-38
 Wide open & closed throttle position
 switch EC-126 RS
 Width (Dimensions) GI-38
 WINDOW - Wiring diagram EL-207 BT
 Window antenna EL-135
 Window, rear BT-33
 Windshield BT-33 HA
 Windshield washer - See Front washer EL-104
 Windshield wiper - See Front wiper EL-104
 WIPER - Wiring diagram EL-106 EL
 Wiper and washer EL-104
 Wiper, front EL-104
 Withdrawal lever (clutch) CL-8
 Wrist pin - See Piston pin inspection EM-55
 IDX