

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) ..... BR-28  
 ABS - Wiring diagram ..... BR-37  
 ABS/TCS C/U signal ..... EC-497  
 Absolute pressure sensor ..... EC-130  
 A/C air flow ..... HA-17  
 A/C component layout ..... HA-16  
 A/C compressor clutch removal and  
   installation ..... HA-96  
 A/C compressor description ..... HA-12  
 A/C compressor mounting ..... HA-95  
 A/C compressor precaution ..... HA-6  
 A/C compressor special service tool ..... HA-6  
 A/C control linkage adjustment ..... HA-73  
 A/C control operation ..... HA-21  
 A/C diagnostic work flow ..... HA-23  
 A/C HFC134a (R134a) system  
   precaution ..... HA-2  
 A/C HFC134a (R134a) system service  
   procedure ..... HA-87  
 A/C HFC134a (R134a) system service  
   tools ..... HA-7  
 A/C HFC134a system service equip-  
   ment precaution ..... HA-9  
 A/C lubricant (R134a) ..... HA-89  
 A/C operational check ..... HA-24  
 A/C performance chart ..... HA-49  
 A/C performance test diagnoses ..... HA-47  
 A/C relay ..... HA-73  
 A/C self-diagnoses ..... HA-30  
 A/C service data specification ..... HA-100  
 A/C symptom chart ..... HA-28  
 A/C system description ..... HA-75  
 A/C trouble diagnoses ..... HA-23  
 A/C, A - Wiring diagram ..... HA-56  
 Accelerator control system ..... FE-2  
 Accelerator wire adjustment ..... FE-2  
 Air bag ..... RS-9  
 Air bag disposal ..... RS-20  
 Air bag precautions ..... GI-2  
 Air bleeding (hydraulic clutch) ..... CL-6  
 Air bleeding for brake system ..... BR-6  
 Air cleaner filter replacement ..... MA-13  
 Air conditioner cut control ..... EC-24  
 Air flow meter - See Mass air flow  
   sensor ..... EC-122  
 Air mix door control linkage adjustment ..... HA-73  
 Air mix. door motor ..... HA-80  
 Air spoiler, rear ..... BT-21  
 Alternator ..... EL-33  
 Ambient sensor ..... HA-77  
 Angular tightening application ..... EM-2  
 Antenna ..... EL-136  
 Anti-lock brake system - See ABS ..... BR-28  
 Anti-lock brake system - Wiring  
   diagram ..... BR-37  
 ASCD (automatic speed control device) ..... EL-152  
 ASCD - Wiring diagram ..... EL-157

A/T - Wiring diagram ..... AT-13  
 A/T fluid temperature sensor ..... AT-87, 153  
 A/T self-diagnoses ..... AT-42  
 A/T shift lock system ..... AT-180  
 A/T shift lock system - Wiring diagram ..... AT-181  
 A/T trouble diagnoses ..... AT-53  
 AT/C - Wiring diagram ..... EC-380, 500  
 Audio ..... EL-130  
 AUDIO - Wiring diagram ..... EL-132  
 Audio and A/C control removal and  
   installation - See Instrument panel ..... BT-13  
 Auto air conditioner - Wiring diagram ..... HA-56  
 Auto anti-dazzling inside mirror ..... EL-150  
 Automatic speed control system - See  
   ASC ..... EL-152  
 Automatic transaxle number ..... GI-40  
 Automatic transmission fluid  
   replacement ..... MA-18  
 Automatic transmission number ..... GI-40  
 Auxiliary air control (AAC) valve ..... EC-368

## B

Back-up lamp ..... EL-65  
 Back-up lamp switch (M/T) ..... MT-8  
 BACK/L - Wiring diagram ..... EL-65  
 Ball joint front axle ..... FA-6  
 Basic inspection ..... EC-92  
 Battery ..... EL-21  
 Baulk ring (M/T) ..... MT-12  
 Blower motor ..... HA-72  
 Board-on lift ..... GI-42  
 Body alignment ..... BT-42  
 Brake booster ..... BR-12  
 Brake control valve (Proportioning  
   valve) ..... BR-8  
 Brake fluid change ..... BR-5  
 Brake fluid level ..... MA-19  
 Brake fluid level and line check ..... BR-5  
 Brake hydraulic line ..... BR-7  
 Brake inspection ..... MA-19  
 Brake lines and cables inspection ..... MA-19  
 Brake master cylinder ..... BR-10  
 Brake pedal ..... BR-9  
 Bulb specifications ..... EL-379  
 Bumper, front ..... BT-5  
 Bumper, rear ..... BT-8  
 BUZZER - Wiring diagram ..... EL-99  
 BYPS/V - Wiring diagram ..... EC-482, 487

## C

Camshaft inspection ..... EM-40  
 Camshaft position sensor (CMPS) ..... EC-310  
 Camshaft position sensor (PHASE) ..... EC-310  
 Canister-See EVAP canister ..... EC-26  
 CHARGE - Wiring diagram ..... EL-31  
 Charging system ..... EL-30

# ALPHABETICAL INDEX

Chassis and body maintenance ..... MA-17  
 CIGAR - Wiring diagram ..... EL-119  
 Cigarette lighter ..... EL-119  
 Circuit breaker ..... EL-15  
 Clock ..... EL-120  
 CLOCK - Wiring diagram ..... EL-120  
 Closed loop control ..... EC-407  
 Closed throttle position switch ..... EC-375  
 Clutch cover ..... CL-10  
 Clutch disc ..... CL-10  
 Clutch fluid level ..... MA-17  
 Clutch master cylinder ..... CL-7  
 Clutch operating cylinder ..... CL-8  
 Clutch pedal ..... CL-5  
 Clutch release bearing ..... CL-9  
 Clutch release mechanism ..... CL-9  
 Clutch withdrawal lever ..... CL-9  
 Coil spring (front) ..... FA-22  
 Coil spring (rear) ..... RA-11  
 Collision diagnosis ..... RS-58  
 Combination lamp, front, removal and  
 installation ..... BT-5  
 Combination lamp, rear, removal and  
 installation ..... BT-21  
 Combination meter ..... EL-80  
 Combination meter removal and instal-  
 lation - See Instrument panel ..... BT-13  
 Combination switch ..... EL-35  
 COMM - Wiring diagram ..... EL-192  
 Component Location ..... HA-53  
 Compression pressure ..... EM-12  
 Compressor clutch removal and  
 installation ..... HA-96  
 Compressor description ..... HA-12  
 Compressor mounting ..... HA-95  
 Compressor precaution ..... HA-6  
 Compressor special service tool ..... HA-6  
 Connecting rod ..... EM-59  
 Connecting rod bearing clearance ..... EM-63  
 Connecting rod bushing clearance ..... EM-64  
 Connector inspection ..... GI-19  
 Console box - See Instrument panel ..... BT-13  
 CONSULT for ABS ..... BR-44  
 CONSULT for engine ..... EC-73  
 CONSULT general information ..... GI-35  
 Control lever (M/T) ..... MT-10  
 Control valve (A/T) ..... AT-218  
 Converter housing installation ..... AT-191  
 Coolant mixture ratio ..... MA-9  
 Coolant replacement ..... MA-11  
 Cooling circuit (engine) ..... LC-8  
 Cooling fan control ..... EC-503  
 Cooling fan control system ..... LC-15  
 Cooling fan motor ..... EC-515  
 Cooling fan relay ..... EC-515  
 CORNER - Wiring diagram ..... EL-71  
 Cornering lamp ..... EL-70  
 Coupling sleeve (M/T) ..... MT-12  
 Crankshaft ..... EM-61  
 Crankshaft position sensor (POS) ..... EC-303

Crankshaft position sensor (POS)  
 chipping ..... EC-427  
 Crankshaft position sensor (REF) ..... EC-421  
 Cruise control - See ASCD ..... EL-152  
 Cylinder block ..... EM-57  
 Cylinder head ..... EM-37  
 Cylinder head bolt tightening ..... EM-46

## D

Daytime light system ..... EL-48  
 Daytime running light - See Daytime  
 light system ..... EL-48  
 DEF - Wiring diagram ..... EL-122  
 Detonation sensor - See Knock sensor ..... EC-299  
 Diagnosis sensor unit ..... RS-13  
 Differential gear (FF M/T) ..... MT-12, 26  
 Dimensions ..... GI-41  
 Direct ignition system ..... EC-40  
 Distributor ignition (DI) system ..... EC-23  
 D/LOCK - Wiring diagram ..... EL-228  
 Door mirror ..... BT-41  
 Door trim ..... BT-18  
 Door, front ..... BT-11  
 Door, rear ..... BT-12  
 Drive belt inspection ..... MA-10  
 Drive plate runout ..... EM-65  
 Drive shaft (front) ..... FA-13  
 Dropping resistor (A/T) ..... AT-131  
 DTRL - Wiring diagram ..... EL-51

## E

ECM input/output signal ..... EC-108  
 ECM-ABS/TCS COMM NG ..... EC-500  
 EGR temperature sensor ..... EC-434  
 EGR valve & EVAP canister purge con-  
 trol solenoid valve ..... EC-329  
 EGR volume control valve ..... EC-324  
 EGVC/V - Wiring diagram ..... EC-324  
 Electric sun roof ..... EL-144  
 Electrical diagnoses ..... GI-22  
 Electrical ignition system ..... EC-23  
 Electrical load signal circuit ..... EC-535  
 Electrical unit ..... Foldout  
 Engine compartment ..... BT-42  
 Engine control circuit diagram ..... EC-11  
 Engine control component parts  
 location ..... EC-14  
 Engine control module (ECM) ..... EC-383  
 Engine control system diagram and  
 chart ..... EC-12  
 Engine coolant temperature sensor  
 (ECTS) ..... EC-145, 161  
 Engine mounting control (Front) ..... EC-527  
 Engine oil filter replacement ..... MA-14  
 Engine oil precautions ..... GI-5  
 Engine oil replacement ..... MA-14

# ALPHABETICAL INDEX

Engine outer component parts ..... EM-8  
 Engine removal ..... EM-54  
 Engine room - See Engine  
   compartment ..... BT-42  
 Engine serial number ..... GI-40  
 EVAP canister ..... EC-26  
 EVAP canister vent control valve ..... EC-353  
 EVAP control system purge flow moni-  
   toring diagnosis ..... EC-470  
 EVAP vapor lines inspection ..... MA-16  
 Evaporative emission (EVAP) system ..... EC-26  
 Exhaust system ..... FE-4  
 Exhaust system inspection ..... MA-17  
 Exterior ..... BT-21

## F

Fan control amp. .... HA-85  
 Fast idle cam (FIC) inspection and  
   adjustment ..... EC-39  
 F/FOG - Wiring diagram ..... EL-67  
 Final drive (FF M/T) ..... MT-12, 26  
 Floor trim ..... BT-16  
 Flow charts ..... GI-32  
 Fluid temperature sensor (A/T) ..... AT-87, 153  
 Fluids ..... MA-8  
 Flywheel (clutch) ..... CL-11  
 Flywheel runout ..... EM-65  
 FO2H-L - Wiring  
   diagram ..... EC-166, 174, 180, 186, 196  
 Fog lamp, front ..... EL-66  
 Fog lamp, front, removal and  
   installation ..... BT-5  
 Fork rod (M/T) ..... MT-13  
 Forward clutch ..... AT-239  
 FRO2LH - Wiring diagram ..... EC-204  
 Front axle ..... FA-9  
 Front bumper ..... BT-5  
 Front combination lamp removal and  
   installation ..... BT-5  
 Front disc brake ..... BR-14  
 Front door ..... BT-11  
 Front engine mounting control ..... EC-527  
 Front fog lamp ..... EL-66  
 Front fog lamp removal and installation ..... BT-5  
 Front heated oxygen  
   sensor (HO2S) ..... EC-166, 174, 180, 186, 196  
 Front heated oxygen sensor (HO2S)  
   (Left bank) ..... EC-166, 174, 180, 186, 196  
 Front heated oxygen sensor (HO2S)  
   (Right bank) ..... EC-166, 174, 180, 186, 196  
 Front heated oxygen sensor (HO2S)  
   monitor ..... EC-64, 67  
 Front heated oxygen sensor heater  
   (Left bank) ..... EC-204  
 Front heated oxygen sensor heater  
   (Right bank) ..... EC-204  
 Front passenger air bag ..... RS-9  
 Front seat ..... BT-28  
 Front seat belt ..... RS-4

Front suspension ..... FA-21  
 Front washer ..... EL-106  
 Front wiper ..... EL-106  
 Fuel cut control (at no load & high  
   engine speed) ..... EC-25  
 Fuel filler lid ..... BT-8  
 Fuel filter replacement ..... MA-13  
 Fuel gauge ..... EL-80  
 Fuel injection system (Left bank) ..... EC-278, 284  
 Fuel injection system (Right bank) ..... EC-278  
 Fuel lid opener, electric ..... EL-151  
 Fuel line inspection ..... MA-12  
 Fuel precautions ..... GI-6  
 Fuel pressure check ..... EC-37  
 Fuel pressure release ..... EC-37  
 Fuel pump ..... EC-526  
 Fuel pump control module ..... EC-523  
 Fuel pump relay ..... EC-526  
 Fuel system ..... FE-3  
 FUELLH - Wiring diagram ..... EC-278, 284  
 Fuse ..... EL-15  
 Fuse block ..... Foldout  
 Fusible link ..... EL-15

## G

Garage jack and safety stand ..... GI-43  
 Gauges ..... EL-80  
 Gear components (M/T) ..... MT-12  
 Generic scan tool (GST) ..... EC-86  
 Grille ..... BT-21  
 Ground distribution ..... EL-16

## H

Harness connector ..... EL-3  
 Harness connector inspection ..... GI-19  
 Harness layout ..... EL-363  
 Hazard warning lamp ..... EL-59  
 Headlamp ..... EL-38  
 Headlamp removal and installation ..... BT-5  
 Headlining - See Roof trim ..... BT-19  
 Heated oxygen sensor (HO2S)  
   (front) ..... EC-166, 174, 180, 186, 196  
 Heated oxygen sensor (HO2S) (Front)  
   (Left bank) ..... EC-166, 174, 180, 186, 196  
 Heated oxygen sensor (HO2S) (Front)  
   (Right bank) ..... EC-166, 174, 180, 196  
 Heated oxygen sensor (HO2S) monitor ..... EC-67  
 Heated oxygen  
   sensor (rear) ..... EC-210, 219, 227, 235  
 Heated oxygen sensor heater  
   (Front)(Left bank) ..... EC-204  
 Heated oxygen sensor heater  
   (Front)(Right bank) ..... EC-204  
 Heated oxygen sensor monitor (HO2S)  
   (front) ..... EC-67  
 Heated seat ..... BT-29, EL-148

# ALPHABETICAL INDEX

Height (Dimensions)..... GI-41  
HFC134a (R134a) system precaution ..... HA-2  
HFC134a (R134a) system service  
    procedure..... HA-87  
HFC134a (R134a) system service tools ..... HA-7  
HFC134a system service equipment  
    precaution..... HA-9  
High clutch..... AT-235  
H/LAMP - Wiring diagram..... EL-40  
Hood ..... BT-5  
Horn..... EL-118  
HORN - Wiring diagram..... EL-118  
How to erase DTC for OBD system ..... EC-62  
H/PHON - Wiring diagram ..... EL-141  
HSEAT - Wiring diagram ..... EL-148

## I

IACV-AAC valve ..... EC-374  
Identification plate ..... GI-40  
Idle air control valve (IACV)..... EC-368  
Idle mixture ratio ..... EC-42  
Idle speed..... EC-42  
Ignition coil ..... EC-420  
Ignition timing ..... EC-42  
ILL - Wiring diagram ..... EL-75  
Illumination..... EL-73, 290  
I/MIRR - Wiring diagram..... EL-150  
In vehicle sensor ..... HA-76  
INFINITI communicator..... EL-323  
Injector..... EC-520  
Injector removal and installation ..... EC-38  
Input shaft (FF M/T)..... MT-12, 17  
Instrument panel ..... BT-13  
INT/L - Wiring diagram ..... EL-79  
Intake air temperature sensor..... EC-139  
Intake door control linkage adjustment..... HA-74  
Intake door motor..... HA-84  
Intake manifold ..... EM-10  
Intake sensor..... HA-78  
Integrated homelink transmitter ..... EL-357  
Interior ..... BT-16  
Interior lamp on-off control..... EL-294  
IVCS (Infiniti vehicle immobiliser  
    system)..... EL-308  
IVCS - Wiring diagram..... EL-332  
IVIS (Infiniti vehicle immobiliser sys-  
    tem) precautions ..... GI-2  
IVMS (In-Vehicle Multiplexing System) ..... EL-176  
IVMS-System description ..... EL-176  
IVMS-Trouble diagnoses ..... EL-195

## J

Jacking points..... GI-43  
Junction box (J/B) ..... Foldout

## K

Key illumination..... EL-294  
Keyless entry system - See Multi-re-  
    mote control system..... EL-245  
Knock sensor (KS) ..... EC-299

## L

Length (Dimensions) ..... GI-41  
License lamp..... EL-56  
Lifting points ..... GI-44  
Line pressure solenoid valve ..... AT-116, 127, 131  
Line pressure test (A/T) ..... AT-61  
Liquid gasket application ..... EM-2  
Location of electrical units ..... EL-360  
Low and reverse brake ..... AT-245  
Lubricant (R134a) A/C ..... HA-89  
Lubricants ..... MA-8  
Lubrication circuit (engine) ..... LC-4  
Lubrication-locks, hinges and hood  
    latches..... MA-21

## M

Magnet clutch..... HA-96  
Main drive gear (M/T) ..... MT-12  
Mainshaft (M/T)..... MT-12, 22  
Maintenance ..... MA-1  
Maintenance (engine) ..... MA-10  
MAJOR OVERHAUL..... AT-193  
Malfunction indicator lamp (MIL)..... EC-64  
Manual transaxle number..... GI-40  
Manual transmission oil replacement ..... MA-17  
MAP/BARO switch solenoid valve ..... EC-385  
Mass air flow sensor (MAFS)..... EC-122  
Master cylinder (brake) ..... BR-10  
Master cylinder (clutch) ..... CL-7  
Meter..... EL-80  
METER - Wiring diagram ..... EL-83  
MIL & Data link connectors circuit ..... EC-538  
MIRROR - Wiring diagram ..... EL-149  
Mirror, door ..... BT-41  
Mirror, out side ..... BT-41  
Misfire ..... EC-294  
Mode door control linkage adjustment..... HA-73  
Mode door motor..... HA-82  
Model variation ..... GI-38  
Molding - See Exterior..... BT-21  
M/T major overhaul ..... MT-11  
M/T removal and installation ..... MT-8  
MULTI - Wiring diagram..... EL-248  
Multi-remote control system ..... EL-245  
Multiport fuel injection (MFI) system..... EC-21  
Multiport fuel injection precautions..... GI-5

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

## N

|                                                   |        |
|---------------------------------------------------|--------|
| NATS (Nissan anti-theft system) .....             | EL-308 |
| NATS (Nissan anti-theft system) precautions ..... | GI-2   |
| NATS - Wiring diagram .....                       | EL-310 |
| NVH troubleshooting (BR) .....                    | BR-4   |
| NVH troubleshooting (CL) .....                    | CL-3   |
| NVH troubleshooting (FA) .....                    | FA-4   |
| NVH troubleshooting (M/T) .....                   | MT-5   |
| NVH troubleshooting (RA) .....                    | RA-3   |
| NVH troubleshooting (ST) .....                    | ST-5   |

## O

|                                                |                  |
|------------------------------------------------|------------------|
| Oil pan (engine) .....                         | EM-13            |
| Oil pressure (engine) .....                    | LC-5             |
| Oil pump (A/T) .....                           | AT-214           |
| Oil pump (engine) .....                        | LC-5             |
| Oil pump regulator valve (engine) .....        | LC-7             |
| Oil seal replacement (engine) .....            | EM-34            |
| On board diagnostic system .....               | EC-50            |
| Operating cylinder (clutch) .....              | CL-8             |
| ORVR (On-board Refueling Vapor Recovery) ..... | EC-31            |
| Out side mirror .....                          | BT-41            |
| Overdrive control switch .....                 | AT-178           |
| Overrun clutch .....                           | AT-239           |
| Overrun clutch solenoid valve .....            | AT-116, 127, 149 |
| Oxygen sensor monitor (O2S) (front) .....      | EC-67            |

## P

|                                            |             |
|--------------------------------------------|-------------|
| P/ANT - Wiring diagram .....               | EL-137      |
| Park/Neutral position switch .....         | EC-492      |
| Park/neutral position switch (M/T) .....   | MT-8        |
| Parking brake control .....                | BR-26       |
| Parking lamp .....                         | EL-56       |
| PCV (positive crankcase ventilation) ..... | EC-36       |
| PGC/V - Wiring diagram .....               | EC-458      |
| PHONE - Wiring diagram .....               | EL-143      |
| Piston assembly .....                      | EM-65       |
| Piston pin inspection .....                | EM-58       |
| Piston ring inspection .....               | EM-59       |
| Piston to bore clearance .....             | EM-60       |
| POWER - Wiring diagram .....               | EL-8        |
| Power door lock .....                      | EL-226      |
| Power door mirror .....                    | EL-149      |
| Power seat .....                           | EL-146      |
| Power steering fluid level .....           | MA-20, ST-7 |
| Power steering gear .....                  | ST-14       |
| Power steering hydraulic pressure .....    | ST-9        |
| Power steering oil pressure switch .....   | EC-530      |
| Power steering oil pump .....              | ST-24       |
| Power steering system bleeding .....       | ST-7        |
| Power supply routing .....                 | EL-7        |
| Power transistor .....                     | EC-420      |

|                                         |        |
|-----------------------------------------|--------|
| Power transistor & ignition coil .....  | EC-414 |
| Power window .....                      | EL-210 |
| Precautions (General) .....             | GI-3   |
| Pressure plate - See Clutch cover ..... | CL-10  |
| Pressure test (A/T) .....               | AT-61  |

## R

|                                                                 |                       |
|-----------------------------------------------------------------|-----------------------|
| Radiator .....                                                  | LC-15                 |
| Radio - See Audio .....                                         | EL-130                |
| Rear air spoiler .....                                          | BT-21                 |
| Rear axle .....                                                 | RA-7                  |
| Rear bumper .....                                               | BT-8                  |
| Rear combination lamp removal and installation .....            | BT-21                 |
| Rear disc brake .....                                           | BR-18                 |
| Rear door .....                                                 | BT-12                 |
| Rear heated oxygen sensor (HO2S) .....                          | EC-210, 219, 227, 235 |
| Rear heated oxygen sensor (HO2S) heater .....                   | EC-267, 273           |
| Rear seat .....                                                 | BT-30                 |
| Rear seat belt .....                                            | RS-5                  |
| Rear suspension .....                                           | RA-10                 |
| Rear window .....                                               | BT-39                 |
| Rear window defogger .....                                      | EL-121                |
| Refrigerant connection precaution .....                         | HA-3                  |
| Refrigerant general precaution .....                            | HA-2                  |
| Refrigerant lines .....                                         | HA-91                 |
| Release bearing (clutch) .....                                  | CL-9                  |
| Removal and installation (A/T) .....                            | AT-190                |
| Reverse clutch .....                                            | AT-232                |
| Reverse idler shaft (M/T) .....                                 | MT-12                 |
| Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) ..... | MT-8                  |
| Reverse main gear (M/T) .....                                   | MT-12                 |
| Revolution sensor (A/T) .....                                   | AT-90                 |
| RO2H-L - Wiring diagram .....                                   | EC-210                |
| Road wheel size .....                                           | GI-41                 |
| Roof trim .....                                                 | BT-19                 |
| ROOM/L - Wiring diagram .....                                   | EL-295                |
| RRO2LH - Wiring diagram .....                                   | EC-248, 267           |
| RRO2RH - Wiring diagram .....                                   | EC-241                |

## S

|                                        |             |
|----------------------------------------|-------------|
| SAE J1930 terminology list .....       | GI-47       |
| SAE J1979 - Mode 1 - 7 .....           | EC-50       |
| Seal - See Exterior .....              | BT-21       |
| SEAT - Wiring diagram .....            | EL-146      |
| Seat belt inspection .....             | MA-21, RS-6 |
| Seat belt pre-tensioner .....          | RS-9        |
| Seat belt pre-tensioner disposal ..... | RS-20       |
| Seat belt, front .....                 | RS-4        |
| Seat belt, rear .....                  | RS-5        |
| Seat, front .....                      | BT-28       |
| Seat, rear .....                       | BT-30       |
| Self-diagnostic results .....          | EC-64       |

# ALPHABETICAL INDEX

|                                            |                           |
|--------------------------------------------|---------------------------|
| SHIFT - Wiring diagram .....               | AT-181                    |
| Shift control components (M/T) .....       | MT-13                     |
| Shift fork (M/T) .....                     | MT-13                     |
| Shift lever .....                          | MT-10                     |
| Shift schedule .....                       | AT-285                    |
| Shift solenoid                             |                           |
| valve A (A/T) .....                        | AT-97, 107, 116, 127, 135 |
| Shift solenoid                             |                           |
| valve B (A/T) .....                        | AT-97, 102, 116, 127, 139 |
| Shock absorber (rear) .....                | RA-11                     |
| Side air bag .....                         | RS-9                      |
| Side trim .....                            | BT-16                     |
| SMJ (super multiple junction) .....        | Foldout                   |
| Spare tire size .....                      | GI-41                     |
| Spark plug replacement .....               | MA-15                     |
| Speedometer .....                          | EL-80                     |
| Spiral cable .....                         | RS-15                     |
| Spot lamp .....                            | EL-79                     |
| Spring (Wheelarch) height .....            | FA-6                      |
| SROOF - Wiring diagram .....               | EL-145                    |
| SRS - See Supplemental Restraint           |                           |
| System .....                               | RS-9                      |
| SRS - Wiring diagram .....                 | RS-31                     |
| SRS Trouble diagnoses .....                | RS-26                     |
| Stabilizer bar (front) .....               | FA-23                     |
| Stall test (A/T) .....                     | AT-58                     |
| Standardized relay .....                   | EL-5                      |
| START - Wiring diagram .....               | EL-26                     |
| Starter .....                              | EL-28                     |
| Starting system .....                      | EL-25                     |
| Steering gear and linkage inspection ..... | MA-20                     |
| Steering linkage .....                     | ST-14                     |
| Steering switch .....                      | EL-37                     |
| Steering wheel and column .....            | ST-10                     |
| Steering wheel play .....                  | ST-6                      |
| Steering wheel turning force .....         | ST-8                      |
| Step lamp .....                            | EL-302                    |
| STEP/L - Wiring diagram .....              | EL-303                    |
| Stop lamp .....                            | EL-63                     |
| STOP/L - Wiring diagram .....              | EL-63                     |
| Striking rod (M/T) .....                   | MT-13                     |
| Strut (front) .....                        | FA-22                     |
| Sun roof, electric .....                   | EL-144                    |
| Sunload sensor .....                       | HA-77                     |
| Sunroof .....                              | BT-31                     |
| Supplemental Restraint System .....        | RS-9                      |
| Supplemental restraint system - Wiring     |                           |
| diagram .....                              | RS-31                     |
| S/VCSW - Wiring diagram .....              | EC-409                    |
| SW/ILL - Wiring diagram .....              | EL-291                    |
| Swirl control valve control solenoid       |                           |
| valve .....                                | EC-394                    |
| Swirl control valve control vacuum         |                           |
| check switch .....                         | EC-409                    |
| SWL/V - Wiring diagram .....               | EC-394                    |
| Symbols and abbreviations .....            | GI-9                      |
| Synchronizer (M/T) .....                   | MT-12                     |
| System readiness test (SRT) code .....     | EC-52                     |

## T

|                                           |                  |    |
|-------------------------------------------|------------------|----|
| Tachometer .....                          | EL-80            |    |
| Tail lamp .....                           | EL-56            | GI |
| TAIL/L - Wiring diagram .....             | EL-56            |    |
| Tank fuel temperature sensor .....        | EC-290           |    |
| TCM circuit diagram .....                 | AT-12            | MA |
| TCM inspection table .....                | AT-76            |    |
| Telephone .....                           | EL-141           |    |
| THEFT - Wiring diagram .....              | EL-268           | EM |
| Theft warning system .....                | EL-263           |    |
| Thermostat .....                          | LC-14            | LC |
| Three way catalyst .....                  | EC-330, 333      |    |
| Three way catalyst function               |                  |    |
| (Left bank) .....                         | EC-330, 333      | EC |
| Three way catalyst function (Right        |                  |    |
| bank) .....                               | EC-330, 333      |    |
| Three way catalyst precautions .....      | GI-5             | FE |
| Throttle bodies .....                     | EM-10            |    |
| Throttle position sensor (TPS) .....      | EC-150           |    |
| Throttle position switch .....            | AT-145, 179      | CL |
| Throwout bearing - See Clutch release     |                  |    |
| bearing .....                             | CL-9             |    |
| Tie-rod .....                             | ST-18            | MT |
| Tie-rod ball joints .....                 | ST-18            |    |
| Tightening torque of standard bolts ..... | GI-46            |    |
| Timing chain .....                        | EM-20            | AT |
| Tire rotation .....                       | MA-19            |    |
| Tire size .....                           | GI-41            | FA |
| TLID - Wiring diagram .....               | EL-151           |    |
| Torque converter installation .....       | AT-191           |    |
| Torque convertor clutch                   |                  |    |
| solenoid valve .....                      | AT-116, 120, 127 | RA |
| Tow truck towing .....                    | GI-45            |    |
| Transmission case (M/T) .....             | MT-11            | BR |
| TRANSMT - Wiring diagram .....            | EL-357           |    |
| Transverse link (front) .....             | FA-24            |    |
| Tread-FR&RR (Dimensions) .....            | GI-41            | ST |
| Trim .....                                | BT-16            |    |
| Triple pressure switch .....              | HA-11, 72        |    |
| Trouble diagnoses .....                   | GI-32            | RS |
| Trunk lid .....                           | BT-8             |    |
| Trunk lid opener - See Trunk lid .....    | BT-8             |    |
| Trunk lid opener, electric .....          | EL-151           | BT |
| Trunk lid trim .....                      | BT-20            |    |
| Trunk room lamp .....                     | EL-79            | HA |
| Trunk room trim .....                     | BT-20            |    |
| TURN - Wiring diagram .....               | EL-60            |    |
| Turn signal lamp .....                    | EL-59            | EL |
| Two trip detection logic .....            | EC-50            |    |
| Two-pole lift .....                       | GI-44            |    |

## U

|                  |       |
|------------------|-------|
| Under body ..... | BT-44 |
|------------------|-------|

IDX

# ALPHABETICAL INDEX

## V

|                                                  |             |
|--------------------------------------------------|-------------|
| Vacuum cut valve .....                           | EC-491      |
| Vacuum hose (brake system) .....                 | BR-13       |
| Vacuum hose drawing (Engine control) .....       | EC-18       |
| Valve clearance .....                            | EM-50       |
| Valve guide .....                                | EM-41       |
| Valve seat .....                                 | EM-43       |
| Valve spring .....                               | EM-44       |
| Vehicle identification number .....              | GI-39       |
| Vehicle recovery (freeing a stuck vehicle) ..... | GI-45       |
| Vehicle speed sensor (VSS) .....                 | EC-364      |
| VENT/V - Wiring diagram .....                    | EC-465, 476 |
| Viscosity number (SAE) .....                     | MA-8        |
| Viscous coupling (FF M/T) .....                  | MT-8, 12    |

## W

|                             |        |
|-----------------------------|--------|
| WARN - Wiring diagram ..... | EL-93  |
| Warning buzzer .....        | EL-98  |
| Warning lamps .....         | EL-92  |
| Washer, front .....         | EL-106 |
| Water pump .....            | LC-10  |

|                                                   |        |
|---------------------------------------------------|--------|
| Water temperature gauge .....                     | EL-80  |
| Weatherstrip - See Exterior .....                 | BT-21  |
| Wheel alignment (front) .....                     | FA-7   |
| Wheel alignment (rear) .....                      | RA-6   |
| Wheel balance .....                               | MA-19  |
| Wheel bearing (front axle) .....                  | FA-7   |
| Wheel bearing (rear) .....                        | RA-5   |
| Wheel hub (rear) .....                            | RA-7   |
| Wheel sensors (ABS) .....                         | BR-31  |
| Wheel size .....                                  | GI-41  |
| Wheelarch height .....                            | FA-6   |
| Wheelbase (Dimensions) .....                      | GI-41  |
| Wide open & closed throttle position switch ..... | EC-150 |
| Width (Dimensions) .....                          | GI-41  |
| WINDOW - Wiring diagram .....                     | EL-212 |
| Window antenna .....                              | EL-138 |
| Window, rear .....                                | BT-39  |
| Windshield .....                                  | BT-39  |
| WIPER - Wiring diagram .....                      | EL-108 |
| Wiper, front .....                                | EL-106 |
| Wiring Diagram (Cell code) list .....             | EL-380 |
| Wiring diagrams .....                             | GI-10  |
| Withdrawal lever (clutch) .....                   | CL-9   |
| Wrist pin - See Piston pin inspection .....       | EM-58  |