

SECTION PWO

POWER OUTLET

CONTENTS

POWER SOCKET	Inverter Unit	14
PRECAUTION	AC 120V Outlet Main Switch	14
POWER SOCKET	AC 120V Outlet	14
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	SYSTEM	15
PREPARATION	System Diagram	15
PREPARATION	System Description	15
Special Service Tool	Fail-safe	15
WIRING DIAGRAM	ECU DIAGNOSIS INFORMATION	17
POWER SOCKET	INVERTER UNIT	17
Wiring Diagram	Reference Value	17
REMOVAL AND INSTALLATION	Fail-safe	18
POWER SOCKET	WIRING DIAGRAM	20
Removal and Installation	INVERTER UNIT	20
AC 120 V OUTLET	Wiring Diagram	20
PRECAUTION	BASIC INSPECTION	27
PRECAUTIONS	DIAGNOSIS AND REPAIR WORK FLOW	27
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	Work Flow	27
Precaution for Work	DTC/CIRCUIT DIAGNOSIS	29
PREPARATION	POWER SUPPLY AND GROUND CIRCUIT	29
PREPARATION	Diagnosis Procedure	29
Special Service Tool	Component Inspection (Inverter Relay)	30
SYSTEM DESCRIPTION	AC 120 V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT	32
COMPONENT PARTS	Diagnosis Procedure	32
Component Parts Location	AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT	33
Component Description	Diagnosis Procedure	33
	Component Inspection (AC 120V Outlet Main Switch)	33
	AC 120 V POWER OUTPUT CIRCUIT	35
	Diagnosis Procedure	35

AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT	38	REMOVAL AND INSTALLATION	43
Diagnosis Procedure (150W Indicator)	38	INVERTER UNIT	43
Diagnosis Procedure (400W Indicator)	38	Removal and Installation	43
Component Inspection (AC 120V Outlet Main Switch Indicators)	39	AC 120V OUTLET MAIN SW	44
SYMPTOM DIAGNOSIS	40	Removal and Installation	44
NO OUTPUT FROM AC 120 V OUTLET	40	AC 120 V OUTLET	45
Diagnosis Procedure	40	Removal and Installation - Front	45
AC 120 V OUTLET MAIN SWITCH INDICATOR DOES NOT TURN ON	41	Removal and Installation - Rear	45
Diagnosis Procedure	41	SERVICE DATA AND SPECIFICATIONS (SDS)	46
NORMAL OPERATING CONDITION	42	SERVICE DATA AND SPECIFICATIONS (SDS)	46
Description	42	AC 120V Power Outlet	46

PRECAUTION

POWER SOCKET

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011559560

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

PREPARATION

< PREPARATION >

[POWER SOCKET]


PREPARATION

PREPARATION

Special Service Tool

INFOID:0000000011559562

The actual shape of the tools may differ from those illustrated here.

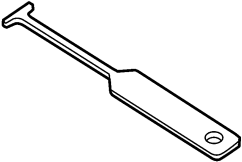Tool number (TechMate No.) Tool name	Description
— (J-42059) Power socket removal tool  AWMIA1148GB	Removing power sockets

POWER SOCKET

< WIRING DIAGRAM >


[POWER SOCKET]

WIRING DIAGRAM

POWER SOCKET

Wiring Diagram

INFOID:0000000011559563

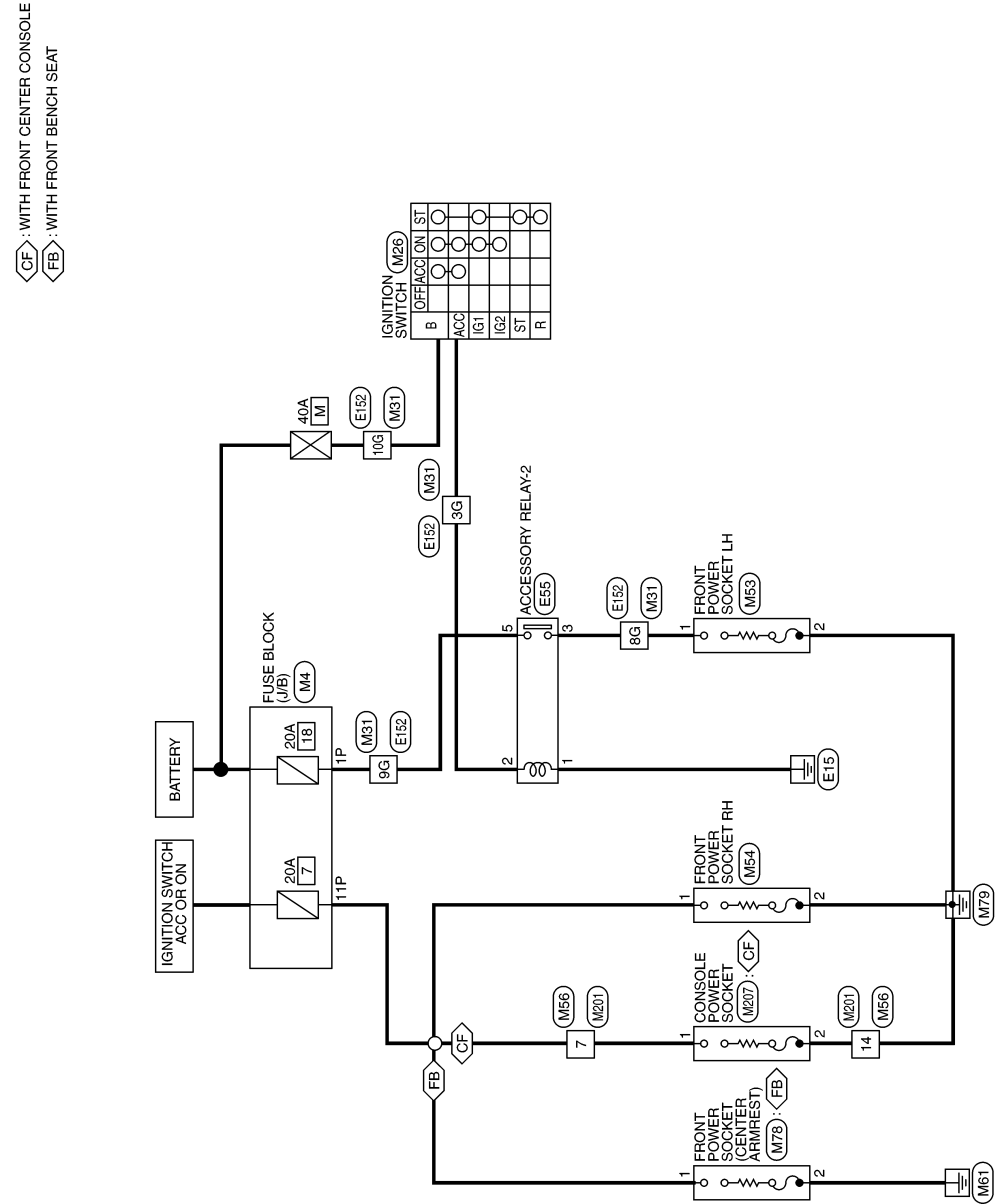

POWER SOCKET

PWO

POWER SOCKET CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1P	G	-
11P	G/W	-

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
B	G	-
ACC	V	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

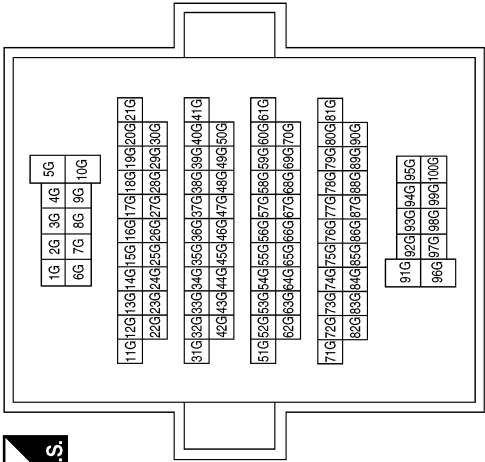

Terminal No.	Color of Wire	Signal Name
3G	V	-
8G	G	-
9G	G	-
10G	G	-

Connector No.	M53
Connector Name	FRONT POWER SOCKET
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-

POWER SOCKET

< WIRING DIAGRAM >


[POWER SOCKET]

Connector No.	M78
Connector Name	FRONT POWER SOCKET (CENTER ARMREST)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/W	—
2	B	—

Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
7	L/W	—
14	B	—

Connector No.	M54
Connector Name	FRONT POWER SOCKET RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G/W	—
2	B	—

Connector No.	E55
Connector Name	ACCESSORY RELAY-2
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	B	—
2	V	—
3	G	—
5	G	—

Connector No.	M207
Connector Name	CONSOLE POWER SOCKET
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/W	—
2	B	—

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
7	L/W	—
14	B	—


ABMIA6074GB

A
B
C
D
E
F
G
H
I
J
K
L
P

PWO

Terminal No.	Color of Wire	Signal Name
3G	V	-
8G	G	-
9G	G	-
10G	G	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

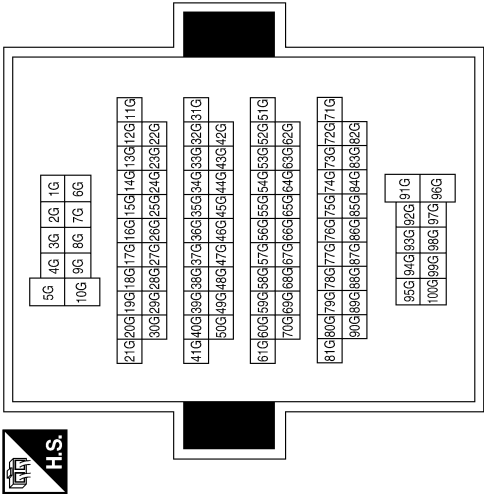

REMOVAL AND INSTALLATION

POWER SOCKET

Removal and Installation

INFOID:0000000011559564

FRONT POWER SOCKET (RH/LH), FRONT POWER SOCKET (CENTER ARMREST) OR CONSOLE POWER SOCKET.

NOTE:


If unable to use the tool because of power socket location or access to the harness connector, then further removal of interior components may be required. Refer to [IP-15, "Exploded View"](#) (Front Power Socket) to remove cluster lid C and/or [IP-21, "Removal and Installation"](#) [Console Power Socket or Front Power Socket (Center Armrest)] if equipped] to remove the center console.

Removal


1. Remove the fuse for the power socket.
2. Insert one end of the Tool (A) into one of the square holes inside the power socket.

Tool number: — (J-42059)

3. Lift up the handle of the Tool until the other end of the Tool is inside the socket and snaps into the other square hole in the power socket.
4. Pull the power socket straight out with the Tool.

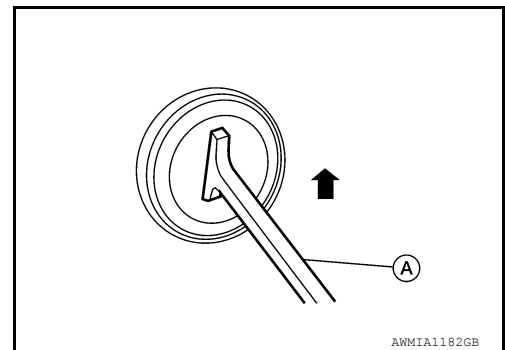

5. Disconnect power socket connector.
6. Remove ring from power socket finisher while pressing pawls.

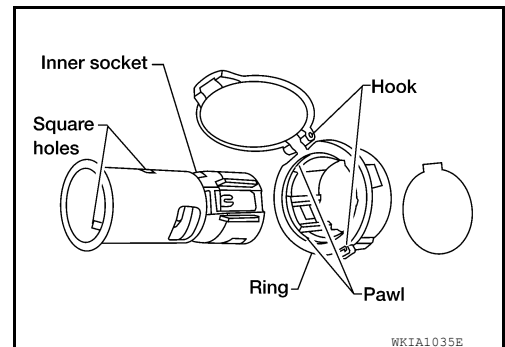


Installation

Installation is in the reverse order of removal.

NOTE:

Make sure to align the tab with the square notched area during installation.

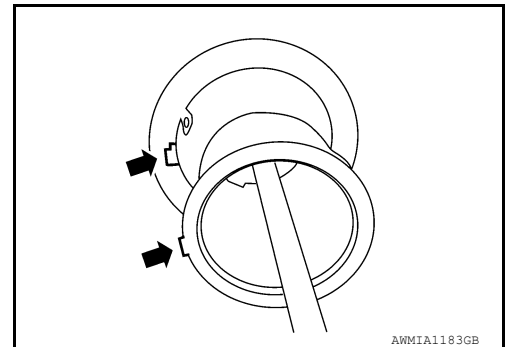

REAR CARGO POWER SOCKET (CARGO BED)

Removal

1. Remove the fuse for the power socket.
2. Remove the rivets attaching the rear cargo power socket finisher to the cargo bed.
3. Disconnect the harness connector from the power socket and remove.

POWER SOCKET

< REMOVAL AND INSTALLATION >

[POWER SOCKET]

Installation

Installation is in the reverse order of removal.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011559565

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:0000000011559566

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO


PREPARATION

PREPARATION

Special Service Tool

INFOID:0000000011559567

The actual shape of the tools may differ from those illustrated here.

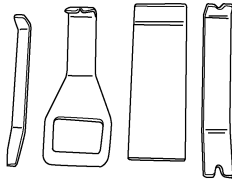
Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim Tool Set  AWJIA04832Z	Removing trim components

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011559568

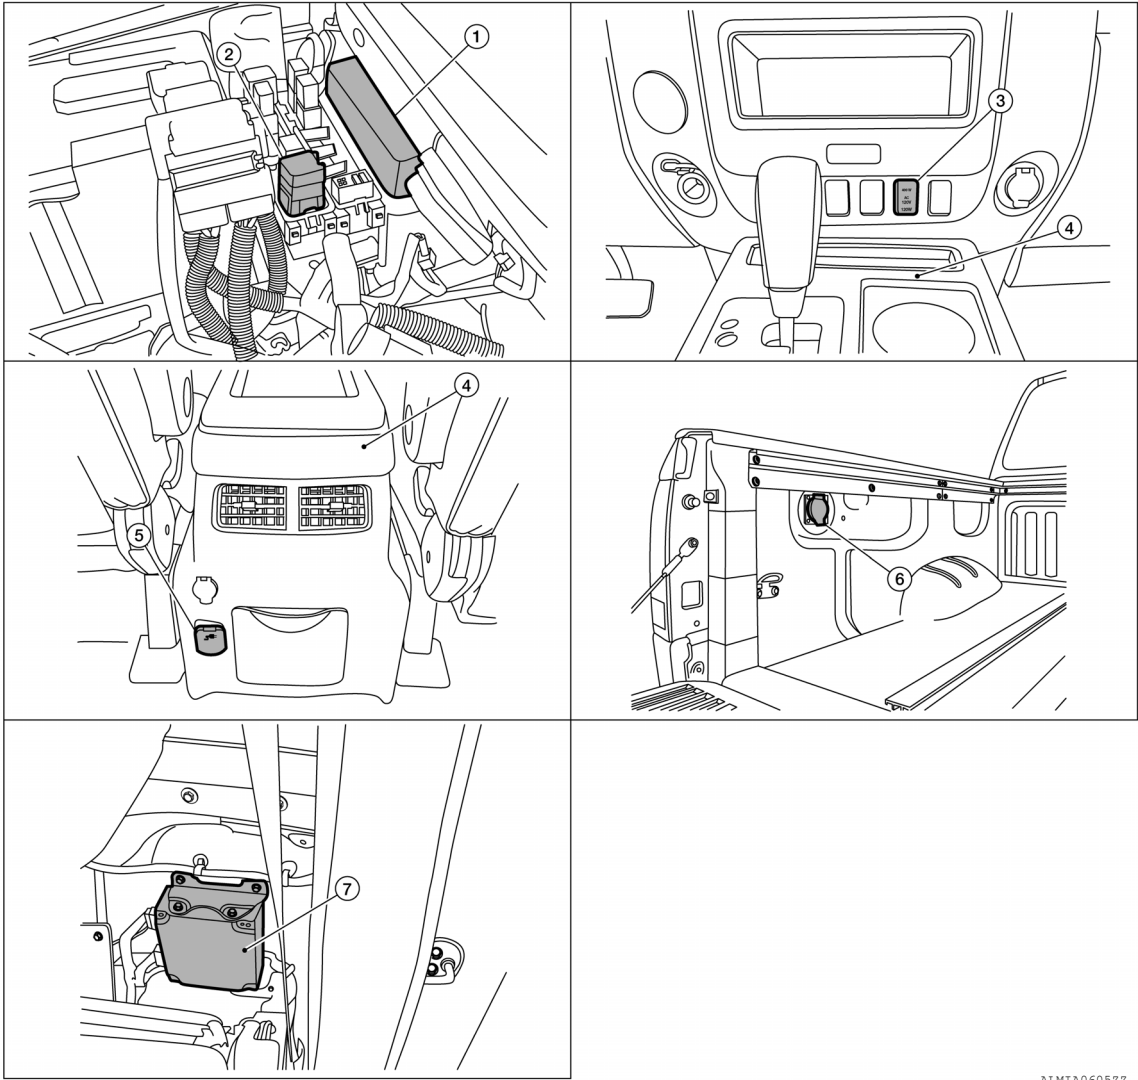

ALMIA06052Z

1. IPDM E/R

2. Inverter relay (view with relay box cover removed)

3. AC 120V outlet main switch
4. Center console

5. AC 120V outlet front

6. AC 120V outlet rear (if equipped)
7. Inverter unit (behind left rear seat back) (view with rear panel removed)

Component Description

INFOID:0000000011559569

Component	Reference
Inverter unit	PWO-14, "Inverter Unit"
AC 120V outlet main switch	PWO-14, "AC 120V Outlet Main Switch"
AC 120V outlet	PWO-14, "AC 120V Outlet"

A
B
C
D
E
F
G
H
I
J
K
L

N
O
P

PWO

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AC 120 V OUTLET]

Inverter Unit

INFOID:0000000011559570

The inverter unit converts 12V DC to 120V AC.

AC 120V Outlet Main Switch

INFOID:0000000011559571

The AC outlet main switch allows operation of the inverter unit in 150W AC 120V and 400W AC 120V modes.

AC 120V Outlet


INFOID:0000000011559572

The AC 120V outlet front and AC 120V outlet rear (if equipped) allow use of AC components up to 400W.

SYSTEM

System Diagram

INFOID:0000000011559573

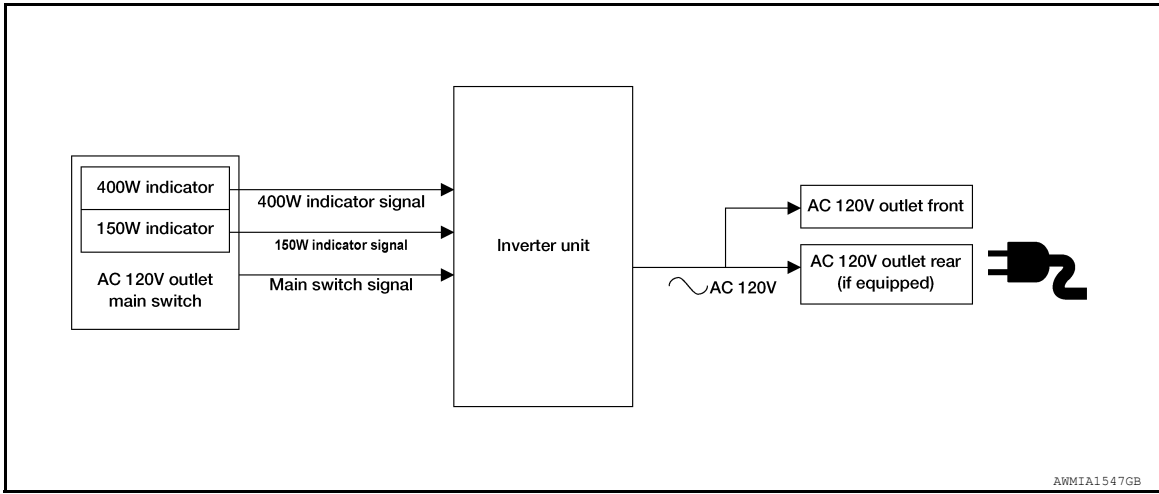

System Description

INFOID:0000000011559574

- When turning ON the AC 120V outlet main switch with the ignition switch ON, the 150W indicator turns ON and the inverter unit is activated allowing the use of devices up to 150W.
- When the vehicle is placed in P (Park) with the ignition switch ON, turning ON the AC 120V outlet main switch turns ON the 400W indicator and the inverter unit is activated, allowing the use of devices up to 400W.
- The inverter unit converts 12V DC to 120V AC and outputs the converted voltage to the AC 120V outlet front and AC 120V outlet rear (if equipped) two seconds after the AC 120V outlet main switch is turned ON.

Fail-safe

INFOID:0000000011559575

When a malfunction listed below occurs, the inverter unit turns OFF the AC 120V outlet main switch indicator and stops the output.

Malfunction item	Fail-safe condition	Fail-safe cancellation condition
Inverter unit power supply voltage is greater than 15V	When inverter unit input voltage rises above 15V, the output will be suspended to protect the inverter unit.	After the inverter unit power supply voltage drops below 15V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit power supply voltage is less than 11.5V for 2 seconds or more	When inverter unit input voltage is lowered, the output will be suspended to protect the battery from running out.	After the inverter unit power supply voltage rises above 11.5V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit power supply voltage is less than 9V		
Inverter unit AC 120V output voltage is greater than 170V	When inverter unit AC 120V output voltage is greater than 170V, the output will be suspended.	After the inverter unit AC 120V output voltage drops below 170V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit output current is greater than 3.7A (400W mode)	When inverter unit output current rises above 3.7A, the output will be suspended to prevent over current (e.g., connecting an electric appliance exceeding rated output).	After the inverter unit output current drops below 3.7A, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit input current is greater than 13.3A (150W mode)	When inverter unit input current rises above 13.3A, the output will be suspended to prevent over current (e.g., connecting an electric appliance exceeding rated output).	After the inverter unit input current drops below 13.3A, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.

SYSTEM

< SYSTEM DESCRIPTION >

[AC 120 V OUTLET]

Malfunction item	Fail-safe condition	Fail-safe cancellation condition
Inverter unit is overheated	When the inverter unit is overheated [thermistor temperature above 100°C (212°F)], the output will be suspended to protect the inverter unit.	After the inverter unit temperature is lowered, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit output signal (AC 120V output signal) is shorted	When inverter unit output signal is shorted, the output will be suspended.	After recovering from inverter unit output signal short, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.

INVERTER UNIT

< ECU DIAGNOSIS INFORMATION >

[AC 120 V OUTLET]


ECU DIAGNOSIS INFORMATION

INVERTER UNIT


Reference Value

INFOID:0000000011559576

TERMINAL LAYOUT

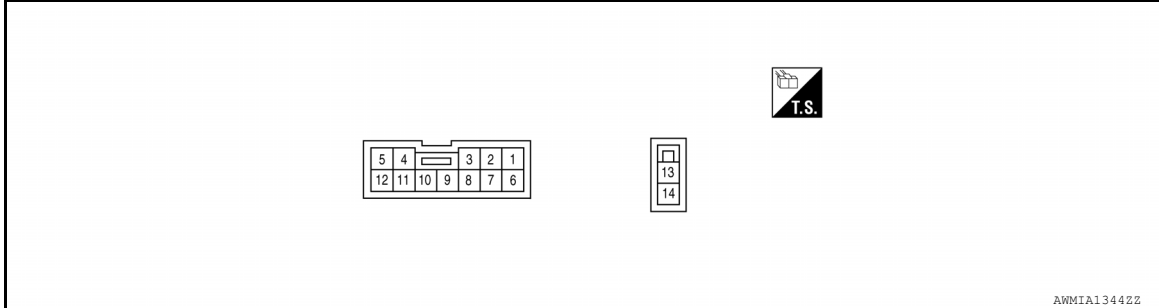


PHYSICAL VALUES

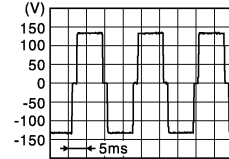Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
1 (L)	Ground	AC sw signal input	Input	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON	12V
3 (G)	Ground	400W indicator drive signal	Input	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON	12V
5 (G)	11 (BR)	AC output 1	Output	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON (Using circuit tester)	AC 120V
					AC 120V outlet main switch ON (Using oscilloscope)	Reference value  RMS 120V JSMIA0397GB AC 120V
6 (W)	Ground	Input park signal	Input	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON with A/T selec- tor lever in P (Park)	12V
7 (SB)	Ground	RLY output signal	Input	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON	12V

INVERTER UNIT

< ECU DIAGNOSIS INFORMATION >

[AC 120 V OUTLET]

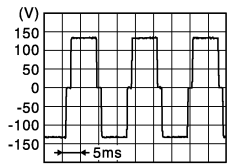Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
11 (BR)	5 (G)	AC output 2	Output	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON (Using circuit tester)	AC 120V
					AC 120V outlet main switch ON (Using oscilloscope)	Reference value  JSMIA0397GB AC 120V
13 (B)	Ground	Ground	—	Ignition switch ON		0V
14 (W)		Battery power supply	Input	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON	Battery voltage

CAUTION:

- To measure AC 120V output signal, always use the circuit tester or oscilloscope AC range. Never allow the probes to contact each other.
- Because of modified sine wave output of the AC 120V output signal, voltage cannot be measured accurately without using a circuit tester that can measure true RMS (root mean square).

Fail-safe

INFOID:0000000011559577

When a malfunction listed below occurs, the inverter unit turns OFF the AC 120V outlet main switch indicator and stops the output.

Malfunction item	Fail-safe condition	Fail-safe cancellation condition
Inverter unit power supply voltage is greater than 15V	When inverter unit input voltage rises above 15V, the output will be suspended to protect the inverter unit.	After the inverter unit power supply voltage drops below 15V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit power supply voltage is less than 11.5V for 2 seconds or more	When inverter unit input voltage is lowered, the output will be suspended to protect the battery from running out.	After the inverter unit power supply voltage rises above 11.5V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit power supply voltage is less than 9V		
Inverter unit AC 120V output voltage is greater than 170V	When inverter unit AC 120V output voltage is greater than 170V, the output will be suspended.	After the inverter unit AC 120V output voltage drops below 170V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit output current is greater than 3.7A (400W mode)	When inverter unit output current rises above 3.7A, the output will be suspended to prevent over current (e.g., connecting an electric appliance exceeding rated output).	After the inverter unit output current drops below 3.7A, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit input current is greater than 13.3A (150W mode)	When inverter unit input current rises above 13.3A, the output will be suspended to prevent over current (e.g., connecting an electric appliance exceeding rated output).	After the inverter unit input current drops below 13.3A, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.

INVERTER UNIT

< ECU DIAGNOSIS INFORMATION >

[AC 120 V OUTLET]

Malfunction item	Fail-safe condition	Fail-safe cancellation condition
Inverter unit is overheated	When the inverter unit is overheated [thermistor temperature above 100°C (212°F)], the output will be suspended to protect the inverter unit.	After the inverter unit temperature is lowered, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit output signal (AC 120V output signal) is shorted	When inverter unit output signal is shorted, the output will be suspended.	After recovering from inverter unit output signal short, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.

A

B

C

D

E

F

G

H

I

J

K

L

PWO


N

O

P

Wiring Diagram

INFOID:0000000011559578

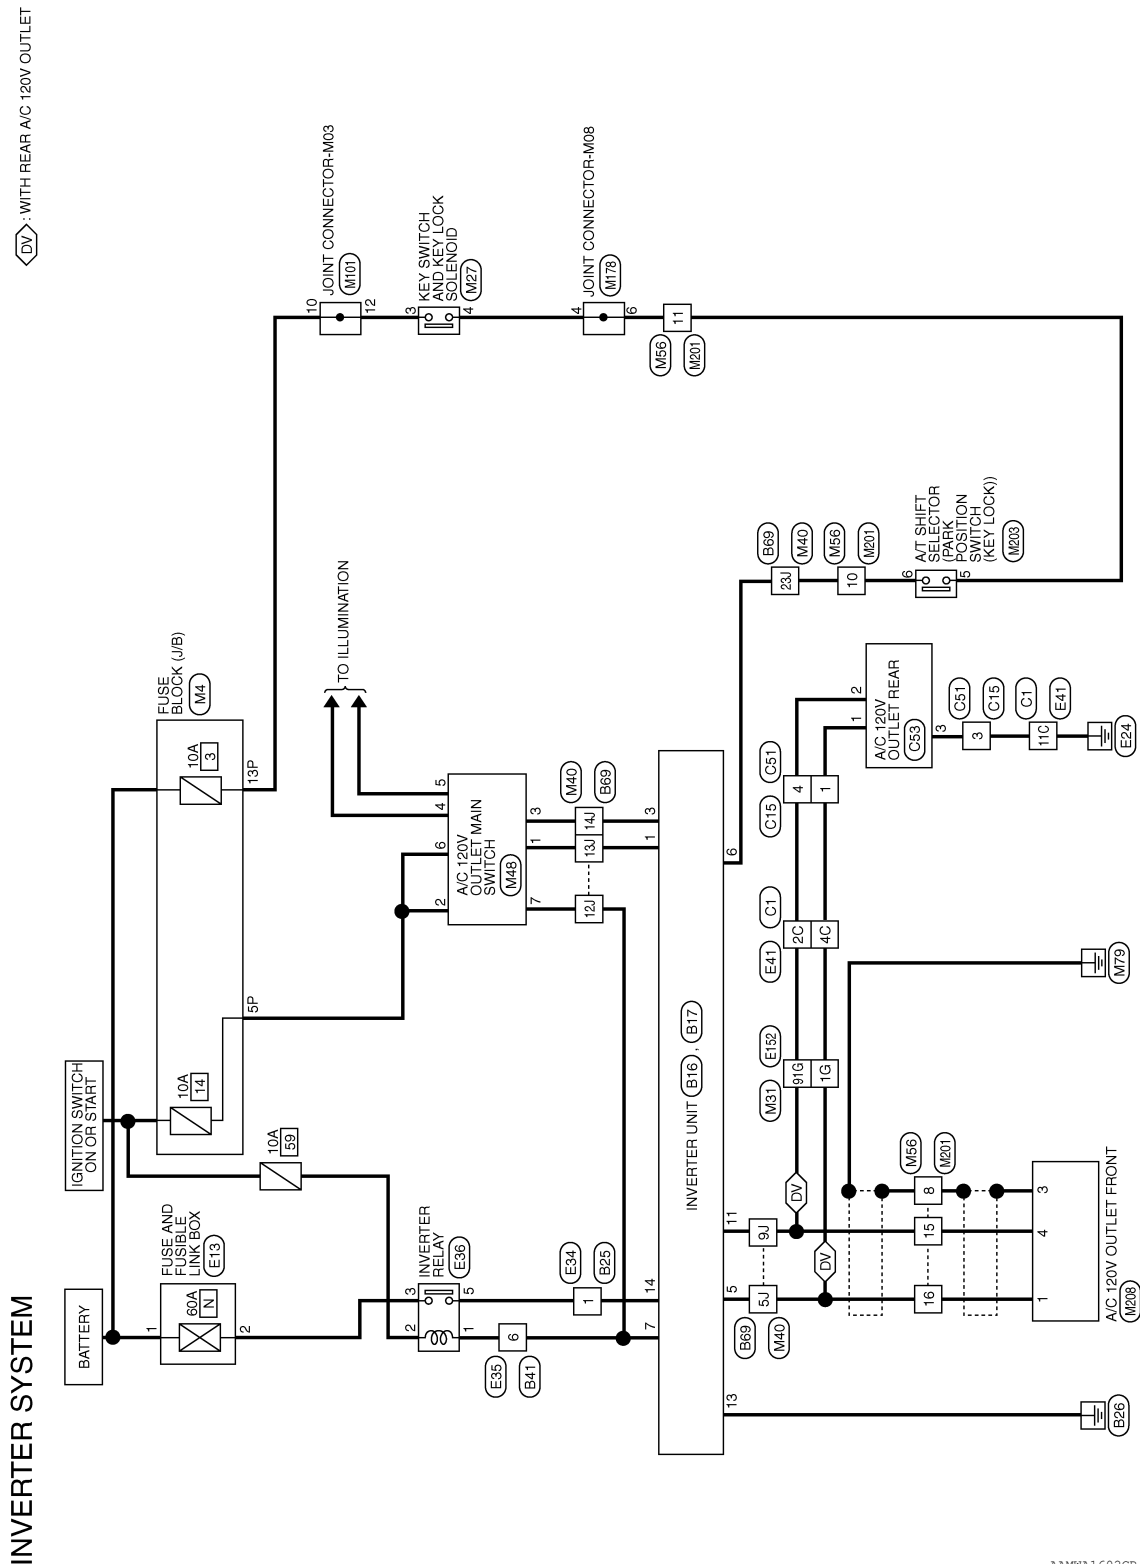

AAMWA1602GB

INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]


INVERTER SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5P	O/L	-
13P	P	-

Connector No.	M27
Connector Name	KEY SWITCH AND KEY LOCK SOLENOID
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
3	P	-
4	B/R	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

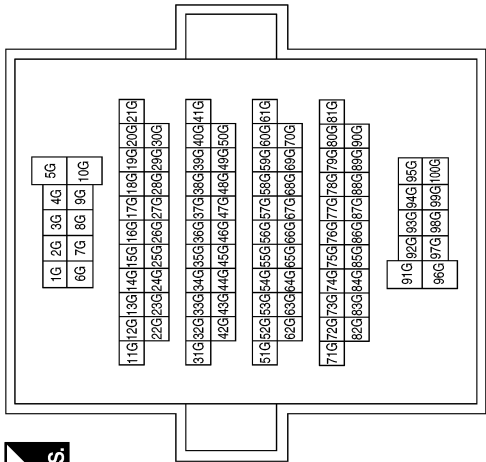

Terminal No.	Color of Wire	Signal Name
1G	G	-
91G	BR	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

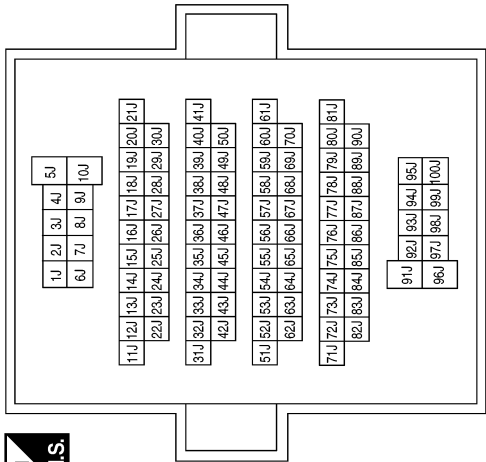


Terminal No.	Color of Wire	Signal Name
5J	G	-
9J	BR	-
12J	SB	-
13J	L	-
14J	G	-
23J	W	-

INVERTER UNIT

< WIRING DIAGRAM >


[AC 120 V OUTLET]

Connector No.	M101
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE

 


Terminal No.	Color of Wire	Signal Name
10	P	-
12	P	-

Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	SHIELD	-
10	L/R	-
11	B/R	-
15	BR	-
16	G	-

Connector No.	M48
Connector Name	A/C 120V OUTLET MAIN SWITCH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-
3	G	-
4	V	-
5	BR	-
6	R	-
7	SB	-

Connector No.	M203
Connector Name	A/T SHIFT SELECTOR (FLOOR SHIFT)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B/R	-
6	L/R	-

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	SHIELD	-
10	L/R	-
11	B/R	-
15	BR	-
16	G	-

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
4	B/R	-
6	B/R	-

ABMIA6080GB

INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]

Connector No.	M208
Connector Name	A/C 120V OUTLET FRONT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
3	SHIELD	-
4	BR	-

Connector No.	E13
Connector Name	FUSE AND FUSIBLE LINK BOX
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W	-
2	R	-

Connector No.	E34
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E35
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
6	SB	-

Connector No.	E36
Connector Name	INVERTER RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	L/W	-
3	R	-
4	W	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

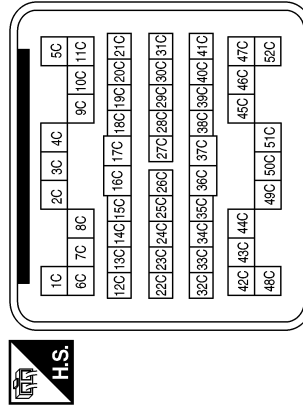

Terminal No.	Color of Wire	Signal Name
2C	BR	-
4C	G	-
11C	B	-

ABMIA6081GB


A
B
C
D
E
F
G
H
I
J
K
L
PWO
N
O
P

INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]


Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

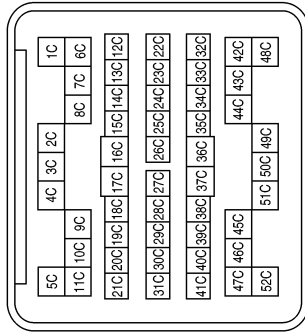

Terminal No.	Color of Wire	Signal Name
2C	BR	-
4C	G	-
11C	B	-

Terminal No.	Color of Wire	Signal Name
1G	G	-
91G	BR	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

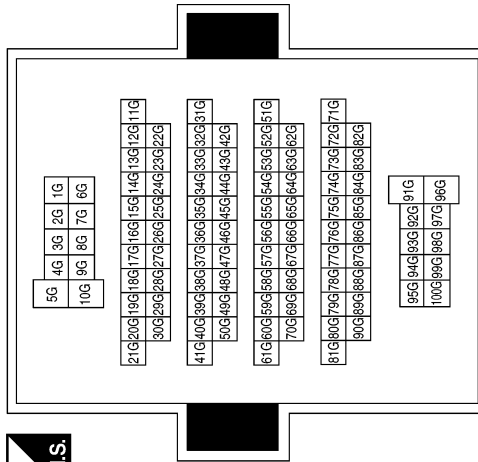


Connector No.	C53
Connector Name	A/C 120V OUTLET REAR
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	G	-
2	BR	-
3	B	-

Connector No.	C51
Connector Name	WIRE TO WIRE
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
1	G	-
3	B	-
4	BR	-

Connector No.	C15
Connector Name	WIRE TO WIRE
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
1	G	-
3	B	-
4	BR	-

ABMIA6082GB

INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]

Connector No.	B17
Connector Name	INVERTER UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
13	B	GND
14	W	POWER


Terminal No.	Color of Wire	Signal Name
7	SB	RLY OUTPUT
8	-	-
9	-	-
10	-	-
11	BR	BR AC OUTPUT 2
12	-	-

Connector No.	B16
Connector Name	INVERTER UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	AC SW SIGNAL INPUT
2	-	-
3	G	400W INDICATOR DRIVE
4	-	-
5	G	AC OUTPUT 1
6	W	INPUT PARK SIGNAL

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	SB	-

Connector No.	B25
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	-

ABMIA4059GB


PWO

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]

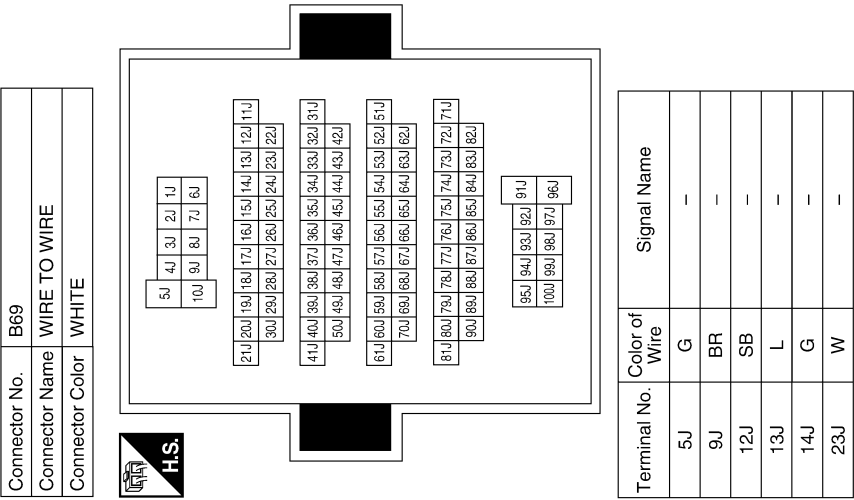

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[AC 120 V OUTLET]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000011559579

OVERALL SEQUENCE

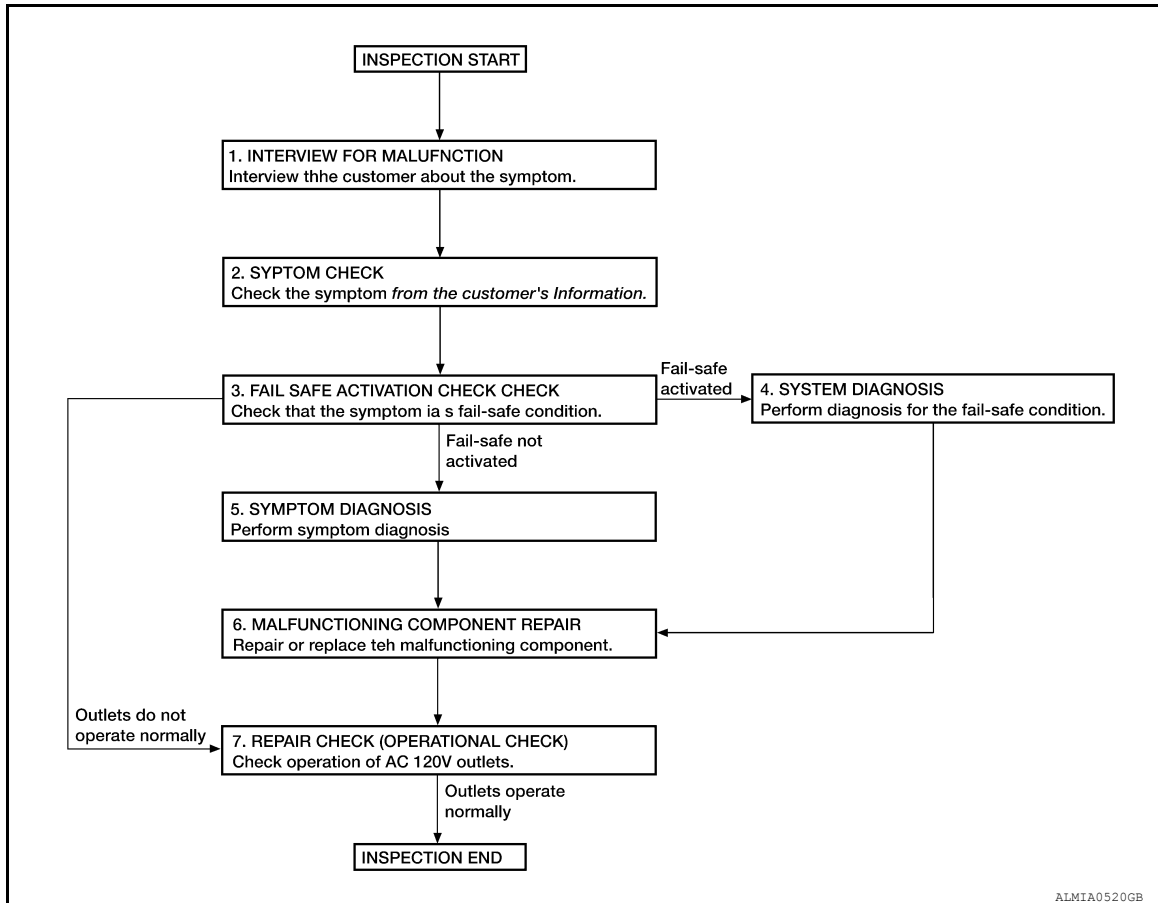

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the customer about the symptom.

>> GO TO 2.

2. SYMPTOM CHECK

Check the symptom from the customer's information.

>> GO TO 3.

3. FAIL-SAFE ACTIVATION CHECK

Check that the symptom is a fail-safe condition.

Is fail-safe activated?

YES >> GO TO 4.

NO >> GO TO 5.

4. SYSTEM DIAGNOSIS

Perform diagnosis for the fail-safe activated system. Specify the malfunctioning component.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[AC 120 V OUTLET]

>> GO TO 6.

5.SYMPTOM DIAGNOSIS

Perform symptom diagnosis. Specify the malfunctioning component.

>> GO TO 6.

6.MALFUNCTIONING COMPONENT REPAIR

Repair or replace the malfunctioning component.

>> GO TO 7.

7.REPAIR CHECK (OPERATION CHECK)

Check operation of AC 120V outlets.

Do the outlets operate normally?

YES >> Inspection End.

NO >> GO TO 3.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000011559580

Regarding Wiring Diagram information, refer to [PWO-20, "Wiring Diagram"](#).

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown:

Signal name	Fuse or Fusible Link No. or Letter
Ignition switch ON or START	59 (10A)
Battery power supply	N (60A)

Is the fuse or fusible link blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
NO >> GO TO 2.

2.CHECK INVERTER RELAY

Check inverter relay. Refer to [PWO-30, "Component Inspection \(Inverter Relay\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace inverter relay.

3.CHECK INVERTER UNIT POWER SUPPLY CIRCUIT

1. Connect inverter relay connector.
2. Disconnect inverter unit connector B16.
3. Connect a fused jumper wire between inverter unit connector B16 terminal 7 and ground.
4. Turn ignition switch ON.
5. Check voltage between inverter unit connector B17 terminal 14 and ground.

Inverter unit		Ground	Voltage (Approx.)
Connector	Terminal		
B17	14	—	Battery voltage

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 4.

4.CHECK INVERTER RELAY POWER SUPPLY CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect inverter relay connector.
3. Check voltage between inverter relay connector E36 terminal 3 and ground.

Inverter relay		Ground	Voltage (Approx.)
Connector	Terminal		
E36	3	—	Battery voltage

4. Turn ignition switch ON.
5. Check voltage between inverter relay connector E36 terminal 1 and ground.

Inverter relay		Ground	Condition	Voltage (Approx.)
Connector	Terminal			

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

E36	1	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the inverter relay power supply circuit.

5.CHECK INVERTER UNIT POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect inverter unit connector B17.
3. Check continuity between inverter relay connector E36 terminal 5 and inverter unit connector B17 terminal 14.

Inverter relay		Inverter unit		Continuity
Connector	Terminal	Connector	Terminal	
E36	5	B17	14	Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the inverter unit power supply circuit.

6.CHECK INVERTER RELAY COIL CIRCUIT FOR OPEN

Check continuity between inverter relay connector E36 terminal 2 and inverter unit connector B16 terminal 7.

Inverter relay		Inverter unit		Continuity
Connector	Terminal	Connector	Terminal	
E36	2	B16	7	Yes

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace the inverter unit coil circuit.

7.CHECK INVERTER UNIT GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between inverter unit connector B17 terminal 13 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B17	13	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace the inverter unit ground circuit.

Component Inspection (Inverter Relay)

INFOID:0000000011559581

1.CHECK INVERTER RELAY

1. Turn ignition switch OFF.
2. Disconnect inverter relay connector.
3. Apply battery voltage to inverter relay terminal 1 and ground to terminal 2.
4. Check continuity between inverter relay terminals 3 and 5.

Inverter relay terminals	Condition	Continuity
3 – 5	Battery voltage applied to terminal 1 and ground to terminal 2	Yes
	Voltage and ground removed	No

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Replace inverter relay.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

AC 120 V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

AC 120 V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

Diagnosis Procedure

INFOID:0000000011559582

Regarding Wiring Diagram information, refer to [PWO-20. "Wiring Diagram"](#).

1. CHECK FUSE

Check that the following fuse is not blown:

Signal name	Fuse No.
Ignition switch ON or START	14 (10A)

Is the fuse blown?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.

2. CHECK POWER SUPPLY FOR AC 120V OUTLET MAIN SWITCH

1. Turn ignition switch ON.
2. Check for voltage between the AC 120V outlet main switch connector and ground.

AC 120V outlet main switch		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M48	2	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace the AC 120V main switch power supply circuit.

AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:0000000011559583

Regarding Wiring Diagram information, refer to [PWO-20, "Wiring Diagram"](#).

1. CHECK AC 120V OUTLET MAIN SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. AC 120V outlet main switch ON.
3. Check for voltage between the inverter unit harness connector B16 terminal 1 and ground.

Inverter unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
B16	1	—	AC 120V outlet main switch OFF	0V
			AC 120V outlet main switch ON	Battery voltage

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 2.

2. CHECK AC 120V OUTLET MAIN SWITCH

Check AC 120V outlet main switch. Refer to [PWO-33, "Component Inspection \(AC 120V Outlet Main Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace AC 120V outlet main switch. Refer to [PWO-44, "Removal and Installation"](#).

3. CHECK HARNESS BETWEEN INVERTER UNIT AND AC 120V OUTLET MAIN SWITCH

1. Disconnect inverter unit connector B16.
2. Check for continuity between the inverter unit connector B16 terminal 1 and AC 120V outlet main switch connector M48 terminal 1.

Inverter unit		AC 120V outlet main switch		Continuity
Connector	Terminal	Connector	Terminal	
B16	1	M48	1	Yes

3. Check for continuity between inverter unit connector B16 terminal 1 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B16	1	—	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace the AC 120V outlet main switch input signal circuit.

Component Inspection (AC 120V Outlet Main Switch)

INFOID:0000000011559584

1. CHECK AC 120V OUTLET MAIN SWITCH

1. Turn ignition switch OFF.
2. Disconnect AC 120V outlet main switch connector.
3. Check continuity between terminals 1 and 2 of AC 120V outlet main switch.

AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

AC 120V outlet main switch terminals	Condition	Continuity
1 –2	AC 120V outlet main switch ON	Yes
	AC 120V outlet main switch OFF	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace AC 120V outlet main switch. Refer to [PWO-44, "Removal and Installation"](#).

AC 120 V POWER OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

AC 120 V POWER OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000011559585

Regarding Wiring Diagram information, refer to [PWO-20, "Wiring Diagram"](#).

1. CHECK HARNESS BETWEEN INVERTER UNIT AND AC 120V OUTLETS

1. Turn ignition switch OFF.
2. Disconnect inverter unit connector B16, AC 120V outlet front connector and AC 120V outlet rear connector.
3. Check continuity between inverter unit connector B16 terminals 5, 11 and AC 120V outlet front connector M208 terminals 1, 4.

Inverter unit		AC 120V outlet front		Continuity
Connector	Terminal	Connector	Terminal	
B16	5	M208	1	Yes
	11		4	

4. Check continuity between inverter unit connector B16 terminals 5, 11 and AC 120V outlet rear connector C53 terminals 1, 2.

Inverter unit		AC 120V outlet rear		Continuity
Connector	Terminal	Connector	Terminal	
B16	5	C53	1	Yes
	11		2	

5. Check continuity between inverter unit connector B16 terminals 5, 11 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B16	5	—	No
	11		

6. Check continuity between inverter unit connector B16 terminals 5 and 11.

Inverter unit			Continuity
Connector	Terminal		
B16	5	11	No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the harness or connectors.

2. CHECK INVERTER UNIT OUTPUT SIGNAL

1. Connect inverter unit connector B16, AC 120V outlet front connector and AC 120V outlet rear connector.
2. Turn ignition switch ON.
3. AC 120V outlet main switch ON (AC 120V outlet main switch 150W indicator ON).
4. Check voltage between inverter unit connector B16 terminals 5 and 11.

CAUTION:

- To measure AC 120V output signal, always use the circuit tester AC range.
- Never allow the probes to contact each other.

AC 120 V POWER OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Inverter unit connector B16		AC 120V outlet main switch	
Terminal			
5	11	All indicators OFF	
		150W indicator ON	

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace inverter unit. Refer to [PWO-43. "Removal and Installation"](#).

3.CHECK AC 120V OUTLET FRONT VOLTAGE

1. AC 120V outlet main switch ON (AC 120V outlet main switch 150W indicator ON).
2. Check voltage between AC 120V outlet front M208 terminals 1 and 4.

CAUTION:

- To measure AC 120V output signal, always use the circuit tester AC range.
- Never allow the probes to contact each other.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
AC 120V outlet front connector M208		AC 120V outlet main switch	
Terminal			
1	4	OFF	0V
		ON	AC 120V

Is the inspection result normal?

YES >> GO TO 4

NO >> Replace AC 120V outlet front. Refer to [PWO-45. "Removal and Installation - Front"](#).

4.CHECK AC 120V OUTLET FRONT GROUND CIRCUIT

1. AC 120V outlet main switch OFF.
2. Turn ignition switch OFF.
3. Disconnect AC 120V outlet front connector.
4. Check continuity between AC 120V outlet front connector M208 terminal 3 and ground.

AC 120V outlet front		Ground	Continuity
Connector	Terminal		
M208	3	—	Yes

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair AC 120V outlet front ground circuit.

5.CHECK AC 120V OUTLET REAR VOLTAGE

1. Turn ignition switch ON.
2. AC 120V outlet main switch ON (AC 120V outlet main switch 150W indicator ON).
3. Check voltage between AC 120V outlet rear C53 terminals 1 and 2.

CAUTION:

- To measure AC 120V output signal, always use the circuit tester AC range.
- Never allow the probes to contact each other.

AC 120 V POWER OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
AC 120V outlet rear connector C53		AC 120V outlet main switch	
Terminal			
1	2	OFF	
		ON	

Is the inspection result normal?

YES >> GO TO 6

NO >> Replace AC 120V outlet rear. Refer to [PWO-45. "Removal and Installation - Front"](#).

6.CHECK AC 120V OUTLET REAR GROUND CIRCUIT

1. AC 120V outlet main switch OFF.
2. Turn ignition switch OFF.
3. Disconnect AC 120V outlet rear connector.
4. Check continuity between AC 120V outlet rear connector C53 terminal 3 and ground.

AC 120V outlet rear		Ground	Continuity
Connector	Terminal		
C53	3	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair AC 120V outlet rear ground circuit.

PWO

AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT

Diagnosis Procedure (150W Indicator)

INFOID:0000000011559586

Regarding Wiring Diagram information, refer to [PWO-20, "Wiring Diagram"](#).

1. CHECK POWER SUPPLY FOR AC 120V OUTLET MAIN SWITCH INDICATOR

1. Turn ignition switch ON.
2. Check for voltage between the AC 120V outlet main switch connector M48 terminal 6 and ground.

AC 120V outlet main switch		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M48	6	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the AC 120V outlet main switch indicator power supply circuit.

2. CHECK AC 120V OUTLET MAIN SWITCH 150W INDICATOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect AC 120V outlet main switch connector and inverter unit connector B16.
3. Check continuity between AC 120V outlet main switch connector M48 terminal 7 and inverter unit connector B16 terminal 7.

AC 120V outlet main switch		Inverter unit		Continuity
Connector	Terminal	Connector	Terminal	
M48	7	B16	7	Yes

Is the inspection result normal?

YES >> Replace AC 120V outlet main switch. Refer to [PWO-44, "Removal and Installation"](#).

NO >> Repair or replace the AC 120V outlet main switch 150W indicator ground circuit.

Diagnosis Procedure (400W Indicator)

INFOID:0000000011559587

Regarding Wiring Diagram information, refer to [PWO-20, "Wiring Diagram"](#).

1. CHECK AC 120V OUTLET MAIN SWITCH INDICATORS

Check AC 120V outlet main switch indicators. Refer to [PWO-39, "Component Inspection \(AC 120V Outlet Main Switch Indicators\)"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace AC 120V outlet main switch.

2. CHECK POWER SUPPLY FOR AC 120V OUTLET MAIN SWITCH INDICATOR

1. Turn ignition switch ON.
2. Check for voltage between the AC 120V outlet main switch connector M48 terminal 6 and ground.

AC 120V outlet main switch		Ground	Condition	Voltage (Approx.)
Connector	Terminal			

AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

M48	6	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the AC 120V outlet main switch indicator power supply circuit.

3.CHECK AC 120V OUTLET MAIN SWITCH 400W INDICATOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect AC 120V outlet main switch connector and inverter unit connector B16.
- Check continuity between AC 120V outlet main switch connector M48 terminal 3 and inverter unit connector B16 terminal 3.

AC 120V outlet main switch		Inverter unit		Continuity
Connector	Terminal	Connector	Terminal	
M48	3	B16	3	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the AC 120V outlet main switch 400W indicator ground circuit.

4.CHECK P RANGE SWITCH SIGNAL CIRCUIT

- Disconnect shift lock control unit connector.
- Check continuity between shift lock control unit connector M203 terminal 6 and inverter unit connector B16 terminal 6.

Shift lock control unit		Inverter unit		Continuity
Connector	Terminal	Connector	Terminal	
M203	6	B16	6	Yes

Is the inspection result normal?

YES >> Replace inverter unit. Refer to [PWO-43. "Removal and Installation"](#).

NO >> Repair or replace the P range switch signal circuit.

Component Inspection (AC 120V Outlet Main Switch Indicators)

INFOID:0000000011559588

1.CHECK AC 120V OUTLET MAIN SWITCH INDICATORS

- Turn ignition switch OFF.
- Disconnect AC 120V outlet main switch connector.
- Apply battery voltage to AC 120V outlet main switch terminal 6 and ground to terminal 7.

AC 120V outlet main switch terminals	Condition	150W indicator
6 – 7	Battery voltage applied to terminal 6 and ground to terminal 7	ON
	Voltage and ground removed	OFF

- Apply battery voltage to AC 120V outlet main switch terminal 6 and ground to terminal 3.

AC 120V outlet main switch terminals	Condition	400W indicator
6 – 3	Battery voltage applied to terminal 6 and ground to terminal 3	ON
	Voltage and ground removed	OFF

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace AC 120V outlet main switch. Refer to [PWO-44. "Removal and Installation"](#).

SYMPTOM DIAGNOSIS

NO OUTPUT FROM AC 120 V OUTLET

Diagnosis Procedure

INFOID:0000000011559589

1.CHECK FAIL-SAFE ACTIVATION

Check if the symptom is caused by a fail-safe operation. Refer to [PWO-18, "Fail-safe"](#).

Is fail-safe operating?

YES >> Repair the part causing fail-safe operation.

NO >> GO TO 2.

2.CHECK INVERTER UNIT POWER SUPPLY CIRCUIT

Check inverter unit power supply circuit. Refer to [PWO-29, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK AC 120V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

Check AC 120V outlet main switch power supply circuit. Refer to [PWO-32, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CHECK AC 120V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

Check AC 120V outlet main switch input signal circuit. Refer to [PWO-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5.CHECK INVERTER UNIT POWER OUTPUT CIRCUIT

Check inverter unit power output circuit. Refer to [PWO-35, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

AC 120 V OUTLET MAIN SWITCH INDICATOR DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

[AC 120 V OUTLET]

AC 120 V OUTLET MAIN SWITCH INDICATOR DOES NOT TURN ON

Diagnosis Procedure

INFOID:0000000011559590

1.CHECK FAIL-SAFE ACTIVATION

Check if the symptom is caused by a fail-safe operation. Refer to [PWO-18, "Fail-safe"](#).

Is fail-safe operating?

YES >> Repair the part causing fail-safe operation.

NO >> GO TO 2.

2.CHECK INVERTER UNIT POWER SUPPLY CIRCUIT

Check inverter unit power supply circuit. Refer to [PWO-29, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK AC 120V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

Check AC 120V outlet main switch power supply circuit. Refer to [PWO-32, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CHECK AC 120V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

Check AC 120V outlet main switch input signal circuit. Refer to [PWO-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5.CHECK AC 120V OUTLET MAIN SWITCH INDICATOR CIRCUIT

Check AC 120V outlet main switch indicator circuit. Refer to [PWO-38, "Diagnosis Procedure \(150W Indicator\)"](#).

Is the inspection result normal?

YES >> Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

NORMAL OPERATING CONDITION

Description

INFOID:0000000011559591

Because of modified sine wave output, the AC 120V outlet may not operate normally for electric appliance of which electric power consumption is 150W or less.

- Electric appliances requiring a large amount of electric power consumption at startup (e.g., CRT-based TV, power tool)
- Measuring instruments for data requiring accuracy (e.g., medical equipment, measuring instrument)
- Microprocessor-controlled appliances (e.g., microprocessor-controlled blanket)

Noise may be caused in radio or TV, depending on an electric appliance.

REMOVAL AND INSTALLATION

INVERTER UNIT

Removal and Installation

INFOID:0000000011559592

REMOVAL

1. Remove inverter unit fuse.
2. Remove rear panel. Refer to [INT-15, "Removal and Installation"](#).

NOTE:

The inverter unit is located behind the LH seat.

3. Remove the inverter unit bolts.
4. Disconnect the harness connector from the inverter unit.
5. Remove the inverter unit.

INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

AC 120V OUTLET MAIN SW

Removal and Installation

INFOID:0000000011559593

REMOVAL

1. Remove the inverter unit fuse.
2. Remove the cluster lid C. Refer to [IP-15, "Removal and Installation"](#).
3. Release pawls using suitable tool to remove the AC 120V outlet main switch.

INSTALLATION

Installation is in the reverse order of removal.

AC 120 V OUTLET

Removal and Installation - Front

INFOID:0000000011559594

AC 120V OUTLET FRONT

Removal

1. Remove center console rear finisher. Refer to [IP-21. "Removal and Installation"](#).
2. Release the pawl from the back of the center console rear finisher to remove the AC 120 V outlet.

Installation

Installation is in the reverse order of removal.

Removal and Installation - Rear

INFOID:0000000011559595

AC 120V OUTLET (CARGO BED)

Removal

1. Remove the fuse for the AC 120V outlet.
2. Remove the rivets attaching the AC 120V outlet finisher to the cargo bed.
3. Disconnect the harness connector from the AC 120V outlet to remove the AC 120V outlet.

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[AC 120 V OUTLET]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

AC 120V Power Outlet

INFOID:0000000011559596

Rated voltage output		AC 120V (+/- 10%)
Operating voltage range		DC 11.5V to 15V (Inverter terminal)
Rated power output	Low power mode	150W
	High power mode	400W
Output over current protection	High power mode	3.7A or more
Input over current protection	Low power mode	13.3A or more
Output frequency		60Hz (+/- 10%)
Parasitic current		< 1mA
Max. input current		45A (during continuous power)
Rated continuous power		400W @ 40°C (104°F) Maximum
Overheat protection (Thermistor)		100°C (212°F)