
ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT [LAN-166](#), [LAN-487](#),
[LAN-514](#), [LAN-548](#), [LAN-584](#), [LAN-624](#),
[LAN-661](#), [LAN-701](#), [LAN-743](#), [LAN-784](#),
[LAN-827](#), [LAN-868](#), [LAN-913](#), [LAN-960](#),
[LAN-1004](#), [LAN-1052](#), [LAN-1195](#), [LAN-1226](#),
[LAN-1267](#), [LAN-1309](#), [LAN-1353](#), [LAN-1398](#),
[LAN-1445](#), [LAN-1493](#)
4WD INDICATOR [DLN-91](#)
4WD INDICATOR CONTINUES BLINKING [DLN-94](#)
4WD MODE DOES NOT CHANGE [DLN-93](#)
4WD SHIFT SWITCH..... [DLN-101](#)
4WD SYSTEM [DLN-29](#)
4WD WARNING LAMP [DLN-90](#)
4WD WARNING LAMP BLINKS SLOWLY .. [DLN-95](#)

A

A-BAG BRANCH LINE CIRCUIT [LAN-177](#), [LAN-236](#),
[LAN-262](#), [LAN-297](#), [LAN-334](#), [LAN-375](#),
[LAN-414](#), [LAN-457](#), [LAN-493](#), [LAN-521](#),
[LAN-555](#), [LAN-592](#), [LAN-631](#), [LAN-668](#),
[LAN-708](#), [LAN-751](#), [LAN-792](#), [LAN-834](#),
[LAN-876](#), [LAN-921](#), [LAN-968](#), [LAN-1012](#),
[LAN-1060](#), [LAN-1096](#), [LAN-1126](#), [LAN-1167](#),
[LAN-1201](#), [LAN-1233](#), [LAN-1274](#), [LAN-1317](#),
[LAN-1360](#), [LAN-1406](#), [LAN-1453](#), [LAN-1501](#)
A/C AUTO AMP. [HAC-31](#), [HAC-118](#), [ST-9](#)
A/C SWITCH ASSEMBLY [HAC-117](#)
A/T ASSEMBLY CONNECTORS [TM-237](#)
A/T CONTROL SYSTEM [TM-70](#), [TM-335](#)
A/T FLUID [TM-215](#), [TM-455](#)
A/T FLUID COOLER [TM-96](#), [TM-359](#)
A/T FLUID TEMPERATURE SENSOR 1 [TM-234](#)
A/T FLUID TEMPERATURE SENSOR 2 [TM-236](#)
A/T POSITION [TM-100](#), [TM-363](#)
A/T SHIFT LOCK SYSTEM..... [TM-82](#), [TM-348](#)
A/T SHIFT SELECTOR..... [TM-218](#), [TM-458](#)
ABBREVIATIONS [GI-14](#)
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)..... [BRC-48](#), [BRC-163](#)
ABS BRANCH LINE CIRCUIT . [LAN-167](#), [LAN-231](#),
[LAN-256](#), [LAN-290](#), [LAN-328](#), [LAN-368](#),
[LAN-407](#), [LAN-450](#), [LAN-488](#), [LAN-515](#),
[LAN-549](#), [LAN-585](#), [LAN-625](#), [LAN-662](#),
[LAN-702](#), [LAN-744](#), [LAN-785](#), [LAN-828](#),
[LAN-869](#), [LAN-914](#), [LAN-961](#), [LAN-1005](#),
[LAN-1053](#), [LAN-1091](#), [LAN-1120](#), [LAN-1160](#),
[LAN-1196](#), [LAN-1227](#), [LAN-1268](#), [LAN-1310](#),
[LAN-1354](#), [LAN-1399](#), [LAN-1446](#), [LAN-1494](#)
ABS FUNCTION DOES NOT OPERATE. [BRC-155](#)
ABS WARNING LAMP [BRC-147](#)
AC 120 V OUTLET [PWO-50](#)

AC 120 V OUTLET MAIN SWITCH INDICATOR
CIRCUIT [PWO-42](#)
AC 120 V OUTLET MAIN SWITCH INDICATOR
DOES NOT TURN ON [PWO-45](#)
AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL
CIRCUIT [PWO-37](#)
AC 120 V OUTLET MAIN SWITCH POWER
SUPPLY CIRCUIT [PWO-36](#)
AC 120 V POWER OUTPUT CIRCUIT [PWO-39](#)
AC 120V OUTLET MAIN SW [PWO-49](#)
ACCELERATOR CONTROL SYSTEM [ACC-3](#)
ACCELERATOR PEDAL RELEASED POSITION
LEARNING [EC-1428](#)
ACTION TEST [DAS-92](#)
ADAS CONTROL UNIT. [DAS-10](#), [DAS-49](#), [DAS-74](#)
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT)..... [BRC-69](#)
ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNIT [DAS-21](#)
ADDITIONAL SERVICE WHEN REPLACING
AROUND VIEW MONITOR CONTROL UNIT ..
[AV-330](#)
ADDITIONAL SERVICE WHEN REPLACING BCM
[DLK-72](#)
ADDITIONAL SERVICE WHEN REPLACING CAN
GATEWAY [LAN-213](#)
ADDITIONAL SERVICE WHEN REPLACING
COMBINATION METER [MWI-80](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT [SEC-67](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE & TCM [TM-357](#)
ADDITIONAL SERVICE WHEN REPLACING ECM
[EC-179](#), [EC-1424](#)
ADDITIONAL SERVICE WHEN REPLACING LOW
TIRE PRESSURE WARNING CONTROL UNIT
[WT-24](#)
ADDITIONAL SERVICE WHEN REPLACING TCM
[TM-90](#)
ADDITIONAL SERVICE WHEN REPLACING TCU
[AV-414](#)
ADDITIONAL SERVICE WHEN REPLACING
TRANSMISSION ASSEMBLY .. [TM-91](#), [TM-356](#)
ADDITIONAL SERVICE WHEN REPLACING VVEL
CONTROL MODULE [EC-1426](#)
ADJUSTMENT AND INSPECTION..... [EXL-128](#),
[EXL-285](#)
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION [BRC-70](#)

ADP BRANCH LINE CIRCUIT [LAN-170](#), [LAN-293](#),
[LAN-371](#), [LAN-410](#), [LAN-453](#), [LAN-588](#),
[LAN-747](#), [LAN-788](#), [LAN-872](#), [LAN-917](#),
[LAN-964](#), [LAN-1008](#), [LAN-1056](#), [LAN-1163](#),
[LAN-1313](#), [LAN-1402](#), [LAN-1449](#), [LAN-1497](#)
ADP STEERING SWITCH..... [ADP-144](#)
ADP SYSTEM SYMPTOMS..... [ADP-138](#)
AIR BREATHER [DLN-112](#), [DLN-152](#)
AIR BREATHER HOSE [TM-241](#), [TM-493](#)
AIR CLEANER AND AIR DUCT [EM-31](#), [EM-212](#)
AIR CLEANER FILTER..... [EM-26](#), [EM-193](#)
AIR FILTER..... [EM-201](#)
AIR INLET CONNECTION [EM-219](#)
AIR INTAKE CONNECTION..... [EM-221](#)
AIR LEAKS, AIR INTAKE AND EXHAUST
SYSTEMS [EM-198](#)
ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/
BACK DOOR DO NOT OPEN WITH REQUEST
SWITCH [DLK-124](#)
AMBIENT SENSOR [HAC-119](#), [HAC-230](#), [MWI-111](#),
[MWI-189](#)
AMBIENT SENSOR SIGNAL CIRCUIT [MWI-98](#),
[MWI-176](#)
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE)..... [PWC-68](#)
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (PASSENGER SIDE) [PWC-69](#)
APPLICATION NOTICE.. [MWI-5](#), [MWI-113](#), [WCS-3](#)
AROUND VIEW MONITOR CONTROL UNIT
[AV-309](#), [AV-360](#)
AROUND VIEW MONITOR SYSTEM [AV-314](#),
[AV-358](#)
ASCD INDICATOR [EC-1882](#)
ATP WARNING LAMP DOES NOT TURN ON.....
[DLN-96](#)
AUDIO AMP [AV-286](#)
AUDIO AMP..... [AV-188](#)
AUDIO SYSTEM [AV-61](#)
AUDIO UNIT [AV-24](#), [AV-66](#)
AUTO LIGHT SYSTEM [EXL-34](#), [EXL-189](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY (DRIVER
SIDE)..... [PWC-70](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY
(PASSENGER SIDE)..... [PWC-71](#)
AUTOMATIC AIR CONDITIONING SYSTEM
[HAC-36](#)
AUTOMATIC DRIVE POSITIONER..... [ADP-41](#)
AUTOMATIC DRIVE POSITIONER CONTROL UNIT
[ADP-37](#), [ADP-141](#)
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
[CCS-3](#)
AUXILIARY INPUT JACK...[AV-60](#), [AV-143](#), [AV-263](#)

AV BRANCH LINE CIRCUIT ... [LAN-183](#), [LAN-266](#),
[LAN-301](#), [LAN-338](#), [LAN-379](#), [LAN-418](#),
[LAN-461](#), [LAN-525](#), [LAN-559](#), [LAN-596](#),
[LAN-635](#), [LAN-672](#), [LAN-712](#), [LAN-755](#),
[LAN-796](#), [LAN-838](#), [LAN-880](#), [LAN-925](#),
[LAN-972](#), [LAN-1016](#), [LAN-1064](#), [LAN-1130](#),
[LAN-1171](#), [LAN-1237](#), [LAN-1278](#), [LAN-1321](#),
[LAN-1364](#), [LAN-1410](#), [LAN-1457](#), [LAN-1505](#)
AV CONTROL UNIT [AV-90](#), [AV-157](#), [AV-183](#),
[AV-277](#), [AV-359](#), [AV-373](#), [AV-390](#), [AV-438](#),
[AV-461](#)
AVM BRANCH LINE CIRCUIT [LAN-191](#), [LAN-423](#),
[LAN-468](#), [LAN-801](#), [LAN-932](#), [LAN-1021](#),
[LAN-1071](#), [LAN-1417](#), [LAN-1512](#)
AXLE SHAFT [RAX-5](#), [RAX-6](#)

B

B TERMINAL CIRCUIT [CHG-37](#), [STR-29](#)
B0001 DRIVER AIRBAG MODULE [SRC-38](#)
B0010, B0011 PASSENGER AIRBAG MODULE
[SRC-42](#)
B0020 SIDE AIRBAG MODULE LH [SRC-46](#)
B0021 SIDE CURTAIN AIR BAG MODULE LH.....
[SRC-49](#)
B0028 SIDE AIRBAG MODULE RH [SRC-52](#)
B0029 SIDE CURTAIN AIR BAG MODULE RH
[SRC-55](#)
B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH [SRC-58](#)
B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH [SRC-62](#)
B0093 FRONT DOOR SATELLITE SENSOR LH....
[SRC-66](#)
B0094 CRASH ZONE SENSOR..... [SRC-70](#)
B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH [SRC-74](#)
B0097 REAR SIDE AIR BAG SATELLITE SENSOR
RH [SRC-78](#)
B0098 FRONT DOOR SATELLITE SENSOR RH ...
[SRC-83](#)
B1400, B1401, B1402, B1403, B1404, B1405 AIR
BAG DIAGNOSIS SENSOR UNIT [SRC-88](#)
B1406, B1407, B1408, B1409, B1410 AIR BAG
DIAGNOSIS SENSOR UNIT [SRC-90](#)
B1411, B1412, B1413, B1414, B1415 AIR BAG
DIAGNOSIS SENSOR UNIT [SRC-92](#)
B1416, B1417, B1418, B1419, B1420 AIR BAG
DIAGNOSIS SENSOR UNIT [SRC-94](#)
B142A IGNITION VOLTAGE..... [SRC-96](#)
B142X COLLISION DETECTION [SRC-99](#)
B1430 SEAT BELT PRE-TENSIONER [SRC-101](#)
B1431 SEAT BELT PRE-TENSIONER [SRC-104](#)
B1500 DOOR SATELLITE SENSOR..... [SRC-107](#)
B2098 IGNITION RELAY ON STUCK [PCS-38](#)
B2099 IGNITION RELAY OFF STUCK [PCS-40](#)
B210B STARTER CONTROL RELAY [SEC-127](#)

B210C STARTER CONTROL RELAY.....	SEC-128	B26F4 STARTER CONTROL RELAY	SEC-124
B210D STARTER RELAY	SEC-129	B26F6 BCM	PCS-88
B210E STARTER RELAY	SEC-131	B26F7 BCM	SEC-126
B210F TRANSMISSION RANGE SWITCH.....	SEC-133	B26FC KEY REGISTRATION	SEC-125
B2110 TRANSMISSION RANGE SWITCH.....	SEC-136	B26FD SHIFT LOCK SOLENOID	DLK-81
B2112 SLIDING MOTOR	ADP-67	B26FE HOOD SWITCH	DLK-83
B2113 RECLINING MOTOR	ADP-69	B26FF REMOTE KEYLESS ENTRY RECEIVER ...	DLK-86
B2116 TILT MOTOR.....	ADP-71	B2720 CORNER SENSOR [RL].....	SN-36
B2128 UART COMMUNICATION LINE	ADP-73	B2721 CENTER SENSOR [RL]	SN-38
B2130 EEPROM	ADP-75	B2722 CENTER SENSOR [RR].....	SN-40
B2192 ID DISCORD, IMMUECM.....	SEC-78	B2723 CORNER SENSOR [RR].....	SN-42
B2193 CHAIN OF ECM-IMMU.....	SEC-80	B2724 SONAR CONTROL UNIT	SN-44
B2195 ANTI-SCANNING	SEC-82	B2728 LED	SN-45
B2196 DONGLE UNIT	SEC-84	B2729 CORNER SENSOR [FL].....	SN-47
B2198 NATS ANTENNA AMP.....	SEC-86	B272A CENTER SENSOR [FL]	SN-49
B2205 VEHICLE SPEED	MWI-84, MWI-164	B272B CENTER SENSOR [FR].....	SN-51
B2267 ENGINE SPEED.....	MWI-85, MWI-165	B272C CORNER SENSOR [FR].....	SN-53
B2268 WATER TEMP	MWI-86, MWI-166	B272D FRONT BUZZER.....	SN-55
B2555 STOP LAMP	SEC-88	B2796 CONTROL COMMUNICATION	HAC-86
B2556 PUSH-BUTTON IGNITION SWITCH.....	SEC-93	BACK-UP LAMP.....	EXL-82, EXL-237
B2557 VEHICLE SPEED	SEC-96	BASIC INSPECTION.....	EC-197, EC-1420
B2560 STARTER CONTROL RELAY	SEC-98	BATTERY	PG-164, PG-173
B2562 LOW VOLTAGE	BCS-69	BATTERY CURRENT SENSOR	PG-182
B2578, B2579 IN-VEHICLE SENSOR.....	HAC-66	BATTERY SAVER OUTPUT/POWER SUPPLY	
B257B, B257C AMBIENT SENSOR	HAC-69, HAC-190	CIRCUIT.....	INL-55
B2581, B2582 INTAKE SENSOR.....	HAC-72, HAC-193	BATTERY TERMINAL WITH FUSIBLE LINK.....	PG-181
B259A ROOM LAMP FUSE.....	BCS-70	BCM	BCS-32, BCS-54, DLK-38
B2600 CONFIG ERROR.....	LAN-217	BCM (BODY CONTROL MODULE).....	ADP-40, BCS-79, INL-13, MWI-37, MWI-140, PCS-97, PWC-15, SEC-154
B2601 SHIFT POSITION	SEC-100	BCM BRANCH LINE CIRCUIT.....	LAN-188, LAN-241, LAN-269, LAN-305, LAN-341, LAN-383, LAN-422, LAN-465, LAN-498, LAN-528, LAN-562, LAN-600, LAN-638, LAN-675, LAN-715, LAN-759, LAN-800, LAN-841, LAN-884, LAN-929, LAN-976, LAN-1020, LAN-1068, LAN-1100, LAN-1133, LAN-1175, LAN-1205, LAN-1240, LAN-1281, LAN-1325, LAN-1367, LAN-1414, LAN-1461, LAN-1509
B2602 SHIFT POSITION	SEC-103	BCM, COMBINATION METER.....	WCS-24
B2603 SHIFT POSITION	SEC-106	BCM, IPDM E/R.....	DEF-14, EXL-26, EXL-175, PCS-56, WT-18, WW-22
B2604 SHIFT POSITION	SEC-110	BED LAMP	INL-75
B2605 SHIFT POSITION	SEC-113	BED RAILS AND TRIM	EXT-42
B2608 STARTER RELAY	SEC-116	BLIND SPOT WARNING INDICATOR	DAS-122
B260A IGNITION RELAY	PCS-79	BLOCK STIFFENING PLATE.....	EM-302
B260F ENGINE STATUS	SEC-118	BLOWER UNIT	VTL-16
B261A PUSH-BUTTON IGNITION SWITCH.....	PCS-81	BODY ALIGNMENT	BRM-173
B261B REMOTE ENGINE START	SEC-120	BODY COMPONENT PARTS	BRM-124
B261E VEHICLE TYPE.....	SEC-121	BODY CONSTRUCTION	BRM-137
B2621 INSIDE ANTENNA.....	DLK-75	BODY EXTERIOR PAINT COLOR.....	BRM-113
B2622 INSIDE ANTENNA.....	DLK-78	BODY MAINTENANCE	MA-46, MA-92
B2626 OUTSIDE ANTENNA.....	DLK-90	BODY SEALING.....	BRM-133
B2627 OUTSIDE ANTENNA.....	DLK-93	BODY SIDE TRIM	INT-20
B2630, B2631 SUNLOAD SENSOR.....	HAC-75	BODY WELDING AND PRECAUTIONS....	BRM-35
B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE)	HAC-78, HAC-196		
B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE)	HAC-80		
B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR.....	HAC-82, HAC-198		
B263D, B263E, B263F INTAKE DOOR MOTOR....	HAC-84, HAC-200		
B26F1 IGNITION RELAY	PCS-84		
B26F2 IGNITION RELAY	PCS-86		
B26F3 STARTER CONTROL RELAY	SEC-123		

BOTH SIDE FRONT FOG LAMPS ARE NOT
TURNED ON[EXL-127](#), [EXL-284](#)
BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
ON[EXL-124](#), [EXL-281](#)
BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
ON[EXL-125](#), [EXL-282](#)
BRAKE CONTROL SYSTEM[BRC-56](#)
BRAKE FLUID[BR-12](#)
BRAKE PEDAL[BR-10](#), [BR-20](#)
BRAKE PEDAL POSITION SWITCH[EC-1883](#)
BRAKE PIPING[BR-22](#)
BRAKE WARNING LAMP[BRC-148](#)
BULB CHECK RELAY[TTS-21](#)
BULB SPECIFICATIONS.....[INL-78](#)
BUZZER[SN-67](#)

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
[BRC-74](#)
C1105, C1106, C1107, C1108 WHEEL SENSOR ...
[BRC-79](#)
C1109 POWER AND GROUND SYSTEM .[BRC-86](#)
C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
[BRC-88](#)
C1115 WHEEL SENSOR.....[BRC-91](#)
C1116 STOP LAMP SWITCH.....[BRC-98](#)
C1118 TRANSFER CONTROL UNIT[BRC-104](#)
C1120, C1122, C1124, C1126 ABS IN VALVE
SYSTEM.....[BRC-105](#)
C1121, C1123, C1125, C1127 ABS OUT VALVE
SYSTEM.....[BRC-107](#)
C1130 ENGINE SIGNAL[BRC-109](#)
C1140 ACTUATOR RELAY SYSTEM.....[BRC-111](#)
C1142 PRESS SENSOR.....[BRC-113](#)
C1143 STEERING ANGLE SENSOR.....[BRC-116](#)
C1144 INCOMPLETE STEERING ANGLE SENSOR
ADJUSTMENT[BRC-120](#)
C1145, C1146 YAW RATE/SIDE G SENSOR
[BRC-122](#)
C1155 BRAKE FLUID LEVEL SWITCH ...[BRC-126](#)
C1160 INCOMPLETE DECEL G SENSOR
CALIBRATION.....[BRC-130](#)
C1164, C1165 CV SYSTEM[BRC-132](#)
C1166, C1167 SV SYSTEM[BRC-134](#)
C1170 VARIANT CODING.....[BRC-136](#)
C1187 DIFFERENTIAL LOCK CONTROL UNIT
[BRC-137](#)
C118E ACCUMULATOR[BRC-138](#)
C1704, C1705, C1706, C1707 LOW TIRE
PRESSURE.....[WT-30](#)
C1708, C1709, C1710, C1711 TIRE PRESSURE
SENSOR[WT-32](#)
C1716, C1717, C1718, C1719 TIRE PRESSURE
SENSOR[WT-35](#)
C1729 VEHICLE SPEED SIGNAL[WT-37](#)
C1730, C1731, C1732, C1733 FLAT TIRE...[WT-38](#)

C1734 CONTROL UNIT[WT-40](#)
C1761, C1762, C1763, C1764 TIRE PRESSURE
SENSOR[WT-42](#)
C1765, C1766, C1767, C1768 TIRE PRESSURE
SENSOR[WT-44](#)
C1769 CONFIGURATION SETTING.....[WT-46](#)
C1770, C1771, C1772, C1773 G SENSOR .[WT-48](#)
C1A00 CONTROL UNIT[DAS-24](#)
C1A01 POWER SUPPLY CIRCUIT 1, C1A02
POWER SUPPLY CIRCUIT 2.....[DAS-25](#)
C1A03 VEHICLE SPEED SENSOR[DAS-26](#)
C1B50 SIDE RADAR MALFUNCTION.....[DAS-94](#)
C1B51 BLIND SPOT WARNING INDICATOR
SHORT CIRCUIT.....[DAS-95](#)
C1B52 BLIND SPOT WARNING INDICATOR OPEN
CIRCUIT[DAS-97](#)
C1B53 SIDE RADAR RIGHT MALFUNCTION.....
[DAS-28](#)
C1B54 SIDE RADAR LEFT MALFUNCTION.....[DAS-29](#)
C1B55 RADAR BLOCKAGE[DAS-99](#)
CALIBRATION OF DECEL G SENSOR[BRC-72](#),
[TM-358](#)
CAMSHAFT[EM-85](#), [EM-343](#)
CAMSHAFT DRIVE CHAIN.....[EM-366](#)
CAMSHAFT POSITION SENSOR.....[EM-316](#)
CAMSHAFT VALVE CLEARANCE[EM-16](#)
CAN COMMUNICATION CIRCUIT[LAN-197](#),
[LAN-242](#), [LAN-346](#), [LAN-388](#), [LAN-472](#),
[LAN-499](#), [LAN-643](#), [LAN-720](#), [LAN-764](#),
[LAN-848](#), [LAN-936](#), [LAN-983](#), [LAN-1077](#),
[LAN-1101](#), [LAN-1138](#), [LAN-1180](#), [LAN-1206](#),
[LAN-1245](#), [LAN-1286](#), [LAN-1330](#), [LAN-1374](#),
[LAN-1421](#), [LAN-1468](#), [LAN-1518](#)
CAN COMMUNICATION CIRCUIT 1.....[LAN-199](#),
[LAN-272](#), [LAN-308](#), [LAN-427](#), [LAN-531](#),
[LAN-565](#), [LAN-603](#), [LAN-680](#), [LAN-805](#),
[LAN-889](#), [LAN-1027](#)
CAN COMMUNICATION CIRCUIT 2.....[LAN-201](#),
[LAN-274](#), [LAN-310](#), [LAN-429](#), [LAN-533](#),
[LAN-567](#), [LAN-605](#), [LAN-682](#), [LAN-807](#),
[LAN-891](#), [LAN-1029](#)
CAN GATEWAY[LAN-209](#), [LAN-220](#)
CAN GATEWAY SYSTEM[LAN-211](#)
CAN SYSTEM (WITH NAVIGATION WITH BLIND
SPOT WARNING SYSTEMS)[LAN-87](#)
CAN SYSTEM (WITH NAVIGATION WITHOUT
BLIND SPOT WARNING SYSTEMS)....[LAN-80](#)
CAN SYSTEM (WITH VK56VD AND WITH DRIVER
ASSISTANCE SYSTEMS).....[LAN-102](#)
CAN SYSTEM (WITH VK56VD AND WITHOUT
DRIVER ASSISTANCE SYSTEMS)[LAN-95](#)
CAN SYSTEM (WITHOUT NAVIGATION SYSTEM)
[LAN-75](#)
CARGO LAMP CONTROL CIRCUIT[INL-59](#)
CARGO LAMP SWITCH.....[INL-76](#)
CARRIER COVER... [DLN-156](#), [DLN-186](#), [DLN-289](#)

CENTER CONSOLEIP-23
 CENTER CONSOLE ASSEMBLYIP-25
 CENTER SPEAKERAV-239, AV-280
 CGW BRANCH LINE CIRCUIT (CAN
 COMMUNICATION CIRCUIT 1) LAN-178,
 LAN-263, LAN-298, LAN-415, LAN-522,
 LAN-556, LAN-593, LAN-669, LAN-793,
 LAN-877, LAN-1013
 CGW BRANCH LINE CIRCUIT (CAN
 COMMUNICATION CIRCUIT 2) LAN-179,
 LAN-264, LAN-299, LAN-416, LAN-523,
 LAN-557, LAN-594, LAN-670, LAN-794,
 LAN-878, LAN-1014
 CHARGE AIR COOLER..... EM-204, EM-248
 CHARGING SYSTEMCHG-12, CHG-43
 CHARGING SYSTEM PRELIMINARY INSPECTION
 CHG-34
 CHASSIS AND BODY MAINTENANCEMA-28,
 MA-74
 CLIMATE CONTROLLED SEAT SE-57
 CLIMATE CONTROLLED SEAT BLOWER FILTER
 SE-87
 CLIMATE CONTROLLED SEAT BLOWER MOTOR
 SE-82, SE-105
 CLIMATE CONTROLLED SEAT CONTROL UNIT .
 SE-21, SE-104
 CLIMATE CONTROLLED SEAT SWITCH .. SE-106
 CLIMATE CONTROLLED SEAT SWITCH
 INDICATOR..... SE-85
 CLIMATE CONTROLLED SEAT SYSTEM ... SE-88
 CLUSTER LID AIP-19
 CLUSTER LID CIP-20
 COIL SPRING AND SHOCK ABSORBER.FSU-10,
 FSU-22
 COLLISION DIAGNOSIS SR-5
 COMBINATION AND LIGHTING SWITCH INPUT
 CIRCUITBCS-73
 COMBINATION AND LIGHTING SWITCH OUTPUT
 CIRCUITBCS-75
 COMBINATION AND LIGHTING SWITCH SYSTEM
 SYMPTOMS.....BCS-77
 COMBINATION METER MWI-30, MWI-108,
 MWI-112, MWI-134, MWI-186, MWI-190
 COMBINATION SWITCH.....BCS-80, EXL-138,
 EXL-295
 COMPRESSION CHECK.....EM-195
 COMPRESSION PRESSUREEM-20
 COMPRESSOR HA-31, HAC-128, HAC-237
 COMPRESSOR DOES NOT OPERATE .HAC-115,
 HAC-227
 CONDENSER HA-36
 CONFIGURATION (ADAS CONTROL UNIT)DAS-22
 CONFIGURATION (AROUND VIEW MONITOR
 CONTROL UNIT)..... AV-331
 CONFIGURATION (CAN GATEWAY) LAN-214
 CONFIGURATION (HVAC)HAC-60, HAC-186

CONFIGURATION (TIRE PRESSURE
 MONITORING SYSTEM)..... WT-28
 CONTROL CABLE TM-220, TM-460
 CONTROL VALVE & TCM.....TM-464
 COOLANT HEATER..... CO-25, CO-57
 COOLANT PLUMBING CO-55
 COOLANT THERMOSTAT CO-60
 COOLER PIPE AND HOSEHA-39
 COOLING CIRCUIT CO-36
 COOLING FAN..... CO-17, EC-1886
 COOLING FAN BELT TENSIONER CO-67
 CORROSION PROTECTION.....BRM-130
 COWL TOPEXT-26
 CRANKCASE BREATHER TUBE EM-325
 CRANKCASE PRESSURE SENSOR EM-327
 CRANKSHAFT POSITION SENSOR..... EM-337
 CRASH ZONE SENSOR..... SR-22
 CYLINDER BLOCK EM-120
 CYLINDER CUTOUT TESTEC-190
 CYLINDER HEAD EM-97, EM-350

D

DAYTIME RUNNING LIGHT CIRCUIT..... EXL-256
 DAYTIME RUNNING LIGHT RELAY CIRCUIT
 EXL-100
 DAYTIME RUNNING LIGHT SYSTEM EXL-44,
 EXL-199
 DECOMPOSITION TUBE AND SCR CATALYST
 ASSEMBLY EX-35
 DEF DOSING UNIT OVERRIDE TESTEC-192
 DEF DOSING VALVE EX-64
 DEF PUMP EX-73
 DEF SYSTEM LEAK TESTEC-191
 DEF TANK..... EX-75
 DIAGNOSIS AND REPAIR WORK FLOW . AV-412,
 BRC-66, DAS-89, DLK-69, DLN-41, EC-174,
 EXL-248, HA-15, MIR-17, MWI-77, MWI-159,
 PCS-73, PWO-31, SE-68, SEC-64, SRC-32,
 ST-14, TM-87, TM-353, WT-23, WW-29
 DIAGNOSIS SENSOR UNIT SR-27, SRC-14
 DIAGNOSIS SYSTEM (A/C AUTO AMP.).. HAC-29
 DIAGNOSIS SYSTEM (ADAS CONTROL UNIT) ...
 DAS-8, DAS-70
 DIAGNOSIS SYSTEM (AIR BAG).....SRC-11
 DIAGNOSIS SYSTEM (AROUND VIEW MONITOR
 CONTROL UNIT)..... AV-306
 DIAGNOSIS SYSTEM (AUDIO UNIT) AV-19
 DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-87,
 AV-180, AV-370
 DIAGNOSIS SYSTEM (BCM)..... BCS-19, DEF-9,
 DLK-32, EXL-17, EXL-166, HAC-152, INL-9,
 PCS-51, PWC-12, SEC-18, WCS-21, WW-15
 DIAGNOSIS SYSTEM (CAN GATEWAY) .LAN-207
 DIAGNOSIS SYSTEM (COMBINATION METER) ..
 MWI-25, MWI-129, WCS-11

DIAGNOSIS SYSTEM (DIFFERENTIAL LOCK CONTROL UNIT)	DLN-215	DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	LAN-174, LAN-331, LAN-372, LAN-454, LAN-628, LAN-705, LAN-748, LAN-831, LAN-918, LAN-965, LAN-1057, LAN-1123, LAN-1164, LAN-1230, LAN-1271, LAN-1314, LAN-1357, LAN-1403, LAN-1450, LAN-1498
DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)	ADP-27	DLC BRANCH LINE CIRCUIT (ITS COMMUNICATION CIRCUIT)	LAN-175, LAN-332, LAN-373, LAN-455, LAN-629, LAN-706, LAN-749, LAN-832, LAN-919, LAN-966, LAN-1058, LAN-1124, LAN-1165, LAN-1231, LAN-1272, LAN-1315, LAN-1358, LAN-1404, LAN-1451, LAN-1499
DIAGNOSIS SYSTEM (ECM)	EC-98, EC-1315	DOC AND DPF ASSEMBLY	EX-41
DIAGNOSIS SYSTEM (HVAC)	HAC-151	DOES NOT OPERATE BY KEY CYLINDER SWITCH	PWC-73
DIAGNOSIS SYSTEM (IPDM E/R)	DEF-12, EXL-22, EXL-171, HAC-155, PCS-10, SEC-24, VW-18	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ALL I-KEY/REQ SW/PUSH SW)	DLK-128
DIAGNOSIS SYSTEM (SIDE RADAR LH)	DAS-72	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ONE I-KEY/REQ SW/PUSH SW)	DLK-136
DIAGNOSIS SYSTEM (SIDE RADAR RH)	DAS-73	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ALL KEYS)	DLK-126
DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)	SN-11	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ONE KEY)	SEC-149
DIAGNOSIS SYSTEM (TCM)	TM-41, TM-316	DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH AND INTELLIGENT KEY	DLK-132
DIAGNOSIS SYSTEM (TCU)	AV-400	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY	DLK-131
DIAGNOSIS SYSTEM (TIRE PRESSURE MONITORING SYSTEM)	WT-12	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY (ONE KEY)	DLK-135
DIAGNOSIS SYSTEM (TRAILER BRAKE CONTROL UNIT)	TTS-9	DOOR KEY CYLINDER SWITCH	DLK-107, PWC-52
DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)	DLN-22	DOOR LOCK ACTUATOR	DLK-100
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	BRC-43	DOOR LOCK AND UNLOCK SWITCH	DLK-98
DIESEL PARTICLE FILTER REGENERATION	EC-181	DOOR MIRROR	MIR-6, MIR-22
DIESEL PARTICULATE FILTER DATA CLEAR	EC-186	DOOR MIRROR ACTUATOR	MIR-28
DIFF BRANCH LINE CIRCUIT	LAN-193, LAN-563, LAN-676, LAN-718, LAN-844, LAN-885, LAN-979, LAN-1023, LAN-1073, LAN-1284, LAN-1370, LAN-1464, LAN-1514	DOOR MIRROR DEFOGGER	DEF-46
DIFF LOCK INDICATOR LAMP DOES NOT TURN ON WITH DIFFERENTIAL LOCK SWITCHED ON	DLN-277	DOOR MIRROR DEFOGGER DOES NOT OPERATE	DEF-55
DIFF LOCK INDICATOR LAMP FLASHES WHILE DRIVING	DLN-278	DOOR MIRROR DEFOGGER DOES NOT OPERATE BUT REAR WINDOW DEFOGGER OPERATES	DEF-56
DIFFERENTIAL LOCK CONTROL UNIT	DLN-218, DLN-281	DOOR MIRROR DEFOGGER LH	DEF-47
DIFFERENTIAL LOCK INDICATOR LAMP	DLN-276	DOOR MIRROR DEFOGGER RH	DEF-49
DIFFERENTIAL LOCK MODE SWITCH	DLN-282	DOOR MIRROR GLASS	MIR-25
DIFFERENTIAL LOCK POSITION SWITCH	DLN-283	DOOR MIRROR MOTOR	ADP-133
DIFFERENTIAL LOCK SYSTEM	DLN-210	DOOR MIRROR REAR FINISHER	MIR-29
DIRECT CLUTCH	TM-592	DOOR MIRROR REMOTE CONTROL SWITCH	ADP-94, MIR-19, MIR-30
DISPLAY AUDIO	AV-27	DOOR MIRROR TURN SIGNAL LAMP	EXL-142, EXL-300
DLC BRANCH LINE CIRCUIT	LAN-171, LAN-234, LAN-491, LAN-1094, LAN-1199		
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	LAN-172, LAN-259, LAN-294, LAN-411, LAN-518, LAN-552, LAN-589, LAN-665, LAN-789, LAN-873, LAN-1009		
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	LAN-173, LAN-260, LAN-295, LAN-412, LAN-519, LAN-553, LAN-590, LAN-666, LAN-790, LAN-874, LAN-1010		

DOOR MOTOR [HAC-94](#), [HAC-124](#), [HAC-207](#),
[HAC-233](#)
DOOR MOTOR COMMUNICATION CIRCUIT
[HAC-96](#), [HAC-209](#)
DOOR OUTSIDE MOLDING [EXT-39](#)
DOOR REQUEST SWITCH [DLK-111](#), [DLK-186](#)
DOOR SWITCH [DLK-96](#), [DLK-183](#), [PWC-50](#)
DPF DIFFERENTIAL PRESSURE SENSOR [EX-58](#)
DPF DIFFERENTIAL PRESSURE SENSOR TUBES
[EX-61](#)
DPF TEMPERATURE SENSOR MODULE... [EX-51](#)
DRIVE BELT [EM-189](#)
DRIVE BELT AUTO TENSIONER AND IDLER
PULLEY [EM-25](#)
DRIVE BELTS [EM-23](#)
DRIVE PLATE [EM-109](#)
DRIVER AIR BAG MODULE..... [SR-12](#)
DRIVER ASSISTANCE SYSTEM SYMPTOMS.....
[DAS-115](#)
DRIVER ASSISTANCE SYSTEMS [DAS-14](#), [DAS-82](#)
DRIVER SEAT CONTROL UNIT [ADP-30](#), [ADP-140](#)
DRIVER SIDE POWER WINDOW ALONE DOES
NOT OPERATE..... [PWC-64](#)
DUCTS AND GRILLES [VTL-9](#)

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE...
[WT-62](#)
ECM BRANCH LINE CIRCUIT [LAN-165](#), [LAN-230](#),
[LAN-255](#), [LAN-289](#), [LAN-327](#), [LAN-367](#),
[LAN-406](#), [LAN-449](#), [LAN-486](#), [LAN-513](#),
[LAN-547](#), [LAN-583](#), [LAN-623](#), [LAN-660](#),
[LAN-700](#), [LAN-742](#), [LAN-783](#), [LAN-826](#),
[LAN-867](#), [LAN-912](#), [LAN-959](#), [LAN-1003](#),
[LAN-1051](#), [LAN-1090](#), [LAN-1119](#), [LAN-1159](#),
[LAN-1194](#), [LAN-1225](#), [LAN-1266](#), [LAN-1308](#),
[LAN-1352](#), [LAN-1397](#), [LAN-1444](#), [LAN-1492](#)
ECM, IPDM E/R, BCM [HAC-35](#), [HAC-162](#), [SEC-26](#)
EGR BYPASS TUBE..... [EM-285](#)
EGR BYPASS VALVE [EM-281](#)
EGR COOLER [EM-267](#)
EGR COOLER COOLANT LINES [EM-274](#)
EGR COOLER MOUNTING BRACKET [EM-290](#)
EGR TEMPERATURE SENSOR [EM-228](#)
EGR VALVE [EM-278](#)
ELECTRICAL LOAD SIGNAL [EC-1889](#)
ELECTRICAL UNITS LOCATION [PG-5](#)
ENCODER [PWC-45](#)
ENGINE ASSEMBLY [EM-112](#), [EM-166](#), [EM-486](#)
ENGINE CAN NOT START [SEC-145](#)
ENGINE CHARGE-AIR COOLER OUTLET OUTLET
PRESSURE/TEMPERATURE SENSOREM-225
ENGINE CONTROL SYSTEM [EC-149](#), [EC-1386](#)
ENGINE CONTROL SYSTEM SYMPTOMS.....
[EC-1246](#), [EC-1922](#)
ENGINE COOLANT [CO-9](#), [CO-39](#)

ENGINE COOLANT TEMPERATURE SENSOR
[EM-340](#)
ENGINE COOLING FAN ASSEMBLY [CO-47](#)
ENGINE COOLING SYSTEM [CO-32](#)
ENGINE COVER..... [EM-30](#)
ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE [SEC-146](#)
ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE (ONE KEY).....
[SEC-148](#)
ENGINE MAINTENANCE [MA-15](#), [MA-62](#)
ENGINE OIL [LU-9](#), [LU-32](#)
ENGINE OIL DIPSTICK TUBE..... [LU-41](#)
ENGINE STAND SETTING [EM-118](#), [EM-493](#)
ENGINE UNIT [EM-495](#)
EVAP CANISTER..... [FL-14](#)
EVAP CANISTER FILTER..... [FL-16](#)
EVAP CANISTER VENT CONTROL VALVE.. [FL-17](#)
EVAP CONTROL SYSTEM PRESSURE SENSOR
[FL-19](#)
EVAP LEAK CHECK [EC-1930](#)
EXCESSIVE ABS FUNCTION OPERATION
FREQUENCY..... [BRC-152](#)
EXHAUST DOWNPIPE [EX-28](#)
EXHAUST GAS PRESSURE SENSOR..... [EM-296](#)
EXHAUST MANIFOLD [EM-257](#)
EXHAUST MANIFOLD AND THREE WAY
CATALYST [EM-45](#)
EXHAUST PRESSURE SENSOR TUBE... [EM-293](#)
EXHAUST SYSTEM. [EC-1250](#), [EX-5](#), [EX-6](#), [EX-10](#),
[EX-19](#), [EX-24](#)
EXHAUST TRANSFER TUBE [EM-263](#)
EXTERIOR LIGHTING SYSTEM SYMPTOMS.....
[EXL-120](#), [EXL-277](#)

F

FAN OVERRIDE TEST [EC-196](#)
FAN SPACER AND PULLEY [CO-49](#)
FENDER PROTECTOR [EXT-32](#)
FLEXPLATE [EM-381](#)
FLOOR TRIM [INT-30](#)
FLUID COOLER SYSTEM [TM-242](#), [TM-495](#)
FLYWHEEL HOUSING [EM-375](#)
FOOT LAMP..... [INL-74](#)
FOOT LAMP CIRCUIT [INL-63](#)
FRAME REPAIR..... [BRM-96](#)
FRONT AIR CONTROL [HAC-157](#), [HAC-229](#)
FRONT BLOWER MOTOR [HAC-98](#), [HAC-127](#),
[HAC-210](#), [HAC-236](#)
FRONT BRAKE CALIPER [BR-45](#)
FRONT BUMPER..... [EXT-16](#)
FRONT CAMERA..... [AV-361](#)
FRONT CARRIER, INPUT CLUTCH, REAR
INTERNAL GEAR [TM-580](#)
FRONT COMBINATION LAMP [EXL-132](#), [EXL-147](#),
[EXL-289](#), [EXL-305](#)

FRONT COVER EM-330
 FRONT DIFFERENTIAL GEAR OIL DLN-148
 FRONT DISC BRAKE BR-8, BR-16, BR-32
 FRONT DOOR DLK-151
 FRONT DOOR FINISHER INT-14
 FRONT DOOR GLASS GW-14
 FRONT DOOR GLASS REGULATOR GW-16
 FRONT DOOR LOCK DLK-167
 FRONT DOOR SPEAKER ..AV-49, AV-68, AV-134,
 AV-160, AV-244, AV-281
 FRONT DRIVE SHAFT FAX-16, FAX-18
 FRONT DRIVE SHAFT BOOT FAX-9
 FRONT FENDER DLK-149
 FRONT FINAL DRIVE DLN-157, DLN-159
 FRONT FOG LAMPEXL-53, EXL-136, EXL-208,
 EXL-293
 FRONT FOG LAMP CIRCUIT ... EXL-110, EXL-267
 FRONT FOG LAMP SWITCH ...EXL-146, EXL-304
 FRONT GRILLEEXT-24
 FRONT OIL SEAL ...DLN-102, DLN-150, DLN-183,
 DLN-286
 FRONT PASSENGER AIR BAG MODULE ...SR-17
 FRONT PASSENGER SIDE POWER WINDOW
 ALONE DOES NOT OPERATE PWC-65
 FRONT PILLAR SPEAKER AV-241
 FRONT POWER WINDOW MOTOR GW-19
 FRONT POWER WINDOW SWITCH PWC-79
 FRONT PROPELLER SHAFT ..DLN-123, DLN-125
 FRONT ROOM/MAP LAMP ASSEMBLY INL-68
 FRONT SEAT SE-95, SE-118
 FRONT SEAT BELT SB-8
 FRONT SEAT BELT BUCKLE SWITCH SR-30
 FRONT SIDE MARKER LAMP CIRCUIT .EXL-104,
 EXL-261
 FRONT SPEAKER AV-282
 FRONT SUSPENSION ASSEMBLY FSU-6
 FRONT TWEETER AV-47, AV-67, AV-132, AV-159,
 AV-236, AV-279
 FRONT WASHER MOTOR WW-55
 FRONT WIPER WW-47
 FRONT WIPER AND WASHER SYSTEM ..WW-23
 FRONT WIPER DOES NOT OPERATE WW-45
 FRONT WIPER MOTOR GROUND CIRCUIT
 WW-37
 FRONT WIPER MOTOR HI CIRCUIT WW-34
 FRONT WIPER MOTOR LO CIRCUIT WW-32
 FRONT WIPER STOP POSITION SIGNAL CIRCUIT
 WW-36
 FUEL DRAIN LINES EM-468
 FUEL FILLER LID DLK-180
 FUEL FILTER (STAGE 1) FL-39
 FUEL FILTER (STAGE 2) FL-41
 FUEL FILTER HOUSING (STAGE 1) FL-43
 FUEL FILTER HOUSING (STAGE 2) FL-46
 FUEL INJECTOR EC-1891, EM-428
 FUEL INJECTOR AND FUEL TUBE EM-54

FUEL LEVEL SENSOR SIGNAL CIRCUIT MWI-91,
 MWI-171
 FUEL LEVEL SENSOR UNIT FL-36
 FUEL LEVEL SENSOR UNIT AND FUEL PUMP
 ASSEMBLY FL-6
 FUEL LINE FL-30
 FUEL PRESSURE EC-1435
 FUEL PRESSURE SENSOR FL-56
 FUEL PUMP EM-422
 FUEL PUMP ACTUATOR EM-477
 FUEL PUMP CONTROL MODULE (FPCM) EC-1935
 FUEL RAIL EM-443
 FUEL RAIL PRESSURE RELIEF VALVE ... EM-474
 FUEL RAIL PRESSURE SENSOR EM-450
 FUEL RAIL SUPPLY LINE (HIGH PRESSURE)
 EM-460
 FUEL RAIL TO FUEL RAIL SUPPLY LINE (HIGH
 PRESSURE) EM-464
 FUEL SUPPLY PIPE EM-453
 FUEL SYSTEM EM-205, FL-5, FL-24
 FUEL TANK FL-9, FL-32
 FUEL TANK INLET VALVE FL-29
 FUEL TEMPERATURE SENSOR FL-54
 FUEL-WATER SEPERATOR FL-31, FL-50
 FUSE BLOCK - JUNCTION BOX (J/B) PG-154
 FUSE INSPECTION PG-168
 FUSE, FUSIBLE LINK AND RELAY BOX .. PG-155
 FUSIBLE LINK INSPECTION PG-172

G

GENERAL MAINTENANCE MA-7, MA-53
 GENERATOR CHG-44, CHG-47
 GLOVE BOX ASSEMBLY AND HOUSING IP-21
 GLOVE BOX LAMP INL-71
 GLOW CONTROL UNIT EC-1256
 GLOW PLUG EM-203, EM-251
 GOOSENECK HITCH TTS-23
 GPS ANTENNA AV-163, AV-288
 GROUND PG-104

H

HANDLING PRECAUTION DAS-68
 HANDLING PRECAUTIONS FOR PLASTICS
 BRM-116
 HARNESS PG-121
 HAZARD FUNCTION DLK-118
 HAZARD SWITCH EXL-118, EXL-139, EXL-275,
 EXL-296
 HEADLAMP EXL-27, EXL-176
 HEADLAMP (HI) CIRCUIT EXL-96, EXL-252
 HEADLAMP (LO) CIRCUIT EXL-98, EXL-254
 HEADLAMP AIMING SWITCH EXL-298
 HEADLAMP AIMING SYSTEM EXL-183
 HEADLINING INT-32
 HEADREST DISPLAY UNIT AV-463

HEAT SHIELDEM-254, EX-32
 HEATED SEAT SE-42
 HEATED SEAT SWITCH..... SE-107
 HEATED STEERING WHEEL..... ST-10
 HEATED STEERING WHEEL SWITCH ST-66
 HEATED STEERING WHEEL SWITCH INDICATOR
 LAMP ST-29
 HEATED STEERING WHEEL SYSTEM ST-25
 HEATER AND AIR CONDITIONING SYSTEM
 CONTROL SYMPTOMSHAC-109, HAC-221
 HEATING AND COOLING UNIT ASSEMBLYHA-45
 HEAVY TIGHT-CORNER BRAKING SYMPTOM
 OCCURSDLN-92
 HIGH AND LOW REVERSE CLUTCH..... TM-590
 HIGH PRESSURE FUEL PUMPEC-1897
 HIGH PRESSURE FUEL PUMP AND FUEL HOSE
 EM-49
 HIGH-MOUNTED STOP LAMP EXL-143, EXL-301
 HILL DESCENT CONTROL SWITCH..... BRC-168
 HOLE COVER..... ST-49
 HOLE COVER SEAL ST-47
 HOMELINK UNIVERSAL TRANSCEIVER .DLK-54
 HOODDLK-141
 HOOD LOCK.....DLK-165
 HOOD SWITCHDLK-119
 HORN..... HRN-3, HRN-7
 HORN FUNCTIONSEC-143
 HOW TO ERASE PERMANENT DTC EC-205,
 EC-1444, TM-92
 HOW TO FOLLOW TROUBLE DIAGNOSES.. GI-6
 HOW TO READ WIRING DIAGRAMS GI-9
 HOW TO SELECT PISTON AND BEARINGEM-139
 HOW TO SET SRT CODEEC-199, EC-1438
 HOW TO USE THIS MANUAL GI-3
 HOW TO USE THIS SECTIONLAN-41, LAN-56
 HVAC BRANCH LINE CIRCUITLAN-186, LAN-239,
 LAN-268, LAN-304, LAN-340, LAN-382,
 LAN-421, LAN-464, LAN-496, LAN-527,
 LAN-561, LAN-599, LAN-637, LAN-674,
 LAN-714, LAN-758, LAN-799, LAN-840,
 LAN-883, LAN-928, LAN-975, LAN-1019,
 LAN-1067, LAN-1099, LAN-1132, LAN-1174,
 LAN-1204, LAN-1239, LAN-1280, LAN-1324,
 LAN-1366, LAN-1413, LAN-1460, LAN-1508
 HYDRAULIC BOOSTER ASSEMBLYBR-15, BR-29,
 BR-42
 HYDRAULIC LASH ADJUSTEREM-323
 HYDRAULIC LINE ST-62

I

ICC BRANCH LINE CIRCUIT (CAN
 COMMUNICATION CIRCUIT)LAN-180,
 LAN-335, LAN-376, LAN-458, LAN-632,
 LAN-709, LAN-752, LAN-835, LAN-922,
 LAN-969, LAN-1061, LAN-1127, LAN-1168,
 LAN-1234, LAN-1275, LAN-1318, LAN-1361,
 LAN-1407, LAN-1454, LAN-1502
 ICC BRANCH LINE CIRCUIT (ITS
 COMMUNICATION CIRCUIT)LAN-181,
 LAN-336, LAN-377, LAN-459, LAN-633,
 LAN-710, LAN-753, LAN-836, LAN-923,
 LAN-970, LAN-1062, LAN-1128, LAN-1169,
 LAN-1235, LAN-1276, LAN-1319, LAN-1362,
 LAN-1408, LAN-1455, LAN-1503
 ID REGISTRATION CANNOT BE COMPLETED....
 WT-61
 ID REGISTRATION PROCEDURE WT-25
 IDENTIFICATION INFORMATION GI-32
 IDLE AIR VOLUME LEARNINGEC-1430
 IDLE SPEEDEC-1249, EC-1928
 IGNITION COIL EM-34
 IGNITION SIGNALEC-1901
 IGNITION TIMINGEC-1929
 ILLUMINATION INL-33
 IN-CABIN MICROFILTER VTL-7
 IN-VEHICLE SENSOR HAC-120
 INFORMATION DISPLAY (ASCD)EC-1906
 INJECTOR ADJUSTMENT VALUE REGISTRATION
 EC-187
 INJECTOR SUPPLY LINES (HIGH PRESSURE)...
 EM-455
 INLET NOx SENSOR..... EX-45
 INPUT SPEED SENSOR TM-226
 INSIDE KEY ANTENNADLK-184
 INSIDE MIRROR..... MIR-13, MIR-20
 INSTRUMENT LOWER PANEL LH IP-22
 INSTRUMENT PANEL ASSEMBLY IP-14
 INSUFFICIENT COOLING HAC-111, HAC-223
 INSUFFICIENT HEATINGHAC-113, HAC-225
 INTAKE MANIFOLD EM-35, EM-231
 INTAKE MANIFOLD AIR TEMPERATURE SENSOR
 EM-242
 INTAKE SENSOR HAC-122, HAC-231
 INTEGRATED HOMELINK TRANSMITTERDLK-121
 INTELLIGENT KEYDLK-115
 INTELLIGENT KEY BATTERYDLK-189
 INTELLIGENT KEY BUTTON OPERATION HAS
 POOR RANGE (ALL KEYS)DLK-133
 INTELLIGENT KEY BUTTON OPERATION HAS
 POOR RANGE (ONE KEY)DLK-140
 INTELLIGENT KEY SYSTEMDLK-39
 INTELLIGENT KEY SYSTEM ALL FUNCTIONS
 CANNOT OPERATE (ALL KEYS).....DLK-129
 INTELLIGENT KEY SYSTEM ALL FUNCTIONS
 CANNOT OPERATE (ONE KEY).....DLK-138

INTELLIGENT KEY SYSTEM SYMPTOMS
[DLK-123](#), [SEC-144](#)
 INTELLIGENT KEY SYSTEM/ENGINE START
 FUNCTION [SEC-27](#)
 INTELLIGENT KEY WARNING BUZZER. [DLK-113](#),
[DLK-187](#)
 INTERIOR LIGHTING SYSTEM SYMPTOMS [INL-67](#)
 INTERIOR ROOM LAMP [INL-14](#)
 INTERIOR ROOM LAMP CONTROL CIRCUIT
[INL-57](#)
 INTERMEDIATE SHAFT [ST-41](#)
 INTERMITTENT INCIDENT [SRC-35](#)
 INVERTER UNIT [PWO-20](#), [PWO-22](#), [PWO-47](#)
 IPDM E/R (INTELLIGENT POWER DISTRIBUTION
 MODULE ENGINE ROOM) ... [PCS-14](#), [PCS-25](#),
[PCS-43](#), [PG-163](#)
 IPDM-E BRANCH LINE CIRCUIT [LAN-168](#),
[LAN-232](#), [LAN-257](#), [LAN-291](#), [LAN-329](#),
[LAN-369](#), [LAN-408](#), [LAN-451](#), [LAN-489](#),
[LAN-516](#), [LAN-550](#), [LAN-586](#), [LAN-626](#),
[LAN-663](#), [LAN-703](#), [LAN-745](#), [LAN-786](#),
[LAN-829](#), [LAN-870](#), [LAN-915](#), [LAN-962](#),
[LAN-1006](#), [LAN-1054](#), [LAN-1092](#), [LAN-1121](#),
[LAN-1161](#), [LAN-1197](#), [LAN-1228](#), [LAN-1269](#),
[LAN-1311](#), [LAN-1355](#), [LAN-1400](#), [LAN-1447](#),
[LAN-1495](#)
 ITS COMMUNICATION CIRCUIT [LAN-203](#),
[LAN-348](#), [LAN-390](#), [LAN-474](#), [LAN-645](#),
[LAN-722](#), [LAN-766](#), [LAN-850](#), [LAN-938](#),
[LAN-985](#), [LAN-1079](#), [LAN-1140](#), [LAN-1182](#),
[LAN-1247](#), [LAN-1288](#), [LAN-1332](#), [LAN-1376](#),
[LAN-1423](#), [LAN-1470](#), [LAN-1520](#)

K

KEY CYLINDER [DLK-182](#)
 KEY WARNING LAMP [DLK-117](#)
 KEYLESS POWER WINDOW DOWN DOES NOT
 OPERATE [PWC-74](#)

L

L TERMINAL CIRCUIT (OPEN) [CHG-38](#)
 L TERMINAL CIRCUIT (SHORT) [CHG-41](#)
 LATCH (LOWER ANCHORS AND TETHER FOR
 CHILDREN) SYSTEM [SB-17](#)
 LEAF SPRING [RSU-6](#)
 LED HEADLAMP [EXL-258](#)
 LED HEADLAMP OPERATION INSPECTION
[EXL-251](#)
 LICENSE PLATE LAMP [EXL-141](#), [EXL-299](#)
 LICENSE PLATE LAMP CIRCUIT [EXL-108](#),
[EXL-265](#)
 LIFTING MOTOR (FRONT) [ADP-125](#)
 LIFTING MOTOR (REAR) [ADP-127](#)
 LIFTING POINT [GI-29](#)
 LIFTING SENSOR (FRONT) [ADP-107](#)

LIFTING SENSOR (REAR) [ADP-110](#)
 LIFTING SWITCH (FRONT) [ADP-83](#)
 LIFTING SWITCH (REAR) [ADP-85](#)
 LIGHTING SWITCH [EXL-140](#), [EXL-297](#)
 LOW PRESSURE FUEL PUMP [EC-1907](#)
 LOW PRESSURE TURBOCHARGER BOOST
 PRESSURE SENSOR [EM-245](#)
 LOW TIRE PRESSURE LOCATION INDICATOR
 CONTINUES DISPLAYING [WT-60](#)
 LOW TIRE PRESSURE LOCATION INDICATOR
 DOES NOT DISPLAY [WT-59](#)
 LOW TIRE PRESSURE WARNING CONTROL
 UNIT [WT-74](#)
 LOW TIRE PRESSURE WARNING LAMP... [WT-52](#)
 LOW TIRE PRESSURE WARNING LAMP BLINKS
[WT-58](#)
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN ON [WT-56](#)
 LOW TIRE PRESSURE WARNING LAMP STAYS
 ON [WT-57](#)
 LOWER JOINT [ST-45](#)
 LOWER LINK [FSU-13](#)
 LUBRICATION SYSTEM [LU-7](#), [LU-23](#)
 LUMBAR SUPPORT SWITCH [SE-111](#)
 LUMBAR SUPPORT SYSTEM [SE-36](#)

M

M&A BRANCH LINE CIRCUIT [LAN-182](#), [LAN-237](#),
[LAN-265](#), [LAN-300](#), [LAN-337](#), [LAN-378](#),
[LAN-417](#), [LAN-460](#), [LAN-494](#), [LAN-524](#),
[LAN-558](#), [LAN-595](#), [LAN-634](#), [LAN-671](#),
[LAN-711](#), [LAN-754](#), [LAN-795](#), [LAN-837](#),
[LAN-879](#), [LAN-924](#), [LAN-971](#), [LAN-1015](#),
[LAN-1063](#), [LAN-1097](#), [LAN-1129](#), [LAN-1170](#),
[LAN-1202](#), [LAN-1236](#), [LAN-1277](#), [LAN-1320](#),
[LAN-1363](#), [LAN-1409](#), [LAN-1456](#), [LAN-1504](#)
 MAGNET CLUTCH [HA-33](#), [HAC-102](#), [HAC-214](#)
 MAIN LINE BETWEEN 4WD AND ABS CIRCUIT ...
[LAN-119](#), [LAN-476](#), [LAN-501](#), [LAN-535](#),
[LAN-569](#), [LAN-607](#), [LAN-647](#), [LAN-684](#),
[LAN-724](#), [LAN-768](#), [LAN-809](#), [LAN-852](#),
[LAN-893](#), [LAN-940](#), [LAN-987](#), [LAN-1031](#)
 MAIN LINE BETWEEN 4WD AND IPDM-E CIRCUIT
[LAN-156](#), [LAN-1185](#), [LAN-1209](#), [LAN-1250](#),
[LAN-1291](#), [LAN-1335](#), [LAN-1379](#), [LAN-1426](#),
[LAN-1473](#)
 MAIN LINE BETWEEN A-BAG AND CGW CIRCUIT
[LAN-127](#), [LAN-249](#), [LAN-282](#), [LAN-398](#),
[LAN-507](#), [LAN-541](#), [LAN-576](#), [LAN-653](#),
[LAN-775](#), [LAN-859](#), [LAN-994](#)
 MAIN LINE BETWEEN A-BAG AND ICC CIRCUIT
[LAN-128](#), [LAN-317](#), [LAN-356](#), [LAN-437](#),
[LAN-613](#), [LAN-690](#), [LAN-731](#), [LAN-815](#),
[LAN-900](#), [LAN-947](#), [LAN-1038](#), [LAN-1109](#),
[LAN-1148](#), [LAN-1215](#), [LAN-1256](#), [LAN-1297](#),
[LAN-1341](#), [LAN-1385](#), [LAN-1432](#), [LAN-1479](#)

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT
[LAN-131](#), [LAN-226](#), [LAN-482](#), [LAN-1087](#),
[LAN-1191](#)

MAIN LINE BETWEEN ABS AND ADP CIRCUIT...
[LAN-158](#), [LAN-1144](#), [LAN-1293](#), [LAN-1381](#),
[LAN-1428](#), [LAN-1475](#)

MAIN LINE BETWEEN ABS AND DLC CIRCUIT...
[LAN-159](#), [LAN-1083](#), [LAN-1105](#), [LAN-1187](#),
[LAN-1211](#), [LAN-1252](#), [LAN-1337](#)

MAIN LINE BETWEEN ABS AND IPDM-E CIRCUIT
[LAN-120](#), [LAN-221](#), [LAN-244](#), [LAN-276](#),
[LAN-312](#), [LAN-350](#), [LAN-392](#), [LAN-431](#),
[LAN-477](#), [LAN-502](#), [LAN-536](#), [LAN-570](#),
[LAN-608](#), [LAN-648](#), [LAN-685](#), [LAN-725](#),
[LAN-769](#), [LAN-810](#), [LAN-853](#), [LAN-894](#),
[LAN-941](#), [LAN-988](#), [LAN-1032](#)

MAIN LINE BETWEEN ADP AND DLC CIRCUIT...
[LAN-124](#), [LAN-279](#), [LAN-353](#), [LAN-395](#),
[LAN-434](#), [LAN-573](#), [LAN-728](#), [LAN-772](#),
[LAN-856](#), [LAN-897](#), [LAN-944](#), [LAN-991](#),
[LAN-1035](#), [LAN-1145](#), [LAN-1294](#), [LAN-1382](#),
[LAN-1429](#), [LAN-1476](#)

MAIN LINE BETWEEN AV AND HVAC CIRCUIT ...
[LAN-163](#), [LAN-1112](#), [LAN-1218](#), [LAN-1259](#),
[LAN-1344](#)

MAIN LINE BETWEEN AV AND TCU CIRCUIT
[LAN-133](#), [LAN-285](#), [LAN-359](#), [LAN-401](#),
[LAN-440](#), [LAN-579](#), [LAN-734](#), [LAN-778](#),
[LAN-862](#), [LAN-903](#), [LAN-950](#), [LAN-997](#),
[LAN-1041](#), [LAN-1151](#), [LAN-1300](#), [LAN-1388](#),
[LAN-1435](#), [LAN-1482](#)

MAIN LINE BETWEEN AV AND TPMS CIRCUIT...
[LAN-134](#), [LAN-252](#), [LAN-320](#), [LAN-510](#),
[LAN-544](#), [LAN-616](#), [LAN-656](#), [LAN-693](#),
[LAN-818](#)

MAIN LINE BETWEEN AVM AND DIFF CIRCUIT..
[LAN-143](#), [LAN-1001](#), [LAN-1044](#), [LAN-1490](#)

MAIN LINE BETWEEN AVM AND SONAR CIRCUIT
[LAN-142](#), [LAN-405](#), [LAN-443](#), [LAN-782](#),
[LAN-906](#), [LAN-1396](#)

MAIN LINE BETWEEN CGW AND M&A CIRCUIT.
[LAN-129](#), [LAN-250](#), [LAN-283](#), [LAN-399](#),
[LAN-508](#), [LAN-542](#), [LAN-577](#), [LAN-654](#),
[LAN-776](#), [LAN-860](#), [LAN-995](#)

MAIN LINE BETWEEN DIFF AND SONAR CIRCUIT
[LAN-144](#), [LAN-659](#), [LAN-820](#), [LAN-866](#),
[LAN-953](#), [LAN-1002](#), [LAN-1050](#), [LAN-1351](#),
[LAN-1443](#), [LAN-1491](#)

MAIN LINE BETWEEN DLC AND AVM CIRCUIT...
[LAN-139](#), [LAN-404](#), [LAN-781](#), [LAN-1000](#)

MAIN LINE BETWEEN DLC AND DIFF CIRCUIT..
[LAN-140](#), [LAN-546](#), [LAN-658](#), [LAN-865](#)

MAIN LINE BETWEEN DLC AND RDR-R CIRCUIT
[LAN-145](#), [LAN-322](#), [LAN-362](#), [LAN-444](#),
[LAN-618](#), [LAN-695](#), [LAN-737](#), [LAN-821](#),
[LAN-907](#), [LAN-954](#), [LAN-1045](#), [LAN-1114](#),
[LAN-1154](#), [LAN-1220](#), [LAN-1261](#), [LAN-1303](#),
[LAN-1346](#), [LAN-1391](#), [LAN-1438](#), [LAN-1485](#)

MAIN LINE BETWEEN DLC AND SONAR CIRCUIT
[LAN-141](#), [LAN-254](#), [LAN-288](#), [LAN-512](#),
[LAN-582](#)

MAIN LINE BETWEEN DLC AND STRG CIRCUIT
[LAN-125](#), [LAN-224](#), [LAN-247](#), [LAN-280](#),
[LAN-315](#), [LAN-354](#), [LAN-396](#), [LAN-435](#),
[LAN-480](#), [LAN-505](#), [LAN-539](#), [LAN-574](#),
[LAN-611](#), [LAN-651](#), [LAN-688](#), [LAN-729](#),
[LAN-773](#), [LAN-813](#), [LAN-857](#), [LAN-898](#),
[LAN-945](#), [LAN-992](#), [LAN-1036](#), [LAN-1085](#),
[LAN-1107](#), [LAN-1146](#), [LAN-1189](#), [LAN-1213](#),
[LAN-1254](#), [LAN-1295](#), [LAN-1339](#), [LAN-1383](#),
[LAN-1430](#), [LAN-1477](#)

MAIN LINE BETWEEN HVAC AND PTC CIRCUIT.
[LAN-138](#), [LAN-229](#), [LAN-485](#)

MAIN LINE BETWEEN HVAC AND TPMS CIRCUIT
[LAN-164](#), [LAN-1089](#), [LAN-1113](#), [LAN-1153](#),
[LAN-1193](#), [LAN-1219](#), [LAN-1260](#), [LAN-1302](#),
[LAN-1345](#), [LAN-1390](#), [LAN-1437](#), [LAN-1484](#)

MAIN LINE BETWEEN ICC AND M&A CIRCUIT ...
[LAN-130](#), [LAN-318](#), [LAN-357](#), [LAN-438](#),
[LAN-614](#), [LAN-691](#), [LAN-732](#), [LAN-816](#),
[LAN-901](#), [LAN-948](#), [LAN-1039](#), [LAN-1110](#),
[LAN-1149](#), [LAN-1216](#), [LAN-1257](#), [LAN-1298](#),
[LAN-1342](#), [LAN-1386](#), [LAN-1433](#), [LAN-1480](#)

MAIN LINE BETWEEN IPDM-E AND ABS CIRCUIT
[LAN-157](#), [LAN-1082](#), [LAN-1104](#), [LAN-1143](#),
[LAN-1186](#), [LAN-1210](#), [LAN-1251](#), [LAN-1292](#),
[LAN-1336](#), [LAN-1380](#), [LAN-1427](#), [LAN-1474](#)

MAIN LINE BETWEEN IPDM-E AND TCM CIRCUIT
[LAN-121](#), [LAN-222](#), [LAN-245](#), [LAN-277](#),
[LAN-313](#), [LAN-351](#), [LAN-393](#), [LAN-432](#),
[LAN-478](#), [LAN-503](#), [LAN-537](#), [LAN-571](#),
[LAN-609](#), [LAN-649](#), [LAN-686](#), [LAN-726](#),
[LAN-770](#), [LAN-811](#), [LAN-854](#), [LAN-895](#),
[LAN-942](#), [LAN-989](#), [LAN-1033](#)

MAIN LINE BETWEEN M&A AND AV CIRCUIT
[LAN-132](#), [LAN-251](#), [LAN-284](#), [LAN-319](#),
[LAN-358](#), [LAN-400](#), [LAN-439](#), [LAN-509](#),
[LAN-543](#), [LAN-578](#), [LAN-615](#), [LAN-655](#),
[LAN-692](#), [LAN-733](#), [LAN-777](#), [LAN-817](#),
[LAN-861](#), [LAN-902](#), [LAN-949](#), [LAN-996](#),
[LAN-1040](#), [LAN-1111](#), [LAN-1150](#), [LAN-1217](#),
[LAN-1258](#), [LAN-1299](#), [LAN-1343](#), [LAN-1387](#),
[LAN-1434](#), [LAN-1481](#)

MAIN LINE BETWEEN M&A AND HVAC CIRCUIT
[LAN-161](#), [LAN-1088](#), [LAN-1192](#)

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT
[LAN-136](#), [LAN-227](#), [LAN-483](#)

MAIN LINE BETWEEN RDR-L AND AVM CIRCUIT
LAN-148, LAN-447, LAN-910, LAN-1048,
LAN-1394, LAN-1488

MAIN LINE BETWEEN RDR-L AND DIFF CIRCUIT
LAN-150, LAN-698, LAN-824, LAN-957,
LAN-1264, LAN-1349, LAN-1441

MAIN LINE BETWEEN RDR-L AND SONAR
CIRCUIT LAN-152, LAN-325, LAN-365,
LAN-621, LAN-740, LAN-1117, LAN-1157,
LAN-1223, LAN-1306

MAIN LINE BETWEEN RDR-R AND RDR-L
CIRCUIT LAN-147, LAN-324, LAN-364,
LAN-446, LAN-620, LAN-697, LAN-739,
LAN-823, LAN-909, LAN-956, LAN-1047,
LAN-1116, LAN-1156, LAN-1222, LAN-1263,
LAN-1305, LAN-1348, LAN-1393, LAN-1440,
LAN-1487

MAIN LINE BETWEEN STRG AND A-BAG CIRCUIT
LAN-126, LAN-225, LAN-248, LAN-281,
LAN-316, LAN-355, LAN-397, LAN-436,
LAN-481, LAN-506, LAN-540, LAN-575,
LAN-612, LAN-652, LAN-689, LAN-730,
LAN-774, LAN-814, LAN-858, LAN-899,
LAN-946, LAN-993, LAN-1037, LAN-1086,
LAN-1108, LAN-1147, LAN-1190, LAN-1214,
LAN-1255, LAN-1296, LAN-1340, LAN-1384,
LAN-1431, LAN-1478

MAIN LINE BETWEEN TCM AND 4WD CIRCUIT ..
LAN-154, LAN-1184, LAN-1208, LAN-1249,
LAN-1290, LAN-1334, LAN-1378, LAN-1425,
LAN-1472

MAIN LINE BETWEEN TCM AND ADP CIRCUIT ..
LAN-122, LAN-278, LAN-352, LAN-394,
LAN-433, LAN-572, LAN-727, LAN-771,
LAN-855, LAN-896, LAN-943, LAN-990,
LAN-1034

MAIN LINE BETWEEN TCM AND DLC CIRCUIT ...
LAN-123, LAN-223, LAN-246, LAN-314,
LAN-479, LAN-504, LAN-538, LAN-610,
LAN-650, LAN-687, LAN-812

MAIN LINE BETWEEN TCM AND IPDM-E CIRCUIT
LAN-155, LAN-1081, LAN-1103, LAN-1142

MAIN LINE BETWEEN TCU AND HVAC CIRCUIT.
LAN-162, LAN-1152, LAN-1301, LAN-1389,
LAN-1436, LAN-1483

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT
LAN-135, LAN-286, LAN-360, LAN-402,
LAN-441, LAN-580, LAN-735, LAN-779,
LAN-863, LAN-904, LAN-951, LAN-998,
LAN-1042

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT
LAN-137, LAN-228, LAN-253, LAN-287,
LAN-321, LAN-361, LAN-403, LAN-442,
LAN-484, LAN-511, LAN-545, LAN-581,
LAN-617, LAN-657, LAN-694, LAN-736,
LAN-780, LAN-819, LAN-864, LAN-905,
LAN-952, LAN-999, LAN-1043

MAIN POWER SUPPLY AND GROUND CIRCUIT .
TM-208, TM-437

MAIN POWER WINDOW AND DOOR LOCK/
UNLOCK SWITCH PWC-16

MALFUNCTION AREA CHART LAN-116

MALFUNCTION INDICATOR LAMP EC-1911

MANUAL AIR CONDITIONING SYSTEM HAC-163

MASS AIR FLOW SENSOR EM-216

METER BUZZER CIRCUIT DLK-116, WCS-47

METER CONTROL SWITCH INL-73, MWI-110,
MWI-188

METER CONTROL SWITCH SIGNAL CIRCUIT
MWI-89, MWI-169

METER SYSTEM MWI-38, MWI-141

MICROPHONE AV-73, AV-166, AV-291, AV-442

MICROPHONE SIGNAL CIRCUIT . AV-53, AV-138,
AV-256

MID SUN GEAR, REAR SUN GEAR, HIGH AND
LOW REVERSE CLUTCH HUB TM-585

MIRROR SENSOR ADP-117

MIXTURE RATIO SELF-LEARNING VALUE CLEAR
EC-1434

MODE SENSOR DLN-108

MOTOR/ACCUMULATOR BRC-164

MUDGUARD EXT-36

MULTI AV SYSTEM AV-144, AV-264

MULTI-WAY CONTROL VALVE CO-22

N

NATS ANTENNA AMP. SEC-151

NAVIGATION WITH AMPLIFIER AV-191

NAVIGATION WITHOUT AMPLIFIER AV-94

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
SEC-41

NO OUTPUT FROM AC 120 V OUTLET .. PWO-44

NOISE HA-30

NOISE VIBRATION AND HARSHNESS (NVH)
TROUBLESHOOTING RSU-4

NOISE, VIBRATION AND HARSHNESS (NVH)
TROUBLESHOOTING BR-7, DLN-97, DLN-147,
DLN-179, DLN-217, EM-21

NONE OF THE POWER WINDOWS CAN BE
OPERATED USING ANY SWITCH PWC-63

NORMAL OPERATING CONDITION ADP-139,
AV-64, AV-148, AV-268, AV-437, BCS-78,
BRC-158, DAS-118, EC-1927, EXL-123,
EXL-280, PWO-46, WW-44

O

OIL HA-21
OIL CHECK VALVE LU-56
OIL COOLER LU-12, LU-37
OIL FILTER LU-11, LU-35
OIL FILTER BYPASS VALVE LU-43
OIL FILTER HEAD ADAPTER LU-45
OIL PAN EM-299, TM-223
OIL PAN (LOWER) AND OIL STRAINER EM-61
OIL PAN (UPPER) EM-64
OIL PRESSURE REGULATOR (MAIN RIFLE) LU-47
OIL PRESSURE SWITCH LU-58
OIL PUMP LU-16, LU-50
OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON
TM-568
OIL SEAL EM-107, EM-384
OIL THERMOSTAT LU-54
ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-97,
EC-1314, TM-40, TM-315
ON BOARD REFUELING VAPOR RECOVERY
(ORVR) EC-1912
OPERATION .. DAS-65, EC-95, EC-1312, HAC-26,
HAC-149, MWI-24, MWI-128
OPERATION INSPECTION HAC-58, HAC-184
OPTICAL SENSOR.. EXL-115, EXL-135, EXL-272,
EXL-292
OUTLET NOx SENSOR..... EX-48
OUTPUT SPEED SENSOR TM-231, TM-483
OUTSIDE KEY ANTENNA..... DLK-185
OVER FENDER EXT-34
OVERHEATING CAUSE ANALYSIS..... CO-5

P

P0011, P0021 IVT CONTROL EC-1468
P0012 INTAKE VALVE TIMING CONTROL EC-1472
P0014, P0024 EVT CONTROL EC-1476
P0015 EXHAUST VALVE TIMING CONTROL.....
EC-1480
P0016 CKP - CMP CORRELATION EC-268
P0016 INTAKE VALVE TIMING CONTROL EC-1484
P0017 EXHAUST VALVE TIMING CONTROL.....
EC-1488
P0018 INTAKE VALVE TIMING CONTROL EC-1492
P0019 EXHAUST VALVE TIMING CONTROL.....
EC-1496
P0022 INTAKE VALVE TIMING CONTROL EC-1500
P0025 EXHAUST VALVE TIMING CONTROL.....
EC-1504
P0030, P0031, P0032, P0036, P0051, P0052 A/F
SENSOR 1 HEATER..... EC-1508
P0037, P0038, P0057, P0058 HO2S2 HEATER
EC-1511
P0046 TC BOOST CONTROL CIRCUIT RANGE/
PERFORMANCE EC-270

P0047 TC BOOST CONTROL CIRCUIT LOW
EC-273
P0049 TC TURBINE OVERSPEED EC-276
P004E TC BOOST CONTROL CIRCUIT
INTERMITTENT EC-279
P0075, P0081 IVT CONTROL SOLENOID VALVE.
EC-1514
P0078, P0084 EVT CONTROL SOLENOID VALVE
EC-1517
P007B CHARGE AIR COOLER TEMPERATURE
SENSOR EC-281
P007C CHARGE AIR COOLER TEMPERATURE
SENSOR EC-285
P007D CHARGE AIR COOLER TEMPERATURE
SENSOR EC-288
P0087 FRP CONTROL SYSTEM EC-1520
P0087 FUEL RAIL PRESSURE TOO LOW EC-291
P0088 FRP CONTROL SYSTEM EC-1524
P0088 FUEL RAIL PRESSURE TOO HIGH EC-293
P008A LOW FUEL PRESSURE CONTROL
SYSTEM EC-295
P0090 HIGH PRESSURE FUEL PUMP EC-1527
P009C FUEL PRESSURE RELIEF CONTROL
CIRCUIT LOW EC-297
P009D FUEL PRESSURE RELIEF CONTROL
CIRCUIT HIGH..... EC-300
P009E FUEL PRESSURE RELIEF CONTROL
PERFORMANCE EC-303
P00AF BOOST PRESSURE CONTROL EC-307
P00B3, P00B4 ENGINE COOLANT
TEMPERATURE SENSOR 2 EC-1530
P00C6 FUEL RAIL PRESSURE EC-309
P0101 MAF SENSOR EC-311, EC-1533
P0102 MASS AIR FLOW SENSOR EC-315
P0102, P0103 MAF SENSOR EC-1538
P0103 MASS AIR FLOW SENSOR EC-319
P0106 MANIFOLD ABSOLUTE PRESSURE
SENSOR EC-322
P0107 MAP SENSOR CIRCUIT LOW EC-327
P0108 MAP SENSOR CIRCUIT HIGH EC-331
P0111 IAT SENSOR EC-335, EC-1543
P0112 INTAKE AIR TEMPERATURE SENSOR
EC-338
P0112, P0113 IAT SENSOR..... EC-1545
P0113 INTAKE AIR TEMPERATURE SENSOR
EC-341
P0116 ECT SENSOR..... EC-344
P0116 ENGINE COOLANT TEMPERATURE
SENSOR 1 EC-1547
P0117 COOLANT TEMPERATURE SENSOR.....
EC-348
P0117, P0118 ENGINE COOLANT TEMPERATURE
SENSOR 1 EC-1550
P0118 COOLANT TEMPERATURE SENSOR.....
EC-351
P0122, P0123 TP SENSOR..... EC-1553

P0125 ECT SENSOR.....	EC-1556	P020F FUEL INJECTOR CYLINDER 6 TIMING	EC-425
P0127 IAT SENSOR.....	EC-354, EC-1558	P0217 ENGINE OVER TEMPERATURE ...	EC-427
P0128 THERMOSTAT FUNCTION	EC-355	P0219 ENGINE OVER SPEED	EC-428
P012B TC BOOST SENSOR	EC-357	P021A FUEL INJECTOR CYLINDER 7 TIMING	EC-430
P012C TC COMPRESSOR INLET PRESSURE SENSOR CIRCUIT LOW	EC-360	P021B FUEL INJECTOR CYLINDER 8 TIMING	EC-432
P012D TC COMPRESSOR INLET PRESSURE SENSOR CIRCUIT HIGH.....	EC-364	P0222, P0223 TP SENSOR	EC-1628
P0130, P0150 A/F SENSOR 1	EC-1560	P0237 BOOST PRESSURE SENSOR.....	EC-434
P0131, P0151 A/F SENSOR 1	EC-1564	P0238 BOOST PRESSURE SENSOR.....	EC-438
P0132, P0152 A/F SENSOR 1	EC-1567	P0252 FUEL PUMP METERING CONTROL RANGE/PERFORMANCE	EC-442
P0137, P0157 HO2S2	EC-1570	P0253 FUEL PUMP METERING CONTROL LOW .	EC-445
P0138, P0158 HO2S2	EC-1576	P0254 FUEL PUMP METERING CONTROL HIGH	EC-448
P0139, P0159 HO2S2	EC-1584	P0257 FUEL PUMP METERING CONTROL RANGE/PERFORMANCE	EC-451
P014C, P014D, P014E, P014F, P015A, P015B, P015C, P015D A/F SENSOR 1	EC-1591	P0261 FUEL INJECTOR (CYLINDER 1)....	EC-454
P0168 FUEL TEMPERATURE SENSOR....	EC-368	P0262 FUEL INJECTOR (CYLINDER 1)....	EC-457
P0169 INCORRECT FUEL COMPOSITION.....	EC-369	P0263 CYLINDER 1 COMBUSTION DISORDER...	EC-460
P0171, P0174 FUEL INJECTION SYSTEM FUNCTION	EC-1597	P0264 FUEL INJECTOR (CYLINDER 2)....	EC-462
P0172, P0175 FUEL INJECTION SYSTEM FUNCTION	EC-1601	P0265 FUEL INJECTOR (CYLINDER 2)....	EC-465
P0181 FTT SENSOR	EC-1605	P0266 CYLINDER 2 COMBUSTION DISORDER...	EC-468
P0181 FUEL TEMPERATURE SENSOR....	EC-370	P0267 FUEL INJECTOR (CYLINDER 3)....	EC-470
P0182 FUEL TEMPERATURE SENSOR....	EC-373	P0268 FUEL INJECTOR (CYLINDER 3)....	EC-473
P0182, P0183 FTT SENSOR	EC-1609	P0269 CYLINDER 3 COMBUSTION DISORDER...	EC-476
P0183 FUEL TEMPERATURE SENSOR....	EC-376	P026A CHARGE AIR COOLER EFFICIENCY BELOW NORMAL	EC-478
P0184 FUEL TEMPERATURE SENSOR....	EC-379	P026B INJECTION TIMING PERFORMANCE	EC-480
P0190, P0192, P0193 FRP SENSOR	EC-1612	P0270 FUEL INJECTOR (CYLINDER 4)....	EC-481
P0191 FRP SENSOR	EC-1616	P0271 FUEL INJECTOR (CYLINDER 4)....	EC-484
P0191 FUEL RAIL PRESSURE SENSOR ..	EC-380	P0272 CYLINDER 4 COMBUSTION DISORDER...	EC-487
P0192 FUEL RAIL PRESSURE SENSOR ..	EC-383	P0273 FUEL INJECTOR (CYLINDER 5)....	EC-489
P0193 FUEL RAIL PRESSURE SENSOR ..	EC-387	P0274 FUEL INJECTOR (CYLINDER 5)....	EC-492
P0196 EOT SENSOR.....	EC-1619	P0275 CYLINDER 5 COMBUSTION DISORDER...	EC-495
P0197, P0198 EOT SENSOR	EC-1623	P0276 FUEL INJECTOR (CYLINDER 6)....	EC-497
P0201 FUEL INJECTOR (CYLINDER 1)....	EC-391	P0277 FUEL INJECTOR (CYLINDER 6)....	EC-500
P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208 INJECTOR.....	EC-1625	P0278 CYLINDER 6 COMBUSTION DISORDER...	EC-503
P0202 FUEL INJECTOR (CYLINDER 2)....	EC-394	P0279 FUEL INJECTOR (CYLINDER 7)....	EC-505
P0203 FUEL INJECTOR (CYLINDER 3)....	EC-397	P0280 FUEL INJECTOR (CYLINDER 7)....	EC-508
P0204 FUEL INJECTOR (CYLINDER 4)....	EC-400	P0281 CYLINDER 7 COMBUSTION DISORDER...	EC-511
P0205 FUEL INJECTOR (CYLINDER 5)....	EC-403	P0282 FUEL INJECTOR (CYLINDER 8)....	EC-513
P0206 FUEL INJECTOR (CYLINDER 6)....	EC-406	P0283 FUEL INJECTOR (CYLINDER 8)....	EC-516
P0207 FUEL INJECTOR (CYLINDER 7)....	EC-409	P0284 CYLINDER 8 COMBUSTION DISORDER...	EC-519
P0208 FUEL INJECTOR (CYLINDER 8)....	EC-412	P0299 BOOST PRESSURE	EC-521
P020A FUEL INJECTOR CYLINDER 1 TIMING	EC-415		
P020B FUEL INJECTOR CYLINDER 2 TIMING	EC-417		
P020C FUEL INJECTOR CYLINDER 3 TIMING	EC-419		
P020D FUEL INJECTOR CYLINDER 4 TIMING	EC-421		
P020E FUEL INJECTOR CYLINDER 5 TIMING	EC-423		

P02EE FUEL INJECTOR (CYLINDER 1) ...	EC-524
P02EF FUEL INJECTOR (CYLINDER 2) ...	EC-527
P02F0 FUEL INJECTOR (CYLINDER 3)....	EC-530
P02F1 FUEL INJECTOR (CYLINDER 4)....	EC-533
P02F2 FUEL INJECTOR (CYLINDER 5)....	EC-536
P02F3 FUEL INJECTOR (CYLINDER 6)....	EC-539
P02F4 FUEL INJECTOR (CYLINDER 7)....	EC-542
P02F5 FUEL INJECTOR (CYLINDER 8)....	EC-545
P0300 MISFIRE	EC-548
P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308 MISFIRE	EC-1631
P0301 CYLINDER 1 MISFIRE	EC-550
P0302 CYLINDER 2 MISFIRE	EC-552
P0303 CYLINDER 3 MISFIRE	EC-554
P0304 CYLINDER 4 MISFIRE	EC-556
P0305 CYLINDER 5 MISFIRE	EC-558
P0306 CYLINDER 6 MISFIRE	EC-560
P0307 CYLINDER 7 MISFIRE	EC-562
P0308 CYLINDER 8 MISFIRE	EC-564
P0327, P0328, P0332, P0333 KS	EC-1638
P0335 CKP SENSOR	EC-1641
P0335 CKP SENSOR (POS)	EC-566
P0340 CMP SENSOR (PHASE)	EC-571
P0340, P0345 CMP SENSOR	EC-1644
P0383 GLOW PLUG CONTROL MODULE CONTROL CIRCUIT LOW	EC-575
P0384 GLOW PLUG CONTROL MODULE CONTROL CIRCUIT HIGH	EC-578
P0401 FLOW IN THE EXHAUST GAS RECIRCULATION	EC-580
P0402 FLOW IN THE EXHAUST GAS RECIRCULATION	EC-582
P0405 EGR SENSOR CIRCUIT LOW	EC-584
P0406 EGR SENSOR CIRCUIT HIGH	EC-588
P040B EXHAUST GAS RECIRCULATION TEMPERATURE SENSOR	EC-592
P040C EXHAUST GAS RECIRCULATION TEMPERATURE SENSOR	EC-595
P040D EXHAUST GAS RECIRCULATION TEMPERATURE SENSOR	EC-598
P0420 EFFICIENCY OF THE CATALYTIC CONVERTER	EC-601
P0420, P0430 THREE WAY CATALYST FUNCTION EC-1649	
P0421 CATALYST EFFICIENCY BELOW THRESHOLD	EC-603
P0441 EVAP CONTROL SYSTEM	EC-1655
P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-1661
P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-1665
P0447 EVAP CANISTER VENT CONTROL VALVE EC-1668	
P0448 EVAP CANISTER VENT CONTROL VALVE EC-1672	
P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-1676
P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-1679
P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-1683
P0456 EVAP CONTROL SYSTEM	EC-1688
P0460 FUEL LEVEL SENSOR	EC-1694
P0461 FUEL LEVEL SENSOR ...	EC-605 , EC-1696
P0462 FUEL LEVEL SENSOR CIRCUIT LOW	EC-607
P0462, P0463 FUEL LEVEL SENSOR	EC-1698
P0463 FUEL LEVEL SENSOR CIRCUIT HIGH	EC-608
P046C EGR VOLUME CONTROL VALVE POSITION SENSOR	EC-609
P0471 EXHAUST PRESSURE SENSOR ...	EC-613
P0472 EXHAUST PRESSURE SENSOR ...	EC-617
P0473 EXHAUST PRESSURE SENSOR ...	EC-621
P0489 EGR CONTROL CIRCUIT LOW	EC-625
P0490 EGR CONTROL CIRCUIT HIGH	EC-628
P0500 VSS	EC-1700
P0501 VEHICLE SPEED SIGNAL	EC-631
P0506 ISC SYSTEM	EC-633 , EC-1702
P0507 ISC SYSTEM	EC-635 , EC-1704
P050A, P050B, P050E COLD START CONTROL .. EC-1706	
P0513 INCORRECT IMMOBILIZER KEY ...	EC-637
P051B CRANKCASE PRESSURE SENSOR RANGE/PERFORMANCE	EC-638
P051C CRANKCASE PRESSURE SENSOR CIRCUIT LOW	EC-641
P051D CRANKCASE PRESSURE SENSOR CIRCUIT HIGH	EC-645
P0520 EOP SENSOR	EC-1709
P0521 ENGINE OIL PRESSURE	EC-649
P0524 ENGINE OIL PRESSURE	EC-652
P0527 COOLING FAN SPEED SENSOR	EC-1712
P0532 A/C REFRIGERANT PRESSURE SENSOR CIRCUIT LOW	EC-653
P0533 A/C REFRIGERANT PRESSURE SENSOR CIRCUIT HIGH	EC-656
P053E CRANKCASE PRESSURE TOO HIGH	EC-660
P0544 EXHAUST GAS TEMPERATURE SENSOR EC-662	
P0544, P0545 EXHAUST GAS TEMPERATURE SENSOR	EC-1715
P0545 EXHAUST GAS TEMPERATURE SENSOR EC-664	
P0546 EXHAUST GAS TEMPERATURE SENSOR EC-665	
P0546, P2081 EXHAUST GAS TEMPERATURE SENSOR	EC-1718
P0547, P0548 EXHAUST GAS TEMPERATURE SENSOR	EC-1721

P0549, P2083 EXHAUST GAS TEMPERATURE SENSOREC-1724	P066E CYLINDER 3 GLOW PLUG CONTROL CIRCUIT LOW EC-740
P054E IDLE FUEL QUANTITY LOWER THAN EXPECTEDEC-666	P066F CYLINDER 3 GLOW PLUG CONTROL CIRCUIT HIGH EC-742
P054F IDLE FUEL QUANTITY HIGHER THAN EXPECTEDEC-668	P0671 GLOW PLUG (CYLINDER 1) EC-744
P0550 PSP SENSOREC-1727	P0672 GLOW PLUG (CYLINDER 2) EC-747
P0562 SYSTEM VOLTAGE LOWEC-670	P0673 GLOW PLUG (CYLINDER 3) EC-750
P0563 SYSTEM VOLTAGE HIGHEC-673	P0674 GLOW PLUG (CYLINDER 4) EC-753
P0579 CRUISE CONTROL CIRCUIT RANGE/ PERFORMANCEEC-675	P0675 GLOW PLUG (CYLINDER 5) EC-756
P057E BRAKE PEDAL POSITION SENSOREC-677	P0676 GLOW PLUG (CYLINDER 6) EC-759
P0581 CRUISE CONTROL SIGNAL CIRCUIT HIGH EC-681	P0677 GLOW PLUG (CYLINDER 7) EC-762
P0591 CRUISE CONTROL SYSTEM RANGE/ PERFORMANCEEC-683	P0678 GLOW PLUG (CYLINDER 8) EC-765
P0601 ECMEC-685	P067A CYLINDER 4 GLOW PLUG CONTROL CIRCUIT LOW EC-768
P0603 ECMEC-1730	P067B CYLINDER 4 GLOW PLUG CONTROL CIRCUIT HIGH EC-770
P0604 ECM EC-686, EC-1732	P067C CYLINDER 5 GLOW PLUG CONTROL CIRCUIT LOW EC-772
P0605 ECM EC-688, EC-1734	P067D CYLINDER 5 GLOW PLUG CONTROL CIRCUIT HIGH EC-774
P0606 ECM EC-689, EC-1736	P067E CYLINDER 6 GLOW PLUG CONTROL CIRCUIT LOW EC-776
P0607 ECM EC-690, EC-1738	P067F CYLINDER 6 GLOW PLUG CONTROL CIRCUIT HIGH EC-778
P060A ECM EC-693, EC-1739	P0687 ECM POWER RELAY CONTROL CIRCUIT HIGH EC-780
P060B ECM EC-694, EC-1741	P068C CYLINDER 7 GLOW PLUG CONTROL CIRCUIT LOW EC-783
P060C ECMEC-695	P068D CYLINDER 7 GLOW PLUG CONTROL CIRCUIT HIGH EC-785
P0611 ECMEC-698	P068E CYLINDER 8 GLOW PLUG CONTROL CIRCUIT LOW EC-787
P0611 ECM PROTECTIONEC-1743	P068F CYLINDER 8 GLOW PLUG CONTROL CIRCUIT HIGH EC-789
P0613 TCM TM-101	P0691 COOLING FAN EC-791
P0615 STARTER RELAY TM-370	P0692 COOLING FAN EC-794
P061A ECMEC-700	P0698 SENSOR REFERENCE VOLTAGE C CIRCUIT LOW EC-797
P061B ECMEC-702	P0699 SENSOR REFERENCE VOLTAGE C CIRCUIT HIGH EC-799
P061C ECMEC-704	P06A4 SENSOR REFERENCE VOLTAGE D CIRCUIT LOW EC-801
P061E ECMEC-706	P06A5 SENSOR REFERENCE VOLTAGE D CIRCUIT HIGH EC-804
P0628 FUEL PUMP CONTROLEC-708	P06B8 ECM EC-806
P0629 FUEL PUMP CONTROLEC-711	P06B9 CYLINDER 1 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-807
P062B ECM EC-714, EC-1744	P06BA CYLINDER 2 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-809
P062C ECMEC-716	P06BB CYLINDER 3 GLOW PLUG CIRCUIT RANGE/PERFORMANCEEC-811
P062F CONTROL MODULEEC-1746	P06BC CYLINDER 4 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-814
P0630 VIN NOT PROGRAMMED OR INCOMPATIBLE - ECMEC-717	P06BD CYLINDER 5 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-817
P0643 SENSOR POWER SUPPLYEC-1747	
P064C GLOW OUTPUT STAGEEC-718	
P0652 SENSOR REFERENCE VOLTAGE B CIRCUIT LOWEC-721	
P0653 SENSOR REFERENCE VOLTAGE B CIRCUIT HIGHEC-729	
P0667 CONTROL MODULE INTERNAL TEMPERATURE SENSOREC-731	
P066A CYLINDER 1 GLOW PLUG CONTROL CIRCUIT LOWEC-732	
P066B CYLINDER 1 GLOW PLUG CONTROL CIRCUIT HIGHEC-734	
P066C CYLINDER 2 GLOW PLUG CONTROL CIRCUIT LOWEC-736	
P066D CYLINDER 2 GLOW PLUG CONTROL CIRCUIT HIGHEC-738	

P06BE CYLINDER 6 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-819	P0763 SHIFT SOLENOID C TM-156	A
P06BF CYLINDER 7 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-821	P0768 SHIFT SOLENOID D TM-159	
P06C0 CYLINDER 8 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-823	P0770 SHIFT SOLENOID E TM-162	
P06D3 SENSOR REFERENCE VOLTAGE E CIRCUIT LOW EC-825	P0773 SHIFT SOLENOID E TM-164	B
P06D4 SENSOR REFERENCE VOLTAGE E CIRCUIT HIGH EC-828	P0775 PRESSURE CONTROL SOLENOID B TM-410	
P06D7 SENSOR REFERENCE VOLTAGE F CIRCUIT LOW EC-830	P0780 SHIFT TM-412	C
P06D8 SENSOR REFERENCE VOLTAGE F CIRCUIT HIGH EC-833	P0795 PRESSURE CONTROL SOLENOID C TM-414	
P06E5 GLOW PLUG CONTROL MODULE PERFORMANCE EC-835	P0826 UP AND DOWN SHIFT SW TM-167	D
P0700 TRANSMISSION CONTROL SYSTEM (MIL REQUEST) EC-838	P0850 PNP SWITCH EC-1750	
P0705 TRANSMISSION RANGE SENSOR A TM-102, TM-372	P0863 TCM COMMUNICATION .. TM-169, TM-416	E
P0708 TRANSMISSION RANGE SENSOR A TM-105	P0882 TCM POWER INPUT SIGNAL TM-170	
P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-374	P0998 SHIFT SOLENOID F TM-172	F
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-108	P0999 SHIFT SOLENOID F TM-174	
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-110	P0A0F THE ENGINE DOES NOT START .. EC-839	G
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-112	P100A, P100B VVEL SYSTEM EC-1753	
P0715 INPUT SPEED SENSOR A TM-114	P1078, P1084 EVT CONTROL POSITION SENSOR EC-1757	H
P0716 INPUT SPEED SENSOR A TM-117	P1087, P1088 VVEL SYSTEM EC-1760	
P0717 INPUT SPEED SENSOR A TM-119, TM-377	P1089, P1092 VVEL CONTROL SHAFT POSITION SENSOR EC-1761	J
P0720 OUTPUT SPEED SENSOR TM-121, TM-379	P1090, P1093 VVEL ACTUATOR MOTOR EC-1764	
P0721 OUTPUT SPEED SENSOR TM-124	P1091 VVEL ACTUATOR MOTOR RELAY EC-1768	K
P0722 OUTPUT SPEED SENSOR TM-126	P1148, P1168 CLOSED LOOP CONTROL EC-1771	
P0725 ENGINE SPEED TM-128, TM-381	P1191 TC INLET AIR TEMPERATURE SENSOR PERFORMANCE EC-843	L
P0729 6GR INCORRECT RATIO TM-129, TM-383	P1192 TC INLET AIR TEMPERATURE SENSOR LOW EC-846	
P0730 INCORRECT GEAR RATIO TM-131, TM-386	P1193 TC INLET AIR TEMPERATURE SENSOR HIGH EC-849	M
P0731 1GR INCORRECT RATIO TM-132, TM-388	P1197 OUT OF GAS EC-1772	
P0732 2GR INCORRECT RATIO TM-134, TM-391	P1212 TCS COMMUNICATION LINE EC-1774	N
P0733 3GR INCORRECT RATIO TM-136, TM-394	P1217 ENGINE OVER TEMPERATURE .. EC-1776	
P0734 4GR INCORRECT RATIO TM-138, TM-397	P1220 FUEL PUMP CONTROL MODULE (FPCM) EC-1779	O
P0735 5GR INCORRECT RATIO TM-140, TM-400	P1225 TP SENSOR EC-1783	
P0736 REVERSE INCORRECT RATIO TM-142	P1226 TP SENSOR EC-1784	P
P0740 TORQUE CONVERTER TM-403	P1423, P1424 COLD START CONTROL .. EC-1785	
P0743 TORQUE CONVERTER TM-144	P1451 DIESEL PARTICULATE FILTER SYSTEM PERFORMANCE EC-852	
P0744 TORQUE CONVERTER TM-405	P1484 CATALYST OVERHEAT DETECTION EC-854	
P0745 PRESSURE CONTROL SOLENOID A TM-407	P1550 BATTERY CURRENT SENSOR EC-1787	
P0748 PRESSURE CONTROL SOLENOID A TM-146	P1551, P1552 BATTERY CURRENT SENSOR EC-1790	
P0750 SHIFT SOLENOID A TM-408	P1553 BATTERY CURRENT SENSOR EC-1793	
P0752 SHIFT SOLENOID A TM-148	P1554 BATTERY CURRENT SENSOR EC-1796	
P0753 SHIFT SOLENOID A TM-150	P1556, P1557 BATTERY TEMPERATURE SENSOR EC-1799	
P0758 SHIFT SOLENOID B TM-153	P1564 ASCD STEERING SWITCH EC-1802	
	P1572 BRAKE PEDAL POSITION SWITCH EC-1806	
	P1574 ASCD VEHICLE SPEED SENSOR EC-1812	
	P1606 VVEL CONTROL MODULE EC-1814	
	P1607 VVEL CONTROL MODULE EC-1815	

P1608 VVEL SENSOR POWER SUPPLY	EC-1816	P1838 DIFFERENTIAL LOCK MODE SWITCH	DLN-243
P1610 LOCK MODE	SEC-71	P1839 DIFFERENTIAL LOCK POSITION SWITCH	DLN-246
P1611 ID DISCORD, IMMU-ECM	SEC-73	P1844 RELAY	DLN-249
P1612 CHAIN OF ECM-IMMU	SEC-75	P1848 DIFFERENTIAL LOCK SOLENOID	DLN-250
P1612 DATA COMMUNICATION	EC-856	P1849 DIFFERENTIAL LOCK SOLENOID	DLN-254
P1613 DPF TEMPERATURE SENSOR MODULE		P1850 DIFFERENTIAL LOCK CONTROL UNIT	DLN-258
PERFORMANCE	EC-857	P1855 VEHICLE SPEED SENSOR (RR) ...	DLN-82
P1614 DPF TEMPERATURE SENSOR MODULE		P1856 VDC SYSTEM	DLN-260
SHORTED HIGH	EC-859	P1867 INCOMPLETE SHIFT	DLN-83
P1615 DIFFERENCE OF KEY	SEC-77	P186C INCOMP RPS OFFSET LEARNING	DLN-85
P1615 DPF TEMPERATURE SENSOR MODULE		P18CB DIFFERENTIAL LOCK SOLENOID POWER	
SHORTED LOW	EC-862	SUPPLY	DLN-261
P1616 DPF TEMPERATURE SENSOR MODULE		P18CC WHEEL SPEED SIGNAL	DLN-264
OVER TEMPERATURE	EC-865	P18CD SELF SHUTDOWN	DLN-265
P1623 DPF TEMPERATURE SENSOR MODULE		P18CE DIFFERENTIAL LOCK POSITION SWITCH	DLN-267
CIRCUIT	EC-867	P18D0 ABS SYSTEM	DLN-270
P1624 SCR TEMPERATURE SENSOR MODULE		P1A62 TC ACTUATOR POSITION	EC-883
PERFORMANCE	EC-870	P1A77 AFTERTREATMENT OVER	
P1625 SCR TEMPERATURE SENSOR MODULE		TEMPERATURE	EC-885
SHORTED HIGH	EC-872	P1A78 FUEL SHUTOFF - FORCED ENGINE	
P1626 SCR TEMPERATURE SENSOR MODULE		SHUTDOWN	EC-886
SHORTED LOW	EC-875	P1C54 SCR NOX CATALYST MISSING	EC-887
P1627 SCR TEMPERATURE SENSOR MODULE		P1C55 NOX SENSOR 1/1 INTERMITTENT	EC-890
OVER TEMPERATURE	EC-878	P1C56 NOX SENSOR 1/2 INTERMITTENT	EC-892
P1628 SCR TEMPERATURE SENSOR MODULE		P1C70 SCR ERROR DETECTED - ENGINE DR-	
CIRCUIT	EC-880	RATED	EC-894
P1679 INCOMPLETED LEARNING	TM-176	P200C DIESEL PARTICULATE FILTER	EC-895
P1705 TP SENSOR	TM-178 , TM-417	P200E CATALYST SYSTEM OVER	
P1721 VEHICLE SPEED SIGNAL	TM-179 , TM-419	TEMPERATURE BANK 1	EC-898
P1730 INTERLOCK	TM-421	P202B REDUCTANT TANK HEATER CONTROL	
P1734 7GR INCORRECT RATIO	TM-423	CIRCUIT LOW	EC-900
P1804 TRANSFER CONTROL UNIT	DLN-45	P202C REDUCTANT TANK HEATER CONTROL	
P1805 BRAKE SWITCH	EC-1818	CIRCUIT HIGH	EC-903
P1808 VEHICLE SPEED SENSOR (ABS) .	DLN-46	P202E REDUCTANT INJECTION VALVE CIRCUIT	
P1809 TRANSFER CONTROL UNIT	DLN-47	1/1	EC-906
P180C SENSOR POWER SUPPLY (5V) ...	DLN-48	P2031 UPSTREAM DPF TEMPERATURE SENSOR	EC-908
P180D TRANSFER ROTARY POSITION SENSOR	DLN-51	P2032 TEMPERATURE SENSOR UPSTREAM DPF	EC-910
P180F MOTOR SYSTEM	DLN-54	P2033 TEMPERATURE SENSOR UPSTREAM DPF	EC-912
P1811 BATTERY VOLTAGE	DLN-56	P203B REDUCTANT LEVEL SENSOR CIRCUIT	
P1813 4WD MODE SWITCH	DLN-59	RANGE/PERFORMANCE	EC-914
P1814 4WD DETECT SWITCH	DLN-62	P203C REDUCTANT LEVEL SENSOR CIRCUIT	
P1815 M-MODE SWITCH	TM-426	LOW	EC-917
P1816 TRANSMISSION RANGE SWITCH	DLN-65	P203D REDUCTANT LEVEL SENSOR CIRCUIT	
P1817 TRANSFER MOTOR	DLN-66	HIGH	EC-921
P1818 ACTUATOR POSITION SWITCH ...	DLN-68	P203F REDUCTANT LEVEL TOO LOW	EC-924
P1819 ACTUATOR CIRCUIT	DLN-71	P2044 REDUCTANT TEMPERATURE SENSOR	
P181B INCOMPLETE SELF SHUT	DLN-73	CIRCUIT HIGH	EC-926
P181C TRANSFER MOTOR POWER SUPPLY	DLN-76	P2045 REDUCTANT TEMPERATURE SENSOR	
P1820 ENGINE SPEED SIGNAL	DLN-78	CIRCUIT LOW	EC-928
P182A TRANSFER HI-LO POSITION SENSOR	DLN-79		
P1836 DIFFERENTIAL LOCK CONTROL UNIT	DLN-242		

P2048 REDUCTANT INJECTION VALVE CIRCUIT LOW 1/1	EC-930	
P204A REDUCTANT PRESSURE SENSOR CIRCUIT	EC-933	
P204C REDUCTANT PRESSURE SENSOR CIRCUIT LOW	EC-936	
P204D REDUCTANT PRESSURE SENSOR CIRCUIT HIGH	EC-940	
P205C REDUCTANT TANK TEMPERATURE SENSOR CIRCUIT LOW	EC-943	
P205D REDUCTANT TANK TEMPERATURE SENSOR CIRCUIT HIGH	EC-946	
P205E REDUCTANT TANK TEMPERATURE SENSOR CIRCUIT INTERMITTENT	EC-949	
P206B REDUCTANT QUALITY SENSOR CIRCUIT	EC-952	
P206D REDUCTANT QUALITY SENSOR CIRCUIT HIGH	EC-954	
P207F REDUCTANT QUALITY PERFORMANCE .	EC-956	
P2080 EXHAUST GAS TEMPERATURE SENSOR	EC-1821	
P2080 EXHAUST GAS TEMPERATURE SENSOR 1	EC-958	
P2082 EXHAUST GAS TEMPERATURE SENSOR	EC-1824	
P208A REDUCTANT PUMP CONTROL CIRCUIT OPEN	EC-960	
P208C REDUCTANT PUMP CONTROL CIRCUIT LOW	EC-963	
P208D REDUCTANT PUMP CONTROL CIRCUIT HIGH	EC-966	
P2096, P2097, P2098, P2099 A/F SENSOR 1	EC-1827	
P209F REDUCTANT TANK HEATER CONTROL CIRCUIT PERFORMANCE	EC-969	
P20B7 REDUCTANT METERING UNIT HEATER CONTROL CIRCUIT LOW	EC-972	
P20B8 REDUCTANT METERING UNIT HEATER CONTROL CIRCUIT HIGH	EC-975	
P20B9 REDUCTANT HEATER CONTROL CIRCUIT OPEN	EC-978	
P20BB REDUCTANT HEATER CONTROL CIRCUIT LOW	EC-981	
P20BC REDUCTANT HEATER CONTROL CIRCUIT HIGH	EC-984	
P20E8 REDUCTANT PRESSURE TOO LOW	EC-986	
P20E9 REDUCTANT PRESSURE TOO HIGH	EC-989	
P20EE SCR NOX CATALYST EFFICIENCY	EC-991	
P20FF REDUCTANT CONTROL MODULE PERFORMANCE	EC-994	
P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-1832	
P2101 ELECTRIC THROTTLE CONTROL FUNCTION	EC-1834	A
P2118 THROTTLE CONTROL MOTOR	EC-1838	
P2119 ELECTRIC THROTTLE CONTROL ACTUATOR	EC-1840	B
P2121 ACCELERATOR PEDAL POSITION SENSOR 1	EC-996	
P2122 ACCELERATOR PEDAL POSITION SENSOR 1	EC-1000	C
P2122, P2123 APP SENSOR	EC-1842	
P2123 ACCELERATOR PEDAL POSITION SENSOR 1	EC-1004	D
P2127 ACCELERATOR PEDAL POSITION SENSOR 2	EC-1008	
P2127, P2128 APP SENSOR	EC-1845	E
P2128 ACCELERATOR PEDAL POSITION SENSOR 2	EC-1012	
P2135 TP SENSOR	EC-1848	F
P2138 APP SENSOR	EC-1851	
P2146 FUEL INJECTOR GROUP 1 POWER CIRCUIT	EC-1016	G
P2149 FUEL INJECTOR GROUP 2 POWER CIRCUIT	EC-1020	
P214A SCR NOX CATALYST INLET TEMPERATURE TOO HIGH	EC-1024	H
P214B SCR NOX CATALYST INLET TEMPERATURE TOO HIGH DURING REGEN	EC-1026	
P214C SCR NOX CATALYST OUTLET TEMPERATURE TOO HIGH	EC-1028	J
P214D SCR NOX CATALYST OUTLET TEMPERATURE TOO HIGH DURING REGEN	EC-1030	
P215C OUTPUT SHAFT SPEED - WHEEL SPEED	TM-180	K
P218F REDUCTANT NO FLOW DETECTED	EC-1032	L
P219A, P219B AIR FUEL RATIO	EC-1855	
P219C, P219D, P219E, P219F, P21A0, P21A1, P21A2, P21A3 AIR FUEL RATIO	EC-1860	M
P21C4 REDUCTANT HEATER RELAY CONTROL CIRCUIT HIGH	EC-1034	
P21CA REDUCTANT SUPPLY VOLTAGE INTERMITTENT	EC-1036	N
P21CB REDUCTANT SUPPLY VOLTAGE LOW	EC-1039	
P21CC REDUCTANT SUPPLY VOLTAGE HIGH ...	EC-1042	O
P2201 NOX SENSOR 1	EC-1044	
P2202 NOX SENSOR 1	EC-1046	P
P2209 NOX SENSOR HEATER SENSE CIRCUIT 1/1	EC-1048	
P220A NOX SENSOR 1	EC-1051	
P220B NOX SENSOR 2	EC-1054	
P221A NOX SENSOR 1/2 CORRELATION BANK 1	EC-1057	

P2262 TC BOOST PRESSURE NOT DETECTED . EC-1060	P2462 PARTICULATE FILTER PRESSURE SENSOR CIRCUIT INTERMITTENT .. EC-1159
P2263 TC BOOST CONTROL SYSTEM .. EC-1063	P2463 DIESEL PARTICULATE FILTER EC-1163
P2267 WATER IN FUEL SENSOR CIRCUIT HIGH EC-1067	P2470 EXHAUST GAS TEMPERATURE SENSOR 4 EC-1165
P2269 WATER IN FUEL CONDITION..... EC-1070	P2471 EXHAUST GAS TEMPERATURE SENSOR 4 EC-1167
P226C TC BOOST CONTROL SLOW RESPONSE EC-1072	P2472 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT INTERMITTENT 1/4..... EC-1169
P2280 INTAKE AIR SYSTEM..... EC-1075	P2481 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW 1/5..... EC-1171
P2299 ACCELERATOR/BRAKE PEDAL POSITION INCONSISTENCY EC-1077	P2482 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH 1/5 EC-1173
P229E NOX SENSOR 2..... EC-1079	P2483 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT INTERMITTENT 1/5..... EC-1175
P229F NOX SENSOR 2..... EC-1081	P2493 EGR COOLER BYPASS POSITION SENSOR INTERMITTENT EC-1177
P22A7 NOX SENSOR HEATER SENSE CIRCUIT 1/ 2 EC-1083	P2494 EGR COOLER BYPASS POSITION SENSOR CIRCUIT LOW..... EC-1181
P22CB TC OUTLET SWITCHING VALVE CONTROL CIRCUIT LOW EC-1086	P2495 EGR COOLER BYPASS POSITION SENSOR CIRCUIT HIGH..... EC-1185
P22CC TC OUTLET SWITCHING VALVE CONTROL CIRCUIT HIGH EC-1089	P249E CLOSED LOOP REDUCTANT INJECTION FLOW TOO HIGH..... EC-1189
P22CD TC OUTLET SWITCHING VALVE STUCK OPEN EC-1092	P24A0 DPF REGENERATION TEMPERATURE TOO LOW..... EC-1192
P22CE TC OUTLET SWITCHING VALVE STUCK CLOSED..... EC-1095	P24A2 PARTICULATE FILTER REGENERATION INCOMPLETE EC-1194
P2413 EGR SYSTEM..... EC-1101	P2509 ECM POWER INPUT SIGNAL INTERMITTENT EC-1198
P242B EGT SENSOR 3..... EC-1104	P2540 LOW FUEL PRESSURE SENSOR EC-1202
P242C EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW 1/3..... EC-1106	P2541 FUEL PRESSURE SENSOR EC-1206
P242D EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH 1/3..... EC-1108	P2542 FUEL PRESSURE SENSOR EC-1210
P242F DIESEL PARTICULATE FILTER EC-1110	P2558 ENGINE COOLANT LEVEL SENSOR CIRCUIT LOW..... EC-1214
P244A DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE EC-1112	P2559 ENGINE COOLANT LEVEL SENSOR CIRCUIT HIGH..... EC-1217
P244D EXHAUST TEMPERATURE TOO HIGH FOR PF REGENERATION..... EC-1114	P2560 ENGINE COOLANT LEVEL LOW. EC-1220
P2453 PARTICULATE FILTER PRESSURE SENSOR A RANGE/PERFORMANCE EC-1116	P2579 TC SPEED SENSOR CIRCUIT RANGE/ PERFORMANCE..... EC-1221
P2454 DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE SENSORE EC-1120	P2580 TC SPEED SENSOR CIRCUIT LOW EC-1224
P2455 DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE SENSORE EC-1124	P2610 ECM INTERNAL TIMER EC-1867
P2456 PARTICULATE FILTER PRESSURE SENSOR A INTERMITTENT EC-1128	P262A FUEL INJECTOR - PILOT INJECTION NOT LEARNED..... EC-1227
P2457 EGR COOLER EC-1133	P262D SENSOR REFERENCE VOLTAGE CIRCUIT LOW EC-1228
P2459 REGENERATION FREQUENCY OF DIESEL PARTICULATE FILTER EC-1137	P2637 TORQUE MANAGEMENT FEEDBACK SIGNAL A TM-182
P245C EGR COOLER BYPASS CONTROL CIRCUIT LOW..... EC-1142	P263E GLOW PLUG CONTROL MODULE OVER TEMPERATURE..... EC-1230
P245D EGR COOLER BYPASS CONTROL CIRCUIT HIGH..... EC-1145	P268C FUEL INJECTOR 1 INJECTION QUANTITY ADJUSTMENT VALUE EC-1232
P245F PARTICULATE FILTER PRESSURE SENSOR B RANGE/PERFORMANCE EC-1147	P268D FUEL INJECTOR 2 INJECTION QUANTITY ADJUSTMENT VALUE EC-1233
P2460 PARTICULATE FILTER PRESSURE SENSOR CIRCUIT LOW EC-1151	P268E FUEL INJECTOR 3 INJECTION QUANTITY ADJUSTMENT VALUE EC-1234
P2461 PARTICULATE FILTER PRESSURE SENSOR CIRCUIT HIGH..... EC-1155	

P268F FUEL INJECTOR 4 INJECTION QUANTITY ADJUSTMENT VALUE EC-1235	PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON EXL-126 , EXL-283	A
P2690 INJECTOR SOLENOID DRIVER CYLINDER 5 EC-1236	PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS BRC-156	B
P2691 INJECTOR SOLENOID DRIVER CYLINDER 6 EC-1237	PERFORMANCE TEST HA-24	C
P2692 INJECTOR SOLENOID DRIVER CYLINDER 7 EC-1238	PERIODIC MAINTENANCE MA-9 , MA-55	
P2693 INJECTOR SOLENOID DRIVER CYLINDER 8 EC-1239	PERSONAL LAMP INL-72	D
P26A3 MULTI-WAY CONTROL VALVE MOTOR EC-1869	POSITIVE CRANKCASE VENTILATION .. EC-1932	
P26A5 MULTI-WAY CONTROL VALVE POSITION SENSOR EC-1872	POWER DISTRIBUTION SYSTEM PCS-57	E
P26A6 P26A7 MULTI-WAY CONTROL VALVE POSITION SENSOR EC-1876	POWER DOOR LOCK SYSTEM DLK-56	
P26AB MULTI-WAY CONTROL VALVE EC-1879	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION CHG-35	F
P2713 PRESSURE CONTROL SOLENOID D TM-429	POWER SEAT FOR DRIVER SIDE WITHOUT AUTOMATIC DRIVE POSITIONER SE-24	
P2722 PRESSURE CONTROL SOLENOID E TM-431	POWER SEAT FOR PASSENGER SIDE SE-30	G
P2731 PRESSURE CONTROL SOLENOID F TM-433	POWER SEAT SWITCH ADP-143 , SE-109	
P2741 TRANSMISSION FLUID TEMPERATURE SENSOR B TM-183	POWER SEAT SWITCH GROUND CIRCUIT ADP-99	H
P2742 TRANSMISSION FLUID TEMPERATURE SENSOR B TM-185	POWER SOCKET PWO-3 , PWO-6 , PWO-11	
P2743 TRANSMISSION FLUID TEMPERATURE SENSOR B TM-187	POWER STEERING FLUID ST-16 , ST-33	J
P2757 TORQUE CONVERTER CLUTCH PRESSURE CONTROL SOLENOID TM-189	POWER STEERING OIL PUMP ST-21 , ST-59	
P279D 4WD RANGE SIGNAL TM-191	POWER SUPPLY ROUTING CIRCUIT PG-13	K
P2803 TRANSMISSION RANGE SENSOR B TM-193	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH PWC-18	
P2807 PRESSURE CONTROL SOLENOID G TM-435	POWER WINDOW LOCK SWITCH DOES NOT FUNCTION PWC-75	L
P2BA7 UREA TANK LEVEL EC-1240	POWER WINDOW MAIN SWITCH PWC-77	
P2BAC NOX CONCENTRATION EC-1241	POWER WINDOW MOTOR PWC-40	M
P2BAD NOX CONCENTRATION EXCEEDED EC-1242	POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY PWC-72	
P2BAF NOX SYSTEM DRIVER INDUCEMENT ACTIVE EC-1244	POWER WINDOW SERIAL LINK PWC-54	N
PARKING BRAKE CONTROL PB-7	POWER WINDOW SYSTEM PWC-20	
PARKING BRAKE FRONT CABLE PB-9	PRE-INSPECTION FOR DIAGNOSTIC ADP-63	O
PARKING BRAKE REAR CABLE PB-10	PRECAUTION HRN-2 , SN-3	
PARKING BRAKE SHOE PB-4 , PB-12	PRECAUTIONS ACC-2 , ADP-4 , AV-10 , AV-75 , AV-167 , AV-292 , AV-364 , AV-392 , AV-443 , BCS-3 , BR-3 , BRC-4 , BRM-115 , CCS-2 , CHG-3 , CO-3 , CO-28 , DAS-4 , DAS-50 , DEF-3 , DLK-6 , DLN-7 , DLN-119 , DLN-128 , DLN-143 , DLN-174 , DLN-204 , EC-28 , EC-1262 , EM-7 , EM-157 , EX-3 , EX-8 , EXL-6 , EXL-152 , EXT-3 , FAX-2 , FL-3 , FL-21 , FSU-2 , GI-23 , GW-2 , HA-3 , HAC-6 , HAC-132 , INL-3 , INT-2 , IP-2 , LAN-38 , LU-3 , LU-19 , MA-4 , MA-50 , MIR-2 , MWI-6 , MWI-114 , PB-2 , PCS-3 , PCS-44 , PG-3 , PWC-4 , PWO-13 , RAX-2 , RSU-2 , SB-2 , SE-4 , SEC-4 , SR-2 , SRC-3 , ST-3 , STR-2 , TM-10 , TM-260 , TTS-2 , VTL-2 , WCS-4 , WT-3 , WW-3	P
PARKING BRAKE SWITCH BRC-143 , PB-11	PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM PCS-76	
PARKING BRAKE SWITCH SIGNAL CIRCUIT WCS-50	PROPELLER SHAFT ASSEMBLY DLN-122 , DLN-131	
PARKING BRAKE SYSTEM PB-5		
PARKING COMPONENTS TM-469		
PARKING LAMP CIRCUIT EXL-102 , EXL-259		
PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM EXL-68 , EXL-223		

PTC BRANCH LINE CIRCUIT. [LAN-187](#), [LAN-240](#),
[LAN-497](#)
PTC HEATER [HAC-107](#), [HAC-129](#), [HAC-219](#),
[HAC-238](#)
PTC HEATER CONTROL UNIT [HAC-160](#)
PTC HEATER RELAY [HAC-105](#), [HAC-217](#)
PUDDLE LAMP [INL-77](#)
PULLEY, FAN IDLER..... [CO-70](#)
PUSH BUTTON IGNITION SWITCH..... [SEC-153](#)
PUSH-BUTTON IGNITION SWITCH..... [PCS-90](#),
[PCS-98](#)
PUSH-BUTTON IGNITION SWITCH DOES NOT
OPERATE..... [PCS-95](#)
PUSH-BUTTON IGNITION SWITCH
ILLUMINATION CIRCUIT [INL-65](#)
PUSH-BUTTON IGNITION SWITCH POSITION
INDICATOR DOES NOT ILLUMINATE [PCS-96](#)

R

RADIATOR [CO-13](#), [CO-43](#)
RADIATOR CORE SUPPORT..... [DLK-147](#)
RAIN SENSOR..... [WW-39](#), [WW-60](#)
RANGE SENSOR..... [DLN-110](#)
RDR-L BRANCH LINE CIRCUIT [LAN-190](#), [LAN-343](#),
[LAN-385](#), [LAN-467](#), [LAN-640](#), [LAN-717](#),
[LAN-761](#), [LAN-843](#), [LAN-931](#), [LAN-978](#),
[LAN-1070](#), [LAN-1135](#), [LAN-1177](#), [LAN-1242](#),
[LAN-1283](#), [LAN-1327](#), [LAN-1369](#), [LAN-1416](#),
[LAN-1463](#), [LAN-1511](#)
RDR-R BRANCH LINE CIRCUIT [LAN-189](#), [LAN-342](#),
[LAN-384](#), [LAN-466](#), [LAN-639](#), [LAN-716](#),
[LAN-760](#), [LAN-842](#), [LAN-930](#), [LAN-977](#),
[LAN-1069](#), [LAN-1134](#), [LAN-1176](#), [LAN-1241](#),
[LAN-1282](#), [LAN-1326](#), [LAN-1368](#), [LAN-1415](#),
[LAN-1462](#), [LAN-1510](#)
REAR BRAKE CALIPER..... [BR-48](#)
REAR BUMPER [EXT-20](#)
REAR CAMERA [AV-363](#)
REAR COMBINATION LAMP... [EXL-144](#), [EXL-149](#),
[EXL-302](#), [EXL-307](#)
REAR DIFFERENTIAL GEAR OIL [DLN-181](#),
[DLN-279](#)
REAR DISC BRAKE [BR-9](#), [BR-18](#), [BR-37](#)
REAR DOOR..... [DLK-156](#)
REAR DOOR FINISHER [INT-17](#)
REAR DOOR GLASS [GW-20](#)
REAR DOOR GLASS REGULATOR..... [GW-22](#)
REAR DOOR LOCK [DLK-172](#)
REAR DOOR SPEAKER..... [AV-51](#), [AV-69](#), [AV-136](#),
[AV-161](#), [AV-250](#), [AV-283](#)
REAR DOOR TWEETER [AV-247](#), [AV-284](#)
REAR FINAL DRIVE [DLN-187](#), [DLN-221](#), [DLN-292](#)
REAR FINAL DRIVE ASSEMBLY [DLN-189](#),
[DLN-290](#)
REAR HEATED SEAT [SE-51](#)

REAR LH SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-66](#)
REAR OIL SEAL [DLN-104](#), [TM-228](#), [TM-480](#)
REAR POWER SLIDE GLASS CIRCUIT CHECK...
[PWC-58](#)
REAR POWER SLIDE GLASS CLOSE RELAY
CHECK [PWC-61](#)
REAR POWER SLIDE GLASS DOES NOT
OPERATE..... [PWC-76](#)
REAR POWER SLIDE GLASS OPEN RELAY
CHECK [PWC-59](#)
REAR POWER SLIDE GLASS SWITCH... [PWC-81](#)
REAR POWER WINDOW MOTOR [GW-25](#)
REAR POWER WINDOW SWITCH [PWC-80](#)
REAR PROPELLER SHAFT ... [DLN-132](#), [DLN-138](#)
REAR RH SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-67](#)
REAR ROOF SPOILER..... [EXT-47](#)
REAR SEAT [SE-114](#), [SE-143](#)
REAR SEAT BELT [SB-14](#)
REAR SEAT ENTERTAINMENT CONTROL UNIT .
[AV-464](#)
REAR SEAT ENTERTAINMENT SYSTEM. [AV-447](#),
[AV-449](#), [AV-460](#)
REAR STABILIZER [RSU-11](#)
REAR SUSPENSION ASSEMBLY [RSU-5](#)
REAR VIEW CAMERA [AV-391](#)
REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT..
[AV-386](#)
REAR VIEW MONITOR SYSTEM. [AV-374](#), [AV-389](#)
REAR WHEEL HOUSE WIND DEFLECTOR [EXT-37](#)
REAR WINDOW DEFOGGER [DEF-44](#), [DEF-58](#)
REAR WINDOW DEFOGGER AND DOOR
MIRROR DEFOGGERS DO NOT OPERATE ...
[DEF-53](#)
REAR WINDOW DEFOGGER DOES NOT
OPERATE..... [DEF-52](#)
REAR WINDOW DEFOGGER DOES NOT
OPERATE BUT BOTH DOOR MIRROR
DEFOGGERS OPERATE..... [DEF-54](#)
REAR WINDOW DEFOGGER RELAY [DEF-40](#)
REAR WINDOW DEFOGGER SWITCH [DEF-33](#)
REAR WINDOW DEFOGGER SWITCH DOES NOT
LIGHT, BUT REAR WINDOW DEFOGGER
OPERATES [DEF-57](#)
REAR WINDOW DEFOGGER SYSTEM.... [DEF-15](#)
REAR WINDOW DEFOGGER SYSTEM
SYMPTOMS [DEF-51](#)
REAR WINDOW GLASS AND MOLDING... [GW-26](#)
RECLINING MOTOR..... [ADP-123](#)
RECLINING SENSOR [ADP-104](#)
RECLINING SWITCH [ADP-81](#)
RECOMMENDED CHEMICAL PRODUCTS AND
SEALANTS [GI-22](#)
RECOMMENDED FLUIDS AND LUBRICANTS.....
[MA-13](#), [MA-59](#)

REFRIGERANT	HA-17
REFRIGERANT PRESSURE SENSOR ..	EC-1916, HAC-123, HAC-232
REFRIGERATION SYSTEM SYMPTOMS....	HA-26
REMOTE KEYLESS ENTRY RECEIVER	DLK-109, DLK-188, SEC-152
REPAIRING HIGH STRENGTH STEEL...	BRM-120
REPAIRING MATERIAL	BRM-123
REPAIRING PROCEDURES AND PRECAUTIONS	BRM-54
REPLACEMENT OPERATIONS	BRM-140
RESERVOIR TANK.....	CO-46
RIGHT/LEFT SWITCHING SIGNAL CIRCUIT	DAS-108
ROCKER ARM.....	EM-319
ROCKER COVER.....	EM-38, EM-309
ROD ANTENNA.....	AV-74, AV-165, AV-290
ROOF SIDE MOLDING.....	EXT-41
ROTARY TURBINE CONTROL VALVE LINKAGE	EM-412
ROTARY TURBINE CONTROL VALVE ACTUATOR	EM-410
ROTARY TURBINE CONTROL VALVE ACTUATOR CALIBRATION	EC-195
ROTARY TURBINE CONTROL VALVE ACTUATOR TEST	EC-194

S

S CONNECTOR CIRCUIT	STR-31
S TERMINAL CIRCUIT	CHG-42
SAFETY AND HEALTH.....	BRM-49
SATELLITE RADIO ANTENNA.....	AV-72, AV-162, AV-287
SCR CONTROL UNIT.....	EC-1259
SCR TEMPERATURE SENSOR MODULE ..	EX-55
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .	WCS-48
SEAT BELT PRE-TENSIONER.....	SR-29
SEAT CUSHION THERMAL ELECTRIC DEVICE ..	SE-78
SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR.....	SE-80
SEAT HEATER.....	SE-113
SEAT MEMORY INDICATOR	ADP-136
SEAT MEMORY SWITCH.....	ADP-91, ADP-142
SEATBACK THERMAL ELECTRIC DEVICE	SE-74, SE-103
SEATBACK THERMAL ELECTRIC DEVICE SENSOR.....	SE-76
SECURITY INDICATOR LAMP	SEC-141
SENSOR POWER SUPPLY 2 CIRCUIT ...	EC-1918
SENSOR POWER SUPPLY 3 CIRCUIT ...	EC-1920
SENSOR ROTOR	BRC-162
SERVICE AFTER REPLACING OR REMOVING ENGINE PARTS.....	EC-178

SERVICE DATA AND SPECIFICATIONS (SDS)	ACC-5, BR-52, CO-27, CO-75, DLN-118, DLN-127, DLN-142, DLN-172, DLN-202, DLN-306, EC-1261, EC-1936, EM-146, EM-522, EXL-151, EXL-309, FAX-25, FL-20, FL-58, FSU-26, HA-48, LU-18, LU-61, PB-14, PG-183, PWO-51, RSU-13, ST-67, TM-256, TM-594, WT-75, WW-63
SERVICE INFORMATION FOR ELECTRICAL INCIDENT	GI-39
SHEET METAL WORK	BRM-5
SHIFT LOCK SYSTEM	TM-209, TM-442
SHIFT POSITION INDICATOR CIRCUIT	TM-441
SHIPPING MODE CANCEL OPERATION.	BCS-65
SHOCK ABSORBER.....	RSU-10
SIDE AIR BAG (SATELLITE) SENSOR.....	SR-24
SIDE AIR BAG MODULE	SR-21
SIDE CAMERA.....	AV-362
SIDE CURTAIN AIR BAG MODULE	SR-19
SIDE OIL SEAL	DLN-149
SIDE RADAR	DAS-120
SIDE RADAR LH.....	DAS-78
SIDE RADAR RH	DAS-80
SIDE STEP.....	EXT-38
SLIDING MOTOR.....	ADP-121
SLIDING SENSOR.....	ADP-101
SLIDING SWITCH.....	ADP-79
SLIP INDICATOR LAMP	BRC-150
SNAP ACCELERATION TEST.....	EC-189
SONAR BRANCH LINE CIRCUIT	LAN-195, LAN-270, LAN-306, LAN-344, LAN-386, LAN-425, LAN-470, LAN-529, LAN-601, LAN-641, LAN-678, LAN-762, LAN-803, LAN-846, LAN-887, LAN-934, LAN-981, LAN-1025, LAN-1075, LAN-1136, LAN-1178, LAN-1243, LAN-1328, LAN-1372, LAN-1419, LAN-1466, LAN-1516
SONAR CONTROL UNIT.....	SN-14, SN-66
SONAR SENSOR	SN-63
SONAR SYSTEM.....	SN-19, SN-62
SONAR SYSTEM OFF SWITCH	SN-68
SONAR SYSTEM OFF SWITCH CIRCUIT ...	SN-58
SONAR SYSTEM OFF SWITCH INDICATOR LAMP CIRCUIT.....	SN-60
SPARK PLUG.....	EM-28
SPIRAL CABLE	SR-14
SPOTTER MIRROR GLASS.....	MIR-26
SQUEAK AND RATTLE TROUBLE DIAGNOSES..	EXT-10, GW-5, INT-8, IP-8, SE-89
SRS AIR BAG CONTROL SYSTEM.....	SRC-20
SRS AIR BAG WARNING LAMP DOES NOT TURN OFF	SRC-111
SRS AIR BAG WARNING LAMP DOES NOT TURN ON.....	SRC-110
STABILIZER BAR.....	FSU-18
STALL TEST	TM-99, TM-362

STARTER MOTOR STR-34, STR-37
 STARTING SYSTEM STR-6, STR-8, STR-33
 STEERING ANGLE SENSOR BRC-165
 STEERING COLUMN ST-19, ST-31, ST-36
 STEERING COLUMN COVERS IP-18
 STEERING GEAR ST-50
 STEERING GEAR AND LINKAGE ST-23
 STEERING KNUCKLE FSU-20
 STEERING LINKAGE ST-53
 STEERING SWITCH AV-55, AV-140, AV-258,
 AV-289, MWI-96, MWI-174
 STEERING SWITCHES AV-70, AV-164
 STEERING WHEEL ST-17, ST-34
 STOP LAMP EXL-77, EXL-232
 STRG BRANCH LINE CIRCUIT LAN-176, LAN-235,
 LAN-261, LAN-296, LAN-333, LAN-374,
 LAN-413, LAN-456, LAN-492, LAN-520,
 LAN-554, LAN-591, LAN-630, LAN-667,
 LAN-707, LAN-750, LAN-791, LAN-833,
 LAN-875, LAN-920, LAN-967, LAN-1011,
 LAN-1059, LAN-1095, LAN-1125, LAN-1166,
 LAN-1200, LAN-1232, LAN-1273, LAN-1316,
 LAN-1359, LAN-1405, LAN-1452, LAN-1500
 STRUCTURE AND OPERATION DLN-13, DLN-146,
 EC-51, EC-1287, TM-22, TM-271
 SUB BATTERY TRAY PG-177
 SUBWOOFER AV-253, AV-285
 SUNLOAD SENSOR HAC-121
 SYSTEM (INTEGRATED HOMELINK
 TRANSMITTER) DLK-31
 SYSTEM (INTELLIGENT KEY SYSTEM) ... DLK-19
 SYSTEM SETTING HAC-61
 SYSTEM SETTINGS CANNOT BE TURNED ON/
 OFF ON THE INTEGRAL SWITCH... DAS-117
 SYSTEM SYMPTOM TM-212, TM-445

T

TAIL LAMP CIRCUIT EXL-106, EXL-263
 TAILGATE DLK-161
 TAILGATE FINISHER EXT-46
 TAILGATE LOCK DLK-177
 TAILGATE TRIM EXT-45
 TCM TM-50, TM-222, TM-323
 TCM BRANCH LINE CIRCUIT LAN-169, LAN-233,
 LAN-258, LAN-292, LAN-330, LAN-370,
 LAN-409, LAN-452, LAN-490, LAN-517,
 LAN-551, LAN-587, LAN-627, LAN-664,
 LAN-704, LAN-746, LAN-787, LAN-830,
 LAN-871, LAN-916, LAN-963, LAN-1007,
 LAN-1055, LAN-1093, LAN-1122, LAN-1162,
 LAN-1198, LAN-1229, LAN-1270, LAN-1312,
 LAN-1356, LAN-1401, LAN-1448, LAN-1496
 TCU AV-402, AV-439

TCU BRANCH LINE CIRCUIT LAN-184, LAN-302,
 LAN-380, LAN-419, LAN-462, LAN-597,
 LAN-756, LAN-797, LAN-881, LAN-926,
 LAN-973, LAN-1017, LAN-1065, LAN-1172,
 LAN-1322, LAN-1411, LAN-1458, LAN-1506
 TEL ANTENNA AV-441
 TELEMATICS SWITCH AV-440
 TELEMATICS SYSTEM AV-406, AV-436
 TELESCOPIC MOTOR ADP-131
 TELESCOPIC SENSOR ADP-115
 TELESCOPIC SWITCH ADP-89
 THE AMBIENT TEMPERATURE DISPLAY IS
 INCORRECT MWI-107, MWI-185
 THE BRAKING DISTANCE IS LONG BRC-154
 THE DOOR OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAY
 MWI-105, MWI-183
 THE FUEL GAUGE INDICATOR DOES NOT
 OPERATE MWI-100, MWI-178
 THE LIGHT REMINDER WARNING DOES NOT
 SOUND WCS-53
 THE LOW WASHER FLUID WARNING
 CONTINUES DISPLAYING, or DOES NOT
 DISPLAY MWI-104, MWI-182
 THE METER CONTROL SWITCH IS INOPERATIVE
 MWI-101, MWI-179
 THE OIL PRESSURE WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAY
 MWI-102, MWI-180
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES DISPLAYING, OR DOES NOT
 DISPLAY MWI-103, MWI-181
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES SOUNDING, OR DOES NOT
 SOUND WCS-55
 THE SEAT BELT WARNING CONTINUES
 SOUNDING, OR DOES NOT SOUND WCS-54
 THE STEERING SWITCHES ARE INOPERATIVE.
 MWI-106, MWI-184
 THROTTLE VALVE CLOSED POSITION
 LEARNING EC-1429
 TIGHTENING TORQUE OF STANDARD BOLTS ...
 GI-19
 TILT & TELESCOPIC SWITCH GROUND CIRCUIT
 ADP-100
 TILT MOTOR ADP-129
 TILT SENSOR ADP-113
 TILT SWITCH ADP-87
 TIMING CHAIN EM-68
 TIRE PRESSURE MONITORING SYSTEM WT-14,
 WT-19
 TIRE PRESSURE SENSOR WT-70
 TOP TETHER STRAP CHILD RESTRAINT .. SB-18
 TORQUE CONVERTER TM-255
 TOW MODE SWITCH TM-206, TM-463
 TOW MODE SYSTEM TM-439

TOW TRUCK TOWING GI-30
 TPMS WT-54
 TPMS BRANCH LINE CIRCUIT LAN-185, LAN-238,
 LAN-267, LAN-303, LAN-339, LAN-381,
 LAN-420, LAN-463, LAN-495, LAN-526,
 LAN-560, LAN-598, LAN-636, LAN-673,
 LAN-713, LAN-757, LAN-798, LAN-839,
 LAN-882, LAN-927, LAN-974, LAN-1018,
 LAN-1066, LAN-1098, LAN-1131, LAN-1173,
 LAN-1203, LAN-1238, LAN-1279, LAN-1323,
 LAN-1365, LAN-1412, LAN-1459, LAN-1507
 TRAILER BRAKE CONTROL UNIT TTS-26
 TRAILER HITCH TTS-24
 TRAILER TOWING SYSTEM TTS-10
 TRANSFER ASSEMBLY DLN-116
 TRANSFER CONTROL UNIT DLN-24, DLN-100
 TRANSFER FLUID DLN-98
 TRANSFER MOTOR DLN-107
 TRANSFER ROTARY POSITION SENSOR
 DLN-106
 TRANSFER ROTARY POSITION SENSOR
 LEARNING VALUE INITIALIZATION DLN-44
 TRANSMISSION ASSEMBLY TM-247, TM-500,
 TM-508
 TRANSMISSION RANGE SWITCH TM-232
 TROUBLE DIAGNOSIS LAN-44
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE
 EC-1450
 TURBOCHARGER EM-202, EM-391
 TURBOCHARGER COMPRESSOR BYPASS
 ACTUATOR EM-417
 TURBOCHARGER COMPRESSOR BYPASS
 SOLENOID EM-419
 TURBOCHARGER COMPRESSOR BYPASS
 VALVE EM-415
 TURBOCHARGER COMPRESSOR INTAKE
 PRESSURE/TEMPURATURE SENSOREM-214
 TURBOCHARGER COMPRESSOR OUTLET
 CONNECTION EM-408
 TURBOCHARGER OIL DRAIN LINE EM-402
 TURBOCHARGER OIL SUPPLY LINE EM-405
 TURBOCHARGER SPEED SENSOR EM-400
 TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM EXL-58, EXL-213
 TURN SIGNAL LAMP CIRCUIT EXL-112, EXL-269

U

U0002 DRIVETRAIN CAN COMMUNICATION
 EC-207
 U0073 COMMUNICATION BUS A OFF TM-196
 U0100 LOST COMMUNICATION (ECM A) TM-197,
 TM-364
 U0101 CAN COMM CIRCUIT EC-209, EC-1461
 U0102 LOST COMMUNICATION (TRANSFER)
 TM-198

U0106 LOST COMMUNICATION (GLOW OUTPUT
 STAGE) EC-211
 U010C CAN COMMUNICATION EC-215
 U010E CAN COMMUNICATION EC-220
 U0113, U1003 CAN COMM CIRCUIT EC-1462
 U0121 VDC CAN 2 DAS-30
 U0140 LOST COMMUNICATION (BCM) TM-199
 U0155 LOST COMMUNICATION (IPC) TM-200
 U029D COMMUNICATION WITH NOX SENSOR 1
 EC-224
 U029E COMMUNICATION WITH NOX SENSOR 2
 EC-228
 U02A2 CAN COMMUNICATION EC-232
 U0300 CAN COMMUNICATION DATA TM-366
 U0307 CAN COMMUNICATION EC-236
 U0401 COMMUNICATION ERROR (INVALID)
 TM-201
 U0401 ECM CAN 1 DAS-31
 U0402 DRIVETRAIN CAN COMMUNICATION
 (TCM) EC-237
 U0402 TCM CAN 1 DAS-32
 U0403 COMMUNICATION ERROR (INVALID)
 TM-202
 U0405 ADAS CAN 2 DAS-101
 U0407 CAN COMMUNICATION EC-238
 U040D CAN COMMUNICATION EC-239
 U040F CAN COMMUNICATION EC-241
 U0415 CAN COMMUNICATION EC-244
 U0415 VDC CAN 1 DAS-33
 U0415 VEHICLE SPEED SIG BCS-66
 U0416 COMMUNICATION ERROR (INVALID)
 TM-203
 U0426 CAN COMMUNICATION (IMMOBILIZER) ..
 EC-246
 U0428 STEERING ANGLE SENSOR AV-338
 U059E CAN COMMUNICATION EC-248
 U059F CAN COMMUNICATION EC-250
 U1000 CAN COMM CIRCUIT ADP-65, AV-115,
 AV-216, AV-340, AV-417, BCS-67, BRC-139,
 DAS-34, DAS-103, DLK-73, DLN-86, DLN-271,
 HAC-63, HAC-187, LAN-215, MWI-81,
 MWI-162, PCS-35, PCS-77, SEC-69, SN-34,
 SRC-36, TM-204, TM-368, WT-50
 U1000 CAN COMMUNICATION CIRCUIT .. EC-252
 U1001 CAN COMM CIRCUIT EC-1465
 U1010 CONTROL UNIT (CAN) ADP-66, AV-116,
 AV-217, AV-341, AV-418, BCS-68, DLK-74,
 DLN-87, DLN-272, HAC-64, HAC-188, LAN-216,
 MWI-82, MWI-163, PCS-37, PCS-78, SEC-70,
 SN-35, SRC-37, WT-51
 U1024 CAN COMM CIRCUIT EC-1466
 U1117 LOST COMMUNICATION (ABS) TM-205
 U111A REAR CAMERA IMAGE SIGNAL CIRCUIT
 AV-342
 U111B SIDE CAMERA RH IMAGE SIGNAL
 CIRCUIT AV-344

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT	
AV-346	
U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT	AV-348
U11C1 CAN COMMUNICATION	EC-255
U1217 AV CONTROL UNIT	AV-117, AV-218
U1229 AV CONTROL UNIT	AV-118, AV-219
U1232 STEERING ANGLE SENSOR	AV-350
U1244 GPS ANTENNA	AV-119, AV-220
U1258 SATELLITE RADIO ANTENNA	AV-120, AV-221
U1263 USB	AV-122, AV-223
U1265 AUDIO AMP	AV-224
U12AA CONFIGURATION ERROR	AV-123, AV-226
U12AB ANTENNA	AV-124, AV-227
U12AC AV CONTROL UNIT	AV-125, AV-228
U12AD AV CONTROL UNIT	AV-126, AV-229
U12AE AV CONTROL UNIT	AV-127, AV-230
U12AF AV CONTROL UNIT	AV-128, AV-231
U12B0 POWER SUPPLY VOLTAGE	AV-129, AV-232
U12B1 POWER SUPPLY VOLTAGE	AV-130, AV-233
U1302 CAMERA POWER VOLT	AV-351
U1304 CAMERA IMAGE CALIBRATION	AV-355
U1305 CONFIG UNFINISH	AV-356
U1321 CONFIGURATION	DAS-36, HAC-65
U1325 CALIBRATION	MWI-83
U1503 SIDE RDR L CAN 2	DAS-37
U1504 SIDE RDR L CAN 1	DAS-39
U1505 SIDE RDR R CAN 2	DAS-41
U1506 SIDE RDR R CAN 1	DAS-43
U1507 LOST COMM(SIDE RDR R)	DAS-45
U1508 LOST COMM(SIDE RDR L)	DAS-46
U1611 CAN COMMUNICATION	EC-258
U1612 CAN COMMUNICATION	EC-262
U1A00 TCU	AV-419
U1A05 TCU	AV-420
U1A06 TEL ANTENNA	AV-422
U1A09 GPS ANTENNA	AV-424
U1A0A TCU	AV-425
U1A0B MICROPHONE	AV-426
U1A0C MICROPHONE	AV-428
U1A0E TELEMATICS SWITCH	AV-430
U1A10 TCU	AV-432
U1A11 TCU	AV-433
U3017 CAN COMMUNICATION	EC-266
UNDER COVER	EXT-28
UNDER DRIVE CARRIER, FRONT BRAKE HUB	TM-577
UNEXPECTED PEDAL REACTION	BRC-153
UNLOCK SENSOR	DLK-105
UPPER LINK	FSU-16
USB CONNECTOR	AV-59, AV-142, AV-262
USB INTERFACE AND AUX IN JACK	AV-71, AV-158, AV-278, AV-462

V

VACUUM PUMP	EM-479
VALVE GUIDE SEAL	EM-363
VANITY MIRROR LAMP	INL-70
VARIABLE BLOWER CONTROL	HAC-130, HAC-239
VDC OFF INDICATOR LAMP	BRC-149
VDC OFF SWITCH	BRC-145, BRC-167
VDC/TCS/ABS	BRC-151
VEHICLE JERKS DURING VDC/TCS/ABS CONTROL	BRC-157
VEHICLE SECURITY SYSTEM	SEC-50
VENTILATION SYSTEM	VTL-6
VIBRATION DAMPER	EM-482
VIN REGISTRATION	EC-188, EC-1427
VVEL ACTUATOR ASSEMBLY	EM-41
VVEL CONTROL MODULE	EC-1382, EC-1934
VVEL CONTROL SHAFT POSITION SENSOR ADJUSTMENT	EC-1432

W

WARNING BUZZER	DAS-119
WARNING BUZZER CIRCUIT	DAS-109
WARNING CHIME SYSTEM	WCS-25
WARNING CHIME SYSTEM SYMPTOMS	WCS-52
WARNING SYSTEM SWITCH	DAS-123
WARNING SYSTEM SWITCH CIRCUIT	DAS-111
WARNING SYSTEMS ON INDICATOR CIRCUIT	DAS-113
WASHER FLUID LEVEL SWITCH	WW-53
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-95, MWI-173
WASHER MOTOR CIRCUIT	WW-38
WASHER NOZZLE AND TUBE	WW-57
WASHER SWITCH	WW-41
WASHER TANK	WW-51
WATER INLET CONNECTION	CO-65
WATER OUTLET CONNECTION	CO-74
WATER PUMP	CO-20, CO-51
WATER TRANSFER CONNECTION	CO-72
WATER VALVE CIRCUIT	HAC-103, HAC-215
WATER-IN-FUEL FILTER SENSOR	FL-52
WHEEL	WT-65
WHEEL ALIGNMENT	FSU-7
WHEEL AND TIRE	WT-66, WT-69
WHEEL HUB	FAX-6, FAX-7
WHEEL SENSOR	BRC-159
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-31
WIPER AND WASHER SWITCH	WW-62
WIPER AND WASHER SYSTEM SYMPTOMS	WW-42

Y

YAW RATE/SIDE/DECEL G SENSOR..... [BRC-166](#)

A

B

C

D

E

F

G

H

J

K

L

M

N

O

P