

ALPHABETICAL INDEX

SECTION

IDX

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-28
ABS actuator	BR-35
ABS circuit diagram	BR-33
ABS component parts and connector locations	BR-45
ABS control unit	BR-35
ABS hydraulic circuit	BR-32
ABS self-diagnosis	BR-44
ABS symptom chart	BR-42
ABS system components	BR-30
ABS trouble diagnoses	BR-38
ABS wheel sensors	BR-35
ABS wiring diagram	BR-34
A/C air flow	HA-8
A/C circuit diagram (manual A/C)	HA-44
A/C component layout	HA-7
A/C compressor clutch removal and installation	HA-23
A/C compressor mounting	HA-19
A/C compressor precaution	HA-5
A/C control operation (manual A/C)	HA-6
A/C diagnostic work flow (manual A/C)	HA-26
A/C harness layout (manual A/C)	HA-42
A/C HFC134a (R134a) system indentification	HA-2
A/C HFC134a (R134a) system introduction	HA-2
A/C HFC134a (R134a) system precaution	HA-3
A/C HFC134a (R134a) system service procedure	HA-15
A/C HFC134a (R134a) system service tools	HA-11
A/C HFC134a system service equipment precaution	HA-13
A/C lubrication oil	HA-21
A/C operational check	HA-27
A/C performance chart	HA-29
A/C performance test diagnoses	HA-30
A/C push control	HA-73
A/C relay	HA-68
A/C service data specification	HA-78
A/C switch	HA-67
A/C symptom chart (manual A/C)	HA-36
A/C trouble diagnoses (manual A/C)	HA-35
A/C wiring diagram (manual A/C)	HA-48
Acceleration cut control (SR engine) ..	EF&EC-26
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Activated carbon canister (GA engine)	EF&EC-206
Activated carbon canister (SR engine)	EF&EC-18

Activated carbon canister inspection (GA engine)	EF&EC-381
Air bag	BF-86
Air bag caution labels	BF-88
Air bag precautions	GI-2
Air bag removal and installation	BF-92
Air bag scrapping	BF-96
Air bag system trouble diagnoses	BF-98
Air bleeding for brake system	BR-3
Air cleaner filter replacement (GA engine)	MA-19
Air cleaner filter replacement (SR engine)	MA-12
Air control cable adjustment	HA-70
Air Spoiler (Rear)	BF-81
Alternator	EL-22
Angular tightening application	EM-2
Anti-freeze coolant	MA-8
ASCD (automatic speed control device)	EL-70
AT control unit (RE4F03V)	AT-94
AT fluid temperature sensor (RE4F03V)	AT-98
AT mode switch (RE4F03V)	AT-99
Audio	EL-67
Automatic transaxle number	GI-18
Automatic transmission fluid	MA-8
Automatic transmission fluid replacement	MA-23
Auxiliary air control (AAC) (GA engine)	EF&EC-205
Auxiliary air control (AAC) (SR engine)	EF&EC-16

B

Back-up lamp	EL-32
Back-up lamp switch (MT)	MT-6
Ball joint front axle	FA-24
Battery	EL-11
Baulk ring (MT) (RS5F31A)	MT-11
Baulk ring (MT) (RS5F32V)	MT-31
Belt inspection (drive belt) (GA engine)	MA-16
Belt inspection (drive belt) (SR engine)	MA-9
Blower motor	HA-69
Blower resistor	HA-69
Body alignment	BF-82
Boring/horning cylinder block (GA engine)	EM-102
Brake booster	BR-12
Brake control valve (Proportioning Valve)	BR-7
Brake fluid	MA-8
Brake fluid change	BR-3
Brake fluid level	MA-24

ALPHABETICAL INDEX

Brake fluid level and line check	BR-3
Brake hydraulic line	BR-5
Brake inspection	MA-24
Brake lines and cables inspection	MA-24
Brake lining wear temporary checking	MA-25
Brake master cylinder	BR-9
Brake pedal	BR-8

C

Camshaft inspection (GA engine)	EM-86
Camshaft inspection (SR engine)	EM-36
Camshaft position sensor (CMPS) (GA engine)	EF&EC-201
Camshaft position sensor (CMPS) (SR engine)	EF&EC-12
Camshaft position sensor inspection (GA engine)	EF&EC-372
Camshaft position sensor inspection (SR engine)	EF&EC-181
Canister control (GA engine)	EF&EC-212
Canister control (SR engine)	EF&EC-24
Charging system	EL-21
Chassis and body maintenance	MA-22
Cigarette lighter	EL-63
Clearance lamp	EL-31
Clock	EL-63
Clutch cable	CL-3
Clutch cover	CL-7
Clutch disc	CL-6
Clutch pedal	CL-4
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-5
Clutch withdrawal lever	CL-5
Coil spring (front)	FA-23
Coil spring (rear)	RA-9
Combination lamp (rear) removal and installation	BF-35
Combination meter	EL-38
Combination switch	EL-24
Compression pressure (GA engine)	EM-71
Compression pressure (SR engine)	EM-11
Compressor clutch removal and installation	HA-23
Compressor mounting	HA-19
Compressor precaution	HA-5
Connecting rod (GA engine)	EM-100
Connecting rod (SR engine)	EM-50
Connecting rod bearing clearance (GA engine)	EM-104
Connecting rod bearing clearance (SR engine)	EM-54
Connecting rod bushing clearance (SR engine)	EM-55
Consult for ECCS (GA engine)	EF&EC-240

Consult for ECCS (SR engine)	EF&EC-50	
CONSULT general information	GI-14	
Control lever (MT)	MT-9	
Control valve (AT) (RE4F03V)	AT-172	
Control valve (AT) (RL4F03A)	AT-164	GI
Converter housing installation	AT-124	
Coolant replacement (GA engine)	MA-17	
Coolant replacement (SR engine)	MA-10	MA
Cooling circuit (GA engine)	LC-17	
Cooling circuit (SR engine)	LC-10	
Cooling fan control (GA engine)	EF&EC-215	EM
Cooling fan control (SR engine)	EF&EC-25	
Cooling fan motor inspection (GA engine)	EF&EC-375	LC
Cooling fan motor inspection (SR engine)	EF&EC-187	EF & EC
Cooling fan relay inspection (GA engine)	EF&EC-377	
Cooling fan relay inspection (SR engine)	EF&EC-188	FE
Counter gear (MT) (RS5F31A)	MT-11	
Counter gear (MT) (RS5F32V)	MT-31	CL
Coupling sleeve (MT) (RS5F31A)	MT-11	
Coupling sleeve (MT) (RS5F32V)	MT-31	
Crankcase emission control system (GA engine)	EF&EC-383	MT
Crankcase emission control system (SR engine)	EF&EC-193	AT
Crankshaft assembly (GA engine)	EM-106	
Crankshaft assembly (SR engine)	EM-57	
Crankshaft bearing clearance (GA engine)	EM-103	FA
Crankshaft bearing clearance (SR engine)	EM-52	RA
Crankshaft inspection (GA engine)	EM-102	
Crankshaft inspection (SR engine)	EM-52	
Cylinder block (GA engine)	EM-98	BR
Cylinder block (SR engine)	EM-48	
Cylinder block boring (GA engine)	EM-102	
Cylinder block boring (SR engine)	EM-52	ST
Cylinder head (GA engine)	EM-85	
Cylinder head (SR engine)	EM-33	BF
Cylinder head bolt tightening (GA engine)	EM-79	
Cylinder head bolt tightening (SR engine)	EM-25	HA

D

Data link connector for Consult (GA engine)	EF&EC-206	IDX
Data link connector for Consult (SR engine)	EF&EC-18	
Daytime light system	EL-27	
Differential gear (FF AT) (RE4F03V)	AT-236	
Differential gear (FF AT) (RL4F03A)	AT-232	
Differential gear (FF MT) (RS5F31A)	MT-21	

ALPHABETICAL INDEX

Differential gear (FF MT) (RS5F32V)..... MT-44
 Dimensions GI-19
 Door adjustment (front)..... BF-8
 Door adjustment (rear)..... BF-9
 Door mirror BF-80
 Drive plate runout (SR engine) EM-56
 Drive shaft (front) FA-12
 Dropping resistor (AT) (RE4F03V) AT-100
 Dual pressure switch HA-67

E

ECCS basic inspection (GA engine) .. EF&EC-252
 ECCS basic inspection (SR engine) EF&EC-62
 ECCS circuit diagram (GA engine).... EF&EC-200
 ECCS circuit diagram (SR engine) EF&EC-11
 ECCS component parts location
 (GA engine) EF&EC-195
 ECCS component parts location
 (SR engine) EF&EC-5
 ECCS fail-safe system (GA engine) ... EF&EC-217
 ECCS on-board diagnostic system
 (GA engine) EF&EC-234
 ECCS on-board diagnostic system
 (SR engine) EF&EC-44
 ECCS relay inspection (GA engine) .. EF&EC-377
 ECCS relay inspection (SR engine) ... EF&EC-188
 ECCS system diagram and chart
 (GA engine) EF&EC-197
 ECCS system diagram and chart
 (SR engine) EF&EC-8
 ECCS trouble diagnoses
 (GA engine) EF&EC-227
 ECCS trouble diagnoses
 (SR engine) EF&EC-37
 ECCS wiring diagram.....Foldout page
 ECM input/output signal inspection
 (GA engine) EF&EC-368
 ECM input/output signal inspection
 (SR engine)..... EF&EC-177
 EGR canister control solenoid valve
 inspection (SR engine) EF&EC-186
 EGR control (EGRC) - BPT valve
 (GA engine) EF&EC-205
 EGR control (EGRC) - BPT valve
 (SR engine) EF&EC-17
 EGR control (EGRC) - solenoid valve
 (GA engine) EF&EC-205
 EGR control (EGRC) - solenoid valve
 (SR engine) EF&EC-17
 EGR temperature sensor
 (GA engine) EF&EC-206
 EGR temperature sensor
 (SR engine) EF&EC-17
 EGR temperature sensor inspection
 (GA engine) EF&EC-378

EGR temperature sensor inspection
 (SR engine)..... EF&EC-187
 EGR valve inspection (GA engine) EF&EC-378
 EGR valve inspection (SR engine) EF&EC-186
 EGRC - BPT valve inspection
 (GA engine) EF&EC-378
 EGRC - BPT valve inspection
 (SR engine)..... EF&EC-187
 Electrical units location EL-86
 Engine control module (ECM)
 (GA engine) EF&EC-201
 Engine control module (ECM)
 (SR engine) EF&EC-12
 Engine coolant temperature sensor
 (ECTS) (GA engine) EF&EC-202
 Engine coolant temperature sensor
 (ECTS) (SR engine)..... EF&EC-13
 Engine coolant temperature sensor
 inspection (GA engine) EF&EC-372
 Engine coolant temperature sensor
 inspection (SR engine) EF&EC-181
 Engine oil..... MA-8
 Engine oil filter replacement
 (GA engine) MA-20
 Engine oil filter replacement
 (SR engine) MA-13
 Engine oil precautions GI-4
 Engine oil replacement (GA engine)..... MA-19
 Engine oil replacement (SR engine) MA-13
 Engine outer component parts
 (GA engine) EM-67
 Engine outer component parts
 (SR engine) EM-8
 Engine removal (GA engine) EM-95
 Engine removal (SR engine)..... EM-45
 Engine serial number GI-18
 Evaporative emission system
 (GA engine) EF&EC-381
 Evaporative emission system
 (SR engine)..... EF&EC-191
 Exhaust gas recirculation (EGR)
 system (GA engine) EF&EC-212
 Exhaust gas recirculation (EGR)
 system (SR engine) EF&EC-24
 Exhaust gas recirculation (EGR)
 valve (GA engine) EF&EC-205
 Exhaust gas recirculation (EGR)
 valve (SR engine) EF&EC-17
 Exhaust system..... FE-5
 Exhaust system inspection MA-22
 Exterior..... BF-31
 Exterior lamp EL-31

F

Fan switch HA-68
 Final drive (FF AT) (RE4F03V) AT-236

ALPHABETICAL INDEX

Final drive (FF AT) (RL4F03A)	AT-232
Final drive (FF MT) (RS5F31A)	MT-21
Final drive (FF MT) (RS5F32V)	MT-44
Fluid temperature sensor (AT) (RE4F03V)	AT-98
Fluids	MA-8
Flywheel runout (GA engine)	EM-105
Flywheel runout (SR engine)	EM-56
Fog lamp, front	EL-33
Fork rod (MT) (RS5F31A)	MT-12
Fork rod (MT) (RS5F32V)	MT-32
Forward clutch	AT-203
Front axle	FA-8
Front bumper	BF-5
Front disc brake	BR-14
Front suspension	FA-22
Fuel check valve inspection (GA engine)	EF&EC-382
Fuel check valve inspection (SR engine)	EF&EC-192
Fuel filter (GA engine)	EF&EC-206
Fuel filter (SR engine)	EF&EC-18
Fuel filter replacement (GA engine)	MA-19
Fuel filter replacement (SR engine)	MA-11
Fuel gauge	EL-40
Fuel injector (GA engine)	EF&EC-202
Fuel injector (SR engine)	EF&EC-14
Fuel line inspection (GA engine)	MA-18
Fuel line inspection (SR engine)	MA-11
Fuel precautions	GI-5
Fuel pressure check (GA engine)	EF&EC-379
Fuel pressure check (SR engine)	EF&EC-189
Fuel pressure regulator (GA engine)	EF&EC-203
Fuel pressure regulator (SR engine) ..	EF&EC-15
Fuel pressure release (GA engine) ..	EF&EC-379
Fuel pressure release (SR engine) ..	EF&EC-189
Fuel pump (GA engine)	EF&EC-204
Fuel pump (SR engine)	EF&EC-15
Fuel pump control (GA engine)	EF&EC-212
Fuel pump control (SR engine)	EF&EC-24
Fuel pump inspection (GA engine)	EF&EC-373
Fuel pump inspection (SR engine)	EF&EC-182
Fuel pump relay inspection (GA engine)	EF&EC-377
Fuel system	FE-3
Fuel tank vacuum relief valve inspection (GA engine)	EF&EC-382
Fuel tank vacuum relief valve inspection (SR engine)	EF&EC-192
Fuel temperature sensor inspection (GA engine)	EF&EC-378
Fuse	EL-10
Fusible link	EL-10

G

Gears (MT) (RS5F31A)	MT-11	
Gears (MT) (RS5F32V)	MT-31	GI

H

Harness connector	EL-4	EM
Harness layout	EL-88	
Hazard warning lamp	EL-34	
Headlamp (For Canada)	EL-27	LC
Headlamp (For U.S.A.)	EL-26	
Heated oxygen (H02S) heater control (SR engine)	EF&EC-26	EF & EC
Heated oxygen sensor (H02S) (GA engine)	EF&EC-203	
Heated oxygen sensor (H02S) (SR engine)	EF&EC-15	FE
Heated oxygen sensor heater inspection (SR engine)	EF&EC-183	CL
Heated oxygen sensor monitor (GA engine)	EF&EC-239	MT
Heated oxygen sensor monitor (SR engine)	EF&EC-49	
Heater wiring diagram	HA-52	AT
Height (Dimensions)	GI-19	
HFC134a (R134a) system identification	HA-2	FA
HFC134a (R134a) system introduction	HA-2	
HFC134a (R134a) system precaution	HA-3	
HFC134a (R134a) system service procedure	HA-15	RA
HFC134a (R134a) system service tools	HA-11	BR
HFC134a system service equipment precaution	HA-13	
High clutch	AT-198	ST
Hood adjustment	BF-5	
Horn	EL-63	
How to follow flow chart in trouble diagnoses	GI-11	BF
How to read wiring diagrams	GI-8	
How to use this manual	GI-6	HA
Hydraulic lash adjuster inspection (SR engine)	EM-40	EL

I

IACV - air regulator inspection (GA engine)	EF&EC-375	
IACV - air regulator inspection (SR engine)	EF&EC-185	
IACV - FICD solenoid valve inspection (GA engine)	EF&EC-375	

ALPHABETICAL INDEX

IACV - FICD solenoid valve
inspection (SR engine) EF&EC-185

IACV-AAC valve inspection
(GA engine) EF&EC-374

IACV-AAC valve inspection
(SR engine) EF&EC-184

Identification plate GI-18

Idle air adjusting (IAA) unit
(GA engine) EF&EC-204

Idle air control (IAC) system
(GA engine) EF&EC-211

Idle air control (IAC) system
(SR engine) EF&EC-23

Idle air control (IACV) - fast idle
control (GA engine) EF&EC-204

Idle air control valve (IACV)
(GA engine) EF&EC-204

Idle air control valve (IACV)
(SR engine) EF&EC-16

Idle air control valve (IACV)
- air regulator (SR engine) EF&EC-27

Idle mixture ratio inspection
(GA engine) EF&EC-219

Idle mixture ratio inspection
(SR engine) EF&EC-30

Idle speed inspection (GA engine) ... EF&EC-219

Idle speed inspection (SR engine) EF&EC-30

Ignition coil inspection (GA engine) .. EF&EC-373

Ignition coil inspection (SR engine) ... EF&EC-182

Ignition timing inspection
(GA engine) EF&EC-219

Ignition timing inspection
(SR engine) EF&EC-30

Illumination EL-36

Inhibitor switch (RE4F03V) AT-99

Inhibitor switch (RL4F03A) AT-30

Inhibitor switch inspection
(GA engine) EF&EC-378

Inhibitor switch inspection
(SR engine) EF&EC-188

Injection removal and installation
(GA engine) EF&EC-380

Injection removal and installation
(SR engine) EF&EC-190

Injector inspection (GA engine) EF&EC-375

Injector inspection (SR engine) EF&EC-186

Instrument panel BF-25

Intake door control linkage
adjustment (Lever control type) HA-71

Intake door control linkage
adjustment (Push control type) HA-72

Interior BF-27

Interior lamp EL-37

J

Jacking points GI-22

K

Knock sensor (KS) (SR engine) EF&EC-18

Knock sensor inspection
(SR engine) EF&EC-185

L

Length (Dimensions) GI-19

Lifting points GI-20

Line pressure solenoid valve
(RE4F03V) AT-98

Line pressure test (AT) (RE4F03V) AT-103

Line pressure test (AT) (RL4F03A) AT-26

Liquid gasket application EM-3

Low and reverse brake AT-209

Lubricants MA-8

Lubrication circuit (GA engine) LC-14

Lubrication circuit (SR engine) LC-6

Lubrication oil A/C HA-21

Lubrication-locks, hinges and hood
latches MA-27

M

Magnet clutch HA-23

Main drive gear (MT) (RS5F31A) MT-11

Main drive gear (MT) (RS5F32V) MT-31

Mainshaft (MT) (RS5F31A) MT-11

Mainshaft (MT) (RS5F32V) MT-31

Maintenance MA-1

Maintenance (engine) (GA engine) MA-16

Maintenance (engine) (SR engine) MA-9

Maintenance general MA-3

Maintenance periodic MA-5

Maintenance schedule (1) MA-6

Maintenance schedule (2) MA-7

Manual steering gear ST-13

Manual transaxle number GI-18

Manual transmission oil MA-8

Manual transmission oil
replacement MA-22

Mass air flow sensor (MAFS)
(GA engine) EF&EC-201

Mass air flow sensor (MAFS)
(SR engine) EF&EC-12

Mass air flow sensor inspection
(GA engine) EF&EC-372

ALPHABETICAL INDEX

Mass air flow sensor inspection
 (SR engine)..... EF&EC-181
 Master cylinder (brake) BR-9
 Meter and gauges..... EL-38
 Mode door control linkage
 adjustment HA-71
 Model variation GI-16
 Molding BF-31
 MT overhaul (RS5F31A)..... MT-10
 MT overhaul (RS5F32V)..... MT-30
 MT removal and installation MT-7
 Multi purpose grease..... MA-8
 Multiport fuel injection (MFI) system
 (GA engine) EF&EC-207
 Multiport fuel injection (MFI) system
 (SR engine) EF&EC-19
 Multiport fuel injection precautions GI-4
 Multiport fuel injection system
 inspection (SR engine) EF&EC-189

N

Neutral position switch (MT) MT-6
 Neutral position switch inspection
 (GA engine) EF&EC-378
 Neutral position switch inspection
 (SR engine)..... EF&EC-188

O

Oil pan (GA engine)..... EM-72
 Oil pan (SR engine) EM-12
 Oil pressure (GA engine)..... LC-14
 Oil pressure (SR engine) LC-6
 Oil pressure relief valve
 (GA engine)..... LC-15
 Oil pressure relief valve (SR engine) LC-9
 Oil pump (AT) AT-160
 Oil pump (GA engine) LC-15
 Oil pump (SR engine)..... LC-7
 Oil pump regulator valve
 (GA engine)..... LC-15
 Oil pump regulator valve
 (SR engine) LC-9
 Oil seal replacement (GA engine)..... EM-83
 Oil seal replacement (SR engine) EM-31
 Overdrive switch (RE4F03V) AT-99
 Overdrive switch (RL4F03A) AT-30
 Overrun clutch AT-203
 Overrun clutch solenoid valve
 (RE4F03V)..... AT-98
 Oversize piston (GA engine)..... EM-102
 Oversize piston (SR engine) EM-51
 Oxygen sensor (02S) (GA engine)..... EF&EC-203

P

Parking brake control BR-27
 PCV (positive crankcase ventilation)
 inspection (GA engine) EF&EC-383
 PCV (positive crankcase ventilation)
 inspection (SR engine) EF&EC-193
 Piston assembly (GA engine)..... EM-106
 Piston assembly (SR engine)..... EM-56
 Piston pin inspection (GA engine) EM-99
 Piston pin inspection (SR engine) EM-49
 Piston ring inspection (GA engine)..... EM-100
 Piston ring inspection (SR engine) EM-50
 Piston to bore clearance
 (GA engine) EM-101
 Piston to bore clearance
 (SR engine)..... EM-51
 Power door lock..... BF-10
 Power steering fluid..... MA-8
 Power steering fluid level ST-6
 Power steering gear..... ST-18
 Power steering hydraulic pressure ST-7
 Power steering oil pressure switch
 (SR engine) EF&EC-17
 Power steering oil pressure switch
 inspection (GA engine) EF&EC-376
 Power steering oil pressure switch
 inspection (SR engine) EF&EC-188
 Power steering oil pump..... ST-29
 Power steering system bleeding ST-6
 Power supply routing EL-8
 Power transistor Ignition coil
 (GA engine) EF&EC-204
 Power transistor Ignition coil
 (SR engine) EF&EC-15
 Power transistor inspection
 (GA engine) EF&EC-373
 Power transistor inspection
 (SR engine)..... EF&EC-182
 Power window BF-10
 Power window/Power door lock
 trouble diagnoses BF-12
 Precautions (General)..... GI-2
 Pressure test (AT) (RE4F03V) AT-103
 Pressure test (AT) (RL4F03A) AT-26

R

Radiator (GA engine) LC-21
 Radiator (SR engine)..... LC-13
 Rear axle..... RA-6
 Rear bumper..... BF-6
 Rear disc brake..... BR-19
 Rear drum brake..... BR-24
 Rear side window..... BF-79
 Rear suspension RA-8

ALPHABETICAL INDEX

Rear window defogger	EL-64
Refilling engine coolant	LC-4
Refrigerant connection precaution	HA-4
Refrigerant general precaution	HA-4
Refrigerant lines	HA-17
Refrigeration cycle	HA-9
Release bearing (clutch)	CL-5
Resistor inspection (GA engine)	EF&EC-376
Reverse clutch	AT-194
Reverse gear (MT) (RS5F31A)	MT-11
Reverse gear (MT) (RS5F32V)	MT-31
Reverse idler shaft (MT) (RS5F31A)	MT-11
Reverse idler shaft (MT) (RS5F32V)	MT-31
Revolution sensor (AT) (RE4F03V)	AT-100
Road wheel size	GI-19

S

SEA J1930 terminology list	GI-26
Seat (front)	BF-36
Seat (rear)	BF-38
Seat belt inspection	MA-27
Seat belt system	BF-39
Self-diagnostic results (GA engine)	EF&EC-237
Self-diagnostic results (SR engine)	EF&EC-47
Shift control (MT) (RS5F31A)	MT-12
Shift control (MT) (RS5F32V)	MT-32
Shift fork (MT) (RS5F31A)	MT-12
Shift fork (MT) (RS5F32V)	MT-32
Shift lock system	AT-108
Shift schedule (RE4F03V)	AT-55
Shift schedule (RL4F03A)	AT-18
Shift solenoid valve (AT) (RE4F03V)	AT-98
Side guard molding	BF-34
SMJ (super multiple junction)	Foldout page
Soft/Hard closed throttle position (CTP) switch (GA engine)	EF&EC-202
Soft/Hard closed throttle position (CTP) switch (SR engine)	EF&EC-13
Spark plug replacement (GA engine)	MA-21
Spark plug replacement (SR engine)	MA-14
Speedometer	EL-40
Spring (Wheelarch) height	FA-5
Stabilizer bar (front)	FA-24
Stabilizer bar (rear)	RA-10
Stall test (AT) (RE4F03V)	AT-100
Stall test (AT) (RL4F03A)	AT-24
Standardized relay	EL-5
Starter	EL-16
Starting system	EL-15
Steering gear oil level	MA-25
Steering linkage (manual steering)	ST-13
Steering linkage (power steering)	ST-18
Steering wheel and column	ST-9
Steering wheel play	ST-5
Steering wheel turning force	ST-7
Stop lamp	EL-31

Striking rod (MT) (RS5F31A)	MT-12
Striking rod (MT) (RS5F32V)	MT-32
Strut (front)	FA-23
Strut (rear)	RA-9
Sun roof	BF-76
Supplemental restraint system	BF-86
Synchronizer (MT) (RS5F31A)	MT-11
Synchronizer (MT) (RS5F32V)	MT-31

T

Tachometer	EL-40
Tail lamp	EL-31
Temperature control cable and linkage adjustment (Lever control type)	HA-70
Temperature control cable and linkage adjustment (Push control type)	HA-71
Thermal protector	HA-67
Thermo control amp	HA-68
Thermostat (GA engine)	LC-20
Thermostat (SR engine)	LC-12
Three way catalyst precautions	GI-4
Throttle position sensor (TPS) (GA engine)	EF&EC-202
Throttle position sensor (TPS) (SR engine)	EF&EC-13
Throttle position sensor inspection and adjustment (GA engine)	EF&EC-373
Throttle position sensor inspection and adjustment (SR engine)	EF&EC-183
Tie-rod	ST-22
Tie-rod ball joints	ST-22
Tightening torque of standard bolts	GI-25
Time control system	EL-47
Timing chain (GA engine)	EM-73
Timing chain (SR engine)	EM-17
Tire rotation	MA-23
Tire size	GI-19
Torque converter clutch solenoid valve (RE4F03V)	AT-98
Torque converter clutch solenoid valve (RL4F03A)	AT-30
Torque converter installation	AT-124
Tow truck towing	GI-23
Transmission case (MT) (RS5F31A)	MT-10
Transmission case (MT) (RS5F32V)	MT-30
Transverse link (front)	FA-24
Tread-FR0R (Dimensions)	GI-19
Trim - door	BF-27
Trim - luggage compartment	BF-30
Trim - roof	BF-29
Trim - side and floor	BF-27
Trunk lid	BF-6
Trunk room lamp	EL-37

ALPHABETICAL INDEX

Turn signal lamp..... EL-34

V

Vacuum hose (brake system)..... BR-13
 Vacuum hose drawing (ECCS)
 (GA engine) EF&EC-199
 Vacuum hose drawing (ECCS)
 (SR engine) EF&EC-10
 Valve clearance (GA engine)..... EM-92
 Valve guide inspection (GA engine)..... EM-88
 Valve guide inspection (SR engine) EM-38
 Valve seat inspection (GA engine) EM-89
 Valve seat inspection (SR engine) EM-39
 Valve spring inspection (GA engine)..... EM-90
 Valve spring inspection (SR engine) EM-40
 Valve timing control (VTC)
 (GA engine) EF&EC-213
 Valve timing control solenoid valve
 (GA engine) EF&EC-206
 Vapor lines inspection (GA engine) MA-21
 Vapor lines inspection (SR engine)..... MA-15
 Vehicle identification number GI-17
 Vehicle speed sensor (VSS)
 (GA engine) EF&EC-205
 Vehicle speed sensor (VSS)
 (SR engine) EF&EC-16
 Viscosity number (SAE) MA-8
 Viscous coupling (FF AT) (RE4F03V) AT-236
 Viscous coupling (FF MT) (RS5F31A) MT-21
 Viscous coupling (FF MT) (RS5F32V)..... MT-44

VTC solenoid valve inspection
 (GA engine) EF&EC-378

W

Warning buzzer..... EL-46
 Warning lamps EL-43
 Washer, front..... EL-59
 Washer, rear EL-60
 Water cock control rod adjustment HA-70
 Water pump (GA engine) LC-18
 Water pump (SR engine)..... LC-11
 Water temperature gauge EL-40
 Weatherstrip..... BF-31
 Wheel alignment (front) FA-6
 Wheel alignment (rear)..... RA-4
 Wheel balance MA-23
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-4
 Wheel hub (rear) RA-6
 Wheel hub and knuckle..... FA-8
 Wheel sensors (ABS)..... BR-35
 Wheelbase (Dimensions) GI-19
 Width (Dimensions) GI-19
 Windshield and windows BF-78
 Wiper and washer..... EL-59
 Wiper, front EL-59
 Wiper, rear EL-60
 Withdrawal lever (clutch) CL-5

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX