

ALPHABETICAL INDEX

SECTION **IDX**

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL

IDX

ALPHABETICAL INDEX

A

ABS actuator BR-37
 ABS (anti-lock brake system)..... BR-33
 ABS circuit diagram..... BR-57
 ABS control unit BR-36
 ABS self-diagnosis BR-45
 ABS symptom chart BR-47
 ABS system components..... BR-34
 ABS wheel sensors BR-35
 ABS wiring diagram..... BR-40
 A/C air flow..... HA-13
 A/C circuit diagram..... HA-33
 A/C component layout..... HA-12
 A/C compressor clutch removal and
 installation HA-58
 A/C compressor precaution..... HA-5
 A/C control operation HA-14
 A/C diagnostic work flow..... HA-15
 A/C harness layout..... HA-31
 A/C HFC134a (R134a) system precaution HA-2
 A/C HFC134a (R134a) system service tools..... HA-6
 A/C lubricant oil..... HA-53
 A/C operational check..... HA-16
 A/C performance chart..... HA-26
 A/C performance test diagnoses..... HA-24
 A/C relay..... HA-49
 A/C service data specification..... HA-64
 A/C switch HA-48
 A/C symptom chart..... HA-18
 A/C trouble diagnoses..... HA-15
 Accelerator control system..... FE-2
 Accelerator wire adjustment..... FE-2
 Activated carbon canister (GA engine) EC-246
 Activated carbon canister inspection
 (GA engine)..... EC-246
 Activated carbon canister inspection
 (SR engine)..... EC-19
 Activated carbon canister (SR engine) EC-19
 Air bag..... RS-9
 Air bag disposal..... RS-17
 Air bag module..... RS-13
 Air bag precautions GI-2
 Air bag removal and installation..... RS-13
 Air bleeding for brake system BR-5
 Air cleaner filter replacement (GA engine)..... MA-22
 Air cleaner filter replacement (SR engine)..... MA-14
 Air conditioner cut control (GA engine)..... EC-245
 Air conditioner cut control (SR engine)..... EC-17
 Air flow meter - See Mass air flow sensor
 (GA engine)..... EC-323
 Air flow meter - See Mass air flow sensor
 (SR engine)..... EC-98
 Air spoiler, rear - See Rear air spoiler..... BT-27

Alternator - See Generator..... EL-36
 Angular tightening application EM-2
 Anti-freeze coolant MA-8
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control device)..... EL-167
 A/T control unit..... AT-125
 A/T diagnosis communication line
 (SR engine)..... EC-189
 A/T fluid temperature sensor..... AT-129
 A/T removal and installation..... AT-154
 A/T self-diagnoses (RE4F03V) AT-68
 A/T shift lock system AT-140
 A/T trouble diagnoses (RE4F03V) AT-36
 A/T trouble diagnoses (RL4F03A) AT-17
 Audio EL-147
 Audio and A/C control removal and
 installation - See Instrument panel..... BT-12
 Automatic transaxle number GI-34
 Automatic transmission fluid MA-8
 Automatic transmission fluid replacement MA-26
 Auxiliary air control (AAC) (GA engine) EC-341
 Auxiliary air control (AAC) (SR engine) EC-116

B

Back window BT-33
 Back-up lamp EL-55
 Back-up lamp switch (MT) (RS5F31A) MT-10
 Back-up lamp switch (MT) (RS5F32V) MT-31
 Ball joint front axle..... FA-27
 Battery EL-17
 Baulk ring (MT) (RS5F31A) MT-11
 Baulk ring (MT) (RS5F32V) MT-32
 Belt inspection (drive belt) (GA engine)..... MA-18
 Belt inspection (drive belt) (SR engine)..... MA-10
 Blower motor HA-48
 Blower resistor..... HA-48
 Board-on lift..... GI-36
 Body alignment..... BT-37
 Boring/horning cylinder block (GA engine) EM-100
 Boring/horning cylinder block (SR engine) EM-53
 Brake control valve (Proportioning Valve)..... BR-8
 Brake fluid MA-8
 Brake fluid change BR-4
 Brake fluid level..... MA-27
 Brake fluid level and line check BR-4
 Brake hydraulic line..... BR-6
 Brake inspection..... MA-27
 Brake lines and cables inspection MA-27
 Brake lining temporary checking..... MA-28
 Brake master cylinder BR-11
 Brake pedal BR-10
 Bumper, front - See Front bumper..... BT-5

ALPHABETICAL INDEX

Bumper, rear - See Rear bumper BT-7

C

Camshaft inspection (GA engine) EM-82
 Camshaft inspection (SR engine) EM-36
 Camshaft position sensor (CMPS)
 (GA engine) EC-318
 Camshaft position sensor (CMPS)
 (SR engine) EC-93
 Camshaft position sensor inspection
 (GA engine) EC-321
 Camshaft position sensor inspection
 (SR engine) EC-96
 Canister control (GA engine) EC-246
 Canister control solenoid valve (GA engine) EC-433
 Canister control solenoid valve inspection
 (GA engine) EC-433
 Canister control solenoid valve inspection
 (SR engine) EC-209
 Canister control solenoid valve (SR engine) EC-209
 Canister control (SR engine) EC-19
 Canister inspection (GA engine) EC-246
 Canister inspection (SR engine) EC-19
 Canister purge control (GA engine) EC-246
 Canister purge control (SR engine) EC-19
 Canister purge control valve (GA engine) EC-246
 Canister purge control valve (SR engine) EC-19
 Charging system EL-33
 Chassis and body maintenance MA-25
 Cigarette lighter EL-138
 Circuit breaker EL-16
 Closed loop control (GA engine) EC-378
 Closed loop control (SR engine) EC-157
 Clutch cable CL-3
 Clutch cover CL-6
 Clutch disc CL-6
 Clutch pedal CL-3
 Clutch pedal free play CL-4
 Clutch pedal height CL-4
 Clutch release bearing CL-5
 Clutch withdrawal lever CL-5
 Coil spring (front) FA-25
 Coil spring (rear) RA-10
 Combination lamp, rear, removal and
 installation BT-26
 Combination meter (needle type)
 (w/tachometer) EL-75
 Combination meter (needle type)
 (wo/tachometer) EL-81
 Combination meter (w/tachometer) EL-75
 Combination meter (wo/tachometer) EL-81

Combination meter removal and installation -
 See Instrument panel BT-12
 Combination switch EL-40
 Compression pressure (GA engine) EM-65 **GI**
 Compression pressure (SR engine) EM-10
 Compressor clutch removal and installation HA-58 **MA**
 Compressor mounting HA-57
 Compressor precaution HA-5
 Connecting rod (GA engine) EM-98 **EM**
 Connecting rod (SR engine) EM-51
 Connecting rod bearing clearance
 (GA engine) EM-102 **LC**
 Connecting rod bearing clearance
 (SR engine) EM-55
 Connecting rod bushing clearance
 (GA engine) EM-103 **EC**
 Console box - See Instrument panel BT-12 **FE**
 CONSULT for ABS BR-48
 Consult for ECCS (GA engine) EC-268
 Consult for ECCS (SR engine) EC-42 **CL**
 CONSULT general information GI-31
 Control lever (MT) MT-9
 Control valve (AT) (RE4F03V) AT-203 **MT**
 Control valve (AT) (RL4F03A) AT-195
 Converter housing installation AT-272
 Coolant replacement (GA engine) MA-19 **AT**
 Coolant replacement (SR engine) MA-11
 Cooling circuit (GA engine) LC-17 **FA**
 Cooling circuit (SR engine) LC-8
 Cooling fan control (GA engine) EC-345 **RA**
 Cooling fan control (SR engine) EC-120
 Cooling fan control system (GA engine) LC-23 **BR**
 Cooling fan control system (SR engine) LC-12
 Cooling fan (GA engine) LC-23 **ST**
 Cooling fan (SR engine) LC-12
 Cooling fan motor inspection (GA engine) EC-353
 Cooling fan motor inspection (SR engine) EC-132
 Cooling fan relay inspection (GA engine) EC-353
 Cooling fan relay inspection (SR engine) EC-132 **RS**
 Counter gear (MT) (RS5F31A) MT-11
 Counter gear (MT) (RS5F32V) MT-32
 Coupling sleeve (MT) (RS5F31A) MT-11 **BT**
 Coupling sleeve (MT) (RS5F32V) MT-32
 Crank angle sensor built into distributor - See
 Camshaft position sensor (GA engine) EC-318 **HA**
 Crank angle sensor built into distributor - See
 Camshaft position sensor (SR engine) EC-93 **EL**
 Crank case ventilation system (GA engine) EC-248
 Crank case ventilation system (SR engine) EC-21
 Crankshaft assembly (GA engine) EM-104 **IDX**
 Crankshaft assembly (SR engine) EM-58
 Crankshaft bearing clearance (GA engine) EM-101
 Crankshaft bearing clearance (SR engine) EM-54
 Crankshaft inspection (GA engine) EM-100

ALPHABETICAL INDEX

Crankshaft inspection (SR engine) EM-53
Crankshaft position sensor (OBD)
 (GA engine).....EC-406
Crankshaft position sensor (OBD) inspection
 (GA engine).....EC-409
Crankshaft position sensor (OBD) inspection
 (SR engine).....EC-188
Crankshaft position sensor (OBD)
 (SR engine).....EC-185
Cruise control - See ASCD EL-167
Cylinder block (GA engine) EM-96
Cylinder block (SR engine) EM-49
Cylinder block boring (GA engine) EM-100
Cylinder block boring (SR engine) EM-53
Cylinder head (GA engine)..... EM-81
Cylinder head (SR engine)..... EM-32
Cylinder head bolt tightening (GA engine)..... EM-74
Cylinder head bolt tightening (SR engine)..... EM-24

D

Daytime light system EL-46
Daytime running light - See Daytime light
 system EL-46
Detonation sensor - See Knock sensor
 (SR engine).....EC-148
Detonation sensor - See Knock sensor
 (GA engine).....EC-369
Device (FICD) solenoid valve (GA engine).....EC-451
Device (FICD) solenoid valve (SR engine).....EC-230
Diagnostic trouble code (DTC) for ECCS
 OBD system (GA engine)EC-258
Diagnostic trouble code (DTC) for ECCS
 OBD system (SR engine)EC-32
Differential gear (FF AT) (RE4F03V)AT-267
Differential gear (FF AT) (RL4F03A).....AT-263
Differential gear (FF MT) (RS5F31A)MT-21
Differential gear (FF MT) (RS5F32V)MT-46
Dimensions GI-35
Distributor (GA engine).....EC-244
Distributor ignition (DI) system (GA engine)EC-244
Distributor ignition (DI) system (SR engine)EC-16
Distributor (SR engine).....EC-16
Dome lamp - See Interior lamp EL-66
Door, front - See Front door BT-9
Door glass (Front door) BT-9
Door glass (Rear door) BT-11
Door lock (Front door) BT-9
Door lock (Rear door) BT-11
Door mirror BT-36
Door, rear - See Rear door BT-11
Door trim BT-18
Drive plate runout (SR engine) EM-57

Drive shaft (front) FA-13
Dropping resistor (AT) AT-131
Dual pressure switch HA-49

E

ECCS basic inspection (GA engine)EC-298
ECCS basic inspection (SR engine)EC-74
ECCS circuit diagram (GA engine)EC-234
ECCS circuit diagram (SR engine)EC-6
ECCS component parts location (GA engine) ..EC-236
ECCS component parts location (SR engine)EC-8
ECCS fail-safe system (GA engine).....EC-297
ECCS fail-safe system (SR engine).....EC-73
ECCS on-board diagnostic system
 (GA engine).....EC-258
ECCS on-board diagnostic system
 (SR engine).....EC-32
ECCS symptom matrix chart (GA engine)EC-301
ECCS symptom matrix chart (SR engine)EC-77
ECCS system diagram and chart
 (GA engine).....EC-235
ECCS system diagram and chart
 (SR engine).....EC-7
ECCS trouble diagnoses (GA engine)EC-282
ECCS trouble diagnoses (SR engine)EC-57
ECM input/output signal inspection
 (GA engine).....EC-309
ECM input/output signal inspection
 (SR engine).....EC-84
EGR canister control solenoid valve
 inspection (GA engine)EC-436
EGR canister control solenoid valve
 inspection (SR engine)EC-213
EGR control (EGRC) - BPT valve
 (GA engine).....EC-376
EGR control (EGRC) - BPT valve
 (SR engine).....EC-155
EGR control (EGRC) - solenoid valve
 (GA engine).....EC-433
EGR control (EGRC) - solenoid valve
 (SR engine).....EC-209
EGR temperature sensor (GA engine).....EC-372
EGR temperature sensor inspection
 (GA engine).....EC-375
EGR temperature sensor inspection
 (SR engine).....EC-154
EGR temperature sensor (SR engine).....EC-151
EGR valve inspection (GA engine)EC-363
EGR valve inspection (SR engine)EC-142
EGRC - BPT valve inspection (GA engine)EC-377
EGRC - BPT valve inspection (SR engine)EC-156

ALPHABETICAL INDEX

EGRC — solenoid valve inspection
(GA engine).....EC-433

EGRC — solenoid valve inspection
(SR engine).....EC-209

Electric sun roofEL-136

Electrical load signal circuit.....EC-454

Electrical units location - See Location of
electrical unitsEL-223

Electronic ignition system (GA engine).....EC-244

Electronic ignition system (SR engine).....EC-16

Engine compartmentBT-37

Engine control module (ECM) (GA engine)EC-354

Engine control module (ECM) (SR engine)EC-133

Engine coolant temperature sensor (ECTS)
DTC13, P0115 (GA engine).....EC-328

Engine coolant temperature sensor (ECTS)
DTC13, P0115 (SR engine).....EC-103

Engine coolant temperature sensor (ECTS)
DTC13, P0115 inspection (GA engine)EC-331

Engine coolant temperature sensor (ECTS)
DTC13, P0115 inspection (SR engine)EC-106

Engine coolant temperature sensor (ECTS)
DTC98, P0125 (GA engine).....EC-429, EC-425

Engine coolant temperature sensor (ECTS)
DTC98, P0125 (SR engine).....EC-199, EC-203

Engine coolant temperature sensor (ECTS)
(GA engine).....EC-328

Engine coolant temperature sensor (ECTS)
(SR engine).....EC-103

Engine oil.....MA-8

Engine oil filter replacement (GA engine).....MA-23

Engine oil filter replacement (SR engine).....MA-15

Engine oil precautions.....GI-4

Engine oil replacement (GA engine).....MA-22

Engine oil replacement (SR engine).....MA-14

Engine outer component parts (GA engine)EM-61

Engine outer component parts (SR engine)EM-7

Engine removal (GA engine).....EM-92

Engine removal (SR engine).....EM-45

Engine room - See Engine compartmentBT-37

Engine serial number.....GI-34

Evaporative emission system (GA engine).....EC-246

Evaporative emission system (SR engine).....EC-19

Exhaust gas recirculation (EGR) system
(GA engine).....EC-356

Exhaust gas recirculation (EGR) system
(SR engine).....EC-135

Exhaust gas recirculation (EGR) valve
(GA engine).....EC-356

Exhaust gas recirculation (EGR) valve
(SR engine).....EC-135

Exhaust system.....FE-5

Exhaust system inspection.....MA-25

ExteriorBT-22

Exterior lampEL-55

F

Fan switchHA-48

Fast idleEC-449

Fast idle cam (FIC)EC-449

Fast idle cam (FIC) inspection and
adjustment.....EC-449

Final drive (FF AT) (RE4F03V)AT-267

Final drive (FF AT) (RL4F03A).....AT-263

Final drive (FF MT) (RS5F31A)MT-21

Final drive (FF MT) (RS5F32V)MT-46

Finisher, interior - See Trim.....BT-15

Finisher, trunk lid - See Trunk lid finisherBT-25

Floor trimBT-15

Fluid temperature sensor (AT)AT-129

Fluids.....MA-8

Flywheel runout (GA engine)EM-103

Flywheel runout (SR engine)EM-57

Fog lamp, front, removal and installation.....BT-6

Fog lamp, front - See Front fog lampEL-58

Fork rod (MT) (RS5F31A)MT-12

Fork rod (MT) (RS5F32V)MT-33

Forward clutch.....AT-234

Freeze frame data (GA engine)EC-259

Freeze frame data (SR engine)EC-33

Front axleFA-8

Front bumper.....BT-5

Front disc brakeBR-16

Front door.....BT-9

Front fog lampEL-58

Front fog lamp removal and installation.....BT-6

Front heated oxygen sensor (HO2S) heater
(GA engine).....EC-416

Front heated oxygen sensor (HO2S) heater
(SR engine).....EC-192

Front heated oxygen sensor (GA engine).....EC-416

Front heated oxygen sensor (SR engine).....EC-192

Front heated oxygen sensor heater
inspection (GA engine)EC-418

Front heated oxygen sensor heater
inspection (SR engine)EC-194

Front oxygen sensor (GA engine).....EC-364

Front oxygen sensor (SR engine).....EC-143

Front oxygen sensor monitor (GA engine).....EC-260

Front oxygen sensor monitor (SR engine).....EC-34

Front passenger air bag.....RS-14

Front seatBT-28

Front seat belt.....RS-4

Front suspension.....FA-24

Front washerEL-110

Front wiperEL-110

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Fuel check valve inspection (GA engine)	EC-247
Fuel check valve inspection (SR engine)	EC-20
Fuel cut control (GA engine)	EC-245
Fuel cut control (SR engine)	EC-18
Fuel filler lid	BT-7
Fuel filter replacement (GA engine)	MA-21
Fuel filter replacement (SR engine)	MA-13
Fuel gauge (w/tachometer)	EL-76
Fuel gauge (wo/tachometer)	EL-82
Fuel injection system (GA engine)	EC-396
Fuel injection system (SR engine)	EC-175
Fuel line inspection (GA engine)	MA-21
Fuel line inspection (SR engine)	MA-13
Fuel precautions	GI-5
Fuel pressure check (GA engine)	EC-249
Fuel pressure check (SR engine)	EC-22
Fuel pressure regulator (GA engine)	EC-250
Fuel pressure regulator (SR engine)	EC-23
Fuel pressure release (GA engine)	EC-249
Fuel pressure release (SR engine)	EC-22
Fuel pump control (GA engine)	EC-442
Fuel pump control (SR engine)	EC-219
Fuel pump (GA engine)	EC-442
Fuel pump (SR engine)	EC-219
Fuel pump inspection (GA engine)	EC-445
Fuel pump inspection (SR engine)	EC-223
Fuel pump relay inspection (GA engine)	EC-445
Fuel pump relay inspection (SR engine)	EC-223
Fuel system	FE-3
Fuel tank vacuum relief valve inspection (GA engine)	EC-247
Fuel tank vacuum relief valve inspection (SR engine)	EC-20
Fuse	EL-16
Fusible link	EL-16

G

Garage jack and safety stand	GI-37
Gauges (w/tachometer)	EL-74
Gauges (wo/tachometer)	EL-80
Gears (MT) (RS5F31A)	MT-11
Gears (MT) (RS5F32V)	MT-32
Generator	EL-36
Generic scan tool (GST) (GA engine)	EC-280
Generic scan tool (GST) (SR engine)	EC-54
Glass (Front door)	BT-9
Glass (Rear door)	BT-11
Governor valve assembly	AT-27
Grille	BT-5

H

Harness connector	EL-3
Harness layout	EL-225
Hazard warning lamp	EL-60
Headlamp	EL-43
Headlamp aiming control	EL-54
Headlining - See Roof trim	BT-20
Heated oxygen sensor (front) (GA engine)	EC-364
Heated oxygen sensor (front) (SR engine)	EC-143
Heated oxygen sensor (H02S) heater (rear) (GA engine)	EC-405
Heated oxygen sensor (H02S) heater (rear) (SR engine)	EC-184
Heated oxygen sensor heater (front) (GA engine)	EC-416
Heated oxygen sensor heater (front) (SR engine)	EC-192
Heated oxygen sensor heater (front) inspection (GA engine)	EC-418
Heated oxygen sensor heater (front) inspection (SR engine)	EC-194
Heated oxygen sensor (HO2S) heater (front) (GA engine)	EC-364
Heated oxygen sensor (HO2S) heater (front) (SR engine)	EC-143
Heated oxygen sensor (rear) (GA engine)	EC-401
Heated oxygen sensor (rear) (SR engine)	EC-180
Heater wiring diagram	HA-35
HEC (Hybrid electrical control unit)	Foldout page
Height (Dimensions)	GI-35
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service tools	HA-6
High clutch	AT-229
Hood	BT-5
Horn	EL-138
How to erase DTC for ECCS OBD system (GA engine)	EC-258
How to erase DTC for ECCS OBD system (SR engine)	EC-32
How to follow flowchart in trouble diagnoses	GI-28
How to perform efficient diagnosis for an electrical incident	GI-17
How to read wiring diagrams	GI-9
How to use this manual	GI-7
Hydraulic lash adjuster inspection (SR engine)	EM-40

I

IACV - air regulator inspection (SR engine)	EC-229
IACV - FICD solenoid valve inspection (GA engine)	EC-453

ALPHABETICAL INDEX

IACV - FICD solenoid valve inspection
 (SR engine).....EC-232
 IACV-AAC valve inspection (GA engine)EC-344
 IACV-AAC valve inspection (SR engine)EC-119
 Identification plateGI-33
 Idle air control valve (IACV) - air regulator
 (SR engine).....EC-227
 Idle air control valve (IACV) (GA engine)EC-341
 Idle air control valve (IACV) (SR engine)EC-116
 Idle mixture ratio inspection (GA engine).....EC-251
 Idle mixture ratio inspection (SR engine).....EC-25
 Idle speed inspection (GA engine).....EC-251
 Idle speed inspection (SR engine).....EC-25
 Ignition coil inspection (GA engine)EC-340
 Ignition coil inspection (SR engine)EC-115
 Ignition timing inspection (GA engine)EC-251
 Ignition timing inspection (SR engine)EC-25
 IlluminationEL-66
 Inhibitor switch (RE4F03V)AT-130
 Inhibitor switch (RL4F03A).....AT-33
 Injector inspection (GA engine).....EC-439
 Injector inspection (SR engine).....EC-216
 Injector removal and installation (GA engine)...EC-250
 Injector removal and installation (SR engine).....EC-23
 Input shaft (RS5F31A)MT-15
 Input shaft (RS5F32V)MT-37
 Instrument panel.....BT-12
 Intake air temperature sensor (SR engine)EC-158
 Intake air temperature sensor (GA engine)EC-379
 Intake air temperature sensor inspection
 (GA engine).....EC-383
 Intake air temperature sensor inspection
 (SR engine).....EC-162
 Intake door control linkage adjustment.....HA-50
 Intake manifold (GA engine)EM-62
 Intake manifold (SR engine)EM-8
 InteriorBT-15
 Interior lampEL-66

J

Jacking points.....GI-36
 Joint connector (J/C).....Foldout page

K

Keyless entry system - See Multi-remote
 control system.....EL-152
 Knock sensor inspection (GA engine).....EC-371
 Knock sensor inspection (SR engine).....EC-150
 Knock sensor (KS) (GA engine).....EC-369
 Knock sensor (KS) (SR engine).....EC-148

Knuckle spindleFA-8

L

Length (Dimensions)GI-35
 License lampEL-56
 Lifting pointsGI-36
 Line pressure solenoid valveAT-129
 Line pressure test (AT) (RE4F03V)AT-135
 Line pressure test (AT) (RL4F03A).....AT-26
 Liquid gasket application.....EM-2
 Location of electrical units.....EL-223
 Lock, door - See Door lock.....BT-9
 Low and reverse brakeAT-240
 Lubricant.....HA-53
 Lubricants.....MA-8
 Lubrication circuit (GA engine).....LC-13
 Lubrication circuit (SR engine).....LC-4
 Lubrication-locks, hinges and hood latches.....MA-30
 Luggage compartment trimBT-21

M

Magnet clutchHA-58
 Main drive gear (MT) (RS5F31A)MT-11
 Main drive gear (MT) (RS5F32V)MT-32
 Mainshaft (MT) (RS5F31A).....MT-11
 Mainshaft (MT) (RS5F32V).....MT-32
 Maintenance (GA engine)MA-18
 Maintenance (SR engine)MA-10
 Maintenance general.....MA-3
 Maintenance periodicMA-5
 Maintenance schedule (1).....MA-6
 Maintenance schedule (2).....MA-7
 Malfunction indicator lamp (MIL) (GA engine) ..EC-260
 Malfunction indicator lamp (MIL) (SR engine)EC-34
 Manual steering gearST-12
 Manual transaxle number.....GI-34
 Manual transmission oil.....MA-8
 Manual transmission oil replacement.....MA-25
 Mass air flow sensor inspection (GA engine) ...EC-327
 Mass air flow sensor inspection (SR engine) ...EC-102
 Mass air flow sensor (MAFS) (GA engine).....EC-323
 Mass air flow sensor (MAFS) (SR engine).....EC-98
 Master cylinder (brake)BR-11
 Meter and gauges (w/tachometer).....EL-74
 Meter and gauges (wo/tachometer).....EL-80
 MIL & Data link connectors circuit
 (GA engine).....EC-457
 MIL & Data link connectors circuit
 (SR engine).....EC-233
 Mirror, door - See Door mirrorBT-36

ALPHABETICAL INDEX

Mirror, outside - See Outside mirror BT-36
Misfire (GA engine) EC-389
Misfire (SR engine) EC-168
Mode door control linkage adjustment HA-49
Model variation GI-32
Molding - See Exterior BT-22
M/T overhaul (RS5F31A) MT-10
M/T overhaul (RS5F32V) MT-31
M/T removal and installation MT-7
Mudguard BT-26
Multi purpose grease MA-8
Multiport fuel injection (MFI) system
 (GA engine) EC-241
Multiport fuel injection (MFI) system
 (SR engine) EC-14
Multiport fuel injection precautions GI-4
Multi-remote control system EL-152

N

Neutral position switch (MT) MT-10, MT-31

O

Oil pan (GA engine) EM-66
Oil pan (SR engine) EM-11
Oil pressure (GA engine) LC-14
Oil pressure relief valve (GA engine) LC-16
Oil pressure (SR engine) LC-4
Oil pump (AT) AT-191
Oil pump (GA engine) LC-15
Oil pump (SR engine) LC-5
Oil pump regulator valve (GA engine) LC-15
Oil pump regulator valve (SR engine) LC-7
Oil seal replacement (GA engine) EM-79
Oil seal replacement (SR engine) EM-30
Out side mirror BT-36
Overdrive switch (RE4F03V) AT-130
Overdrive switch (RL4F03A) AT-32
Overrun clutch AT-234
Overrun clutch solenoid valve AT-129
Oversize piston (GA engine) EM-100
Oversize piston (SR engine) EM-52
Oxygen sensor (Front) (GA engine) EC-364
Oxygen sensor (Front) (SR engine) EC-143

P

Park/Neutral position switch (GA engine) EC-430
Park/Neutral position switch (SR engine) EC-204

PCV (positive crankcase ventilation)
 inspection (GA engine) EC-248
PCV (positive crankcase ventilation)
 inspection (SR engine) EC-21
Personal lamp EL-70, EL-72
Pilot bushing replacement EM-57
Piston assembly (GA engine) EM-104
Piston assembly (SR engine) EM-57
Piston pin inspection (GA engine) EM-97
Piston pin inspection (SR engine) EM-50
Piston ring inspection (GA engine) EM-98
Piston ring inspection (SR engine) EM-51
Piston to bore clearance (GA engine) EM-99
Piston to bore clearance (SR engine) EM-52
Power door lock EL-127
Power door mirror EL-135
Power steering fluid MA-8
Power steering fluid level ST-5
Power steering gear ST-17
Power steering hydraulic pressure ST-7
Power steering oil pressure switch
 (GA engine) EC-446
Power steering oil pressure switch
 (SR engine) EC-224
Power steering oil pressure switch inspection
 (GA engine) EC-448
Power steering oil pressure switch inspection
 (SR engine) EC-226
Power steering pump ST-23
Power steering system bleeding ST-6
Power supply routing EL-6
Power transistor & ignition coil (GA engine) EC-336
Power transistor & ignition coil (SR engine) EC-111
Power transistor inspection (GA engine) EC-340
Power transistor inspection (SR engine) EC-115
Power window EL-119
Precautions (General) GI-3
Pressure plate - See Clutch cover CL-6
Pressure test (AT) (RE4F03V) AT-135
Pressure test (AT) (RL4F03A) AT-26

Q

Quarter window BT-34

R

Radiator (GA engine) LC-23
Radiator (SR engine) LC-12
Radiator fan - See Cooling fan (GA engine) LC-23
Radiator fan - See Cooling fan (SR engine) LC-12
Radio - See Audio EL-147

ALPHABETICAL INDEX

Rear air spoiler.....	BT-27	Shift control (MT) (RS5F31A)	MT-12	
Rear axle.....	RA-6	Shift control (MT) (RS5F32V)	MT-33	
Rear axle (disc brake type).....	RA-6	Shift fork (MT) (RS5F31A)	MT-12	
Rear bumper	BT-7	Shift fork (MT) (RS5F32V)	MT-33	GI
Rear combination lamp removal and installation	BT-26	Shift lock system	AT-140	
Rear disc brake.....	BR-23	Shift schedule (RE4F03V).....	AT-59	
Rear door	BT-11	Shift schedule (RL4F03A).....	AT-19	MA
Rear drum brake	BR-20	Shift solenoid valve (AT)	AT-129	
Rear heated oxygen sensor (HO2S) heater (GA engine).....	EC-405	Shock absorber (front)	FA-25	EM
Rear heated oxygen sensor (HO2S) heater (SR engine).....	EC-184	Shock absorber (rear)	RA-10	
Rear heated oxygen sensor (GA engine)	EC-401	Side trim	BT-15	
Rear heated oxygen sensor (SR engine)	EC-180	Side window - See Rear side window	BT-34	LC
Rear seat.....	BT-29	Spark plug replacement (GA engine).....	MA-24	
Rear seat belt.....	RS-7	Spark plug replacement (SR engine).....	MA-15	
Rear side window.....	BT-34	Speedometer (w/tachometer).....	EL-76	EC
Rear suspension	RA-8	Speedometer (wo/tachometer).....	EL-82	
Rear window.....	BT-33	Spiral cable.....	RS-13	
Rear window defogger	EL-139	Spot lamp	EL-70	FE
Rear window signal (GA engine)	EC-454	Spring (Wheelarch) height	FA-5	
Refrigerant connection precaution	HA-4	SRS - See Supplemental Restraint System	RS-9	CL
Refrigerant general precaution.....	HA-3	SRS Trouble diagnoses	RS-22	
Refrigerant lines	HA-55	SRS Wiring diagram.....	RS-22	
Refrigeration cycle.....	HA-11	Stabilizer bar (front).....	FA-26	MT
Release bearing (clutch)	CL-5	Stall test (AT) (RE4F03V)	AT-132	
Remote keyless entry system - See Multi-remote control system.....	EL-152	Stall test (AT) (RL4F03A).....	AT-24	AT
Resistor inspection (GA engine)	EC-340	Standardized relay	EL-4	
Resistor inspection (SR engine)	EC-115	Starter.....	EL-28	
Reverse clutch.....	AT-225	Starting system.....	EL-21	FA
Reverse gear (MT) (RS5F31A).....	MT-11	Steering gear and linkage inspection.....	MA-28	
Reverse gear (MT) (RS5F32V).....	MT-32	Steering gear oil level	MA-29	
Reverse idler shaft (MT) (RS5F31A)	MT-11	Steering knuckle.....	FA-8	RA
Reverse idler shaft (MT) (RS5F32V)	MT-32	Steering linkage (manual steering)	ST-12	
Revolution sensor (AT).....	AT-131	Steering linkage (power steering)	ST-17	
Road wheel size.....	GI-35	Steering switch.....	EL-42	BR
Roof trim.....	BT-20	Steering wheel and column.....	ST-8	
Room lamp.....	EL-70	Steering wheel play.....	ST-26	ST
Rotor disc (front)	FA-8	Steering wheel turning force	ST-6	
		Stop lamp	EL-56	
		Striking rod (MT) (RS5F31A)	MT-12	RS
		Striking rod (MT) (RS5F32V)	MT-33	
		Strut (front)	FA-25	
		Sunroof	BT-30	BT
		Sunroof, electric - See Electric sunroof	EL-136	
		Supplemental Restraint System.....	RS-9	HA
		Symbols and abbreviations	GI-8	
		Synchronizer (MT) (RS5F31A).....	MT-11	
		Synchronizer (MT) (RS5F32V).....	MT-32	EL

S

SAE J1930 terminology list.....	GI-41
Seal - See Exterior.....	BT-22
Seat belt inspection.....	MA-30
Seat belt, front - See Front seat belt	RS-4
Seat belt, rear - See Rear seat belt.....	RS-7
Seat, front - See Front seat	BT-28
Seat, rear - See Rear seat.....	BT-29
Self-diagnostic results (GA engine).....	EC-260
Self-diagnostic results (SR engine).....	EC-34

T

Tachometer.....	EL-76
Tail lamp	EL-56

IDX

ALPHABETICAL INDEX

Temperature control cable and linkage adjustment.....	HA-50
Theft warning system.....	EL-190
Thermal protector.....	HA-49
Thermo control amp.....	HA-49
Thermostat (GA engine).....	LC-21
Thermostat (SR engine).....	LC-10
Three way catalyst (GA engine).....	EC-393
Three way catalyst (SR engine).....	EC-172
Three way catalyst precautions.....	GI-4
Throttle bodies (GA engine).....	EM-62
Throttle bodies (SR engine).....	EM-8
Throttle drum adjustment.....	FE-2
Throttle position sensor inspection (GA engine).....	EC-298
Throttle position sensor inspection (SR engine).....	EC-74
Throttle position sensor (TPS) (GA engine).....	EC-384
Throttle position sensor (TPS) (SR engine).....	EC-163
Throwout bearing - See Clutch release bearing.....	CL-5
Tie-rod.....	ST-20
Tie-rod ball joints.....	ST-20
Tightening torque of standard bolts.....	GI-40
Timing chain (GA engine).....	EM-68
Timing chain (SR engine).....	EM-16
Tire rotation.....	MA-28
Tire size.....	GI-35
Torque converter clutch solenoid valve (RE4F03V).....	AT-129
Torque converter clutch solenoid valve (RL4F03A).....	AT-34
Torque converter installation.....	AT-298
Tow truck towing.....	GI-38
Transmission case (MT) (RS5F31A).....	MT-10
Transmission case (MT) (RS5F32V).....	MT-31
Transverse link (front).....	FA-27
Tread-FR&RR (Dimensions).....	GI-35
Trim.....	BT-15
Trunk lid.....	BT-7
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid.....	BT-7
Trunk lid trim.....	BT-25
Trunk room lamp.....	EL-70
Trunk room trim.....	BT-21
Turn signal lamp.....	EL-60
Two trip detection logic (GA engine).....	EC-258
Two trip detection logic (SR engine).....	EC-32

U

Under body.....	BT-39
-----------------	-------

V

Vacuum hose (brake system).....	BR-15
Vacuum hose drawing (ECCS) (GA engine).....	EC-239
Vacuum hose drawing (ECCS) (SR engine).....	EC-12
Valve clearance (GA engine).....	EM-89
Valve guide inspection (GA engine).....	EM-84
Valve guide inspection (SR engine).....	EM-37
Valve seat inspection (GA engine).....	EM-85
Valve seat inspection (SR engine).....	EM-39
Valve spring inspection (GA engine).....	EM-86
Valve timing control (VTC) (GA engine).....	EC-410
Vapor lines inspection (GA engine).....	MA-24
Vapor lines inspection (SR engine).....	MA-17
Vehicle identification number.....	GI-33
Vehicle speed sensor (VSS) (GA engine).....	EC-332
Vehicle speed sensor (VSS) (SR engine).....	EC-107
Viscosity number (SAE).....	MA-8
Viscous coupling (FF AT).....	AT-267
Viscous coupling (FF MT).....	MT-46

W

Warning chime.....	EL-87
Warning lamps.....	EL-87
Washer, front - See Front washer.....	EL-110
Water cock control rod adjustment.....	HA-50
Water pump (GA engine).....	LC-20
Water pump (SR engine).....	LC-9
Water temperature gauge (w/tachometer).....	EL-76
Water temperature gauge (wo/tachometer).....	EL-82
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (front).....	FA-6
Wheel alignment (rear).....	RA-5
Wheel balance.....	MA-28
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear).....	RA-4
Wheel hub and steering knuckle.....	FA-8
Wheel hub (front).....	FA-8
Wheel sensors (ABS).....	BR-35
Wheel size.....	GI-35
Wheelarch height.....	FA-5
Wheelbase (Dimensions).....	GI-35
Wide open & closed throttle position (CTP) switch (GA engine).....	EC-384
Wide open & closed throttle position (CTP) switch (SR engine).....	EC-163
Width (Dimensions).....	GI-35
Window, back - See Back window.....	BT-33
Window, door (Front door).....	BT-9
Window, door (Rear door).....	BT-11
Window, opera - See Quarter window.....	BT-34
Window, rear - See Rear window.....	BT-33

ALPHABETICAL INDEX

Window, rear side - See Rear side window.....	BT-34	Wiper, front - See Front wiper.....	EL-110
Window, side - See Rear side window	BT-34	Withdrawal lever (clutch).....	CL-5
Windshield.....	BT-33	Wrist pin - See Piston pin inspection	
Windshield washer - See Front washer.....	EL-110	(GA engine).....	EM-97
Windshield wiper - See Front wiper.....	EL-110	Wrist pin - See Piston pin inspection	
Wiper and washer	EL-110	(SR engine).....	EM-50

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX