

SECTION **IDX**

GI
MA
EM
LC
EC
PE
CL
MT
AT
FA
HA
BR
ST
RS
BT
HA
EL

IDX

ALPHABETICAL INDEX

A

- ABS actuator BR-38
ABS (anti-lock brake system)..... BR-34
ABS circuit diagram..... BR-44
ABS component parts and connector
 locations BR-43
ABS control unit BR-37
ABS self-diagnosis BR-49
ABS symptom chart BR-51
ABS system components BR-35
ABS trouble diagnoses..... BR-41
ABS wheel sensors BR-36
ABS wiring diagram..... BR-45
A/C air flow HA-13
A/C circuit diagram HA-33
A/C component layout..... HA-12
A/C compressor clutch removal and
 installation HA-60
A/C compressor mounting..... HA-59
A/C compressor precaution..... HA-5
A/C compressor special service tool..... HA-6
A/C control linkage adjustment HA-49
A/C control operation HA-14
A/C diagnostic work flow..... HA-15
A/C harness layout..... HA-31
A/C HFC134a (R134a) system precaution HA-2
A/C HFC134a (R134a) system service
 procedure HA-53
A/C HFC134a (R134a) system service tools..... HA-7
A/C HFC134a system service equipment
 precaution HA-9
A/C lubricant (R134a)..... HA-55
A/C lubrication oil HA-55
A/C operational check..... HA-16
A/C performance chart..... HA-26
A/C performance test diagnoses..... HA-24
A/C pressure switch HA-11
A/C relay..... HA-49
A/C service data specification..... HA-66
A/C switch HA-48
A/C symptom chart..... HA-18
A/C trouble diagnoses..... HA-15
A/C wiring diagram..... HA-36
Accelerator control system..... FE-2
Accelerator wire adjustment..... FE-2
Air bag RS-13
Air bag disposal..... RS-17
Air bag module RS-13
Air bag precautions GI-2
Air bag removal and installation..... RS-13
Air bleeding for brake system BR-5
Air cleaner filter replacement (GA engine)..... MA-22
Air cleaner filter replacement (SR engine)..... MA-14
Air conditioner cut control (GA engine)..... EC-245
Air conditioner cut control (SR engine)..... EC-18
Air conditioning - See A/C..... HA-11
Air flow meter - See Mass air flow sensor
 (GA engine)..... EC-318
Air flow meter - See Mass air flow sensor
 (SR engine)..... EC-93
Air mix door control linkage adjustment..... HA-50
Air spoiler, rear - See Rear air spoiler BT-27
Alternator..... EL-38
Angular tightening application EM-2
Anti-freeze coolant MA-8
Anti-freeze coolant mixture ratio MA-9
ASCD (automatic speed control device)..... EL-170
AT control unit AT-124
AT diagnosis communication line (SR
 engine) EC-198
AT fluid temperature sensor..... AT-128
AT removal and installation..... AT-155
AT self-diagnoses AT-68
AT shift lock system AT-139
AT trouble diagnoses (RE4F03V) AT-36
AT trouble diagnoses (RL4F03A)..... AT-17
Audio EL-151
Audio and A/C control removal and
 installation - See Instrument panel..... BT-12
Automatic transaxle number GI-36
Automatic transmission fluid MA-8
Automatic transmission fluid replacement MA-26
Auxiliary air control (AAC) (GA engine) EC-395
Auxiliary air control (AAC) (SR engine) EC-170

B

- Back-up lamp EL-57
Back-up lamp switch (MT) -See reverse lamp
 switch MT-7
Ball joint front axle..... FA-27
Battery EL-21
Baulk ring (MT) (RS5F31A) MT-12
Baulk ring (MT) (RS5F32V) MT-32
Belt inspection (drive belt) (GA engine)..... MA-18
Belt inspection (drive belt) (SR engine)..... MA-10
Blower motor HA-48
Blower resistor..... HA-48
Board-on lift..... GI-38
Body alignment..... BT-38
Boring/honing cylinder block (GA engine)..... EM-101
Boring/honing cylinder block (SR engine)..... EM-54
Brake booster..... BR-14
Brake control valve (Proportioning valve)..... BR-8
Brake fluid MA-8

ALPHABETICAL INDEX

Brake fluid change	BR-4
Brake fluid level	MA-27
Brake fluid level and line check	BR-4
Brake hydraulic line	BR-6
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake lining temporary checking	MA-28
Brake master cylinder	BR-11
Brake pedal	BR-10
Bumper, front - See Front bumper	BT-5
Bumper, rear - See Rear bumper	BT-7

C

Camshaft inspection (GA engine)	EM-83
Camshaft inspection (SR engine)	EM-36
Camshaft position sensor (CMPS) (GA engine)	EC-372
Camshaft position sensor (CMPS) (SR engine)	EC-147
Camshaft position sensor inspection (GA engine)	EC-375
Camshaft position sensor inspection (SR engine)	EC-150
Charging system	EL-35
Chassis and body maintenance	MA-25
Cigarette lighter	EL-142
Circuit breaker	EL-16
Closed loop control (GA engine)	EC-347
Closed loop control (SR engine)	EC-122
Clutch cable	CL-3
Clutch cover	CL-6
Clutch disc	CL-6
Clutch pedal	CL-3
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-5
Clutch withdrawal lever	CL-5
Coil spring (front)	FA-25
Coil spring (rear)	RA-10
Combination lamp, rear, removal and installation	BT-26
Combination meter (needle type) (With tachometer)	EL-79
Combination meter (needle type) (Without tachometer)	EL-85
Combination meter removal and installation - See Instrument panel	BT-12
Combination meter (With tachometer)	EL-79
Combination meter (Without tachometer)	EL-85
Combination switch	EL-42
Compression pressure (GA engine)	EM-66
Compression pressure (SR engine)	EM-10

Compressor clutch removal and installation	HA-60
Compressor description	HA-59
Compressor mounting	HA-59
Compressor precaution	HA-5
Compressor special service tool	HA-6
Connecting rod bearing clearance (GA engine)	EM-103
Connecting rod bearing clearance (SR engine)	EM-56
Connecting rod bushing clearance (GA engine)	EM-104
Connecting rod bushing clearance (SR engine)	EM-57
Connecting rod (GA engine)	EM-99
Connecting rod (SR engine)	EM-52
Console box - See Instrument panel	BT-12
CONSULT for ABS	BR-52
Consult for ECCS (GA engine)	EC-270
Consult for ECCS (SR engine)	EC-44
Consult general information	GI-33
Control lever (MT)	MT-10
Control valve (AT) (RE4F03V)	AT-204
Control valve (AT) (RL4F03A)	AT-196
Converter housing installation	AT-156
Coolant replacement (GA engine)	MA-19
Coolant replacement (SR engine)	MA-11
Cooling circuit (GA engine)	LC-17
Cooling circuit (SR engine)	LC-8
Cooling fan control (GA engine)	EC-430
Cooling fan control (SR engine)	EC-201
Cooling fan control system (GA engine)	LC-23
Cooling fan control system (SR engine)	LC-12
Cooling fan (GA engine)	LC-23
Cooling fan (SR engine)	LC-12
Cooling fan motor	HA-31
Cooling fan motor inspection (GA engine)	EC-438
Cooling fan motor inspection (SR engine)	EC-213
Cooling fan relay	HA-31
Cooling fan relay inspection (GA engine)	EC-438
Cooling fan relay inspection (SR engine)	EC-213
Counter gear (MT) (RS5F31A)	MT-12
Counter gear (MT) (RS5F32V)	MT-32
Coupling sleeve (MT) (RS5F31A)	MT-12
Coupling sleeve (MT) (RS5F32V)	MT-32
Crank angle sensor built into distributor - See Camshaft position sensor (GA engine)	EC-372
Crank angle sensor built into distributor - See Camshaft position sensor (SR engine)	EC-147
Crank case ventilation system (GA engine)	EC-248
Crank case ventilation system (SR engine)	EC-23
Crankshaft assembly (GA engine)	EM-105
Crankshaft assembly (SR engine)	EM-59
Crankshaft bearing clearance (GA engine)	EM-102
Crankshaft bearing clearance (SR engine)	EM-55

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Crankshaft inspection (GA engine) EM-101
 Crankshaft inspection (SR engine) EM-54
 Crankshaft position sensor (OBD) DTC0802,
 P0335 (GA engine) EC-368
 Crankshaft position sensor (OBD) DTC0802,
 P0335 (SR engine) EC-143
 Crankshaft position sensor (OBD) DTC0802,
 P0335 inspection (GA engine) EC-371
 Crankshaft position sensor (OBD) DTC0802,
 P0335 inspection (SR engine) EC-146
 Cruise control - See ASCD EL-170
 Cylinder block boring (GA engine) EM-101
 Cylinder block boring (SR engine) EM-54
 Cylinder block (GA engine) EM-97
 Cylinder block (SR engine) EM-50
 Cylinder head bolt tightening (GA engine) EM-75
 Cylinder head bolt tightening (SR engine) EM-24
 Cylinder head (GA engine) EM-82
 Cylinder head (SR engine) EM-32

D

Data link connector for Consult (GA engine) EC-270
 Data link connector for Consult (SR engine) EC-44
 Daytime light system EL-48
 Daytime running light - See Daytime light
 system EL-48
 Detonation sensor - See Knock sensor (GA
 engine) EC-365
 Detonation sensor - See Knock sensor (SR
 engine) EC-140
 Device (FICD) solenoid valve (GA engine) EC-451
 Device (FICD) solenoid valve (SR engine) EC-230
 Diagnostic trouble code (DTC) for ECCS
 OBD system (GA engine) EC-260
 Diagnostic trouble code (DTC) for ECCS
 OBD system (SR engine) EC-33
 Differential gear (FF AT) (RE4F03V) AT-268
 Differential gear (FF AT) (RL4F03A) AT-264
 Differential gear (FF MT) (RS5F31A) MT-22
 Differential gear (FF MT) (RS5F32V) MT-46
 Dimensions GI-37
 Distributor (GA engine) EC-244
 Distributor (SR engine) EC-17
 Distributor ignition (DI) system (GA engine) EC-244
 Distributor ignition (DI) system (SR engine) EC-17
 Door, front - See Front door BT-9
 Door glass (Front) BT-9
 Door glass (Rear) BT-11
 Door lock (Front) BT-9
 Door lock (Rear) BT-11
 Door mirror BT-37
 Door, rear - See Rear door BT-11

Door trim BT-18
 Drive plate runout (GA engine) EM-104
 Drive plate runout (SR engine) EM-58
 Drive shaft (front) FA-13
 Dropping resistor (AT) AT-130
 Dual pressure switch HA-49

E

ECCS basic inspection (GA engine) EC-288
 ECCS basic inspection (SR engine) EC-62
 ECCS circuit diagram (GA engine) EC-234
 ECCS circuit diagram (SR engine) EC-7
 ECCS component parts location (GA engine) .. EC-236
 ECCS component parts location (SR engine) EC-9
 ECCS fail-safe system (GA engine) EC-300
 ECCS fail-safe system (SR engine) EC-76
 ECCS on-board diagnostic system (GA
 engine) EC-260
 ECCS on-board diagnostic system (SR
 engine) EC-33
 ECCS symptom matrix chart (GA engine) EC-301
 ECCS symptom matrix chart (SR engine) EC-77
 ECCS system diagram and chart (GA
 engine) EC-235
 ECCS system diagram and chart (SR
 engine) EC-8
 ECCS trouble diagnoses (GA engine) EC-284
 ECCS trouble diagnoses (SR engine) EC-58
 ECCS wiring diagram (GA engine) EC-234
 ECCS wiring diagram (SR engine) EC-7
 ECM input/output signal inspection (GA
 engine) EC-309
 ECM input/output signal inspection (SR
 engine) EC-84
 EGR control (EGRC) - BPT valve (GA
 engine) EC-386
 EGR control (EGRC) - BPT valve (SR
 engine) EC-161
 EGR control (EGRC) - solenoid valve (GA
 engine) EC-420
 EGR control (EGRC) - solenoid valve (SR
 engine) EC-190
 EGR temperature sensor (GA engine) EC-424
 EGR temperature sensor (SR engine) EC-194
 EGR temperature sensor inspection (GA
 engine) EC-427
 EGR temperature sensor inspection (SR
 engine) EC-197
 EGR valve EVAP canister control solenoid
 valve inspection (GA engine) EC-423
 EGR valve EVAP canister control solenoid
 valve inspection (SR engine) EC-193

ALPHABETICAL INDEX

EGR valve inspection (GA engine)	EC-384	
EGR valve inspection (SR engine)	EC-159	
EGRC - BPT valve inspection (GA engine)	EC-385	
EGRC - BPT valve inspection (SR engine)	EC-162	
EGRC-solenoid valve inspection (GA engine) ..	EC-420	
EGRC-solenoid valve inspection (SR engine) ..	EC-190	
Electric sun roof	EL-140	
Electrical load signal circuit (GA engine)	EC-454	
Electrical units location	EL-226	
Electronic ignition system (GA engine)	EC-244	
Electronic ignition system (SR engine)	EC-17	
Engine compartment	BT-38	
Engine control module (ECM) (GA engine)	EC-399	
Engine control module (ECM) (SR engine)	EC-174	
Engine coolant temperature sensor (ECTS) (GA engine)	EC-328	
Engine coolant temperature sensor (ECTS) P0115, DTC0103 (GA engine)	EC-328	
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection (GA engine)	EC-331	
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection (SR engine)	EC-106	
Engine coolant temperature sensor (ECTS) P0115, DTC0103 (SR engine)	EC-103	
Engine coolant temperature sensor (ECTS) P0125, DTC0908 (GA engine)	EC-337	
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection (GA engine)	EC-341	
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection (SR engine)	EC-116	
Engine coolant temperature sensor (ECTS) P0125, DTC0908 (SR engine)	EC-112	
Engine coolant temperature sensor (ECTS) (SR engine)	EC-103	
Engine coolant temperature sensor inspection (GA engine)	EC-331	
Engine coolant temperature sensor inspection (SR engine)	EC-106	
Engine oil	MA-8	
Engine oil filter replacement (GA engine)	MA-23	
Engine oil filter replacement (SR engine)	MA-15	
Engine oil precautions	GI-4	
Engine oil replacement (GA engine)	MA-22	
Engine oil replacement (SR engine)	MA-14	
Engine outer component parts (GA engine)	EM-62	
Engine outer component parts (SR engine)	EM-7	
Engine removal (GA engine)	EM-93	
Engine removal (SR engine)	EM-46	
Engine room - See Engine compartment	BT-38	
Engine serial number	GI-36	
Engine trouble diagnoses (GA engine)	EC-284	
Engine trouble diagnoses (SR engine)	EC-58	
EVAP canister control (GA engine)	EC-246	
EVAP canister control (SR engine)	EC-21	
EVAP canister control solenoid valve inspection (GA engine)	EC-420	
EVAP canister control solenoid valve inspection (SR engine)	EC-190	GI
EVAP canister (GA engine)	EC-246	
EVAP canister (SR engine)	EC-21	MA
EVAP canister inspection (GA engine)	EC-246	
EVAP canister inspection (SR engine)	EC-21	EM
EVAP canister purge control (GA engine)	EC-246	
EVAP canister purge control (SR engine)	EC-21	
EVAP canister purge control solenoid valve (GA engine)	EC-420	LC
EVAP canister purge control solenoid valve (SR engine)	EC-190	EC
EVAP canister purge control valve (GA engine)	EC-246	
EVAP canister purge control valve (SR engine)	EC-21	FE
EVAP canister purge volume control valve (GA engine)	EC-246	CL
EVAP canister purge volume control valve (SR engine)	EC-21	MT
Evaporative emission (EVAP) system (GA engine)	EC-246	
Evaporative emission (EVAP) system (SR engine)	EC-21	AT
Exhaust gas recirculation (EGR) system (GA engine)	EC-377	FA
Exhaust gas recirculation (EGR) system (SR engine)	EC-152	PA
Exhaust gas recirculation (EGR) valve (GA engine)	EC-377	
Exhaust gas recirculation (EGR) valve (SR engine)	EC-152	BR
Exhaust system	FE-5	
Exhaust system inspection	MA-25	ST
Exterior	BT-22	
Exterior lamp	EL-57	RS
F		
Fan switch	HA-48	
Fast idle cam (FIC) (GA engine)	EC-251	HA
Fast idle cam (FIC) inspection and adjustment (GA engine)	EC-251	EL
Fast idle (GA engine)	EC-251	
Final drive (FF AT) (RE4F03V)	AT-268	
Final drive (FF AT) (RL4F03A)	AT-264	
Final drive (FF MT) (RS5F31A)	MT-22	
Final drive (FF MT) (RS5F32V)	MT-46	
Finisher, interior - See Trim	BT-15	
Finisher, trunk lid - See Trunk lid finisher	BT-25	
Floor trim	BT-15	

ALPHABETICAL INDEX

Fluid temperature sensor (AT)AT-128
Fluids MA-8
Flywheel runout (GA engine) EM-104
Flywheel runout (SR engine) EM-58
Fog lamp, front EL-61
Fog lamp, front, removal and installation BT-5
Fork rod (MT) (RS5F31A) MT-13
Fork rod (MT) (RS5F32V) MT-33
Forward clutch AT-235
Freeze frame data (GA engine) EC-261
Freeze frame data (SR engine) EC-34
Front axle FA-8
Front bumper BT-5
Front disc brake BR-17
Front door BT-9
Front fog lamp EL-61
Front fog lamp removal and installation BT-5
Front heated oxygen sensor heater
inspection (GA engine) EC-350
Front heated oxygen sensor heater
inspection (SR engine) EC-125
Front heated oxygen sensor (HO2S) (GA
engine) EC-342
Front heated oxygen sensor (HO2S) (SR
engine) EC-117
Front heated oxygen sensor (HO2S) heater
(GA engine) EC-348
Front heated oxygen sensor (HO2S) heater
(SR engine) EC-123
Front heated oxygen sensor (HO2S) monitor
(GA engine) EC-342
Front heated oxygen sensor (HO2S) monitor
(SR engine) EC-117
Front oxygen sensor (O2S) (GA engine) EC-342
Front oxygen sensor (O2S) (SR engine) EC-117
Front oxygen sensor (O2S) monitor (GA
engine) EC-262
Front oxygen sensor (O2S) monitor (SR
engine) EC-35
Front passenger air bag RS-15
Front seat BT-28
Front seat belt RS-3
Front suspension FA-24
Front washer EL-114
Front wiper EL-114
Fuel check valve inspection (GA engine) EC-247
Fuel check valve inspection (SR engine) EC-22
Fuel cut control (at no load & high engine
speed) (GA engine) EC-245
Fuel cut control (at no load & high engine
speed) (SR engine) EC-19
Fuel filler lid BT-7
Fuel filter replacement (SR engine) MA-13
Fuel gauge EL-86

Fuel gauge (With tachometer) EL-80
Fuel injection system (GA engine) EC-356
Fuel injection system (SR engine) EC-131
Fuel injector (GA engine) EC-439
Fuel injector (SR engine) EC-214
Fuel line inspection (GA engine) MA-21
Fuel line inspection (SR engine) MA-13
Fuel precautions GI-5
Fuel pressure check (GA engine) EC-249
Fuel pressure check (SR engine) EC-24
Fuel pressure regulator (GA engine) EC-250
Fuel pressure regulator (SR engine) EC-25
Fuel pressure release (GA engine) EC-249
Fuel pressure release (SR engine) EC-24
Fuel pump control (GA engine) EC-444
Fuel pump control (SR engine) EC-219
Fuel pump (GA engine) EC-444
Fuel pump (SR engine) EC-219
Fuel pump inspection (GA engine) EC-447
Fuel pump inspection (SR engine) EC-223
Fuel pump relay inspection (GA engine) EC-447
Fuel pump relay inspection (SR engine) EC-223
Fuel system FE-3
Fuel tank vacuum relief valve inspection (GA
engine) EC-247
Fuel tank vacuum relief valve inspection (SR
engine) EC-22
Fuse EL-16
Fuse block Foldout page
Fusible link EL-16

G

Garage jack and safety stand GI-39
Gauges (With tachometer) EL-78
Gauges (Without tachometer) EL-84
Gears (MT) (RS5F31A) MT-12
Gears (MT) (RS5F32V) MT-32
Generator EL-38
Generator - See Alternator EL-38
Generic scan tool (GST) (GA engine) EC-282
Generic scan tool (GST) (SR engine) EC-56
Glass (Front) BT-9
Glass (Rear) BT-11
Governor valve assembly AT-27
Grille - See Exterior BT-5
Ground distribution EL-17

H

Harness layout EL-228
Hazard warning lamp EL-63

ALPHABETICAL INDEX

Headlamp	EL-45
Headlamp aiming control	EL-56
Headlining - See Roof trim.....	BT-20
Heated oxygen sensor heater (front) inspection (GA engine)	EC-350
Heated oxygen sensor heater (front) inspection (SR engine)	EC-125
Heated oxygen sensor (HO2S) (front) (GA engine)	EC-342
Heated oxygen sensor (HO2S) (front) (SR engine)	EC-117
Heated oxygen sensor (HO2S) heater (front) (GA engine).....	EC-348
Heated oxygen sensor (HO2S) heater (front) (SR engine).....	EC-123
Heated oxygen sensor (HO2S) heater (rear) (GA engine).....	EC-355
Heated oxygen sensor (HO2S) heater (rear) (SR engine).....	EC-130
Heated oxygen sensor monitor (HO2S) (front) (GA engine).....	EC-342
Heated oxygen sensor monitor (HO2S) (front) (SR engine).....	EC-117
Heated oxygen sensor (rear) (GA engine).....	EC-351
Heated oxygen sensor (rear) (SR engine).....	EC-126
Heater wiring diagram.....	HA-35
HEC (Hybrid electrical control unit).....	Foldout page
Height (Dimensions).....	GI-37
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-53
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution	HA-9
High clutch.....	AT-230
Hood.....	BT-5
Horn.....	EL-142
How to erase DTC for ECCS OBD system (GA engine).....	EC-260
How to erase DTC for ECCS OBD system (SR engine).....	EC-33
How to follow flow chart in trouble diagnoses	GI-30
How to perform efficient diagnosis for an electrical incident	GI-18
How to read wiring diagrams	GI-9
How to use this manual	GI-7
Hydraulic lash adjuster inspection (SR engine)	EM-41

I

IACV - air regulator inspection (SR engine)	EC-229
IACV - FICD solenoid valve inspection (SR engine)	EC-232

IACV-AAC valve inspection (GA engine)	EC-398	
IACV-AAC valve inspection (SR engine)	EC-173	
Identification plate	GI-35	GI
Idle air control (IAC) system (GA engine).....	EC-395	
Idle air control (IAC) system (SR engine).....	EC-170	
Idle air control valve (IACV) - air regulator (SR engine).....	EC-227	MA
Idle air control valve (IACV) (GA engine)	EC-395	
Idle air control valve (IACV) (SR engine)	EC-170	EM
Idle mixture ratio inspection (GA engine).....	EC-253	
Idle mixture ratio inspection (SR engine).....	EC-26	LC
Idle speed inspection (GA engine).....	EC-253	
Idle speed inspection (SR engine).....	EC-26	
Ignition coil inspection (GA engine)	EC-415	EC
Ignition coil inspection (SR engine)	EC-185	
Ignition timing inspection (GA engine)	EC-253	
Ignition timing inspection (SR engine)	EC-26	FE
Inhibitor switch (RE4F03V)	AT-129	
Inhibitor switch (RL4F03A).....	AT-33	CL
Injector inspection (GA engine).....	EC-441	
Injector inspection (SR engine).....	EC-216	
Injector removal and installation (GA engine)...	EC-250	MT
Injector removal and installation (SR engine)....	EC-25	
Input shaft (RS5F31A)	MT-16	AT
Input shaft (RS5F32V)	MT-37	
Instrument panel.....	BT-12	
Intake air temperature sensor (GA engine)	EC-323	FA
Intake air temperature sensor inspection (GA engine)	EC-327	
Intake air temperature sensor inspection (SR engine)	EC-102	RA
Intake air temperature sensor (SR engine)	EC-98	
Intake door control linkage adjustment	HA-50	BR
Intake door motor.....	HA-50	
Intake manifold (GA engine)	EM-63	ST
Intake manifold (SR engine)	EM-8	
Interior	BT-15	
Interior lamp	EL-70	RS

J

Jacking points.....	GI-38	BT
---------------------	-------	----

K

Keyless entry system - See Multi-remote control system.....	EL-155	
Knock sensor (KS) (GA engine).....	EC-365	
Knock sensor (KS) inspection (GA engine)	EC-367	
Knock sensor (KS) inspection (SR engine)	EC-142	
Knock sensor (KS) (SR engine).....	EC-140	
Knuckle spindle	FA-8	

IDX

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-37
License lamp	EL-59
Lifting points	GI-38
Line pressure solenoid valve	AT-128
Line pressure test (AT) (RE4F03V)	AT-134
Line pressure test (AT) (RL4F03A)	AT-26
Liquid gasket application	EM-2
Location of electrical units	EL-226
Lock, door - See Door lock (Front)	BT-9
Lock, door - See Door lock (Rear)	BT-11
Low and reverse brake	AT-241
Lubricant (R134a) A/C	HA-55
Lubricants	MA-8
Lubrication circuit (GA engine)	LC-13
Lubrication circuit (SR engine)	LC-4
Lubrication oil A/C	HA-55
Lubrication-locks, hinges and hood latches	MA-30
Luggage compartment trim	BT-21

M

Magnet clutch	HA-60
Main drive gear (MT) (RS5F31A)	MT-12
Main drive gear (MT) (RS5F32V)	MT-32
Mainshaft (MT) (RS5F31A)	MT-18
Mainshaft (MT) (RS5F32V)	MT-40
Maintenance (engine) (GA engine)	MA-18
Maintenance (engine) (SR engine)	MA-10
Maintenance general	MA-3
Maintenance periodic	MA-5
Maintenance schedule (1)	MA-6
Maintenance schedule (2)	MA-7
Malfunction indicator lamp (MIL) (GA engine) ..	EC-262
Malfunction indicator lamp (MIL) (SR engine) ..	EC-35
Manual steering gear	ST-13
Manual transaxle number	GI-36
Manual transmission oil	MA-8
Manual transmission oil replacement	MA-25
Mass air flow sensor inspection (GA engine) ...	EC-322
Mass air flow sensor inspection (SR engine)	EC-97
Mass air flow sensor (MAFS) (GA engine)	EC-318
Mass air flow sensor (MAFS) (SR engine)	EC-93
Master cylinder (brake)	BR-11
Meter and gauges (With tachometer)	EL-78
Meter and gauges (Without tachometer)	EL-84
MIL & Data link connectors circuit (GA engine)	EC-457
MIL & Data link connectors circuit (SR engine)	EC-233
Mirror, door - See Door mirror	BT-37

Mirror, out side - See Out side mirror	BT-37
Misfire (GA engine)	EC-361
Misfire (SR engine)	EC-136
Mode door control linkage adjustment	HA-49
Model variation	GI-34
Molding - See Exterior	BT-22
MT overhaul (RS5F31A)	MT-11
MT overhaul (RS5F32V)	MT-31
MT removal and installation	MT-8
Mud guard - See Exterior	BT-26
Multi purpose grease	MA-8
Multiport fuel injection (MFI) system (GA engine)	EC-241
Multiport fuel injection (MFI) system (SR engine)	EC-15
Multiport fuel injection precautions	GI-4
Multiport fuel injection system inspection (GA engine)	EC-356
Multiport fuel injection system inspection (SR engine)	EC-131
Multi-remote control system	EL-155

N

Neutral position switch inspection (GA engine)	EC-401
Neutral position switch inspection (SR engine)	EC-176
Neutral position switch (MT)	MT-7

O

Oil pan (engine) (GA engine)	EM-67
Oil pan (engine) (SR engine)	EM-11
Oil pressure (GA engine)	LC-14
Oil pressure (SR engine)	LC-4
Oil pressure relief valve (GA engine)	LC-16
Oil pump (AT)	AT-192
Oil pump (GA engine)	LC-15
Oil pump (SR engine)	LC-5
Oil pump regulator valve (GA engine)	LC-15
Oil pump regulator valve (SR engine)	LC-7
Oil seal replacement (engine) (GA engine)	EM-80
Oil seal replacement (engine) (SR engine)	EM-30
Opera window	BT-35
Out side mirror	BT-37
Overdrive switch (RE4F03V)	AT-129
Overdrive switch (RL4F03A)	AT-32
Overrun clutch	AT-235
Overrun clutch solenoid valve	AT-128
Oversize piston (GA engine)	EM-101
Oversize piston (SR engine)	EM-54

ALPHABETICAL INDEX

Oxygen sensor monitor (O2S) (front) (GA engine)	EC-342
Oxygen sensor monitor (O2S) (front) (SR engine)	EC-117
Oxygen sensor (O2S) (front) (GA engine)	EC-342
Oxygen sensor (O2S) (front) (SR engine)	EC-117

P

Parking brake control	BR-32
Park/Neutral position switch (GA engine)	EC-401
Park/Neutral position switch (SR engine)	EC-176
PCV (positive crankcase ventilation) inspection (GA engine)	EC-248
PCV (positive crankcase ventilation) inspection (SR engine)	EC-23
Pilot bushing replacement (SR engine)	EM-58
Piston assembly (GA engine)	EM-105
Piston assembly (SR engine)	EM-59
Piston pin inspection (GA engine)	EM-98
Piston pin inspection (SR engine)	EM-51
Piston ring inspection (GA engine)	EM-99
Piston ring inspection (SR engine)	EM-52
Piston to bore clearance (GA engine)	EM-100
Piston to bore clearance (SR engine)	EM-53
Power door lock	EL-131
Power door mirror	EL-139
Power steering fluid	MA-8
Power steering fluid level	ST-5
Power steering gear	ST-18
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch (GA engine)	EC-448
Power steering oil pressure switch inspection (GA engine)	EC-450
Power steering oil pressure switch inspection (SR engine)	EC-226
Power steering oil pressure switch (SR engine)	EC-224
Power steering oil pump	ST-24
Power steering system bleeding	ST-6
Power supply routing	EL-6
Power transistor & ignition coil (GA engine)	EC-411
Power transistor & ignition coil (SR engine)	EC-181
Power transistor inspection (GA engine)	EC-415
Power transistor inspection (SR engine)	EC-185
Power window	EL-123
Precautions (General)	GI-3
Pressure plate - See Clutch cover	CL-6
Pressure test (AT) (RE4F03V)	AT-134
Pressure test (AT) (RL4F03A)	AT-26

R

Rack retainer adjustment	ST-15	GI
Radiator fan - See Cooling fan (GA engine)	LC-23	
Radiator fan - See Cooling fan (SR engine)	LC-12	MA
Radiator (GA engine)	LC-23	
Radiator (SR engine)	LC-12	
Radio - See Audio	EL-151	EM
Rear air spoiler	BT-27	
Rear axle	RA-6	LC
Rear axle (disc brake type)	RA-6	
Rear axle (drum brake type)	RA-6	
Rear bumper	BT-7	EC
Rear combination lamp removal and installation	BT-26	
Rear disc brake	BR-24	FE
Rear door	BT-11	
Rear drum brake	BR-21	CL
Rear heated oxygen sensor heater inspection (GA engine)	EC-355	
Rear heated oxygen sensor heater inspection (SR engine)	EC-130	MT
Rear heated oxygen sensor (HO2S) (GA engine)	EC-351	AT
Rear heated oxygen sensor (HO2S) (SR engine)	EC-126	FA
Rear heated oxygen sensor (HO2S) heater (GA engine)	EC-355	
Rear heated oxygen sensor (HO2S) heater (SR engine)	EC-130	RA
Rear seat	BT-29	
Rear seat belt	RS-3	BR
Rear side window	BT-35	
Rear suspension	RA-8	ST
Rear window	BT-34	
Rear window defogger	EL-143	
Rear window signal (GA engine)	EC-454	RS
Refilling engine coolant (GA engine)	LC-23	
Refilling engine coolant (SR engine)	LC-12	
Refrigerant CFC12 precaution	HA-2	ET
Refrigerant connection precaution	HA-4	
Refrigerant discharging evacuating charging	HA-53	HA
Refrigerant general precaution	HA-3	
Refrigerant lines	HA-57	
Refrigeration cycle	HA-11	EL
Release bearing (clutch)	CL-5	
Resistor inspection (GA engine)	EC-415	
Resistor inspection (SR engine)	EC-185	
Reverse clutch	AT-226	
Reverse gear (MT) (RS5F31A)	MT-12	
Reverse gear (MT) (RS5F32V)	MT-32	
Reverse idler shaft (MT) (RS5F31A)	MT-12	
Reverse idler shaft (MT) (RS5F32V)	MT-32	

ALPHABETICAL INDEX

Reverse lamp switch.....	MT-7
Revolution sensor (AT).....	AT-130
Road wheel size.....	GI-37
Roof trim.....	BT-20
Room lamp.....	EL-74
Room lamp - See Interior lamp.....	EL-74
Rotor disc (front).....	FA-8

S

SAE J1930 terminology list.....	GI-43
Seal - See Exterior.....	BT-22
Seat belt, front - See Front seat belt.....	RS-3
Seat belt inspection.....	MA-30
Seat belt, rear - See Rear seat belt.....	RS-3
Seat, front - See Front seat.....	BT-28
Seat, rear - See Rear seat.....	BT-29
Self-diagnostic results (GA engine).....	EC-262
Self-diagnostic results (SR engine).....	EC-35
Shift control (MT) (RS5F31A).....	MT-13
Shift control (MT) (RS5F32V).....	MT-33
Shift fork (MT) (RS5F31A).....	MT-13
Shift fork (MT) (RS5F32V).....	MT-33
Shift lock system.....	AT-139
Shift schedule (RE4F03V).....	AT-59
Shift schedule (RL4F03A).....	AT-19
Shift solenoid valve (AT).....	AT-128
Shock absorber (front).....	FA-25
Shock absorber (rear).....	RA-10
Side trim.....	BT-15
Side window - See Rear side window.....	BT-35
Spark plug replacement (GA engine).....	MA-24
Spark plug replacement (SR engine).....	MA-15
Speedometer.....	EL-86
Speedometer (With tachometer).....	EL-80
Spiral cable.....	RS-13
Spot lamp.....	EL-74
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-9
SRS Trouble diagnoses.....	RS-21
SRS Wiring diagram.....	RS-24
Stabilizer bar (front).....	FA-26
Stall test (AT) (RE4F03V).....	AT-131
Stall test (AT) (RL4F03A).....	AT-24
Standardized relay.....	EL-4
Starter.....	EL-30
Starting system.....	EL-25
Steering gear and linkage inspection.....	MA-28
Steering gear oil level.....	MA-29
Steering knuckle.....	FA-8
Steering linkage (manual steering).....	ST-13
Steering linkage (power steering).....	ST-18
Steering switch.....	EL-44

Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force.....	ST-6
Stop lamp.....	EL-59
Striking rod (MT) (RS5F31A).....	MT-13
Striking rod (MT) (RS5F32V).....	MT-33
Strut (front).....	FA-25
Sun roof.....	BT-30
Sun roof, electric - See Electric sun roof.....	EL-140
Supplemental Restraint System.....	RS-9
Symbols and abbreviations.....	GI-8
Synchronizer (MT) (RS5F31A).....	MT-12
Synchronizer (MT) (RS5F32V).....	MT-32

T

Tachometer.....	EL-80
Tail lamp.....	EL-59
Temperature control cable and linkage adjustment.....	HA-50
Theft warning system.....	EL-193
Thermal protector.....	HA-49
Thermo control amp.....	HA-49
Thermostat (GA engine).....	LC-21
Thermostat (SR engine).....	LC-10
Three way catalyst (GA engine).....	EC-388
Three way catalyst (SR engine).....	EC-163
Three way catalyst precautions.....	GI-4
Throttle bodies (GA engine).....	EM-63
Throttle bodies (SR engine).....	EM-8
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment (GA engine).....	EC-288
Throttle position sensor adjustment (SR engine).....	EC-62
Throttle position sensor inspection (GA engine).....	EC-336
Throttle position sensor inspection (SR engine).....	EC-62, EC-111
Throttle position sensor (TPS) (GA engine).....	EC-332
Throttle position sensor (TPS) (SR engine).....	EC-107
Throttle position switch.....	AT-130
Throwout bearing - See Clutch release bearing.....	CL-5
Tie-rod (manual steering).....	ST-15
Tie-rod (power steering).....	ST-21
Tie-rod ball joints (manual steering).....	ST-15
Tie-rod ball joints (power steering).....	ST-21
Tightening torque of standard bolts.....	GI-42
Timing chain (GA engine).....	EM-69
Timing chain (SR engine).....	EM-16
Tire rotation.....	MA-28
Tire size.....	GI-37

ALPHABETICAL INDEX

Torque converter clutch solenoid valve (RE4F03V)	AT-128
Torque converter clutch solenoid valve (RL4F03A)	AT-34
Torque converter installation	AT-156
Tow truck towing	GI-40
Transmission case (MT) (RS5F31A)	MT-11
Transmission case (MT) (RS5F32V)	MT-31
Transverse link (front)	FA-27
Tread-FR&RR (Dimensions)	GI-37
Trim	BT-15
Trunk lid	BT-7
Trunk lid finisher	BT-25
Trunk lid opener - See Trunk lid	BT-7
Trunk room lamp	EL-74
Trunk room trim	BT-21
Turn signal lamp	EL-63
Two trip detection logic (GA engine)	EC-260
Two trip detection logic (SR engine)	EC-33
Two-pole lift	GI-40

U

Under body	BT-40
------------------	-------

V

Vacuum hose (brake system)	BR-16
Vacuum hose drawing (ECCS) (GA engine)	EC-239
Vacuum hose drawing (ECCS) (SR engine)	EC-13
Valve clearance (GA engine)	EM-90
Valve clearance (SR engine)	EM-38
Valve guide inspection (GA engine)	EM-85
Valve guide inspection (SR engine)	EM-38
Valve seat inspection (GA engine)	EM-87
Valve seat inspection (SR engine)	EM-39
Valve spring inspection (GA engine)	EM-88
Valve spring inspection (SR engine)	EM-40
Valve timing control solenoid valve (GA engine)	EC-404
Valve timing control (VTC) (GA engine)	EC-404
Valve timing control (VTC) valve inspection (GA engine)	EC-410
Vapor lines inspection (GA engine)	MA-24
Vapor lines inspection (SR engine)	MA-17
Vehicle identification number	GI-35
Vehicle Recovery. (Freeing a stuck vehicle)	GI-41
Vehicle speed sensor (VSS) (GA engine)	EC-391

Vehicle speed sensor (VSS) (SR engine)	EC-166
Viscosity number (SAE)	MA-8
Viscous coupling (FF AT)	AT-268
Viscous coupling (FF MT) (RS5F32V)	MT-46
VTC solenoid valve inspection (GA engine)	EC-410

W

Warning chime	EL-91
Warning lamps	EL-91
Washer, front	EL-114
Water cock control rod adjustment	HA-50
Water pump (GA engine)	LC-20
Water pump (SR engine)	LC-9
Water temperature gauge	EL-86
Water temperature gauge (With tachometer)	EL-80
Weatherstrip - See Exterior	BT-22
Wheel alignment (rear)	RA-5
Wheel balance	MA-28
Wheel bearing (rear)	RA-4
Wheel hub and steering knuckle	FA-8
Wheel hub (front)	FA-8
Wheel hub (rear)	RA-6
Wheel sensors (ABS)	BR-36
Wheel size	GI-37
Wheelarch height	FA-5
Wheelbase (Dimensions)	GI-37
Wide open & closed throttle position (CTP) switch (GA engine)	EC-332
Wide open & closed throttle position (CTP) switch (SR engine)	EC-107
Width (Dimensions)	GI-37
Window, door (Front)	BT-9
Window, door (Rear)	BT-11
Window, opera _ See Opera window	BT-35
Window, rear - See Rear window	BT-34
Window, rear side - See Rear side window	BT-35
Window, side - See Rear side window	BT-35
Windshield	BT-33
Windshield washer - See Front washer	EL-114
Windshield wiper - See Front wiper	EL-114
Wiper and washer	EL-114
Wiper, front	EL-114
Withdrawal lever (clutch)	CL-5
Wrist pin - See Piston pin inspection (GA engine)	EM-98
Wrist pin - See Piston pin inspection (SR engine)	EM-51

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX