

ALPHABETICAL INDEX

SECTION	IDX
---------	-----

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram (GA).....EC-472
AAC/V - Wiring diagram (SR).....EC-170
ABS - Wiring diagramBR-47
ABS (anti-lock brake system).....BR-36
Absolute pressure sensorEC-342
A/C - Wiring diagram.....HA-36
A/C air flow.....HA-14
A/C component layout.....HA-12
A/C compressor clutch removal and
installationHA-61
A/C compressor mounting.....HA-60
A/C compressor precaution.....HA-5
A/C compressor special service tool.....HA-6
A/C control linkage adjustment.....HA-49
A/C control operationHA-13
A/C diagnostic work flow.....HA-15
A/C harness layout.....HA-31
A/C HFC134a (R134a) system precaution.....HA-2
A/C HFC134a (R134a) system service
procedureHA-54
A/C HFC134a (R134a) system service tools.....HA-7
A/C HFC134a system service equipment
precautionHA-9
A/C lubricant (R134a).....HA-56
A/C lubrication oilHA-56
A/C operational check.....HA-16
A/C performance chart.....HA-26
A/C performance test diagnoses.....HA-24
A/C pressure switchHA-11
A/C relay.....HA-49
A/C service data specification.....HA-67
A/C switchHA-48
A/C symptom chart.....HA-18
A/C trouble diagnoses.....HA-15
Accelerator control system.....FE-2
Accelerator wire adjustment.....FE-2
Air bag.....RS-14
Air bag disposal.....RS-18
Air bag precautionsGI-2
Air bleeding for brake systemBR-5
Air cleaner filter replacement (GA)MA-22
Air cleaner filter replacement (SR).....MA-14
Air conditioner - wiring diagram.....HA-36
Air conditioner cut control (GA).....EC-254
Air conditioner cut control (SR).....EC-20
Air conditioning - See A/C.....HA-2
Air flow meter - See Mass air flow sensor
(GA).....EC-336
Air flow meter - See Mass air flow sensor
(SR).....EC-85
Air mix door control linkage adjustment.....HA-50

Air spoiler, rear.....BT-27
AIRREG - Wiring diagram.....EC-233
Alternator.....EL-38
Angular tightening application.....EM-2
AntennaEL-144
Anti-lock brake system - See ABS.....BR-36
Anti-lock brake system - Wiring diagram.....BR-47
AP/SEN - Wiring diagramEC-345
ASCD - Wiring diagram.....EL-152
ASCD (automatic speed control device).....EL-148
A/T control unit.....AT-79
A/T diagnosis communication lineEC-200
A/T fluid temperature sensor.....AT-88
A/T, RE - Wiring diagramAT-17
A/T removal and installation.....AT-177
A/T, RL - Wiring diagram.....AT-11
A/T self-diagnoses.....AT-47
A/T shift lock system - Wiring diagram
(RE4F03V).....AT-163
A/T shift lock system - Wiring diagram
(RL4F03A).....AT-155
A/T shift lock system (RE4F03V).....AT-161
A/T shift lock system (RL4F03A)AT-154
A/T trouble diagnosesAT-57
A/T trouble diagnoses (RE4F03V)AT-62
A/T trouble diagnoses (RL4F03A)AT-29
ATDIAG - Wiring diagramEC-201
AudioEL-141
AUDIO - Wiring diagram.....EL-142
Audio and A/C control removal and
installation - See Instrument panel.....BT-12
Automatic speed control system - See ASCD..EL-148
Automatic transaxle numberGI-36
Automatic transmission fluid replacementMA-28
Auxiliary air control (AAC) (GA).....EC-469
Auxiliary air control (AAC) (SR).....EC-167

B

BACK/L - Wiring diagram.....EL-59
Back-up lampEL-59
Back-up lamp switch (M/T)MT-7, MT-11
Ball joint front axle.....FA-27
Battery.....EL-21
Baulk ring (M/T) (RS5F31A)MT-12
Baulk ring (M/T) (RS5F32V)MT-32
Blower motorHA-48
Blower resistor.....HA-48
Board-on lift.....GI-39
Body alignment.....BT-38
Boring/honing cylinder block (GA)EM-101
Boring/honing cylinder block (SR).....EM-54
BPT valve (GA)EC-431

ALPHABETICAL INDEX

BPT valve (SR)	EC-159
Brake booster	BR-16
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-4
Brake fluid level	MA-28
Brake fluid level and line check	BR-4
Brake hydraulic line	BR-6
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake lining temporary checking	MA-29
Brake master cylinder	BR-12
Brake pedal	BR-10
Bumper, front	BT-5
Bumper, rear	BT-7
BYPASS/V - Wiring diagram	EC-521

C

Camshaft inspection (GA)	EM-83
Camshaft inspection (SR)	EM-36
Camshaft position sensor (CMPS) (GA)	EC-418
Camshaft position sensor (CMPS) (SR)	EC-143
Canister - See EVAP canister (GA)	EC-255
Canister - See EVAP canister (SR)	EC-22
CANI/V - Wiring diagram	EC-451
CHARGE - Wiring diagram	EL-36
Charging system	EL-35
Chassis and body maintenance	MA-26
Check connector for ECCS checker box	EC-290
CHIME - Wiring diagram	EL-111
Cigarette lighter	EL-131
Circuit breaker	EL-16
CKPS - Wiring diagram (GA)	EC-415
CKPS - Wiring diagram (SR)	EC-140
Clearance lamp	EL-60
Closed loop control (GA)	EC-376
Closed loop control (SR)	EC-116
Closed throttle position switch	EC-475
Clutch cable	CL-3
Clutch cover	CL-6
Clutch disc	CL-6
Clutch pedal	CL-3
Clutch release bearing	CL-5
Clutch withdrawal lever	CL-5
CMPS - Wiring diagram (GA)	EC-420
CMPS - Wiring diagram (SR)	EC-145
Coil spring (front)	FA-25
Coil spring (rear)	RA-10
Collision diagnosis	RS-42
Combination lamp, rear, removal and installation	BT-26
Combination meter (needle type) (with tachometer)	EL-82

Combination meter (needle type) (without tachometer)	EL-89	
Combination meter removal and installation - See Instrument panel	BT-12	GI
Combination meter (with tachometer)	EL-82	
Combination meter (without tachometer)	EL-89	MA
Combination switch	EL-42	
Compression pressure (GA)	EM-66	EM
Compression pressure (SR)	EM-10	EM
Compressor clutch removal and installation	HA-61	
Compressor mounting	HA-60	LC
Compressor precaution	HA-5	LC
Compressor special service tool	HA-6	
Connecting rod bearing clearance (GA)	EM-103	EC
Connecting rod bearing clearance (SR)	EM-56	
Connecting rod bushing clearance (GA)	EM-104	FE
Connecting rod bushing clearance (SR)	EM-57	FE
Connecting rod (GA)	EM-99	
Connecting rod (SR)	EM-52	CL
Console box - See Instrument panel	BT-12	CL
CONSULT for ABS	BR-55	
CONSULT for ECCS (GA)	EC-290	MT
CONSULT for ECCS (SR)	EC-45	MT
CONSULT general information	GI-33	AT
Control lever (M/T)	MT-10	AT
Control valve (A/T), (RE4F03V)	AT-226	
Control valve (A/T), (RL4F03A)	AT-218	FA
Converter housing installation	AT-178	FA
Coolant mixture ratio	MA-9	
Coolant replacement (GA)	MA-19	RA
Coolant replacement (SR)	MA-11	RA
COOL/F - Wiring diagram (GA)	EC-547	
COOL/F - Wiring diagram (SR)	EC-207	BR
Cooling circuit (GA)	LC-17	
Cooling circuit (SR)	LC-8	ST
Cooling fan control (GA)	EC-544	ST
Cooling fan control (SR)	EC-203	
Cooling fan (GA)	LC-23	PS
Cooling fan (SR)	LC-12	PS
Cooling fan motor	EC-216, HA-31	
Cooling fan relay	HA-31	BT
Cooling fan relay (GA)	EC-556	
Cooling fan relay (SR)	EC-216	HA
Cornering lamp	EL-68	HA
Coupling sleeve (M/T) (RS5F31A)	MT-12	
Coupling sleeve (M/T) (RS5F32V)	MT-32	EL
Courtesy lamp	EL-78	
Crank angle sensor built into distributor - See Camshaft position sensor (GA)	EC-418	INDEX
Crank angle sensor built into distributor - See Camshaft position sensor (SR)	EC-143	
Crankcase emission control system - See positive crankcase ventilation (GA)	EC-259	

ALPHABETICAL INDEX

Crankcase emission control system - See
 positive crankcase ventilation (SR) EC-24
 Crankcase ventilation system - See positive
 crankcase ventilation (GA) EC-259
 Crankcase ventilation system - See positive
 crankcase ventilation (SR) EC-24
 Crankshaft (GA) EM-101
 Crankshaft (SR) EM-54
 Crankshaft position sensor (OBD) cog
 chipping (GA) EC-504
 Crankshaft position sensor (OBD) cog
 chipping (SR) EC-186
 Crankshaft position sensor (OBD) (GA) EC-413
 Crankshaft position sensor (OBD) (SR) EC-138
 Cruise control - See ASCD EL-148
 Cylinder block boring (GA) EM-101
 Cylinder block boring (SR) EM-54
 Cylinder block (GA) EM-97
 Cylinder block (SR) EM-50
 Cylinder head bolt tightening (GA) EM-75
 Cylinder head bolt tightening (SR) EM-24
 Cylinder head (GA) EM-82
 Cylinder head (SR) EM-32

D

Data link connector for Consult (GA) EC-290
 Data link connector for Consult (SR) EC-45
 Daytime light system EL-50
 Daytime running light - See Daytime light
 system EL-50
 DEF - Wiring diagram EL-134
 Detonation sensor - See Knock sensor (GA) ... EC-409
 Detonation sensor - See Knock sensor (SR) ... EC-135
 Diagnosis sensor unit RS-13
 Diagnostic trouble code (DTC) for ECCS
 OBD system EC-34
 Differential gear (FF M/T) (RS5F31A) MT-22
 Differential gear (FF M/T) (RS5F32V) MT-46
 Differential gear (FF A/T) (RE4F03V) AT-290
 Differential gear (FF A/T) (RL4F03A) AT-286
 Dimensions GI-37
 Distributor (GA) EC-253
 Distributor (SR) EC-19
 Distributor ignition (DI) system (GA) EC-253
 Distributor ignition (DI) system (SR) EC-19
 D/LOCK - Wiring diagram EL-181
 Dome light - See Interior lamp EL-78
 Door, front BT-9
 Door glass (front) BT-9
 Door glass (rear) BT-11
 Door lock (front) BT-9
 Door lock (rear) BT-11

Door mirror BT-37
 Door, rear BT-11
 Door trim BT-18
 Drive belt inspection (GA) MA-18
 Drive belt inspection (SR) MA-10
 Drive plate runout (GA) EM-105
 Drive plate runout (SR) EM-58
 Drive shaft (front) FA-13
 Dropping resistor (A/T) AT-119
 DTRL - Wiring diagram EL-53
 Dual pressure switch HA-49

E

ECCS basic inspection (GA) EC-310
 ECCS basic inspection (SR) EC-63
 ECCS circuit diagram (GA) EC-243
 ECCS circuit diagram (SR) EC-9
 ECCS component parts location (GA) EC-245
 ECCS component parts location (SR) EC-11
 ECCS fail-safe system (GA) EC-314
 ECCS fail-safe system (SR) EC-67
 ECCS on board diagnostic system (GA) EC-271
 ECCS on board diagnostic system (SR) EC-34
 ECCS symptom matrix chart (GA) EC-315
 ECCS symptom matrix chart (SR) EC-68
 ECCS system diagram and chart (GA) EC-244
 ECCS system diagram and chart (SR) EC-10
 ECM input/output signal (GA) EC-323
 ECM input/output signal (SR) EC-75
 ECTS - Wiring diagram (GA) EC-357
 ECTS - Wiring diagram (SR) EC-97
 EGR control (EGRC) - BPT valve (GA) EC-432
 EGR control (EGRC) - BPT valve (SR) EC-158
 EGR control (EGRC) - solenoid valve (GA) EC-509
 EGR control (EGRC) - solenoid valve (SR) EC-191
 EGR control valve (GA) EC-430
 EGR control valve (SR) EC-156
 EGR temperature sensor (GA) EC-514
 EGR temperature sensor (SR) EC-196
 EGR valve and EVAP canister purge control
 solenoid valve EC-195
 EGRC1 - Wiring diagram (GA) EC-428
 EGRC1 - Wiring diagram (SR) EC-153
 EGRC/V - Wiring diagram (GA) EC-511
 EGRC/V - Wiring diagram (SR) EC-193
 EGR/TS - Wiring diagram (GA) EC-516
 EGR/TS - Wiring diagram (SR) EC-198
 Electric sun roof EL-145
 Electrical diagnoses GI-18
 Electrical load signal circuit EC-577
 Electrical units location EL-232
 Electronic ignition system (GA) EC-253

ALPHABETICAL INDEX

Electronic ignition system (SR).....EC-19
 Engine compartment.....BT-38
 Engine control circuit diagram (GA).....EC-243
 Engine control circuit diagram (SR).....EC-9
 Engine control module (ECM) (GA).....EC-479
 Engine control module (ECM) (SR).....EC-172
 Engine coolant temperature sensor (ECTS)
 (GA).....EC-355
 Engine coolant temperature sensor (ECTS)
 (SR).....EC-96
 Engine oil filter replacement (GA).....MA-23
 Engine oil filter replacement (SR).....MA-15
 Engine oil precautions.....GI-5
 Engine oil replacement (GA).....MA-23
 Engine oil replacement (SR).....MA-14
 Engine outer component parts (GA).....EM-62
 Engine outer component parts (SR).....EM-7
 Engine removal (GA).....EM-93
 Engine removal (SR).....EM-46
 Engine room - See Engine compartment.....BT-38
 Engine serial number.....GI-36
 Engine trouble diagnoses (GA).....EC-306
 Engine trouble diagnoses (SR).....EC-59
 EVAP canister (GA).....EC-255
 EVAP canister (SR).....EC-22
 EVAP canister purge control solenoid valve.....EC-191
 EVAP canister purge control valve.....EC-255, EC-447
 EVAP canister purge volume control
 valve.....EC-255, EC-524
 EVAP canister vent control valve.....EC-455
 EVAP control system pressure sensor.....EC-460
 EVAP control system purge flow monitoring
 diagnosis.....EC-531
 EVAP control system (small leak) diagnosis.....EC-437
 EVAP vapor lines inspection (GA).....MA-25
 EVAP vapor lines inspection (SR).....MA-17
 Evaporative emission (EVAP) system (GA).....EC-255
 Evaporative emission (EVAP) system (SR).....EC-22
 Exhaust gas recirculation (EGR) valve (GA).....EC-424
 Exhaust gas recirculation (EGR) valve (SR).....EC-149
 Exhaust system.....FE-6
 Exhaust system inspection.....MA-26
 Exterior.....BT-22
 Exterior lamp.....EL-59

F

Fan switch.....HA-48
 Fast idle.....EC-262
 Fast idle cam (FIC).....EC-262
 Fast idle cam (FIC) inspection and
 adjustment.....EC-262
 F/FOG - Wiring diagram.....EL-63

FICD - Wiring diagram (GA).....EC-573
 FICD - Wiring diagram (SR).....EC-237
 Final drive (FF M/T) (RS5F31A).....MT-22
 Final drive (FF M/T) (RS5F32V).....MT-46
 Final drive (FF A/T) (RE4F03V).....AT-290
 Final drive (FF A/T) (RL4F03A).....AT-286
 Finisher, interior - See Trim.....BT-15
 Finisher, trunk lid.....BT-25
 Floor trim.....BT-15
 Flow charts.....GI-30
 Fluid temperature sensor (A/T).....AT-88
 Fluids.....MA-8
 Flywheel runout (GA).....EM-105
 Flywheel runout (SR).....EM-58
 Fog lamp, front.....EL-62
 Fog lamp, front, removal and installation.....BT-5
 Fork rod (M/T) (RS5F31A).....MT-13
 Fork rod (M/T) (RS5F32V).....MT-33
 Forward clutch.....AT-257
 F/PUMP - Wiring diagram (GA).....EC-566
 F/PUMP - Wiring diagram (SR).....EC-225
 Freeze frame data.....EC-36, EC-273, EC-293
 FRO2 - Wiring diagram (GA).....EC-373
 FRO2 - Wiring diagram (SR).....EC-113
 FRO2/H - Wiring diagram (GA).....EC-379
 FRO2/H - Wiring diagram (SR).....EC-119
 Front axle.....FA-8
 Front bumper.....BT-5
 Front disc brake.....BR-19
 Front door.....BT-9
 Front fog lamp.....EL-62
 Front fog lamp removal and installation.....BT-5
 Front heated oxygen sensor (HO2S) (GA).....EC-371
 Front heated oxygen sensor (HO2S) (SR).....EC-111
 Front heated oxygen sensor (HO2S) heater
 (GA).....EC-377
 Front heated oxygen sensor (HO2S) heater
 (SR).....EC-117
 Front heated oxygen sensor (HO2S) monitor.....EC-285
 Front heated oxygen sensor (HO2S) monitor
 (GA).....EC-372
 Front heated oxygen sensor (HO2S) monitor
 (SR).....EC-112
 Front oxygen sensor (O2S) (GA).....EC-371
 Front oxygen sensor (O2S) (SR).....EC-111
 Front oxygen sensor (O2S) monitor (GA).....EC-282
 Front oxygen sensor (O2S) monitor (SR).....EC-36
 Front passenger air bag.....RS-16
 Front seat.....BT-28
 Front seat belt.....RS-3
 Front suspension.....FA-24
 Front washer.....EL-122
 Front wiper.....EL-122
 FUEL - Wiring diagram (GA).....EC-393

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

FUEL - Wiring diagram (SR).....	EC-128
Fuel check valve	EC-23
Fuel cut control (at no load & high engine speed) (GA)	EC-254
Fuel cut control (at no load & high engine speed) (SR).....	EC-21
Fuel filler lid	BT-7
Fuel filter replacement (GA).....	MA-22
Fuel filter replacement (SR).....	MA-13
Fuel gauge (with tachometer)	EL-83
Fuel gauge (without tachometer)	EL-90
Fuel injection system (GA).....	EC-391
Fuel injection system (SR).....	EC-126
Fuel injector (GA)	EC-557
Fuel injector (SR)	EC-217
Fuel line inspection (GA).....	MA-21
Fuel line inspection (SR).....	MA-13
Fuel precautions.....	GI-6
Fuel pressure check (GA).....	EC-260
Fuel pressure check (SR)	EC-25
Fuel pressure regulator	EC-261
Fuel pressure release (GA).....	EC-260
Fuel pressure release (SR).....	EC-25
Fuel pump and gauge	FE-5
Fuel pump (GA).....	EC-564
Fuel pump (SR).....	EC-223
Fuel pump relay (GA).....	EC-568
Fuel pump relay (SR).....	EC-228
Fuel system.....	FE-3
Fuel tank vacuum relief valve	EC-23
Fuse.....	EL-16
Fuse block.....	Foldout page
Fusible link	EL-16

G

Garage jack and safety stand.....	GI-39
Gauges (with tachometer).....	EL-81
Gauges (without tachometer).....	EL-88
Gears (M/T) (RS5F31A).....	MT-12
Gears (M/T) (RS5F32V).....	MT-32
Generator	EL-38
Generator - See Alternator.....	EL-38
Generic scan tool (GST) (GA)	EC-304
Generic scan tool (GST) (SR).....	EC-57
Glass (front door)	BT-9
Glass (rear door)	BT-11
Governor valve assembly (RL4F03A).....	AT-43
Grille - See Exterior.....	BT-5
Ground distribution.....	EL-17

H

Harness connector	EL-3
Harness layout	EL-233
Hazard warning lamp	EL-65
Headlamp	EL-47
Headlamp aiming control	EL-58
Headlining - See Roof trim.....	BT-20
Heated oxygen sensor (HO2S) (front) (GA)	EC-371
Heated oxygen sensor (HO2S) (front) (SR)	EC-111
Heated oxygen sensor (HO2S) heater (front) (GA).....	EC-377
Heated oxygen sensor (HO2S) heater (front) (SR).....	EC-117
Heated oxygen sensor (HO2S) heater (rear) (GA).....	EC-386
Heated oxygen sensor (HO2S) heater (rear) (SR).....	EC-125
Heated oxygen sensor (HO2S) monitor.....	EC-285
Heated oxygen sensor monitor (HO2S) (front).....	EC-285
Heated oxygen sensor monitor (HO2S) (front) (GA).....	EC-372
Heated oxygen sensor monitor (HO2S) (front) (SR)	EC-112
Heated oxygen sensor (rear) (GA)	EC-381
Heated oxygen sensor (rear) (SR).....	EC-121
HEATER - Wiring diagram	HA-35
Heater system - Wiring diagram	HA-35
Height (Dimensions).....	GI-37
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-54
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution	HA-9
High clutch.....	AT-252
H/LAMP - Wiring diagram	EL-48
Hood	BT-5
Horn.....	EL-131
HORN - Wiring diagram.....	EL-131
How to erase DTC for ECCS OBD system (GA).....	EC-280
How to erase DTC for ECCS OBD system (SR).....	EC-34
Hydraulic lash adjuster inspection	EM-41

I

IACV - air regulator	EC-236
IACV-AAC valve inspection (GA)	EC-474
IACV-AAC valve inspection (SR)	EC-171
IACV-FICD solenoid valve (GA).....	EC-573

ALPHABETICAL INDEX

IACV-FICD solenoid valve (SR).....	EC-237
IATS - Wiring diagram (GA).....	EC-352
IATS - Wiring diagram (SR).....	EC-93
Identification plate.....	GI-36
Idle air control (IAC) system (GA).....	EC-469
Idle air control (IAC) system (SR).....	EC-167
Idle air control valve (IACV) - air regulator.....	EC-233
Idle air control valve (IACV) (GA).....	EC-469
Idle air control valve (IACV) (SR).....	EC-167
Idle mixture ratio (GA).....	EC-264
Idle mixture ratio (SR).....	EC-27
Idle speed (GA).....	EC-264
Idle speed (SR).....	EC-27
Ignition coil (GA).....	EC-503
Ignition coil (SR).....	EC-185
Ignition control system (GA).....	EC-253
Ignition control system (SR).....	EC-19
Ignition timing (GA).....	EC-264
Ignition timing (SR).....	EC-27
Ignition wire inspection (GA).....	EC-408
Ignition wire inspection (SR).....	EC-134
IGN/SG - Wiring diagram (GA).....	EC-500
IGN/SG - Wiring diagram (SR).....	EC-182
ILL - Wiring diagram.....	EL-74
Illumination.....	EL-72
Inhibitor switch (GA).....	EC-481
Inhibitor switch (SR).....	EC-174
Inhibitor switch (RE4F03V).....	AT-87
Inhibitor switch (RL4F03A).....	AT-39
INJECT - Wiring diagram (GA).....	EC-557
INJECT - Wiring diagram (SR).....	EC-217
Injector (GA).....	EC-560
Injector (SR).....	EC-219
Injector removal and installation (GA).....	EC-261
Injector removal and installation (SR).....	EC-26
Input shaft (RS5F31A).....	MT-16
Input shaft (RS5F32V).....	MT-37
Instrument panel.....	BT-12
Intake air temperature sensor (GA).....	EC-349
Intake air temperature sensor (SR).....	EC-91
Intake door control linkage adjustment.....	HA-50
Intake door motor.....	HA-50
Intake manifold (GA).....	EM-62
Intake manifold (SR).....	EM-7
Intake valve timing control.....	EC-491
Intake valve timing control solenoid valve.....	EC-491
Interior.....	BT-15
Interior lamp.....	EL-72
Interior lamp on-off control.....	EL-76
INT/L - Wiring diagram.....	EL-78
IVC - Wiring diagram.....	EC-495

J

Jacking points.....	GI-38
Joint connector (J/C).....	Foldout page

K

Keyless entry system - See Multi-remote control system.....	EL-187
Knock sensor (KS) (GA).....	EC-409
Knock sensor (KS) (SR).....	EC-135
Knuckle spindle.....	FA-8
KS - Wiring diagram (GA).....	EC-410
KS - Wiring diagram (SR).....	EC-136

L

Length (Dimensions).....	GI-37
License lamp.....	EL-60
Lifting points.....	GI-38
Line pressure solenoid valve.....	AT-116
Line pressure test (A/T) (RE4F03V).....	AT-152
Line pressure test (A/T) (RL4F03A).....	AT-42
Liquid gasket application.....	EM-2
LKUP - Wiring diagram.....	EC-541
LOAD - Wiring diagram.....	EC-577
Location of electrical units.....	EL-231
Lock, door (front).....	BT-9
Lock, door (rear).....	BT-11
Low and reverse brake.....	AT-263
Lubricant (R134a) A/C.....	HA-56
Lubricants.....	MA-8
Lubrication circuit (GA).....	LC-13
Lubrication circuit (SR).....	LC-4
Lubrication oil A/C.....	HA-56
Lubrication-locks, hinges and hood latches.....	MA-31
Luggage compartment trim.....	BT-21
Luggage room lamp.....	EL-76

M

MAFS - Wiring diagram (GA).....	EC-339
MAFS - Wiring diagram (SR).....	EC-88
Magnet clutch.....	HA-61
MAIN - Wiring diagram (GA).....	EC-332
MAIN - Wiring diagram (SR).....	EC-81
Main drive gear (M/T) (RS5F31A).....	MT-12
Main drive gear (M/T) (RS5F32V).....	MT-32
Mainshaft (M/T) (RS5F31A).....	MT-18
Mainshaft (M/T) (RS5F32V).....	MT-40

ALPHABETICAL INDEX

Maintenance MA-3
Maintenance (engine) (GA) MA-18
Maintenance (engine) (SR) MA-10
Malfunction indicator lamp (MIL) (GA) EC-282
Malfunction indicator lamp (MIL) (SR) EC-36
Manual steering gear ST-16
Manual transaxle number GI-36
Manual transmission oil replacement MA-26
MAP/BARO switch solenoid valve EC-485
Mass air flow sensor (MAFS) (GA) EC-336
Mass air flow sensor (MAFS) (SR) EC-85
Master cylinder (brake) BR-12
METER - Wiring diagram EL-83
Meter (with tachometer) EL-81
Meter (without tachometer) EL-88
MIL & Data link connectors circuit (GA) EC-581
MIL & Data link connectors circuit (SR) EC-241
MIL/DL Wiring diagram (GA) EC-581
MIL/DL Wiring diagram (SR) EC-241
MIRROR - Wiring diagram EL-147
Mirror, door BT-37
Mirror, out side BT-37
Misfire (GA) EC-405
Misfire (SR) EC-131
Mode door control linkage adjustment HA-49
Model variation GI-34
Molding - See Exterior BT-22
M/T overhaul (RS5F31A) MT-11
M/T overhaul (RS5F32V) MT-31
M/T removal and installation MT-8
Mud guard - See Exterior BT-26
MULTI - Wiring diagram EL-190
Multiport fuel injection (MFI) system (GA) EC-250
Multiport fuel injection (MFI) system (SR) EC-17
Multiport fuel injection precautions GI-6
Multiport fuel injection system inspection EC-126
Multi-remote control system EL-187

N

Neutral position switch (GA) EC-482
Neutral position switch (M/T) MT-7
Neutral position switch (SR) EC-175

O

Oil change (capacity) MA-8
Oil change (interval) MA-5
Oil pan (engine) (GA) EM-67
Oil pan (engine) (SR) EM-11
Oil pressure (GA) LC-14
Oil pressure (SR) LC-4

Oil pressure relief valve (GA) LC-16
Oil pump (A/T) AT-214
Oil pump (GA) LC-15
Oil pump (SR) LC-5
Oil pump regulator valve (GA) LC-15
Oil pump regulator valve (SR) LC-7
Oil seal replacement (engine) (GA) EM-80
Oil seal replacement (engine) (SR) EM-30
Opera window BT-35
Out side mirror BT-37
Overdrive control switch (RE4F03V) AT-87
Overdrive control switch (RL4F03A) AT-38
Overrun clutch AT-257
Overrun clutch solenoid valve AT-116
Oversize piston (GA) EM-101
Oversize piston (SR) EM-54
Oxygen sensor monitor (O2S) (front) EC-285
Oxygen sensor monitor (O2S) (front) (GA) EC-372
Oxygen sensor monitor (O2S) (front) (SR) EC-112
Oxygen sensor (O2S) (front) (GA) EC-371
Oxygen sensor (O2S) (front) (SR) EC-111

P

Parking brake control BR-34
Parking lamp EL-65
Park/Neutral position switch (GA) EC-481
Park/Neutral position switch (SR) EC-174
PCV (positive crankcase ventilation) (GA) EC-259
PCV (positive crankcase ventilation) (SR) EC-24
PGC/V - Wiring diagram EC-528
Pilot bushing replacement EM-58
Piston assembly (GA) EM-105
Piston assembly (SR) EM-59
Piston pin inspection (GA) EM-98
Piston pin inspection (SR) EM-51
Piston ring inspection (GA) EM-99
Piston ring inspection (SR) EM-52
Piston to bore clearance (GA) EM-100
Piston to bore clearance (SR) EM-53
PNP/SW - Wiring diagram (GA) EC-483
PNP/SW - Wiring diagram (SR) EC-176
POWER - Wiring diagram EL-7
Power door lock EL-179
Power door mirror EL-147
Power steering fluid level ST-5, MA-30
Power steering gear ST-21
Power steering hydraulic pressure ST-8
Power steering oil pressure switch (GA) EC-569
Power steering oil pressure switch (SR) EC-229
Power steering oil pump ST-26
Power steering system bleeding ST-6
Power supply routing EL-6

ALPHABETICAL INDEX

Power transistor & ignition coil (GA).....	EC-498
Power transistor & ignition coil (SR).....	EC-180
Power transistor (GA).....	EC-503
Power transistor (SR).....	EC-185
Power window.....	EL-172
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-462
Pressure plate - See Clutch cover.....	CL-6
Pressure test (A/T) (RE4F03V).....	AT-152
Pressure test (A/T) (RL4F03A).....	AT-42
PST/SW - Wiring diagram (GA).....	EC-569
PST/SW - Wiring diagram (SR).....	EC-229

R

Rack retainer adjustment.....	ST-18
Radiator fan - See Cooling fan (GA).....	LC-23
Radiator fan - See Cooling fan (SR).....	LC-12
Radiator (GA).....	LC-23
Radiator (SR).....	LC-12
Radio - See Audio.....	EL-141
Rear air spoiler.....	BT-27
Rear axle.....	RA-6
Rear axle (disc brake type).....	RA-6
Rear axle (drum brake type).....	RA-6
Rear bumper.....	BT-7
Rear combination lamp removal and installation.....	BT-26
Rear disc brake.....	BR-26
Rear door.....	BT-11
Rear drum brake.....	BR-23
Rear heated oxygen sensor (HO2S) (GA).....	EC-381
Rear heated oxygen sensor (HO2S) (SR).....	EC-121
Rear heated oxygen sensor (HO2S) heater (GA).....	EC-386
Rear heated oxygen sensor (HO2S) heater (SR).....	EC-125
Rear seat.....	BT-29
Rear seat belt.....	RS-3
Rear side window.....	BT-35
Rear suspension.....	RA-8
Rear window.....	BT-34
Rear window defogger.....	EL-132
Rear window signal.....	EC-577
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-4
Refrigerant discharging evacuating charging.....	HA-54
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-58
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-5
Resistor (GA).....	EC-503
Resistor (SR).....	EC-185

Reverse clutch.....	AT-248
Reverse gear (M/T) (RS5F31A).....	MT-12
Reverse gear (M/T) (RS5F32V).....	MT-32
Reverse idler shaft (M/T) (RS5F31A).....	MT-12
Reverse idler shaft (M/T) (RS5F32V).....	MT-32
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-7
Revolution sensor (A/T).....	AT-91
Road wheel size.....	GI-37
Roof trim.....	BT-20
Room lamp.....	EL-76
Room lamp - See Interior lamp.....	EL-76
Rotor disc (front).....	FA-8
RRO2 - Wiring diagram (GA).....	EC-384
RRO2 - Wiring diagram (SR).....	EC-123
RRO2/H - Wiring diagram.....	EC-388

S

SAE J1930 terminology list.....	GI-43
SAE J1979 - Mode 1 ~ 7.....	EC-271, EC-305
Seal - See Exterior.....	BT-22
Seat belt, front.....	RS-3
Seat belt inspection.....	MA-31
Seat belt, rear.....	RS-3
Seat, front.....	BT-28
Seat, rear.....	BT-29
Self-diagnostic results (GA).....	EC-282
Self-diagnostic results (SR).....	EC-36
SFT, RE - Wiring diagram.....	AT-163
SFT, RL - Wiring diagram.....	AT-155
SHIFT - Wiring diagram (RE4F03V).....	AT-163
SHIFT - Wiring diagram (RL4F03A).....	AT-155
Shift control (M/T) (RS5F31A).....	MT-13
Shift control (M/T) (RS5F32V).....	MT-33
Shift fork (M/T) (RS5F31A).....	MT-13
Shift fork (M/T) (RS5F32V).....	MT-33
Shift lock system (RE4F03V).....	AT-161
Shift lock system (RL4F03A).....	AT-154
Shift schedule (RE4F03V).....	AT-73
Shift schedule (RL4F03A).....	AT-31
Shift solenoid valve (A/T).....	AT-116
Shock absorber (front).....	FA-25
Shock absorber (rear).....	RA-10
Side trim.....	BT-15
Side window - See Rear side window.....	BT-35
Smart entrance control unit.....	EL-230
SMJ (super multiple junction).....	Foldout page
Spare tire size.....	GI-37
Spark plug replacement (GA).....	MA-24
Spark plug replacement (SR).....	MA-15
Speedometer (with tachometer).....	EL-83
Speedometer (without tachometer).....	EL-90

ALPHABETICAL INDEX

Spiral cable.....	RS-14
Spot lamp.....	EL-76
Spring (Wheelarch) height.....	FA-5
SROOF - Wiring diagram.....	EL-146
SRS - See Supplemental Restraint System.....	RS-10
SRS - Wiring diagram.....	RS-25
SRS Trouble diagnoses.....	RS-22
S/SIG - Wiring diagram (GA).....	EC-561
S/SIG - Wiring diagram (SR).....	EC-220
Stabilizer bar (front).....	FA-26
Stall test (A/T) (RE4F03V).....	AT-149
Stall test (A/T) (RL4F03A).....	AT-40
Standardized relay.....	EL-4
START - Wiring diagram.....	EL-27
Start signal (GA).....	EC-561
Start signal (SR).....	EC-220
Starter.....	EL-30
Starting system.....	EL-25
Steering gear and linkage inspection.....	MA-30
Steering knuckle.....	FA-8
Steering linkage (Model PR24T).....	ST-21
Steering linkage (Model R24N).....	ST-16
Steering switch.....	EL-45
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force.....	ST-6
Stop lamp.....	EL-60
Striking rod (M/T) (RS5F31A).....	MT-13
Striking rod (M/T) (RS5F32V).....	MT-33
Strut (front).....	FA-25
Sun roof, electric.....	EL-145
Sunroof.....	BT-30
Supplement restraint system - Wiring diagram.....	RS-25
Supplemental Restraint System.....	RS-10
SW/V - Wiring diagram.....	EC-487
Symbols and abbreviations.....	GI-8
Synchronizer (M/T) (RS5F32V).....	MT-32
Synchronizer (M/T) (RS5F31A).....	MT-12
System readiness test (SRT) code.....	EC-273

T

Tachometer.....	EL-83
Tail lamp.....	EL-60
TAIL/L - Wiring diagram.....	EL-60
Tank fuel temperature sensor.....	EC-401
Temperature control cable and linkage adjustment.....	HA-50
TFTS - Wiring diagram.....	EC-402
THEFT - Wiring diagram.....	EL-207
Theft warning system.....	EL-201
Thermal protector.....	HA-49

Thermo control amp.....	HA-49
Thermostat (GA).....	LC-21
Thermostat (SR).....	LC-10
Three way catalyst (GA).....	EC-434
Three way catalyst (SR).....	EC-160
Three way catalyst precautions.....	GI-6
Throttle bodies (GA).....	EM-63
Throttle bodies (SR).....	EM-8
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment (GA).....	EC-310
Throttle position sensor adjustment (SR).....	EC-63
Throttle position sensor (TPS) (GA).....	EC-360
Throttle position sensor (TPS) (SR).....	EC-100
Throttle position switch (RE4F03V).....	AT-86
Throwout bearing - See Clutch release bearing.....	CL-5
Tie-rod ball joints (Model PR24T).....	ST-24
Tie-rod ball joints (Model R24N).....	ST-18
Tie-rod (Model PR24T).....	ST-24
Tie-rod (Model R24N).....	ST-18
Tightening torque of standard bolts.....	GI-42
Timing chain (GA).....	EM-69
Timing chain (SR).....	EM-16
Tire rotation.....	MA-30
Tire size.....	GI-37
Torque converter clutch solenoid valve (RE4F03V).....	AT-116
Torque converter clutch solenoid valve (RL4F03A).....	AT-36
Torque converter installation.....	AT-178
Torque convertor clutch solenoid valve.....	EC-539
Tow truck towing.....	GI-40
TPS - Wiring diagram (GA).....	EC-363
TPS - Wiring diagram (SR).....	EC-103
TP/SW - Wiring diagram.....	EC-476
Transmission case (M/T) (RS5F31A).....	MT-11
Transmission case (M/T) (RS5F32V).....	MT-31
Transverse link (front).....	FA-27
Tread-FR&RR (Dimensions).....	GI-37
Trim (interior).....	BT-15
Trunk lid.....	BT-7
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid.....	BT-7
Trunk room lamp.....	EL-76
Trunk room trim.....	BT-21
TURN - Wiring diagram.....	EL-68
Turn signal lamp.....	EL-65
Two trip detection logic (GA).....	EC-271
Two trip detection logic (SR).....	EC-34
Two-pole lift.....	GI-40

ALPHABETICAL INDEX

U

Under body..... BT-40

V

Vacuum cut valve.....EC-523
 Vacuum cut valve bypass valve.....EC-519
 Vacuum hose (brake system)BR-18
 Vacuum hose drawing (ECCS) (GA)EC-248
 Vacuum hose drawing (ECCS) (SR).....EC-15
 Valve clearanceEM-90
 Valve guide (GA)EM-85
 Valve guide (SR)EM-38
 Valve seat (GA)EM-87
 Valve seat (SR)EM-39
 Valve spring (GA)EM-88
 Valve spring (SR)EM-40
 Vehicle identification numberGI-35
 Vehicle recovery (freeing a stuck vehicle)GI-41
 Vehicle speed sensor (VSS) (GA)EC-465
 Vehicle speed sensor (VSS) (SR).....EC-163
 VENT/V - Wiring diagram.....EC-457
 Viscosity number (SAE)MA-8
 Viscous coupling (FF M/T) (RS5F32V).....MT-46
 Viscous coupling (FF A/T) (RE4F03V).....AT-290
 VSS - Wiring diagram (GA).....EC-467
 VSS - Wiring diagram (SR).....EC-165

W

WARN - Wiring diagram..... EL-100
 Warning buzzer EL-109
 Warning chime EL-109
 Warning lamps EL-97
 Washer, front..... EL-122
 Water cock control rod adjustmentHA-50
 Water pump (GA) LC-20

Water pump (SR) LC-9
 Water temperature gauge (with tachometer) EL-83
 Water temperature gauge (without
 tachometer) EL-90
 Weatherstrip - See Exterior..... BT-22
 Wheel alignment (front)..... FA-6
 Wheel alignment (rear).....RA-5
 Wheel balance..... MA-30
 Wheel bearing (front axle)..... FA-10
 Wheel bearing (rear)RA-4
 Wheel hub and steering knuckle..... FA-8
 Wheel hub (front) FA-8
 Wheel hub (rear)RA-6
 Wheel sensors (ABS).....BR-38
 Wheel size.....GI-37
 Wheelarch height FA-5
 Wheelbase (Dimensions)GI-37
 Wide open & closed throttle position (CTP)
 switch (GA)EC-360
 Wide open & closed throttle position (CTP)
 switch (SR).....EC-100
 Width (Dimensions)GI-37
 WINDOW - Wiring diagram..... EL-176
 Window antenna..... EL-195
 Window, door (front)..... BT-9
 Window, door (rear).....BT-11
 Window, opera..... BT-35
 Window, rear BT-34
 Window, rear side..... BT-35
 Window, side - See Rear side window BT-35
 Windshield BT-33
 Windshield washer - See Front washer..... EL-122
 Windshield wiper - See Front wiper..... EL-122
 WIPER - Wiring diagram..... EL-124
 Wiper and washer EL-122
 Wiper, front..... EL-122
 Wiring diagramsGI-9
 Withdrawal lever (clutch)..... CL-5
 Wrist pin - See Piston pin inspection (GA) EM-98
 Wrist pin - See Piston pin inspection (SR) EM-51