

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EW

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-304
ABS - Wiring diagram BR-48
ABS (anti-lock brake system)..... BR-37
ABS sensor rotor..... FA-9
Absolute pressure sensor EC-119
A/C - Wiring diagram..... HA-24
A/C air flow..... HA-16
A/C component layout..... HA-14
A/C compressor clutch removal and
installation HA-61
A/C compressor mounting..... HA-60
A/C compressor precaution..... HA-7
A/C compressor special service tool..... HA-8
A/C control linkage adjustment (manual A/C)..... HA-41
A/C control operation (manual A/C) HA-15
A/C diagnostic work flow (manual A/C) HA-17
A/C harness layout (manual A/C) HA-20
A/C HFC134a (R134a) system precaution HA-2
A/C HFC134a (R134a) system service
procedure..... HA-55
A/C HFC134a (R134a) system service tools..... HA-9
A/C HFC134a system service equipment
precaution HA-11
A/C lubricant (R134a)..... HA-57
A/C lubrication oil HA-57
A/C operational check..... HA-18
A/C performance chart..... HA-45
A/C performance test diagnoses..... HA-43
A/C pressure switch HA-13
A/C relay..... HA-40
A/C service data specification..... HA-67
A/C switch HA-39
A/C trouble diagnoses (manual A/C) HA-17
Accelerator control system..... FE-2
Accelerator wire adjustment..... FE-2
Air bag..... RS-17
Air bag disposal..... RS-21
Air bag precautions GI-2
Air bleeding for brake system BR-5
Air cleaner filter replacement MA-14
Air conditioner - wiring diagram HA-24
Air conditioner cut control EC-19
Air conditioning - See A/C..... HA-2
Air flow meter - See Mass air flow sensor..... EC-110
Air mix door control linkage adjustment..... HA-40
Air spoiler, rear BT-28
Alternator EL-35
Angular tightening application..... EM-2
Antenna EL-140
Anti-lock brake system - See ABS..... BR-37
Anti-lock brake system - Wiring diagram..... BR-48

AP/SEN - Wiring diagram EC-119
ASCD - Wiring diagram..... EL-147
ASCD (automatic speed control device)..... EL-143
A/T - Wiring diagram AT-8
A/T removal and installation..... AT-59
A/T shift lock system AT-48
A/T shift lock system - Wiring diagram..... AT-49
A/T trouble diagnoses AT-31
Audio EL-137
AUDIO - Wiring diagram EL-138
Audio and A/C control removal and
installation - See Instrument panel BT-13
Automatic speed control system - See ASCD.. EL-143
Automatic transaxle number GI-37
Automatic transmission fluid replacement MA-20
Auxiliary air control (AAC)..... EC-304

B

BACK/L - Wiring diagram..... EL-54
Back-up lamp EL-54
Back-up lamp switch (M/T) MT-7, MT-11
Ball joint front axle..... FA-25
Battery..... EL-19
Baulk ring (M/T)..... MT-12
Blower motor HA-31
Blower resistor..... HA-31
Board-on lift..... GI-40
Body alignment..... BT-41
Boring/honing cylinder block EM-49
BPT valve EC-262, EC-267
Brake booster..... BR-16
Brake control valve (Proportioning valve)..... BR-8
Brake fluid change BR-4
Brake fluid level..... MA-20
Brake fluid level and line check BR-4
Brake hydraulic line..... BR-6
Brake inspection..... MA-20
Brake lines and cables inspection MA-20
Brake lining temporary checking..... MA-21
Brake master cylinder BR-12
Brake pedal BR-10
Bulb specifications..... EL-251
Bumper, front..... BT-5
Bumper, rear..... BT-8
BYP/S - Wiring diagram..... EC-406

C

Camshaft inspection..... EM-31
Camshaft position sensor (CMPS)..... EC-249
Canister - See EVAP canister EC-21

ALPHABETICAL INDEX

CANI/V - Wiring diagram..... EC-417
 CHARGE - Wiring diagram..... EL-33
 Charging system EL-32
 Chassis and body maintenance..... MA-18
 CHIME - Wiring diagram..... EL-108
 CIGAR - Wiring diagram..... EL-127
 Cigarette lighter..... EL-127
 Circuit breaker..... EL-14
 CKPS - Wiring diagram..... EC-244, EC-343
 Clearance lamp..... EL-56
 Closed loop control..... EC-334
 Closed throttle position switch..... EC-311
 Clutch cable..... CL-4
 Clutch cover..... CL-7
 Clutch disc..... CL-7
 Clutch pedal..... CL-4
 Clutch release bearing..... CL-6
 Clutch release mechanism..... CL-6
 Clutch withdrawal lever..... CL-6
 CMPS - Wiring diagram..... EC-249
 Coil spring (front)..... FA-23
 Coil spring (rear)..... RA-11
 Collision diagnosis..... RS-47
 Combination lamp, rear, removal and
 installation..... BT-27
 Combination meter..... EL-78, EL-87
 Combination meter removal and installation -
 See Instrument panel..... BT-13
 Combination switch..... EL-39
 Compression pressure..... EM-14
 Compressor clutch removal and installation..... HA-61
 Compressor mounting..... HA-60
 Compressor precaution..... HA-7
 Compressor special service tool..... HA-8
 Connecting rod..... EM-47
 Connecting rod bearing clearance..... EM-51
 Connecting rod bushing clearance..... EM-52
 Connector inspection..... GI-17
 Console box - See Instrument panel..... BT-13
 CONSULT for ABS..... BR-55
 CONSULT for ECCS..... EC-62
 CONSULT general information..... GI-33
 Control lever (M/T)..... MT-10
 Control valve (A/T)..... AT-88
 Converter housing installation..... AT-60
 Coolant mixture ratio..... MA-9
 Coolant replacement..... MA-11
 COOL/F - Wiring diagram..... EC-449
 Cooling circuit (engine)..... LC-8
 Cooling fan..... LC-14
 Cooling fan control..... EC-446
 Cooling fan motor..... HA-20, EC-458
 Cooling fan relay..... HA-20, EC-458
 Coupling sleeve (M/T)..... MT-12

Crank angle sensor built into distributor - See
 Camshaft position sensor..... EC-249
 Crankcase emission control system - See
 positive crankcase ventilation..... EC-31
 Crankcase ventilation system - See positive
 crankcase ventilation..... EC-31
 Crankshaft..... EM-49
 Crankshaft position sensor (OBD)..... EC-244
 Cruise control - See ASCD..... EL-143
 Cylinder block..... EM-45
 Cylinder block boring..... EM-49
 Cylinder head..... EM-30
 Cylinder head bolt tightening..... EM-23

D

Data link connector for Consult..... EC-62
 Daytime light system..... EL-46
 Daytime running light - See Daytime light
 system..... EL-46
 DEF - Wiring diagram..... EL-130
 Detonation sensor - See Knock sensor..... EC-240
 Diagnosis sensor unit..... RS-16
 Diagnostic trouble code (DTC) chart..... EC-85
 Diagnostic trouble code (DTC) for ECCS
 OBD system..... EC-2
 Differential gear (FF A/T)..... AT-136
 Differential gear (FF M/T)..... MT-22
 Dimensions..... GI-38
 Distributor..... EC-18
 Distributor ignition (DI) system..... EC-18
 D/LOCK - Wiring diagram..... EL-176
 Dome light - See Interior lamp..... EL-71
 Door, front..... BT-10
 Door glass (front)..... BT-10
 Door glass (rear)..... BT-12
 Door lock (front)..... BT-10
 Door lock (rear)..... BT-12
 Door mirror..... BT-40
 Door, rear..... BT-12
 Door trim..... BT-19
 Drive belt inspection..... MA-10
 Drive plate runout..... EM-52
 Drive shaft (front)..... FA-14
 DTRL - Wiring diagram..... EL-49
 Dual pressure switch..... HA-40

E

ECCS basic inspection..... EC-82
 ECCS circuit diagram..... EC-9
 ECCS component parts location..... EC-11

ALPHABETICAL INDEX

ECCS fail-safe system	EC-86	Fast idle cam (FIC) inspection and adjustment.....	EC-33
ECCS on board diagnostic system.....	EC-42	F/FOG - Wiring diagram.....	EL-59
ECCS relay.....	EC-11	FICD - Wiring diagram	EC-473
ECCS symptom matrix chart.....	EC-87	Final drive (FF A/T)	AT-136
ECCS system diagram and chart	EC-10	Final drive (FF M/T)	MT-22
ECM input/output signal.....	EC-95	Finisher, interior - See Trim.....	BT-16
ECTS - Wiring diagram.....	EC-133, EC-149	Finisher, trunk lid	BT-26
EGR control (EGRC) - BPT valve.....	EC-263	Floor trim	BT-16
EGR control (EGRC) - solenoid valve	EC-348	Flow charts	GI-30
EGR control valve	EC-261, EC-364	Fluids	MA-8
EGR temperature sensor	EC-353	Flywheel (clutch)	CL-8
EGRC1 - Wiring diagram	EC-255	Flywheel runout.....	EM-52
EGRC/V - Wiring diagram.....	EC-348	Fog lamp, front.....	EL-58
EGR/TS - Wiring diagram	EC-353	Fog lamp, front, removal and installation.....	BT-5
Electric sun roof	EL-141	Fork rod (M/T)	MT-13
Electrical diagnoses	GI-20	Forward clutch.....	AT-112
Electrical load signal circuit.....	EC-477	F/PUMP - Wiring diagram	EC-465
Electrical units location.....	EL-230	Freeze frame data.....	EC-44
Electronic ignition system.....	EC-18	FRO2 - Wiring diagram	EC-154
Engine compartment	BT-41	FRO2/H - Wiring diagram	EC-186
Engine control circuit diagram.....	EC-9	Front axle	FA-9
Engine control module (ECM).....	EC-316	Front bumper.....	BT-5
Engine coolant temperature sensor (ECTS).....	EC-133	Front disc brake	BR-19
Engine oil filter replacement.....	MA-15	Front door.....	BT-10
Engine oil precautions.....	GI-5	Front fog lamp.....	EL-58
Engine oil replacement.....	MA-15	Front fog lamp removal and installation.....	BT-5
Engine outer component parts.....	EM-10	Front heated oxygen sensor (HO2S).....	EC-154
Engine removal	EM-41	Front heated oxygen sensor (HO2S) heater	EC-186
Engine room - See Engine compartment	BT-41	Front heated oxygen sensor (HO2S) monitor...EC-161	
Engine serial number	GI-37	Front oxygen sensor (O2S).....	EC-154
EVAP canister	EC-21	Front oxygen sensor (O2S) monitor	EC-53
EVAP canister purge control solenoid valve.....	EC-417, EC-423	Front passenger air bag.....	RS-19
EVAP canister purge control valve	EC-417, EC-423	Front seat	BT-29
EVAP canister purge volume control valve.....	EC-21, EC-283, EC-378	Front seat belt	RS-3
EVAP canister vent control valve.....	EC-289	Front suspension.....	FA-22
EVAP control system pressure sensor	EC-294	Front washer	EL-117
EVAP control system (small leak) diagnosis	EC-272, EC-366	Front wiper	EL-117
EVAP vapor lines inspection	MA-17	FUEL - Wiring diagram	EC-219
Evaporative emission (EVAP) system.....	EC-21	Fuel cut control (at no load & high engine speed)	EC-20
Exhaust gas recirculation (EGR) valve.....	EC-255	Fuel filler lid	BT-8
Exhaust system	FE-6	Fuel filter.....	EC-32
Exhaust system inspection.....	MA-18	Fuel filter replacement.....	MA-14
Exterior	BT-23	Fuel gauge	EL-80, EL-89
Exterior lamp	EL-54	Fuel injector.....	EC-461
		Fuel line inspection	MA-13
		Fuel precautions.....	GI-6
		Fuel pressure check.....	EC-32
		Fuel pressure regulator.....	EC-33
		Fuel pressure release	EC-32
		Fuel pump	EC-465
		Fuel pump and gauge.....	FE-5
		Fuel pump relay	EC-465

F

Fan switch	HA-31
Fast idle.....	EC-33
Fast idle cam (FIC)	EC-33

ALPHABETICAL INDEX

Fuel system	FE-3
Fuel tank vacuum relief valve	EC-22
Fuse	EL-14
Fuse block	Foldout page
Fusible link	EL-14

G

Garage jack and safety stand	GI-40
Gauges	EL-77, EL-86
Gear components (M/T)	MT-12
Generator	EL-35
Generic scan tool (GST)	EC-76
Glass (front)	BT-10
Glass (rear)	BT-12
Governor valve assembly	AT-35
Grease	MA-8
Grille - See Exterior	BT-5
Ground distribution	EL-15

H

Harness connector	EL-3
Harness connector inspection	GI-17
Harness layout	EL-231
Hazard warning lamp	EL-61
Headlamp	EL-42
Headlamp aiming control	EL-45
Headlining - See Roof trim	BT-21
Heated oxygen sensor (HO2S) (front)	EC-154
Heated oxygen sensor (HO2S) heater (front)	EC-186
Heated oxygen sensor (HO2S) heater (rear) ...	EC-215
Heated oxygen sensor monitor (HO2S) (front)	EC-161
Heated oxygen sensor (rear)	EC-190
HEATER - Wiring diagram	HA-23
Heater system - Wiring diagram	HA-23
Height (Dimensions)	GI-38
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure ...	HA-55
HFC134a (R134a) system service tools	HA-9
HFC134a system service equipment precaution	HA-11
High clutch	AT-107
H/LAMP - Wiring diagram	EL-43
Hood	BT-5
Horn	EL-126
HORN - Wiring diagram	EL-126
How to erase DTC for ECCS OBD system	EC-52

I

IACV-AAC valve inspection	EC-310	GI
IACV-FICD solenoid valve	EC-473	
IATS - Wiring diagram	EC-127	MA
Identification plate	GI-36	
Idle air control (IAC) system	EC-304	
Idle air control valve (IACV)	EC-304	EM
Idle mixture ratio	EC-36	
Idle speed	EC-36	
Ignition coil	EC-342	LC
Ignition timing	EC-36	
Ignition wire inspection	EC-239	EC
IGN/SG - Wiring diagram	EC-336	
ILL - Wiring diagram	EL-68	
Illumination	EL-67	FE
Inhibitor switch	AT-47	
INJECT - Wiring diagram	EC-459	GL
Injector	EC-461	
Injector removal and installation	EC-33	
Input shaft (FF M/T)	MT-16	MT
Instrument panel	BT-13	
Intake air temperature sensor	EC-127	
Intake door control linkage adjustment	HA-34	AT
Intake door motor	HA-34	
Intake manifold	EM-10	FA
Intake valve timing control	EC-326	
Intake valve timing control solenoid valve	EC-326	
Interior	BT-16	RA
Interior lamp	EL-71	
Interior lamp on-off control	EL-72	
INT/L - Wiring diagram	EL-73	BR
IVC - Wiring diagram	EC-326	

J

Jacking points	GI-40, GI-39	ST
Joint connector (J/C)	Foldout page	RS
Junction box (J/B)	Foldout page	BT

K

Keyless entry system - See Multi-remote control system	EL-188	EL
Knock sensor (KS)	EC-240	
Knuckle spindle	FA-9	
KS - Wiring diagram	EC-240	

IDX

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-38
License lamp	EL-56
Lifting points	GI-39
Line pressure test (A/T)	AT-34
Liquid gasket application.....	EM-2
LKUP - Wiring diagram	EC-436
LOAD - Wiring diagram.....	EC-477
Location of electrical units.....	EL-229
Lock, door (front).....	BT-10
Lock, door (rear).....	BT-12
Low and reverse brake	AT-118
Lubricant (R134a) A/C.....	HA-57
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-57
Lubrication-locks, hinges and hood latches.....	MA-23
Luggage compartment trim	BT-22

M

MAFS - Wiring diagram.....	EC-110
Magnet clutch	HA-61
MAIN - Wiring diagram.....	EC-105
Main drive gear (M/T).....	MT-12
Mainshaft (M/T)	MT-18
Maintenance	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL	AT-62
Malfunction indicator lamp (MIL).....	EC-53
Manual steering gear	ST-14
Manual transaxle number.....	GI-37
Manual transmission oil replacement.....	MA-18
MAP/BARO switch solenoid valve	EC-318
Mass air flow sensor (MAFS).....	EC-110
Master cylinder (brake)	BR-12
Meter	EL-77, EL-86
METER - Wiring diagram.....	EL-79, EL-88
MIL & Data link connectors circuit	EC-481
MIL/DL - Wiring diagram	EC-481
MIRROR - Wiring diagram	EL-142
Mirror, door.....	BT-40
Mirror, out side	BT-40
Misfire	EC-235
Mode door control linkage adjustment.....	HA-41
Model variation	GI-35
Molding - See Exterior	BT-23
M/T major overhaul	MT-11
M/T removal and installation.....	MT-8
Mud guard - See Exterior.....	BT-27
MULTI - Wiring diagram.....	EL-191

Multiport fuel injection (MFI) system.....	EC-16
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-188

N

Neutral position switch (M/T)	MT-7
NVH troubleshooting (BR).....	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-8
NVH troubleshooting (FA)	FA-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-5

O

Oil change (capacity)	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine)	LC-7
Oil pump (A/T).....	AT-84
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine)	EM-28
ORVR (On-board Refueling Vapor Recovery)	EC-26
Out side mirror	BT-40
Overdrive control switch.....	AT-46
Overrun clutch	AT-112
Oversize piston.....	EM-49
Oxygen sensor monitor (O2S) (front)	EC-161
Oxygen sensor (O2S) (front).....	EC-154

P

Parking brake control	BR-35
Park/Neutral position switch.....	EC-431
PCV (positive crankcase ventilation)	EC-31
PGC/V - Wiring diagram	EC-283
Piston assembly	EM-53
Piston pin inspection	EM-46
Piston ring inspection	EM-47
Piston to bore clearance	EM-48
PNP/SW - Wiring diagram	EC-431
POWER - Wiring diagram	EL-8
Power door mirror	EL-142
Power steering fluid level.....	ST-6, MA-22
Power steering gear.....	ST-19
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch	EC-469, EC-472

ALPHABETICAL INDEX

Power steering oil pump ST-24
 Power steering system bleeding ST-7
 Power supply routing EL-6
 Power transistor EC-342
 Power transistor & ignition coil EC-336
 Power window EL-167
 Precautions (General) GI-3
 PRE/SE - Wiring diagram EC-294
 Pressure plate - See Clutch cover CL-7
 Pressure test (A/T) AT-34
 PST/SW - Wiring diagram EC-469

R

Rack retainer adjustment ST-16
 Radiator LC-14
 Radiator fan - See Cooling fan LC-14
 Radio - See Audio EL-137
 Rear air spoiler BT-28
 Rear axle RA-7
 Rear axle (disc brake type) RA-7
 Rear axle (drum brake type) RA-7
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-27
 Rear disc brake BR-27
 Rear door BT-12
 Rear drum brake BR-24
 Rear heated oxygen sensor (HO2S) EC-190
 Rear heated oxygen sensor (HO2S) heater EC-215
 Rear seat BT-30
 Rear seat belt RS-3
 Rear side window BT-38
 Rear suspension RA-9
 Rear window BT-37
 Rear window defogger EL-128
 Refrigerant CFC12 precaution HA-2
 Refrigerant connection precaution HA-6
 Refrigerant discharging evacuating charging HA-55
 Refrigerant general precaution HA-3
 Refrigerant lines HA-59
 Refrigeration cycle HA-13
 Release bearing (clutch) CL-6
 Resistor EC-342
 Reverse clutch AT-103
 Reverse idler shaft (M/T) MT-12
 Reverse lamp switch (M/T) - See Back-up
 lamp switch (M/T) MT-7
 Reverse main gear (M/T) MT-12
 Road wheel size GI-38
 Roof trim BT-21
 Room lamp EL-71
 Rotor disc (front) FA-9

RRO2 - Wiring diagram EC-190
 RRO2/H - Wiring diagram EC-215

S

SAE J1930 terminology list GI-44
 Seal - See Exterior BT-23
 Seat belt, front RS-3
 Seat belt inspection MA-23
 Seat belt, rear RS-3
 Seat, front BT-29
 Seat, rear BT-30
 Self-diagnostic results EC-53
 SFT, RL - Wiring diagram AT-49
 SHIFT - Wiring diagram AT-49
 Shift control components (M/T) MT-13
 Shift fork (M/T) MT-13
 Shift lever MT-10
 Shift lock system AT-48
 Shift schedule AT-38
 Shock absorber (front) FA-23
 Shock absorber (rear) RA-11
 Side trim BT-16
 Side window - See Rear side window BT-38
 Smart entrance control unit EL-228
 SMJ (super multiple junction) Foldout page
 Spare tire size GI-38
 Spark plug replacement MA-16
 Speedometer EL-83, EL-91
 Spiral cable RS-17
 Spring (Wheelarch) height FA-6
 SROOF - Wiring diagram EL-141
 SRS - See Supplemental Restraint System RS-13
 SRS - Wiring diagram RS-30
 SRS Trouble diagnoses RS-25, RS-28
 S/SIG - Wiring diagram EC-462
 Stabilizer bar (front) FA-24
 Stall test (A/T) AT-31
 Standardized relay EL-4
 START - Wiring diagram EL-25
 Start signal EC-462
 Starter EL-28
 Starting system EL-23
 Steering gear and linkage inspection MA-22
 Steering knuckle FA-9
 Steering linkage ST-14, ST-19
 Steering switch EL-41
 Steering wheel and column ST-10
 Steering wheel play ST-8
 Steering wheel turning force ST-7
 Stop lamp EL-56
 Striking rod (M/T) MT-13
 Strut (front) FA-23

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Strut (rear)..... RA-11
 Sun roof, electric EL-141
 Sunroof..... BT-31
 Supplemental restraint system - Wiring
 diagram RS-30
 Supplemental Restraint System..... RS-13
 SW/V - Wiring diagram EC-318
 Symbols and abbreviations..... GI-8
 Synchronizer (M/T)..... MT-12
 System readiness test (SRT) code EC-44

T

Tachometer..... EL-82
 Tail lamp EL-56
 TAIL/L - Wiring diagram EL-56
 Tank fuel temperature sensor EC-231
 Temperature control cable and linkage
 adjustment..... HA-40
 TFTS - Wiring diagram..... EC-231
 THEFT - Wiring diagram EL-207
 Theft warning system EL-202
 Thermal protector..... HA-40
 Thermo control amp HA-40
 Thermostat LC-12
 Three way catalyst precautions GI-5
 Throttle bodies..... EM-11
 Throttle drum adjustment FE-2
 Throttle position sensor adjustment..... EC-82
 Throttle position sensor (TPS) EC-138
 Throwout bearing - See Clutch release
 bearing CL-6
 Tie-rod ST-16, ST-22
 Tie-rod ball joints..... ST-16, ST-22
 Tightening torque of standard bolts GI-43
 Timing chain EM-17
 Tire rotation MA-22
 Tire size GI-38
 Torque converter clutch solenoid valve..... AT-44
 Torque converter installation AT-60
 Torque convertor clutch solenoid
 valve..... EC-436, EC-441
 Tow truck towing..... GI-41
 TPS - Wiring diagram..... EC-138
 TP/SW - Wiring diagram EC-311
 Transmission case (M/T)..... MT-11
 Transverse link (front) FA-25
 Tread-FR&RR (Dimensions) GI-38
 Trim BT-16
 Trouble diagnoses..... GI-20
 Trunk lid..... BT-8
 Trunk lid finisher..... BT-26
 Trunk lid opener - See Trunk lid BT-8

Trunk room lamp EL-71
 Trunk room trim BT-22
 TURN - Wiring diagram..... EL-64
 Turn signal lamp..... EL-61
 Two trip detection logic EC-42
 Two-pole lift GI-41

U

Under body..... BT-43

V

Vacuum cut valve EC-416
 Vacuum cut valve bypass valve..... EC-406
 Vacuum hose (brake system) BR-18
 Vacuum hose drawing (ECCS) EC-14
 Valve clearance EM-38
 Valve guide..... EM-33
 Valve seat..... EM-35
 Valve spring EM-36
 Vehicle identification number GI-36
 Vehicle recovery (freeing a stuck vehicle) GI-42
 Vehicle speed sensor (VSS) EC-300
 VENT/V - Wiring diagram..... EC-289
 Viscosity number (SAE) MA-8
 VSS - Wiring diagram EC-300

W

WARN - Wiring diagram..... EL-97
 Warning chime EL-106
 Warning lamps EL-94
 Washer, front EL-117
 Water pump..... LC-11
 Water temperature gauge EL-80, EL-89
 Weatherstrip - See Exterior..... BT-23
 Wheel alignment (front)..... FA-7
 Wheel alignment (rear)..... RA-6
 Wheel balance..... MA-22
 Wheel bearing (front axle)..... FA-7, FA-11
 Wheel bearing (rear) RA-5
 Wheel hub (front) FA-9
 Wheel hub (rear) RA-7
 Wheel sensors (ABS)..... BR-40
 Wheel size..... GI-38
 Wheelarch height FA-6
 Wheelbase (Dimensions) GI-38
 Wide open & closed throttle position (CTP)
 switch EC-138
 Width (Dimensions)..... GI-38

ALPHABETICAL INDEX

WINDOW - Wiring diagram..... EL-170
 Window, door (front)..... BT-10
 Window, door (rear)..... BT-12
 Window, rear BT-37
 Window, rear side..... BT-38
 Window, side - See Rear side window BT-38
 Windshield BT-36

WIPER - Wiring diagram.....EL-119
 Wiper, front.....EL-117
 Wiring diagram (cell code) list..... EL-252
 Wiring diagrams GI-9
 Withdrawal lever (clutch)..... CL-6
 Wrist pin - See Piston pin inspection..... EM-46

GI
 MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST'

RS

BT

HA

EL

