

SECTION **IDX**

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL

ALPHABETICAL INDEX

A

ABS - Wiring diagram	BR-44
ABS (anti-lock brake system).....	BR-33
ABS sensor rotor.....	FA-9
Absolute pressure sensor	EC-121
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component layout.....	HA-14
A/C compressor clutch removal and installation	HA-65
A/C compressor mounting.....	HA-64
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-8
A/C control linkage adjustment (manual A/C).....	HA-34
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (manual A/C)	HA-24
A/C harness layout (manual A/C)	HA-17
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-60
A/C HFC134a (R134a) system service tools.....	HA-9
A/C HFC134a system service equipment precaution	HA-11
A/C lubricant (R134a).....	HA-62
A/C lubrication oil	HA-62
A/C operational check.....	HA-25
A/C performance chart.....	HA-48
A/C performance test diagnoses.....	HA-46
A/C pressure switch	HA-13
A/C relay.....	HA-44
A/C service data specification.....	HA-71
A/C switch	HA-43
A/C symptom chart (manual A/C)	HA-24
A/C trouble diagnoses (manual A/C)	HA-24
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag	RS-17
Air bag disposal.....	RS-21
Air bag precautions	GI-2
Air bleeding for brake system	BR-5
Air cleaner filter replacement	MA-14
Air conditioner - wiring diagram	HA-21
Air conditioner cut control	EC-20
Air conditioning - See A/C.....	HA-2
Air flow meter - See Mass air flow sensor.....	EC-112
Air mix door control linkage adjustment.....	HA-34
Air spoiler, rear.....	BT-29
AIRREG - Wiring diagram.....	EC-466
Alternator	EL-31
Angular tightening application	EM-2
Antenna	EL-116
Anti-lock brake system - See ABS.....	BR-33

Anti-lock brake system - Wiring diagram.....	BR-44
AP/SEN - Wiring diagram	EC-121
ASCD - Wiring diagram.....	EL-124
ASCD (automatic speed control device).....	EL-120
A/T - Wiring diagram	AT-13
A/T diagnosis communication line	EC-430
A/T fluid temperature sensor.....	AT-88
A/T removal and installation.....	AT-192
A/T self-diagnoses.....	AT-42
A/T shift lock system	AT-182
A/T shift lock system - Wiring diagram	AT-183
A/T trouble diagnoses	AT-53
ATDIAG - Wiring diagram	EC-430
Audio	EL-113
AUDIO - Wiring diagram	EL-114
Audio and A/C control removal and installation - See Instrument panel.....	BT-13
Automatic speed control system - See ASCD ..	EL-120
Automatic transaxle number	GI-37
Automatic transmission fluid replacement	MA-21
Auxiliary air control (AAC).....	EC-306

B

BACK/L - Wiring diagram	EL-53
Back-up lamp	EL-53
Back-up lamp switch (M/T)	MT-7
Ball joint front axle.....	FA-26
Battery	EL-18
Baulk ring (M/T).....	MT-11
Blower motor	HA-30
Blower resistor.....	HA-30
Board-on lift.....	GI-40
Body alignment.....	BT-42
Boring/honing cylinder block	EM-57
BPT valve	EC-264, EC-269
Brake booster	BR-15
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-4
Brake fluid level.....	MA-21
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-21
Brake lines and cables inspection	MA-21
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications.....	EL-227
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPS/V - Wiring diagram.....	EC-405, EC-410

ALPHABETICAL INDEX

C

Camshaft inspection..... EM-39
 Camshaft position sensor (CMPS)..... EC-250
 Canister - See EVAP canister..... EC-22
 CANI/V - Wiring diagram..... EC-416
 CHARGE - Wiring diagram..... EL-32
 Charging system..... EL-31
 Chassis and body maintenance..... MA-19
 CIGAR - Wiring diagram..... EL-106
 Cigarette lighter..... EL-106
 Circuit breaker..... EL-14
 CKPS - Wiring diagram..... EC-245, EC-342
 Clearance lamp..... EL-54
 Closed loop control..... EC-326
 Closed throttle position switch..... EC-311
 Clutch cable..... CL-4
 Clutch cover..... CL-8
 Clutch disc..... CL-7
 Clutch pedal..... CL-4
 Clutch release bearing..... CL-6
 Clutch release mechanism..... CL-6
 Clutch withdrawal lever..... CL-6
 CMPS - Wiring diagram..... EC-250
 Coil spring (front)..... FA-24
 Coil spring (rear)..... RA-11
 Collision diagnosis..... RS-47
 Combination lamp, rear, removal and
 installation..... BT-27
 Combination meter..... EL-74
 Combination meter (needle type)..... EL-74
 Combination meter removal and installation -
 See Instrument panel..... BT-13
 Combination switch..... EL-38
 Compression pressure..... EM-12
 Compressor clutch removal and installation..... HA-65
 Compressor mounting..... HA-64
 Compressor precaution..... HA-7
 Compressor special service tool..... HA-8
 Connecting rod..... EM-55
 Connecting rod bearing clearance..... EM-59
 Connecting rod bushing clearance..... EM-60
 Connector inspection..... GI-17
 Console box - See Instrument panel..... BT-13
 CONSULT for ABS..... BR-51
 CONSULT for ECCS..... EC-62
 CONSULT general information..... GI-33
 Control lever (M/T)..... MT-9
 Control valve (A/T)..... AT-221
 Converter housing installation..... AT-193
 Coolant mixture ratio..... MA-9
 Coolant replacement..... MA-11
 COOL/F - Wiring diagram..... EC-438

Cooling circuit (engine)..... LC-8
 Cooling fan..... LC-13
 Cooling fan control..... EC-438
 Cooling fan motor..... HA-17, EC-451
 Cooling fan relay..... HA-17, EC-451
 Coupling sleeve (M/T)..... MT-11
 Crank angle sensor built into distributor - See
 Camshaft position sensor..... EC-250
 Crankcase emission control system - See
 positive crankcase ventilation..... EC-32
 Crankcase ventilation system - See positive
 crankcase ventilation..... EC-32
 Crankshaft..... EM-57
 Crankshaft position sensor (OBD)..... EC-245, EC-342
 Crankshaft position sensor (OBD) cog
 chipping..... EC-342
 Cruise control - See ASCD..... EL-120
 Cylinder block..... EM-53
 Cylinder block boring..... EM-57
 Cylinder head..... EM-35
 Cylinder head bolt tightening..... EM-26

D

Data link connector for Consult..... EC-33
 Daytime light system..... EL-45
 Daytime running light - See Daytime light
 system..... EL-45
 DEF - Wiring diagram..... EL-108
 Detonation sensor - See Knock sensor..... EC-241
 Diagnosis sensor unit..... RS-16
 Diagnostic trouble code (DTC) chart..... EC-87
 Diagnostic trouble code (DTC) for ECCS
 OBD system..... EC-2
 Differential gear (FF A/T)..... AT-269
 Differential gear (FF M/T)..... MT-25
 Dimensions..... GI-38
 Distributor..... EC-19
 Distributor ignition (DI) system..... EC-19
 D/LOCK - Wiring diagram..... EL-152
 Dome light - See Interior lamp..... EL-68
 Door, front..... BT-10
 Door glass..... BT-10, BT-12
 Door lock..... BT-10, BT-12
 Door mirror..... BT-41
 Door, rear..... BT-12
 Door trim..... BT-19
 Drive belt inspection..... MA-10
 Drive plate runout..... EM-61
 Drive shaft (front)..... FA-14
 Dropping resistor (A/T)..... AT-134
 DTC WORK SUPPORT..... EC-71

ALPHABETICAL INDEX

DTRL - Wiring diagram	EL-48
Dual pressure switch	HA-44

E

ECCS basic inspection	EC-82
ECCS circuit diagram	EC-9
ECCS component parts location	EC-11
ECCS fail-safe system	EC-88
ECCS on board diagnostic system	EC-42
ECCS relay	EC-107
ECCS symptom matrix chart	EC-89
ECCS system diagram and chart	EC-10
ECM input/output signal	EC-97
ECTS - Wiring diagram	EC-135, EC-152
EGR control (EGRC) - BPT valve	EC-265
EGR control (EGRC) - solenoid valve	EC-347
EGR control valve	EC-262, EC-363
EGR temperature sensor	EC-352
EGRC1 - Wiring diagram	EC-256
EGRC/V - Wiring diagram	EC-347
EGR/TS - Wiring diagram	EC-352
Electric sun roof	EL-117
Electrical diagnoses	GI-20
Electrical units location	EL-206
Electronic ignition (EI) system	EC-19
Electronic ignition system	EC-19
Engine compartment	BT-42
Engine control circuit diagram	EC-9
Engine control module (ECM)	EC-316
Engine coolant temperature sensor (ECTS)	EC-135, EC-152
Engine oil filter replacement	MA-15
Engine oil precautions	GI-5
Engine oil replacement	MA-14
Engine outer component parts	EM-9
Engine removal	EM-49
Engine room - See Engine compartment	BT-42
Engine serial number	GI-37
EVAP canister	EC-22
EVAP canister purge control solenoid valve	EC-416, EC-422
EVAP canister purge control valve	EC-416, EC-422
EVAP canister purge volume control valve	EC-22, EC-285, EC-377
EVAP canister vent control valve	EC-291, EC-385, EC-399
EVAP control system pressure sensor	EC-296
EVAP control system purge flow monitoring diagnosis	EC-390
EVAP control system (small leak) diagnosis	EC-24, EC-274, EC-365
EVAP system close mode	EC-24

EVAP vapor lines inspection	MA-18
Evaporative emission (EVAP) system	EC-22
Exhaust gas recirculation (EGR) valve	EC-256
Exhaust system	FE-6
Exhaust system inspection	MA-19
Exterior	BT-23
Exterior lamp	EL-53

F

Fan switch	HA-30
F/FOG - Wiring diagram	EL-57
FICD - Wiring diagram	EC-470
Final drive (FF A/T)	AT-269
Final drive (FF M/T)	MT-25
Finisher, interior - See Trim	BT-16
Finisher, trunk lid	BT-26
Floor trim	BT-16
Flow charts	GI-30
Fluid temperature sensor (A/T)	AT-88
Fluids	MA-8
Flywheel (clutch)	CL-8
Flywheel runout	EM-61
Fog lamp, front	EL-56
Fog lamp, front, removal and installation	BT-5
Fork rod (M/T)	MT-12
Forward clutch	AT-245
FPCM - Wiring diagram	EC-328
F/PUMP - Wiring diagram	EC-458
Freeze frame data	EC-44
FRO2 - Wiring diagram	EC-157
FRO2/H - Wiring diagram	EC-188
Front axle	FA-9
Front bumper	BT-5
Front disc brake	BR-18
Front door	BT-10
Front fog lamp	EL-56
Front fog lamp removal and installation	BT-5
Front heated oxygen sensor (HO2S)	EC-157
Front heated oxygen sensor (HO2S) heater	EC-188
Front passenger air bag	RS-19
Front seat	BT-30
Front seat belt	RS-3
Front suspension	FA-23
Front washer	EL-96
Front wiper	EL-96
FUEL - Wiring diagram	EC-221, EC-227
Fuel cut control (at no load & high engine speed)	EC-21
Fuel filler lid	BT-8
Fuel filter	EC-11, EC-33
Fuel filter replacement	MA-13
Fuel gauge	EL-76

ALPHABETICAL INDEX

Fuel injection system..... EC-221, EC-227
 Fuel injector..... EC-452
 Fuel line inspection MA-13
 Fuel precautions..... GI-6
 Fuel pressure check..... EC-33
 Fuel pressure regulator..... EC-34
 Fuel pressure release EC-33
 Fuel pump EC-458
 Fuel pump and gauge..... FE-5
 Fuel pump control module EC-328
 Fuel pump dropping resistor EC-458
 Fuel pump relay EC-458
 Fuel system FE-3
 Fuel tank vacuum relief valve EC-23
 Fuse..... EL-14
 Fuse block..... Foldout page
 Fusible link EL-14

G

Garage jack and safety stand..... GI-40
 Gauges..... EL-73
 Gear components (M/T)..... MT-11
 Generator EL-31
 Generic scan tool (GST) EC-76
 Glass BT-10, BT-12
 Grille - See Exterior..... BT-5
 Ground distribution..... EL-15

H

Harness connector EL-3
 Harness connector inspection..... GI-17
 Harness layout EL-209
 Hazard warning lamp EL-60
 Headlamp EL-41
 Headlamp aiming control EL-44
 Headlining - See Roof trim..... BT-21
 Heated oxygen sensor (HO2S) (front)..... EC-157
 Heated oxygen sensor (HO2S) heater (front)...EC-188
 Heated oxygen sensor (HO2S) heater (rear) ...EC-217
 Heated oxygen sensor (rear) EC-192
 HEATER - Wiring diagram HA-20
 Heater system - Wiring diagram HA-20
 Height (Dimensions)..... GI-38
 HFC134a (R134a) system precaution HA-2
 HFC134a (R134a) system service procedure HA-60
 HFC134a (R134a) system service tools..... HA-9
 HFC134a system service equipment
 precaution HA-11
 High clutch..... AT-240
 H/LAMP - Wiring diagram EL-42

Hood BT-5
 Horn..... EL-105
 HORN - Wiring diagram..... EL-105
 How to erase DTC for ECCS OBD system EC-52
 Hydraulic lash adjuster inspection EM-44

I

IACV - air regulator EC-466
 IACV-AAC valve inspection..... EC-310
 IACV-FICD solenoid valve..... EC-470
 IATS - Wiring diagram..... EC-129
 Identification plate GI-36
 Idle air control (IAC) system EC-306
 Idle air control valve (IACV) EC-306
 Idle mixture ratio..... EC-35
 Idle speed..... EC-35
 Ignition coil EC-341
 Ignition timing EC-35
 Ignition wire inspection..... EC-240
 IGN/SG - Wiring diagram EC-335
 ILL - Wiring diagram..... EL-66
 Illumination EL-65
 Inhibitor switch..... AT-81, EC-433
 INJECT - Wiring diagram EC-452
 Injector..... EC-454
 Injector removal and installation EC-34
 Input shaft (FF M/T) MT-16
 Instrument panel..... BT-13
 Intake air temperature sensor..... EC-129
 Intake door control linkage adjustment HA-37
 Intake door motor..... HA-37
 Intake manifold EM-9
 Interior BT-16
 Interior lamp EL-68
 Interior lamp on-off control EL-68
 INT/L - Wiring diagram..... EL-70

J

Jacking points..... GI-39, GI-40
 Joint connector (J/C)..... Foldout page
 Junction box (J/B) Foldout page

K

Keyless entry system - See Multi-remote
 control system..... EL-165
 Knock sensor (KS) EC-241
 Knuckle spindle FA-9
 KS - Wiring diagram..... EC-241

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-38
License lamp	EL-54
Lifting points	GI-39
Line pressure solenoid valve	AT-119
Line pressure test (A/T)	AT-61
Liquid gasket application	EM-2
Location of electrical units	EL-206
Lock, door	BT-10, BT-12
Low and reverse brake	AT-251
Lubricant (R134a) A/C	HA-62
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication oil A/C	HA-62
Lubrication-locks, hinges and hood latches	MA-24
Luggage compartment trim	BT-22

M

MAFS - Wiring diagram	EC-112
Magnet clutch	HA-65
MAIN - Wiring diagram	EC-107
Main drive gear (M/T)	MT-11
Mainshaft (M/T)	MT-19
Maintenance	MA-3
Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-195
Malfunction indicator lamp (MIL)	EC-54
Manual transaxle number	GI-37
Manual transmission oil replacement	MA-19
MAP/BARO switch solenoid valve	EC-318
Mass air flow sensor (MAFS)	EC-112
Master cylinder (brake)	BR-12
Meter	EL-73
METER - Wiring diagram	EL-75
MIL & Data link connectors circuit	EC-474
MIL/DL - Wiring diagram	EC-474
MIRROR - Wiring diagram	EL-118
Mirror, door	BT-41
Mirror, out side	BT-41
Misfire	EC-236
Mode door control linkage adjustment	HA-32
Model variation	GI-35
Molding - See Exterior	BT-23
M/T major overhaul	MT-10
M/T removal and installation	MT-8
Mud guard - See Exterior	BT-28
MULTI - Wiring diagram	EL-168
Multiport fuel injection (MFI) system	EC-17
Multiport fuel injection precautions	GI-5
Multi-remote control system	EL-165

N

Neutral position switch	EC-433
Neutral position switch (M/T)	MT-7
NVH troubleshooting (BR)	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (FA)	FA-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (ST)	ST-4

O

Oil change (capacity)	MA-8
Oil change (interval)	MA-5
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-217
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-33
Opera window	BT-39
ORVR (On-board Refueling Vapor Recovery)	EC-27
Out side mirror	BT-41
Overdrive control switch	AT-180
Overrun clutch	AT-245
Overrun clutch solenoid valve	AT-119
Oversize piston	EM-57

P

Parking brake control	BR-31
Parking lamp	EL-54
Park/Neutral position switch	EC-433
PCV (positive crankcase ventilation)	EC-32
PGC/V - Wiring diagram	EC-285
Pilot bushing replacement	EM-61
Piston assembly	EM-62
Piston pin inspection	EM-54
Piston ring inspection	EM-55
Piston to bore clearance	EM-56
PNP/SW - Wiring diagram	EC-433
POWER - Wiring diagram	EL-8
Power door lock	EL-149
Power door mirror	EL-118
Power steering fluid level	ST-5, MA-23
Power steering gear	ST-13
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-462
Power steering oil pump	ST-18

ALPHABETICAL INDEX

Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6
Power transistor.....	EC-341
Power transistor & ignition coil.....	EC-335
Power window.....	EL-143
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-296
Pressure plate - See Clutch cover.....	CL-7
Pressure test (A/T).....	AT-61
PST/SW - Wiring diagram.....	EC-462

R

Radiator.....	LC-13
Radiator fan - See Cooling fan.....	LC-13
Radio - See Audio.....	EL-113
Rear air spoiler.....	BT-29
Rear axle.....	RA-7
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-27
Rear disc brake.....	BR-23
Rear door.....	BT-12
Rear heated oxygen sensor (HO2S).....	EC-192
Rear heated oxygen sensor (HO2S) heater.....	EC-217
Rear seat.....	BT-31
Rear seat belt.....	RS-3
Rear side window.....	BT-39
Rear suspension.....	RA-9
Rear window.....	BT-38
Rear window defogger.....	EL-107
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-6
Refrigerant discharging evacuating charging.....	HA-60
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-56
Refrigeration cycle.....	HA-13
Release bearing (clutch).....	CL-6
Resistor.....	EC-341
Reverse clutch.....	AT-236
Reverse idler shaft (M/T).....	MT-11
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-7
Reverse main gear (M/T).....	MT-11
Revolution sensor (A/T).....	AT-92
Road wheel size.....	GI-38
Roof trim.....	BT-21
Room lamp - See Interior lamp.....	EL-68
Rotor disc (front).....	FA-9
RRO2 - Wiring diagram.....	EC-192
RRO2/H - Wiring diagram.....	EC-217

S

SAE J1930 terminology list.....	GI-44
Seal - See Exterior.....	BT-23
Seat belt, front.....	RS-3
Seat belt inspection.....	MA-24
Seat belt, rear.....	RS-3
Seat, front.....	BT-30
Seat, rear.....	BT-31
Self-diagnostic results.....	EC-54
SHIFT - Wiring diagram.....	AT-183
Shift control components (M/T).....	MT-12
Shift fork (M/T).....	MT-12
Shift lever.....	MT-9
Shift lock system.....	AT-182
Shift schedule.....	AT-294
Shift solenoid valve (A/T).....	AT-100, AT-110
Shift solenoid valve B (A/T).....	AT-100
Shock absorber (front).....	FA-24
Shock absorber (rear).....	RA-11
Side trim.....	BT-16
Side window - See Rear side window.....	BT-39
Smart entrance control unit.....	EL-204
SMJ (super multiple junction).....	Foldout page
Spare tire size.....	GI-38
Spark plug replacement.....	MA-15
Speedometer.....	EL-79
Spiral cable.....	RS-17
Spring (Wheelarch) height.....	FA-6
SROOF - Wiring diagram.....	EL-117
SRS - See Supplemental Restraint System.....	RS-13
SRS - Wiring diagram.....	RS-30
SRS Trouble diagnoses.....	RS-25
S/SIG - Wiring diagram.....	EC-455
Stabilizer bar (front).....	FA-25
Stall test (A/T).....	AT-58
Standardized relay.....	EL-4
START - Wiring diagram.....	EL-25
Start signal.....	EC-455
Starter.....	EL-28
Starting system.....	EL-23
Steering gear and linkage inspection.....	MA-23
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch.....	EL-40
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force.....	ST-6
Stop lamp.....	EL-54
Striking rod (M/T).....	MT-12
Strut (front).....	FA-24
Strut (rear).....	RA-11
Sun roof, electric.....	EL-117

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Sunroof.....	BT-32
Supplement restraint system - Wiring diagram	RS-30
Supplemental Restraint System.....	RS-13
SW/V - Wiring diagram	EC-318
Symbols and abbreviations	GI-8
Synchronizer (M/T).....	MT-11
System readiness test (SRT) code	EC-44

T

Tachometer.....	EL-78
Tail lamp	EL-54
TAIL/L - Wiring diagram	EL-54
Tank fuel temperature sensor	EC-232
TCM circuit diagram.....	AT-12
TCM inspection table	AT-76
Temperature control cable and linkage adjustment.....	HA-34
TFTS - Wiring diagram.....	EC-232
THEFT - Wiring diagram	EL-184
Theft warning system.....	EL-179
Thermal protector.....	HA-44
Thermo control amp.....	HA-44
Thermostat	LC-11
Three way catalyst.....	EC-270
Three way catalyst precautions	GI-5
Throttle bodies.....	EM-10
Throttle drum adjustment	FE-2
Throttle position sensor adjustment.....	EC-82
Throttle position sensor (TPS)	EC-140
Throttle position switch.....	AT-149, AT-181, EC-311
Throwout bearing - See Clutch release bearing	CL-6
Tie-rod	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts	GI-43
Timing chain	EM-18
Tire rotation	MA-23
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-119
Torque converter installation	AT-193
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-140
TP/SW - Wiring diagram	EC-311
Transmission case (M/T).....	MT-10
Transverse link (front)	FA-26
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-16
Trouble diagnoses.....	GI-20
Trunk lid.....	BT-8
Trunk lid finisher	BT-26
Trunk lid opener - See Trunk lid	BT-8

Trunk room lamp.....	EL-68
Trunk room trim.....	BT-22
TURN - Wiring diagram.....	EL-62
Turn signal lamp.....	EL-60
Two trip detection logic	EC-42
Two-pole lift	GI-41

U

Under body.....	BT-44
-----------------	-------

V

Vacuum cut valve	EC-415
Vacuum cut valve bypass valve.....	EC-405, EC-410
Vacuum hose (brake system)	BR-17
Vacuum hose drawing (ECCS)	EC-15
Valve guide.....	EM-41
Valve seat.....	EM-42
Valve spring.....	EM-44
Vehicle identification number	GI-36
Vehicle recovery (freeing a stuck vehicle)	GI-42
Vehicle speed sensor (VSS)	EC-302
VENT/V - Wiring diagram.....	EC-291, EC-385, EC-399
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-302

W

WARN - Wiring diagram.....	EL-85
Warning lamps	EL-82
Washer, front.....	EL-96
Water pump.....	LC-9
Water temperature gauge	EL-76
Weatherstrip - See Exterior.....	BT-23
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-23
Wheel bearing (front axle).....	FA-7, FA-11
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-9
Wheel hub (rear)	RA-7
Wheel sensors (ABS).....	BR-36
Wheel size	GI-38
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position (CTP) switch	EC-140
Width (Dimensions)	GI-38
WINDOW - Wiring diagram.....	EL-146
Window, door.....	BT-10, BT-12

ALPHABETICAL INDEX

Window, opera.....	BT-39	WIPER - Wiring diagram.....	EL-98
Window, rear	BT-38	Wiper and washer	EL-96
Window, rear side.....	BT-39	Wiper, front.....	EL-96
Window, side - See Rear side window	BT-39	Wiring diagram (cell code) list.....	EL-228
Windshield.....	BT-37	Wiring diagrams	GI-9
Windshield washer - See Front washer.....	EL-96	Withdrawal lever (clutch).....	CL-6
Windshield wiper - See Front wiper.....	EL-96	Wrist pin - See Piston pin inspection.....	EM-54

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX