

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-321
ABS - Wiring diagramBR-48
ABS (anti-lock brake system).....BR-37
ABS sensor rotor.....FA-9
Absolute pressure sensorEC-121
A/C - Wiring diagram.....HA-21
A/C air flow.....HA-16
A/C component location.....HA-14
A/C compressor clutch removal and
installationHA-66
A/C compressor mounting.....HA-65
A/C compressor precaution.....HA-7
A/C compressor special service tool.....HA-8
A/C control linkage adjustment (manual A/C).....HA-34
A/C control operation (manual A/C).....HA-15
A/C diagnostic work flow (manual A/C)HA-24
A/C harness layout (manual A/C)HA-17
A/C HFC134a (R134a) system precautionHA-2
A/C HFC134a (R134a) system service
procedureHA-61
A/C HFC134a (R134a) system service tools.....HA-9
A/C HFC134a system service equipment
precautionHA-11
A/C lubricant (R134a).....HA-63
A/C lubrication oil.....HA-63
A/C operational check.....HA-25
A/C performance chart.....HA-49
A/C performance test diagnoses.....HA-47
A/C pressure switchHA-13
A/C relay.....HA-44
A/C service data specification.....HA-72
A/C switchHA-43
A/C symptom chart (manual A/C)HA-24
A/C trouble diagnoses (manual A/C)HA-24
Accelerator control system.....FE-2
Accelerator wire adjustment.....FE-2
Air bagRS-15
Air bag disposal.....RS-19
Air bag precautionsGI-2
Air bleeding for brake systemBR-5
Air cleaner filter replacementMA-15
Air conditioner - Wiring diagramHA-21
Air conditioner cut controlEC-19
Air conditioning - See A/C.....HA-2
Air flow meter - See Mass air flow sensor.....EC-112
Air mix door control linkage adjustment.....HA-34
Air spoiler, rearBT-27
Alternator - See Generator.....EL-37
Angular tightening application.....EM-2
AntennaEL-142
Anti-lock brake system - See ABS.....BR-37

Anti-lock brake system - Wiring diagram.....BR-48
AP/SEN - Wiring diagramEC-121
ASCD - Wiring diagram.....EL-149
ASCD (automatic speed control device).....EL-145
A/T - Wiring diagram.....AT-8
A/T shift lock system.....AT-48
A/T shift lock system - Wiring diagram.....AT-49
A/T trouble diagnosesAT-31
AudioEL-139
AUDIO - Wiring diagramEL-140
Audio and A/C control removal and
installation - See Instrument panel.....BT-13
Automatic speed control system - See ASCD..EL-145
Automatic transaxle numberGI-37
Automatic transmission fluid replacementMA-21
Auxiliary air control (AAC).....EC-321

B

BACK/L - Wiring diagram.....EL-56
Back-up lampEL-56
Back-up lamp switch (M/T)MT-8
Ball joint front axle.....FA-24
Basic inspectionEC-82
BatteryEL-21
Baulk ring (M/T).....MT-13
Blower motorHA-30
Blower resistor.....HA-30
Board-on lift.....GI-40
Body alignment.....BT-39
Boring/honing cylinder blockEM-49
BPT valveEC-277, EC-282
Brake boosterBR-16
Brake control valve (Proportioning valve).....BR-8
Brake fluid changeBR-4
Brake fluid level.....MA-21
Brake fluid level and line checkBR-4
Brake hydraulic line.....BR-6
Brake inspection.....MA-21
Brake lines and cables inspectionMA-21
Brake lining wear temporary checking.....MA-22
Brake master cylinderBR-12
Brake pedalBR-10
Bulb specifications.....EL-250
Bumper, front.....BT-5
Bumper, rear.....BT-8
BYPSS/V - Wiring diagram.....EC-427

C

Camshaft inspection.....EM-31
Camshaft position sensor (CMPS).....EC-261

ALPHABETICAL INDEX

Canister - See EVAP canister.....EC-21
 CANI/V - Wiring diagram.....EC-438
 CHARGE - Wiring diagram.....EL-35
 Charging system.....EL-34
 Chassis and body maintenance.....MA-19
 CHIME - Wiring diagram.....EL-110
 CIGAR - Wiring diagram.....EL-130
 Cigarette lighter.....EL-130
 Circuit breaker.....EL-16
 CKPS - Wiring diagram.....EC-256, EC-362
 Clearance lamp.....EL-58
 Closed loop control.....EC-353
 Closed throttle position switch.....EC-328
 Clutch cable.....CL-4
 Clutch cover.....CL-8
 Clutch disc.....CL-7
 Clutch pedal.....CL-4
 Clutch release bearing.....CL-6
 Clutch release mechanism.....CL-6
 Clutch withdrawal lever.....CL-6
 CMPS - Wiring diagram.....EC-261
 Coil spring (front).....FA-22
 Coil spring (rear).....RA-11
 Collision diagnosis.....RS-45
 Combination lamp, rear, removal and
 installation.....BT-26
 Combination meter.....EL-79, EL-89
 Combination meter removal and installation -
 See Instrument panel.....BT-13
 Combination switch.....EL-41
 Compression pressure.....EM-14
 Compressor clutch removal and installation.....HA-66
 Compressor mounting.....HA-65
 Compressor precaution.....HA-7
 Compressor special service tool.....HA-8
 Connecting rod.....EM-47
 Connecting rod bearing clearance.....EM-51
 Connecting rod bushing clearance.....EM-52
 Connector inspection.....GI-17
 Console box - See Instrument panel.....BT-13
 CONSULT for ABS.....BR-55
 CONSULT for engine.....EC-62
 CONSULT general information.....GI-33
 Control lever (M/T).....MT-11
 Control valve (A/T).....AT-88
 Converter housing installation.....AT-60
 Coolant mixture ratio.....MA-9
 Coolant replacement.....MA-12
 COOL/F - Wiring diagram.....EC-471
 Cooling circuit (engine).....LC-8
 Cooling fan.....LC-14
 Cooling fan control.....EC-468
 Cooling fan motor.....EC-480
 Cooling fan relay.....EC-480

Coupling sleeve (M/T).....MT-13
 Crank angle sensor built into distributor - See
 Camshaft position sensor.....EC-261 GI
 Crankcase emission control system - See
 positive crankcase ventilation.....EC-31 MA
 Crankcase ventilation system - See positive
 crankcase ventilation.....EC-31
 Crankshaft.....EM-49
 Crankshaft position sensor (OBD).....EC-256 EM
 Cruise control - See ASCD.....EL-145
 Cylinder block.....EM-45 LC
 Cylinder block boring.....EM-49
 Cylinder head.....EM-30
 Cylinder head bolt tightening.....EM-23 EC

D

Data link connector for CONSULT.....EC-62
 Daytime light system.....EL-48 CL
 Daytime running light - See Daytime light
 system.....EL-48 MT
 DEF - Wiring diagram.....EL-132
 Detonation sensor - See Knock sensor.....EC-251
 Diagnosis sensor unit.....RS-14 AT
 Diagnostic trouble code (DTC) for OBD
 system.....EC-2 FA
 Diagnostic trouble code (DTC) inspection
 priority chart.....EC-87
 Differential gear (FF A/T).....AT-136 RA
 Differential gear (FF M/T).....MT-23
 Dimensions.....GI-38
 Distributor.....EC-18 BR
 Distributor ignition (DI) system.....EC-18
 D/LOCK - Wiring diagram.....EL-178
 Dome light - See Interior lamp.....EL-74 ST
 Door, front.....BT-11
 Door glass.....BT-11, BT-12 RS
 Door lock.....BT-11, BT-12
 Door mirror.....BT-38
 Door, rear.....BT-12 BT
 Door trim.....BT-18
 Drive belt inspection.....MA-10
 Drive plate runout.....EM-52 HA
 Drive shaft (front).....FA-14
 DTRL - Wiring diagram.....EL-51 EL
 Dual pressure switch.....HA-44

E

ECCS relay.....EC-11
 ECM input/output signal.....EC-97
 ECTS - Wiring diagram.....EC-136, EC-155

IDX

ALPHABETICAL INDEX

EGR control (EGRC) - BPT valve.....EC-278
 EGR control (EGRC) - solenoid valveEC-367
 EGR control valve EC-276, EC-384
 EGR temperature sensorEC-372
 EGRC1 - Wiring diagramEC-269
 EGRC/V - Wiring diagram.....EC-367
 EGR/TS - Wiring diagramEC-372
 Electric sun roof EL-143
 Electrical diagnoses GI-20
 Electrical ignition system.....EC-18
 Electrical load signal circuit.....EC-499
 Electrical units location..... EL-232
 Engine compartment BT-39
 Engine control circuit diagram.....EC-9
 Engine control component parts location..... EC-11
 Engine control module (ECM).....EC-334
 Engine control system diagram and chartEC-10
 Engine coolant temperature sensor (ECTS).....EC-136
 Engine fail-safe system.....EC-88
 Engine oil filter replacement..... MA-16
 Engine oil precautions..... GI-5
 Engine oil replacement..... MA-15
 Engine outer component parts..... EM-10
 Engine removal EM-41
 Engine room - See Engine compartment BT-39
 Engine serial number GI-37
 EVAP canister EC-21
 EVAP canister purge control solenoid
 valve..... EC-438, EC-444
 EVAP canister purge control valve EC-438, EC-444
 EVAP canister purge volume control
 valve..... EC-21, EC-299, EC-399
 EVAP canister vent control valve.....EC-305
 EVAP control system pressure sensorEC-310
 EVAP control system (small leak)
 diagnosis..... EC-287, EC-386
 EVAP vapor lines inspection..... MA-17
 Evaporative emission (EVAP) system.....EC-21
 Exhaust gas recirculation (EGR) valve.....EC-269
 Exhaust system..... FE-6
 Exhaust system inspection..... MA-19
 Exterior BT-22
 Exterior lamp EL-56

F

Fan switch HA-30
 Fast idle.....EC-33
 Fast idle cam (FIC)EC-33
 Fast idle cam (FIC) inspection and
 adjustment..... EC-33
 F/FOG - Wiring diagram..... EL-61
 FICD - Wiring diagramEC-495

Final drive (FF A/T)AT-136
 Final drive (FF M/T)MT-23
 Finisher, interior - See Trim..... BT-16
 Finisher, trunk lid BT-25
 Floor trim BT-16
 Flow charts GI-30
 Fluids MA-8
 Flywheel (clutch) CL-8
 Flywheel runout..... EM-52
 Fog lamp, front..... EL-60
 Fog lamp, front, removal and installation..... BT-5
 Fork rod (M/T) MT-14
 Forward clutch..... AT-112
 F/PUMP - Wiring diagramEC-487
 Freeze frame data..... EC-44
 FRO2 - Wiring diagram.....EC-161
 FRO2/H - Wiring diagramEC-197
 Front axle FA-9
 Front bumper..... BT-5
 Front disc brake BR-19
 Front door..... BT-11
 Front fog lamp EL-60
 Front fog lamp removal and installation..... BT-5
 Front heated oxygen sensor (HO2S).....EC-161
 Front heated oxygen sensor (HO2S) heaterEC-197
 Front heated oxygen sensor (HO2S) monitor...EC-168
 Front oxygen sensor (O2S).....EC-161
 Front oxygen sensor (O2S) monitorEC-53
 Front passenger air bag..... RS-17
 Front seat BT-28
 Front seat belt RS-3
 Front suspension..... FA-21
 Front washer EL-120
 Front wiper EL-120
 FUEL - Wiring diagramEC-231
 Fuel cut control (at no load & high engine
 speed) EC-20
 Fuel filler lid..... BT-8
 Fuel filter..... EC-32
 Fuel filter replacement..... MA-14
 Fuel gauge EL-81, EL-91
 Fuel injector..... EC-483
 Fuel line inspection MA-14
 Fuel precautions..... GI-6
 Fuel pressure check..... EC-32
 Fuel pressure regulator..... EC-33
 Fuel pressure release EC-32
 Fuel pump EC-487
 Fuel pump and gauge FE-5
 Fuel pump relay EC-487
 Fuel system FE-3
 Fuel tank vacuum relief valve EC-22
 Fuel temperature sensor EC-242
 Fuse..... EL-16

ALPHABETICAL INDEX

Fuse block.....Foldout page
Fusible link.....EL-16

G

Garage jack and safety stand.....GI-40
Gauges.....EL-78, EL-88
Gear components (M/T).....MT-13
Generator.....EL-37
Generic scan tool (GST).....EC-76
Glass.....BT-11, BT-12
Governor valve assembly.....AT-35
Grease.....MA-8
Grille - See Exterior.....BT-5
Ground distribution.....EL-17

H

Harness connector.....EL-4
Harness connector inspection.....GI-17
Harness layout.....EL-233
Hazard warning lamp.....EL-63
Headlamp.....EL-44
Headlamp aiming control.....EL-47
Headlining - See Roof trim.....BT-20
Heated oxygen sensor (HO2S) (front).....EC-161
Heated oxygen sensor (HO2S) heater (front).....EC-197
Heated oxygen sensor (HO2S) heater (rear).....EC-227
Heated oxygen sensor monitor (HO2S) (front).....EC-168
Heated oxygen sensor (rear).....EC-201
HEATER - Wiring diagram.....HA-20
Heater system - Wiring diagram.....HA-20
Height (Dimensions).....GI-38
HFC134a (R134a) system precaution.....HA-2
HFC134a (R134a) system service procedure.....HA-61
HFC134a (R134a) system service tools.....HA-9
HFC134a system service equipment precaution.....HA-11
High clutch.....AT-107
H/LAMP - Wiring diagram.....EL-45
Hood.....BT-5
Horn.....EL-129
HORN - Wiring diagram.....EL-129
How to erase DTC for OBD system.....EC-52

I

IACV-AAC valve.....EC-327
IACV-FICD solenoid valve.....EC-495
IATS - Wiring diagram.....EC-130

Identification plate.....GI-36
Idle air control (IAC) system.....EC-321
Idle air control valve (IACV).....EC-321
Idle mixture ratio.....EC-36
Idle speed.....EC-36
Ignition coil.....EC-361
Ignition timing.....EC-36
Ignition wire inspection.....EC-250
IGN/SG - Wiring diagram.....EC-355
ILL - Wiring diagram.....EL-70
Illumination.....EL-69
INJECT - Wiring diagram.....EC-481
Injector.....EC-483
Injector removal and installation.....EC-33
Input shaft (FF M/T).....MT-17
Instrument panel.....BT-13
Intake air temperature sensor.....EC-130
Intake door control linkage adjustment.....HA-37
Intake door motor.....HA-37
Intake manifold.....EM-10
Intake valve timing control.....EC-345
Intake valve timing control solenoid valve.....EC-345
Interior.....BT-16
Interior lamp.....EL-69
Interior lamp on-off control.....EL-73
INT/L - Wiring diagram.....EL-74
IVC - Wiring diagram.....EC-345

J

Jacking points.....GI-39, GI-40
Joint connector (J/C).....Foldout page
Junction box (J/B).....Foldout page

K

Keyless entry system - See Multi-remote control system.....EL-190
Knock sensor (KS).....EC-251
Knuckle spindle.....FA-9
KS - Wiring diagram.....EC-251

L

Length (Dimensions).....GI-38
License lamp.....EL-58
Lifting points.....GI-39
Line pressure test (A/T).....AT-34
Liquid gasket application.....EM-2
LKUP - Wiring diagram.....EC-458
LOAD - Wiring diagram.....EC-499

ALPHABETICAL INDEX

Location of electrical units.....	EL-231
Lock, door.....	BT-11, BT-12
Low and reverse brake	AT-118
Lubricant (R134a) A/C.....	HA-63
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-63
Lubrication-locks, hinges and hood latches.....	MA-24
Luggage compartment trim	BT-21

M

MAFS - Wiring diagram.....	EC-112
Magnet clutch.....	HA-66
MAIN - Wiring diagram.....	EC-107
Main drive gear (M/T).....	MT-13
Mainshaft (M/T)	MT-19
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-62
Malfunction indicator lamp (MIL).....	EC-53
Manual steering gear	ST-14
Manual transaxle number.....	GI-37
Manual transmission oil replacement.....	MA-19
MAP/BARO switch solenoid valve	EC-336
Mass air flow sensor (MAFS).....	EC-112
Master cylinder (brake)	BR-12
Meter	EL-78, EL-88
METER - Wiring diagram	EL-80, EL-90
MIL & Data link connectors circuit	EC-503
MIL/DL - Wiring diagram	EC-503
MIRROR - Wiring diagram.....	EL-144
Mirror, door	BT-38
Mirror, out side	BT-38
Misfire	EC-246
Mode door control linkage adjustment.....	HA-32
Model variation.....	GI-35
Molding - See Exterior	BT-22
M/T major overhaul	MT-12
M/T removal and installation	MT-9
Mud guard - See Exterior.....	BT-27
MULTI - Wiring diagram	EL-193
Multiport fuel injection (MFI) system	EC-16
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-190

N

NVH troubleshooting (BR).....	BR-3
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-8
NVH troubleshooting (FA).....	FA-4

NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-5

O

Oil change (capacity)	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-7
Oil pump (A/T).....	AT-84
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-28
On board diagnostic system	EC-42
ORVR (On-board Refueling Vapor Recovery)	EC-26
Out side mirror	BT-38
Overdrive control switch.....	AT-46
Overrun clutch.....	AT-112
Oversize piston.....	EM-49
Oxygen sensor monitor (O2S) (front)	EC-168
Oxygen sensor (O2S) (front).....	EC-161

P

Parking brake control	BR-35
Park/neutral position (PNP) switch	EC-453
Park/neutral position (PNP) switch (A/T)	AT-47
Park/neutral position (PNP) switch (M/T).....	MT-8
PCV (positive crankcase ventilation)	EC-31
PGC/V - Wiring diagram	EC-299
Piston assembly	EM-53
Piston pin inspection	EM-46
Piston ring inspection	EM-47
Piston to bore clearance	EM-48
PNP/SW - Wiring diagram	EC-453
POWER - Wiring diagram.....	EL-10
Power door mirror	EL-144
Power steering fluid level.....	MA-23, ST-6
Power steering gear.....	ST-19
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch	EC-491
Power steering oil pump	ST-24
Power steering system bleeding	ST-7
Power supply routing.....	EL-8
Power transistor	EC-361
Power transistor & ignition coil.....	EC-355
Power window	EL-169
Precautions (General)	GI-3
PRE/SE - Wiring diagram	EC-310
Pressure plate - See Clutch cover.....	CL-8

ALPHABETICAL INDEX

Pressure test (A/T).....AT-34
PST/SW - Wiring diagram.....EC-491

R

Rack retainer adjustment.....ST-16
Radiator.....LC-14
Radiator fan - See Cooling fan.....LC-14
Radio - See Audio.....EL-139
Rear air spoiler.....BT-27
Rear axle.....RA-7
Rear axle (disc brake type).....RA-7
Rear axle (drum brake type).....RA-7
Rear bumper.....BT-8
Rear combination lamp removal and
installation.....BT-26
Rear disc brake.....BR-26
Rear door.....BT-12
Rear drum brake.....BR-23
Rear heated oxygen sensor (HO2S).....EC-201
Rear heated oxygen sensor (HO2S) heater.....EC-227
Rear seat.....BT-29
Rear seat belt.....RS-3
Rear side window.....BT-37
Rear suspension.....RA-9
Rear window.....BT-36
Rear window defogger.....EL-131
Refrigerant CFC12 precaution.....HA-2
Refrigerant connection precaution.....HA-4
Refrigerant discharging evacuating charging.....HA-61
Refrigerant general precaution.....HA-3
Refrigerant lines.....HA-57
Refrigeration cycle.....HA-13
Release bearing (clutch).....CL-6
Removal and installation (A/T).....AT-59
Resistor.....EC-361
Reverse clutch.....AT-103
Reverse idler shaft (M/T).....MT-13
Reverse lamp switch (M/T) - See Back-up
lamp switch (M/T).....MT-8
Reverse main gear (M/T).....MT-13
Road wheel size.....GI-38
Roof trim.....BT-20
Room lamp.....EL-72
Rotor disc (front).....FA-9
RRO2 - Wiring diagram.....EC-201
RRO2/H - Wiring diagram.....EC-227

S

SAE J1930 terminology list.....GI-44
Seal - See Exterior.....BT-22

Seat belt, front.....RS-3
Seat belt inspection.....MA-24, RS-8
Seat belt, rear.....RS-3
Seat, front.....BT-28
Seat, rear.....BT-29
Self-diagnostic results.....EC-53
SFT, RL - Wiring diagram.....AT-49
SHIFT - Wiring diagram.....AT-49
Shift control components (M/T).....MT-14
Shift fork (M/T).....MT-14
Shift lever.....MT-11
Shift lock system.....AT-48
Shift schedule.....AT-38
Shock absorber (front).....FA-22
Shock absorber (rear).....RA-11
Side trim.....BT-16
Smart entrance control unit.....EL-230
SMJ (super multiple junction).....Foldout page
Spare tire size.....GI-38
Spark plug replacement.....MA-16
Speedometer.....EL-84, EL-93
Spiral cable.....RS-15
Spot lamp.....EL-72
Spring (Wheelarch) height.....FA-6
SROOF - Wiring diagram.....EL-143
SRS - See Supplemental Restraint System.....RS-11
SRS - Wiring diagram.....RS-28
SRS Trouble diagnoses.....RS-23
S/SIG - Wiring diagram.....EC-484
Stabilizer bar (front).....FA-23
Stall test (A/T).....AT-31
Standardized relay.....EL-6
START - Wiring diagram.....EL-27
Start signal.....EC-484
Starter.....EL-30
Starting system.....EL-25
Steering gear and linkage inspection.....MA-23
Steering knuckle.....FA-9
Steering linkage (PR24T).....ST-19
Steering linkage (R24N).....ST-14
Steering switch.....EL-43
Steering wheel and column.....ST-10
Steering wheel play.....ST-8
Steering wheel turning force.....ST-7
Stop lamp.....EL-58
Striking rod (M/T).....MT-14
Strut (front).....FA-22
Strut (rear).....RA-11
Sun roof, electric.....EL-143
Sunroof.....BT-30
Supplemental Restraint System.....RS-11
Supplemental restraint system - Wiring
diagram.....RS-28
SW/V - Wiring diagram.....EC-336

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Symbols and abbreviations.....	GI-8
Symptom matrix chart.....	EC-89
Synchronizer (M/T).....	MT-13
System readiness test (SRT) code.....	EC-44

T

Tachometer.....	EL-83
Tail lamp.....	EL-58
TAIL/L - Wiring diagram.....	EL-58
Tank fuel temperature sensor.....	EC-242
Temperature control cable and linkage adjustment.....	HA-34
TFTS - Wiring diagram.....	EC-242, EC-244
THEFT - Wiring diagram.....	EL-209
Theft warning system.....	EL-204
Thermal protector.....	HA-44
Thermo control amp.....	HA-44
Thermostat.....	LC-12
Three way catalyst.....	EC-283
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-11
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment.....	EC-82
Throttle position sensor (TPS).....	EC-141
Throwout bearing - See Clutch release bearing.....	CL-6
Tie-rod (PR24T).....	ST-22
Tie-rod (R24N).....	ST-16
Tie-rod ball joints (PR24T).....	ST-22
Tie-rod ball joints (R24N).....	ST-16
Tightening torque of standard bolts.....	GI-43
Timing chain.....	EM-17
Tire rotation.....	MA-23
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-44
Torque converter installation.....	AT-60
Torque convertor clutch solenoid valve.....	EC-458, EC-463
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-141
TP/SW - Wiring diagram.....	EC-328
Transmission case (M/T).....	MT-12
Transverse link (front).....	FA-24
Tread-FR&RR (Dimensions).....	GI-38
Trim.....	BT-16
Trouble diagnoses.....	GI-20
Trunk lid.....	BT-8
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid.....	BT-8
Trunk room lamp.....	EL-72
Trunk room trim.....	BT-21
TURN - Wiring diagram.....	EL-66

Turn signal lamp.....	EL-63
Two trip detection logic.....	EC-42
Two-pole lift.....	GI-41

U

Under body.....	BT-41
-----------------	-------

V

Vacuum cut valve.....	EC-437
Vacuum cut valve bypass valve.....	EC-427
Vacuum hose (brake system).....	BR-18
Vacuum hose drawing (Engine control).....	EC-14
Valve clearance.....	EM-38
Valve guide.....	EM-33
Valve lifter.....	EM-36
Valve seat.....	EM-35
Valve spring.....	EM-36
Vehicle identification number.....	GI-36
Vehicle recovery (freeing a stuck vehicle).....	GI-42
Vehicle speed sensor (VSS).....	EC-316
VENT/V - Wiring diagram.....	EC-305
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram.....	EC-316

W

WARN - Wiring diagram.....	EL-99
Warning chime.....	EL-108
Warning lamps.....	EL-96
Washer, front.....	EL-120
Water pump.....	LC-11
Water temperature gauge.....	EL-81, EL-91
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-23
Wheel bearing (front axle).....	FA-7, FA-11
Wheel bearing (rear).....	RA-5
Wheel hub (front).....	FA-9
Wheel hub (rear).....	RA-7
Wheel sensors (ABS).....	BR-40
Wheel size.....	GI-38
Wheelarch height.....	FA-6
Wheelbase (Dimensions).....	GI-38
Wide open & closed throttle position switch.....	EC-141
Width (Dimensions).....	GI-38
WINDOW - Wiring diagram.....	EL-172
Window, door.....	BT-11, BT-12
Window, rear.....	BT-36

ALPHABETICAL INDEX

Windshield	BT-35	Wiring diagrams	GI-9
WIPER - Wiring diagram	EL-122	Withdrawal lever (clutch)	CL-6
Wiper, front	EL-120	Wrist pin - See Piston pin inspection	EM-46
Wiring Diagram (Cell code) list	EL-251		

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX