

ALPHABETICAL INDEX

SECTION **IDX**

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL

IDX

ALPHABETICAL INDEX

A

ABS - Wiring diagram	BR-44
ABS (anti-lock brake system).....	BR-33
ABS sensor rotor.....	FA-9
Absolute pressure sensor	EC-122
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component location.....	HA-14
A/C compressor clutch removal and installation	HA-66
A/C compressor mounting.....	HA-65
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-8
A/C control linkage adjustment (manual A/C).....	HA-34
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (manual A/C)	HA-24
A/C harness layout (manual A/C)	HA-17
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-61
A/C HFC134a (R134a) system service tools.....	HA-9
A/C HFC134a system service equipment precaution	HA-11
A/C lubricant (R134a).....	HA-63
A/C lubrication oil	HA-63
A/C operational check.....	HA-25
A/C performance chart.....	HA-49
A/C performance test diagnoses.....	HA-47
A/C pressure switch	HA-13
A/C relay.....	HA-44
A/C service data specification.....	HA-72
A/C switch	HA-43
A/C symptom chart (manual A/C)	HA-24
A/C trouble diagnoses (manual A/C)	HA-24
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	RS-15
Air bag disposal.....	RS-19
Air bag precautions	GI-2
Air bleeding for brake system	BR-5
Air cleaner filter replacement	MA-14
Air conditioner - Wiring diagram	HA-21
Air conditioner cut control	EC-20
Air conditioning - See A/C.....	HA-2
Air flow meter - See Mass air flow sensor.....	EC-112
Air mix door control linkage adjustment.....	HA-34
Air spoiler, rear.....	BT-27
AIRREG - Wiring diagram.....	EC-483
Alternator - See Generator.....	EL-33
Angular tightening application.....	EM-2
Antenna	EL-118

Anti-lock brake system - See ABS.....	BR-33
Anti-lock brake system - Wiring diagram.....	BR-44
AP/SEN - Wiring diagram	EC-122
ASCD - Wiring diagram.....	EL-126
ASCD (automatic speed control device).....	EL-122
A/T - Wiring diagram	AT-13
A/T diagnosis communication line	EC-447
A/T fluid temperature sensor.....	AT-88
A/T self-diagnoses.....	AT-42
A/T shift lock system	AT-183
A/T shift lock system - Wiring diagram	AT-184
A/T trouble diagnoses	AT-53
ATDIAG - Wiring diagram	EC-447
Audio	EL-115
AUDIO - Wiring diagram	EL-116
Audio and A/C control removal and installation - See Instrument panel.....	BT-13
Automatic speed control system - See ASCD..	EL-122
Automatic transaxle number	GI-37
Automatic transmission fluid replacement	MA-21
Auxiliary air control (AAC).....	EC-319

B

BACK/L - Wiring diagram.....	EL-55
Back-up lamp	EL-55
Back-up lamp switch (M/T)	MT-8
Ball joint front axle.....	FA-26
Basic inspection	EC-82
Battery	EL-20
Baulk ring (M/T).....	MT-12
Blower motor	HA-30
Blower resistor.....	HA-30
Board-on lift.....	GI-40
Body alignment.....	BT-39
Boring/honing cylinder block	EM-57
BPT valve	EC-275, EC-280
Brake booster	BR-15
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-4
Brake fluid level.....	MA-21
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-21
Brake lines and cables inspection	MA-21
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications.....	EL-226
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPSS/V - Wiring diagram.....	EC-421, EC-426

ALPHABETICAL INDEX

C

Camshaft inspection..... EM-39
 Camshaft position sensor (CMPS)..... EC-260
 Canister - See EVAP canister..... EC-22
 CANI/V - Wiring diagram..... EC-432
 CHARGE - Wiring diagram..... EL-34
 Charging system..... EL-33
 Chassis and body maintenance..... MA-19
 CHIME - Wiring diagram..... EL-93
 CIGAR - Wiring diagram..... EL-108
 Cigarette lighter..... EL-108
 Circuit breaker..... EL-16
 CKPS - Wiring diagram..... EC-255, EC-358
 Clearance lamp..... EL-56
 Closed loop control..... EC-342
 Closed throttle position switch..... EC-325
 Clutch cable..... CL-4
 Clutch cover..... CL-8
 Clutch disc..... CL-7
 Clutch pedal..... CL-4
 Clutch release bearing..... CL-6
 Clutch release mechanism..... CL-6
 Clutch withdrawal lever..... CL-6
 CMPS - Wiring diagram..... EC-260
 Coil spring (front)..... FA-24
 Coil spring (rear)..... RA-11
 Collision diagnosis..... RS-45
 Combination lamp, rear, removal and
 installation..... BT-26
 Combination meter..... EL-76
 Combination meter (needle type)..... EL-76
 Combination meter removal and installation -
 See Instrument panel..... BT-13
 Combination switch..... EL-40
 Compression pressure..... EM-12
 Compressor clutch removal and installation..... HA-66
 Compressor mounting..... HA-65
 Compressor precaution..... HA-7
 Compressor special service tool..... HA-8
 Connecting rod..... EM-55
 Connecting rod bearing clearance..... EM-59
 Connecting rod bushing clearance..... EM-60
 Connector inspection..... GI-17
 Console box - See Instrument panel..... BT-13
 CONSULT for ABS..... BR-51
 CONSULT for engine..... EC-62
 CONSULT general information..... GI-33
 Control lever (M/T)..... MT-10
 Control valve (A/T)..... AT-223
 Converter housing installation..... AT-195
 Coolant mixture ratio..... MA-9
 Coolant replacement..... MA-11

COOL/F - Wiring diagram..... EC-455
 Cooling circuit (engine)..... LC-8
 Cooling fan..... LC-13 GI
 Cooling fan control..... EC-455
 Cooling fan motor..... EC-468
 Cooling fan relay..... EC-468 MA
 Coupling sleeve (M/T)..... MT-12
 Crank angle sensor built into distributor - See
 Camshaft position sensor..... EC-260 EM
 Crankcase emission control system - See
 positive crankcase ventilation..... EC-32 LC
 Crankcase ventilation system - See positive
 crankcase ventilation..... EC-32
 Crankshaft..... EM-57 EC
 Crankshaft position sensor (OBD)..... EC-255, EC-358
 Crankshaft position sensor (OBD) cog
 chipping..... EC-358 FE
 Cruise control - See ASCD..... EL-122
 Cylinder block..... EM-53 CL
 Cylinder block boring..... EM-57
 Cylinder head..... EM-35
 Cylinder head bolt tightening..... EM-26 MT

D

Data link connector for CONSULT..... EC-33
 Daytime light system..... EL-47 FA
 Daytime running light - See Daytime light
 system..... EL-47 RA
 DEF - Wiring diagram..... EL-110
 Detonation sensor - See Knock sensor..... EC-250
 Diagnosis sensor unit..... RS-14 BR
 Diagnostic trouble code (DTC) for OBD
 system..... EC-2 ST
 Diagnostic trouble code (DTC) inspection
 priority chart..... EC-87
 Differential gear (FF A/T)..... AT-271 RS
 Differential gear (FF M/T)..... MT-26
 Dimensions..... GI-38
 Distributor..... EC-19 BT
 Distributor ignition (DI) system..... EC-19
 D/LOCK - Wiring diagram..... EL-154
 Dome light - See Interior lamp..... EL-70 HA
 Door, front..... BT-11
 Door glass..... BT-11, BT-12 EL
 Door lock..... BT-11, BT-12
 Door mirror..... BT-38
 Door, rear..... BT-12
 Door trim..... BT-18
 Drive belt inspection..... MA-10
 Drive plate runout..... EM-61
 Drive shaft (front)..... FA-14
 Dropping resistor (A/T)..... AT-134

IDX

ALPHABETICAL INDEX

DTC work support EC-71
 DTRL - Wiring diagram EL-50
 Dual pressure switch HA-44

E

ECCS relay EC-107
 ECM input/output signal EC-97
 ECTS - Wiring diagram EC-137, EC-157
 EGR control (EGRC) - BPT valve EC-276
 EGR control (EGRC) - solenoid valve EC-363
 EGR valve EC-274, EC-379
 EGR temperature sensor EC-368
 EGRC1 - Wiring diagram EC-267
 EGRC/V - Wiring diagram EC-363
 EGR/TS - Wiring diagram EC-368
 Electric sun roof EL-119
 Electrical diagnoses GI-20
 Electrical ignition system EC-19
 Electrical units location EL-208
 Electronic ignition (EI) system EC-19
 Engine compartment BT-39
 Engine control circuit diagram EC-9
 Engine control component parts location EC-11
 Engine control module (ECM) EC-331
 Engine control system diagram and chart EC-10
 Engine coolant temperature sensor
 (ECTS) EC-137, EC-157
 Engine fail-safe system EC-88
 Engine oil filter replacement MA-15
 Engine oil precautions GI-5
 Engine oil replacement MA-14
 Engine outer component parts EM-9
 Engine removal EM-49
 Engine room - See Engine compartment BT-39
 Engine serial number GI-37
 EVAP canister EC-22
 EVAP canister purge control solenoid
 valve EC-432, EC-438
 EVAP canister purge control valve EC-432, EC-438
 EVAP canister purge volume control solenoid
 valve EC-438
 EVAP canister purge volume control
 valve EC-22, EC-296, EC-393
 EVAP canister vent control
 valve EC-302, EC-401, EC-415
 EVAP control system pressure sensor EC-307
 EVAP control system purge flow monitoring
 diagnosis EC-406
 EVAP control system (small leak)
 diagnosis EC-24, EC-285, EC-381
 EVAP system close mode EC-24
 EVAP vapor lines inspection MA-18

Evaporative emission (EVAP) system EC-22
 Exhaust gas recirculation (EGR) valve EC-267
 Exhaust system FE-6
 Exhaust system inspection MA-19
 Exterior BT-22
 Exterior lamp EL-55

F

Fan switch HA-30
 F/FOG - Wiring diagram EL-59
 FICD - Wiring diagram EC-487
 Final drive (FF A/T) AT-271
 Final drive (FF M/T) MT-26
 Finisher, interior - See Trim BT-16
 Finisher, trunk lid BT-25
 Floor trim BT-16
 Flow charts GI-30
 Fluid temperature sensor (A/T) AT-88
 Fluids MA-8
 Flywheel (clutch) CL-8
 Flywheel runout EM-61
 Fog lamp, front EL-58
 Fog lamp, front, removal and installation BT-5
 Fork rod (M/T) MT-13
 Forward clutch AT-247
 FPCM - Wiring diagram EC-344
 F/PUMP - Wiring diagram EC-475
 Freeze frame data EC-44
 FRO2 - Wiring diagram EC-163
 FRO2/H - Wiring diagram EC-195
 Front axle FA-9
 Front bumper BT-5
 Front disc brake BR-18
 Front door BT-11
 Front fog lamp EL-58
 Front fog lamp removal and installation BT-5
 Front heated oxygen sensor (HO2S) EC-163
 Front heated oxygen sensor (HO2S) heater EC-195
 Front passenger air bag RS-17
 Front seat BT-28
 Front seat belt RS-3
 Front suspension FA-23
 Front washer EL-98
 Front wiper EL-98
 FUEL - Wiring diagram EC-230, EC-236
 Fuel cut control (at no load & high engine
 speed) EC-21
 Fuel filler lid BT-8
 Fuel filter EC-11, EC-33
 Fuel filter replacement MA-13
 Fuel gauge EL-78
 Fuel injection system EC-230, EC-236

ALPHABETICAL INDEX

Fuel injector.....EC-469
 Fuel line inspectionMA-13
 Fuel precautions.....GI-6
 Fuel pressure check.....EC-33
 Fuel pressure regulator.....EC-34
 Fuel pressure releaseEC-33
 Fuel pumpEC-475
 Fuel pump and gauge.....FE-5
 Fuel pump control moduleEC-344
 Fuel pump dropping resistorEC-475
 Fuel pump relayEC-475
 Fuel system.....FE-3
 Fuel tank vacuum relief valveEC-23
 Fuel temperature sensor.....EC-241
 Fuse.....EL-16
 Fuse block.....Foldout page
 Fusible linkEL-16

G

Garage jack and safety stand.....GI-40
 Gauges.....EL-75
 Gear components (M/T).....MT-12
 GeneratorEL-33
 Generic scan tool (GST).....EC-76
 GlassBT-11, BT-12
 Grille - See Exterior.....BT-5
 Ground distributionEL-17

H

Harness connectorEL-3
 Harness connector inspection.....GI-17
 Harness layoutEL-211
 Hazard warning lampEL-62
 HeadlampEL-43
 Headlamp aiming controlEL-46
 Headlining - See Roof trim.....BT-20
 Heated oxygen sensor (HO2S) (front).....EC-163
 Heated oxygen sensor (HO2S) heater (front)....EC-195
 Heated oxygen sensor (HO2S) heater (rear) ...EC-226
 Heated oxygen sensor (rear)EC-199
 HEATER - Wiring diagramHA-20
 Heater system - Wiring diagramHA-20
 Height (Dimensions).....GI-38
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service procedureHA-61
 HFC134a (R134a) system service tools.....HA-9
 HFC134a system service equipment
 precautionHA-11
 High clutch.....AT-242
 H/LAMP - Wiring diagramEL-44

Hood.....BT-5
 Horn.....EL-107
 HORN - Wiring diagramEL-107
 How to erase DTC for OBD systemEC-52
 Hydraulic lash adjuster inspectionEM-44

I

IACV - air regulatorEC-483, EC-486
 IACV-AAC valveEC-324
 IACV-FICD solenoid valve.....EC-487
 IATS - Wiring diagram.....EC-131
 Identification plateGI-36
 Idle air control (IAC) systemEC-319
 Idle air control valve (IACV).....EC-319
 Idle mixture ratio.....EC-35
 Idle speed.....EC-35
 Ignition coilEC-357
 Ignition timingEC-35
 Ignition wire inspection.....EC-249
 IGN/SG - Wiring diagramEC-351
 ILL - Wiring diagram.....EL-68
 IlluminationEL-67
 INJECT - Wiring diagramEC-469
 Injector.....EC-471
 Injector removal and installationEC-34
 Input shaft (FF M/T)MT-17
 Instrument panel.....BT-13
 Intake air temperature sensor.....EC-131
 Intake door control linkage adjustment.....HA-37
 Intake door motor.....HA-37
 Intake manifold.....EM-9
 InteriorBT-16
 Interior lampEL-67
 Interior lamp on-off controlEL-70
 INT/L - Wiring diagramEL-72

J

Jacking points.....GI-39, GI-40
 Joint connector (J/C).....Foldout page
 Junction box (J/B)Foldout page

K

Keyless entry system - See Multi-remote
 control system.....EL-167
 Knock sensor (KS)EC-250
 Knuckle spindleFA-9
 KS - Wiring diagram.....EC-250

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-38
License lamp	EL-56
Lifting points	GI-39
Line pressure solenoid valve	AT-119
Line pressure test (A/T)	AT-61
Liquid gasket application	EM-2
Location of electrical units	EL-208
Lock, door	BT-11, BT-12
Low and reverse brake	AT-253
Lubricant (R134a) A/C	HA-63
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication oil A/C	HA-63
Lubrication-locks, hinges and hood latches	MA-24
Luggage compartment trim	BT-21

M

MAFS - Wiring diagram	EC-112
Magnet clutch	HA-66
MAIN - Wiring diagram	EC-107
Main drive gear (M/T)	MT-12
Mainshaft (M/T)	MT-20
Maintenance	MA-3
Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-197
Malfunction indicator lamp (MIL)	EC-54
Manual transaxle number	GI-37
Manual transmission oil replacement	MA-19
MAP/BARO switch solenoid valve	EC-333
Mass air flow sensor (MAFS)	EC-112
Master cylinder (brake)	BR-12
Meter	EL-75
METER - Wiring diagram	EL-77
MIL & Data link connectors circuit	EC-491
MIL/DL - Wiring diagram	EC-491
MIRROR - Wiring diagram	EL-120
Mirror, door	BT-38
Mirror, out side	BT-38
Misfire	EC-245
Mode door control linkage adjustment	HA-32
Model variation	GI-35
Molding - See Exterior	BT-22
M/T major overhaul	MT-11
M/T removal and installation	MT-9
Mud guard - See Exterior	BT-27
MULTI - Wiring diagram	EL-170
Multiport fuel injection (MFI) system	EC-17
Multiport fuel injection precautions	GI-5
Multi-remote control system	EL-167

N

NVH troubleshooting (BR)	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (FA)	FA-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (ST)	ST-4

O

Oil change (capacity)	MA-8
Oil change (interval)	MA-5
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-219
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-33
On board diagnostic system	EC-42
ORVR (On-board Refueling Vapor Recovery)	EC-27
Out side mirror	BT-38
Overdrive control switch	AT-181
Overrun clutch	AT-247
Overrun clutch solenoid valve	AT-119
Oversize piston	EM-57

P

Parking brake control	BR-31
Parking lamp	EL-56
Park/neutral position (PNP) switch	EC-450
Park/neutral position (PNP) switch (A/T)	AT-81
Park/neutral position (PNP) switch (M/T)	MT-8
PCV (positive crankcase ventilation)	EC-32
PGC/V - Wiring diagram	EC-296
Pilot bushing replacement	EM-61
Piston assembly	EM-62
Piston pin inspection	EM-54
Piston ring inspection	EM-55
Piston to bore clearance	EM-56
PNP/SW - Wiring diagram	EC-450
POWER - Wiring diagram	EL-10
Power door lock	EL-151
Power door mirror	EL-120
Power steering fluid level	MA-23, ST-5
Power steering gear	ST-13
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-479
Power steering oil pump	ST-18

ALPHABETICAL INDEX

Power steering system bleeding..... ST-6
 Power supply routing..... EL-8
 Power transistor EC-357
 Power transistor & ignition coil..... EC-351
 Power window EL-145
 Precautions (General) GI-3
 PRE/SE - Wiring diagram EC-307
 Pressure plate - See Clutch cover..... CL-8
 Pressure test (A/T) AT-61
 PST/SW - Wiring diagram..... EC-479

R

Radiator LC-13
 Radiator fan - See Cooling fan LC-13
 Radio - See Audio EL-115
 Rear air spoiler..... BT-27
 Rear axle RA-7
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-26
 Rear disc brake BR-22
 Rear door BT-12
 Rear heated oxygen sensor (HO2S) EC-199
 Rear heated oxygen sensor (HO2S) heater..... EC-226
 Rear seat..... BT-29
 Rear seat belt..... RS-3
 Rear side window BT-37
 Rear suspension RA-9
 Rear window..... BT-36
 Rear window defogger EL-109
 Refrigerant CFC12 precaution HA-2
 Refrigerant connection precaution HA-4
 Refrigerant discharging evacuating charging..... HA-61
 Refrigerant general precaution..... HA-3
 Refrigerant lines HA-57
 Refrigeration cycle..... HA-13
 Release bearing (clutch) CL-6
 Removal and installation (A/T)..... AT-194
 Resistor EC-357
 Reverse clutch..... AT-238
 Reverse idler shaft (M/T) MT-12
 Reverse lamp switch (M/T) - See Back-up
 lamp switch (M/T) MT-8
 Reverse main gear (M/T) MT-12
 Revolution sensor (A/T) AT-92
 Road wheel size GI-38
 Roof trim..... BT-20
 Room lamp EL-70
 Room lamp - See Interior lamp..... EL-70
 Rotor disc (front) FA-9
 RRO2 - Wiring diagram..... EC-199
 RRO2/H - Wiring diagram..... EC-226

S

SAE J1930 terminology list..... GI-44
 Seal - See Exterior BT-22
 Seat belt, front..... RS-3
 Seat belt inspection..... MA-24, RS-8
 Seat belt, rear..... RS-3
 Seat, front..... BT-28
 Seat, rear..... BT-29
 Self-diagnostic results EC-54
 SFT, RE - Wiring diagram AT-184
 SHIFT - Wiring diagram AT-184
 Shift control components (M/T)..... MT-13
 Shift fork (M/T) MT-13
 Shift lever MT-10
 Shift lock system AT-183
 Shift schedule..... AT-296
 Shift solenoid valve A (A/T) AT-100, AT-110
 Shift solenoid valve B (A/T) AT-100
 Shock absorber (front) FA-24
 Shock absorber (rear) RA-11
 Side trim BT-16
 Smart entrance control unit..... EL-206
 SMJ (super multiple junction)..... Foldout page
 Spare tire size GI-38
 Spark plug replacement MA-15
 Speedometer EL-81
 Spiral cable..... RS-15
 Spring (Wheelarch) height FA-6
 SROOF - Wiring diagram..... EL-119
 SRS - See Supplemental Restraint System RS-11
 SRS - Wiring diagram RS-28
 SRS Trouble diagnoses RS-23
 S/SIG - Wiring diagram EC-472
 Stabilizer bar (front)..... FA-25
 Stall test (A/T) AT-58
 Standardized relay EL-5
 START - Wiring diagram EL-27
 Start signal EC-472
 Starter..... EL-30
 Starting system..... EL-25
 Steering gear and linkage inspection..... MA-23
 Steering knuckle..... FA-9
 Steering linkage..... ST-13
 Steering switch..... EL-42
 Steering wheel and column..... ST-9
 Steering wheel play..... ST-7
 Steering wheel turning force ST-6
 Stop lamp EL-56
 Striking rod (M/T) MT-13
 Strut (front) FA-24
 Strut (rear) RA-11
 Sun roof, electric EL-119

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Sunroof..... BT-30
 Supplemental Restraint System..... RS-11
 Supplemental restraint system - Wiring
 diagram RS-28
 SW/V - Wiring diagram EC-333
 Symbols and abbreviations GI-8
 Symptom matrix chart EC-89
 Synchronizer (M/T)..... MT-12
 System readiness test (SRT) code EC-44

T

Tachometer..... EL-80
 Tail lamp EL-56
 TAIL/L - Wiring diagram EL-56
 Tank fuel temperature sensor EC-241
 TCM circuit diagram AT-12
 TCM inspection table AT-76
 Temperature control cable and linkage
 adjustment..... HA-34
 TFTS - Wiring diagram..... EC-241
 THEFT - Wiring diagram EL-186
 Theft warning system EL-181
 Thermal protector HA-44
 Thermo control amp HA-44
 Thermostat LC-11
 Three way catalyst EC-281
 Three way catalyst precautions GI-5
 Throttle bodies..... EM-10
 Throttle drum adjustment FE-2
 Throttle position sensor adjustment..... EC-82
 Throttle position sensor (TPS) EC-142
 Throttle position switch..... AT-149, AT-182, EC-325
 Throwout bearing - See Clutch release
 bearing CL-6
 Tie-rod ST-16
 Tie-rod ball joints ST-16
 Tightening torque of standard bolts GI-43
 Timing chain EM-18
 Tire rotation MA-23
 Tire size..... GI-38
 Torque converter clutch solenoid valve..... AT-119
 Torque converter installation AT-195
 Tow truck towing..... GI-41
 TPS - Wiring diagram..... EC-142
 TP/SW - Wiring diagram EC-325
 Transmission case (M/T)..... MT-11
 Transverse link (front) FA-26
 Tread-FR&RR (Dimensions) GI-38
 Trim BT-16
 Trouble diagnoses GI-20
 Trunk lid..... BT-8
 Trunk lid finisher..... BT-25

Trunk lid opener - See Trunk lid BT-8
 Trunk room lamp EL-70
 Trunk room trim..... BT-21
 TURN - Wiring diagram..... EL-64
 Turn signal lamp..... EL-62
 Two trip detection logic EC-42
 Two-pole lift GI-41

U

Under body BT-41

V

Vacuum cut valve EC-431
 Vacuum cut valve bypass valve EC-421, EC-426
 Vacuum hose (brake system) BR-17
 Vacuum hose drawing (Engine control) EC-15
 Valve clearance EM-41
 Valve guide EM-41
 Valve seat EM-42
 Valve spring EM-44
 Vehicle identification number GI-36
 Vehicle recovery (freeing a stuck vehicle) GI-42
 Vehicle speed sensor (VSS) EC-314
 VENT/V - Wiring diagram..... EC-302, EC-401, EC-415
 Viscosity number (SAE) MA-8
 VSS - Wiring diagram EC-314

W

WARN - Wiring diagram..... EL-87
 Warning chime EL-92
 Warning lamps EL-84
 Washer, front EL-98
 Water pump LC-9
 Water temperature gauge EL-78
 Weatherstrip - See Exterior..... BT-22
 Wheel alignment (front)..... FA-7
 Wheel alignment (rear)..... RA-6
 Wheel balance..... MA-23
 Wheel bearing (front axle)..... FA-7, FA-11
 Wheel bearing (rear) RA-5
 Wheel hub (front) FA-9
 Wheel hub (rear) RA-7
 Wheel sensors (ABS)..... BR-36
 Wheel size..... GI-38
 Wheelarch height FA-6
 Wheelbase (Dimensions) GI-38
 Wide open & closed throttle position switch..... EC-142
 Width (Dimensions) GI-38

ALPHABETICAL INDEX

WINDOW - Wiring diagram.....	EL-148	Wiper and washer	EL-98
Window, door.....	BT-11, BT-12	Wiper, front	EL-98
Window, rear	BT-36	Wiring Diagram (Cell code) list	EL-227
Windshield	BT-35	Wiring diagrams	GI-9
Windshield washer - See Front washer.....	EL-98	Withdrawal lever (clutch).....	CL-6
Windshield wiper - See Front wiper.....	EL-98	Wrist pin - See Piston pin inspection.....	EM-54
WIPER - Wiring diagram.....	EL-100		

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX