

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-458, 1111, 1779
 ABS - Wiring diagram.....BR-43
 ABS sensor rotorAX-23
 Absolute pressure
 sensorEC-185, 859, 1130, 1524
 A/C - Wiring diagramHA-23
 A/C air flowHA-17
 A/C component layoutHA-15
 A/C compressor clutch removal and
 installationHA-67
 A/C compressor mountingHA-66
 A/C compressor precautionHA-6
 A/C compressor special service toolHA-10
 A/C control linkage adjustment (manual
 A/C)HA-32
 A/C control operation (manual A/C)HA-16
 A/C diagnostic work flow (manual A/C).....HA-25
 A/C HFC134a (R134a) system
 identificationHA-6
 A/C HFC134a (R134a) system
 introductionHA-14
 A/C HFC134a (R134a) system
 precaution.....HA-2
 A/C HFC134a (R134a) system service
 procedureHA-61
 A/C HFC134a (R134a) system service
 toolsHA-11
 A/C HFC134a system service equipment
 precaution.....HA-7
 A/C lubricant (R134a)HA-63
 A/C lubrication oil.....HA-63
 A/C operational checkHA-26
 A/C performance chartHA-52
 A/C performance test diagnosesHA-52
 A/C pressure switch.....HA-14
 A/C push control.....HA-16
 A/C relayHA-49
 A/C service data specificationHA-81
 A/C switch.....HA-16
 A/C trouble diagnoses (manual A/C).....HA-19
 A/C, M - Wiring diagramHA-23
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Air bagRS-13
 Air bag disposalRS-25
 Air bag precautionsGI-3
 Air bleeding (hydraulic clutch).....CL-7
 Air bleeding for brake system.....BR-8
 Air cleaner filter replacementMA-20, 29
 Air conditioner - Wiring diagramHA-23
 Air conditioner cut controlEC-48, 725, 1389
 Air control cable adjustmentHA-34
 Air flow meter - See Mass air flow
 sensorEC-176, 850, 1515

Air mix door control linkage
 adjustment.....HA-35
 Air spoiler, rearBT-31
 AlternatorSC-17
 Angular tightening application.....EM-4, 77
 AntennaEL-166
 Anti-lock brake system - Wiring
 diagramBR-43
 AP/SEN - Wiring
 diagramEC-186, 860, 1132, 1525
 ASCD (automatic speed control
 device)EL-173
 ASCD - Wiring diagram.....EL-178
 A/T - Wiring diagram - AT - FTSAT-122, 282
 A/T - Wiring diagram - AT -
 MAINAT-112, 272
 A/T - Wiring diagram - AT -
 PNP/SWAT-116, 276
 A/T - Wiring diagram - AT - VSS
 A/TAT-128, 288
 A/T controlEC-472, 1125, 1793
 A/T diagnosis communication
 lineEC-657, 1322, 1909
 A/T fluid temperature sensorAT-125, 285
 A/T shift lock systemAT-425
 A/T shift lock system - Wiring
 diagramAT-426
 A/T trouble diagnosesAT-59
 A/T Wiring diagram - AT -
 ENG SSAT-132, 292
 A/T Wiring diagram AT - 1STAT-138, 298
 A/T Wiring diagram AT - 2NDAT-145, 305
 A/T Wiring diagram AT - 3RD.....AT-151, 311
 A/T Wiring diagram AT - 4TH.....AT-157, 317
 A/T Wiring diagram AT - BA/FTSAT-205, 365
 A/T Wiring diagram AT - LPSVAT-179, 339
 A/T Wiring diagram AT -
 NONDTC.....AT-218, 377
 A/T Wiring diagram AT -
 OVRCSV.....AT-200, 360
 A/T Wiring diagram AT - SSV/AAT-184, 344
 A/T Wiring diagram AT - SSV/BAT-188, 348
 A/T Wiring diagram AT -
 TCCSIGAT-170, 330
 A/T Wiring diagram AT - TCVAT-164, 324
 A/T Wiring diagram AT - TPS.....AT-193, 353
 A/T Wiring diagram AT -
 VSSMTRAT-212, 371
 AT/C - Wiring diagramEC-1126, 1794
 ATDIAG - Wiring diagram.....EC-1323, 1910
 AudioEL-161
 AUDIO - Wiring diagramEL-162
 Audio and A/C control removal and installation -
 See Instrument panelBT-21
 Automatic speed control system - See
 ASCDEL-173
 Automatic transaxle numberGI-45

ALPHABETICAL INDEX

Automatic transmission fluid
replacementMA-36
Auxiliary air control (AAC)
valveEC-455, 1108, 1776

B

Back-up lampEL-52
Back-up lamp switch (M/T)MT-10
BACK/L - Wiring diagramEL-52
Ball joint (front)SU-12
Base idle air volume
initializingEC-83, 756, 1424
Basic inspectionEC-131, 802, 1470
BatterySC-3
Baulk ring (M/T)MT-18
Bi-level door control linkage
adjustmentHA-34
Blower motorHA-41
Blower resistorHA-41
Blower unitHA-72
Board-on liftGI-46
Body alignmentBT-51
Boring/honing cylinder blockEM-134
Brake boosterBR-17
Brake control valve (Proportioning
valve)BR-11
Brake fluid changeBR-7
Brake fluid levelMA-37
Brake fluid level and line checkBR-7
Brake hydraulic lineBR-9
Brake inspectionMA-37
Brake lines and cables inspectionMA-37
Brake pedalBR-12
Bulb specificationsEL-348
Bumper, frontBT-13
Bumper, rearBT-16
BYP/S/V - Wiring
diagramEC-643, 1306, 1313, 1893, 1900

C

Camshaft inspectionEM-35, 111
Camshaft position sensor
(CMPS)EC-363, 1014, 1683
Canister-See EVAP
canisterEC-49, 726, 1390
CHARGE - Wiring diagramSC-15
Charging systemSC-14
Chassis and body maintenanceMA-35
CHIME - Wiring diagramEL-118
CIGAR - Wiring diagramEL-144
Cigarette lighterEL-144
Circuit breakerEL-19
CKPS - Wiring
diagramEC-359, 561, 1010, 1679, 1827

Closed loop controlEC-523, 1175, 1800
Closed throttle position
switchEC-464, 1117, 1785
Clutch coverCL-17
Clutch discCL-17
Clutch fluid levelMA-35
Clutch master cylinderCL-8
Clutch operating cylinderCL-11
Clutch pedalCL-6
Clutch release bearingCL-14
Clutch release mechanismCL-14
Clutch withdrawal leverCL-14
CMPS - Wiring diagramEC-364, 1015, 1685
Coil spring (front)SU-9
Coil spring (rear)SU-21
Collision diagnosisRS-65
Combination lamp, front, removal and
installationBT-13
Combination lamp, rear, removal and
installationBT-31
Combination meterEL-85
Combination meter removal and installation -
See Instrument panelBT-21
Combination switchEL-32
Component Location (manual A/C)HA-19
Compression pressureEM-16, 87
Compressor clutch removal and
installationHA-67
Compressor mountingHA-66
Compressor precautionHA-6
Compressor special service toolHA-10
Connecting rodEM-56, 133
Connecting rod bearing
clearanceEM-60, 137
Connecting rod bushing
clearanceEM-61, 138
Connector inspectionGI-22
Console box - See Instrument panelBT-21
CONSULT for ABSBR-48
CONSULT for engineEC-107, 779, 1447
CONSULT-II general informationGI-39
Control lever (M/T)MT-16
Control units (terminal arrangement)EL-353
Control valve (A/T)AT-465
Converter housing installationAT-535
COOL/F - Wiring diagramEC-334, 535, 985,
1179, 1654, 1805
Coolant mixture ratioMA-15
Coolant replacementMA-17, 26
Cooling circuit (engine)LC-10, 28
Cooling fanLC-15, 33
Cooling fan controlEC-532, 1176, 1802
Cooling fan control systemLC-18, 36
Cooling fan motorEC-548, 1192, 1819
Cooling fan relayEC-547, 1191, 1818
Cooling unit (A/C evaporator)HA-73
Coupling sleeve (M/T)MT-18

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Crank angle sensor built into distributor -
See Camshaft position
sensorEC-363, 1014, 1683
Crankcase emission control system - See
positive crankcase
ventilation.....EC-65, 742, 1406
Crankcase ventilation system - See
Positive crankcase
ventilation.....EC-65, 742, 1406
Crankshaft.....EM-58, 135
Crankshaft position sensor
(OBD)EC-358, 560, 1009, 1678, 1826
Crankshaft position sensor (OBD) cog
chipping.....EC-560, 1826
Cruise control - See ASCDEL-173
Cylinder block.....EM-53, 130
Cylinder block boring.....EM-134
Cylinder head.....EM-31, 105
Cylinder head bolt tighteningEM-42, 121

D

Data link connector for Consult.EC-67, 107, 744,
779, 1408, 1447
Daytime light system.....EL-40
Daytime running light - See Daytime light
system.....EL-40
DEF - Wiring diagramEL-148
Detonation sensor - See Knock
sensorEC-354, 1005, 1674
Diagnosis sensor unit.....RS-18
Diagnostic trouble code (DTC) for OBD
system.....EC-22, 86, 701, 759, 1366, 1427
Diagnostic trouble code (DTC) inspection
priority chart.....EC-145, 817, 1484
Differential gear (FF A/T).....AT-515
Differential gear (FF M/T).....MT-20, 40
DimensionsGI-45
DistributorEC-47, 724, 1388
Distributor ignition (DI)
system.....EC-47, 724, 1388
D/LOCK - Wiring diagramEL-202
Dome light - See Interior lamp.....EL-64
Door mirrorBT-49
Door trim.....BT-27
Door, front.....BT-19
Door, rearBT-19, 20
Drive belt inspection.....MA-16, 25
Drive plate runout.....EM-61, 139
Drive shaft (front).....AX-10
Dropping resistor (A/T).....AT-182, 342
DTC work supportEC-122, 794, 1462
DTRL - Wiring diagramEL-44

E

ECM input/output signal.....EC-156, 828, 1495
ECTS - Wiring diagram.....EC-198, 215, 872,
888, 1537, 1553
EGR temperature
sensorEC-565, 1244, 1831
EGR/TS - Wiring
diagram.....EC-568, 1247, 1834
EGRC1 - Wiring
diagram.....EC-373, 381, 575, 1024,
1032, 1254, 1694, 1702, 1841
Electric sun roofEL-167
Electrical diagnoses.....GI-25
Electrical ignition system.....EC-47, 724, 1388
Electrical unit.....EL-353
Electrical units location.....EL-325
Electronic ignition (EI)
system.....EC-47, 724, 1388
Engine compartmentBT-52
Engine control circuit
diagram.....EC-39, 718, 1381
Engine control component parts
location.....EC-34, 713, 1378
Engine control module
(ECM).....EC-474, 1128, 1796
Engine control system diagram and
chart.....EC-41, 720, 1383
Engine coolant temperature sensor
(ECTS).....EC-196, 213, 870,
886, 1535, 1551
Engine fail-safe system.....EC-146, 818, 1485
Engine oil filter replacementMA-21, 30
Engine oil precautionsGI-7
Engine oil replacementMA-20, 29
Engine outer component parts.....EM-12, 84
Engine removalEM-49, 127
Engine room - See Engine
compartment.....BT-52
Engine serial number.....GI-44
EVAP canisterEC-50, 727, 1391
EVAP canister purge volume control solenoid
valve.....EC-403, 597, 1055,
1260, 1725, 1847
EVAP canister vent control
valveEC-409, 609, 629, 1061,
1272, 1292, 1731, 1859, 1879
EVAP control system (small leak)
diagnosisEC-52, 389, 428, 580, 728,
1040, 1080, 1258, 1393, 1710, 1750, 1845
EVAP control system pressure
sensorEC-416, 1068, 1738
EVAP control system purge flow monitoring
diagnosis.....EC-617, 1280, 1867
EVAP system close mode.....EC-52, 728, 1393
EVAP vapor lines inspection.....MA-23, 33

ALPHABETICAL INDEX

Evaporative emission (EVAP)
 system.....EC-49, 726, 1390
Exhaust gas recirculation (EGR)
 valve.....EC-369, 573, 1020,
 1252, 1690, 1839
Exhaust system.....FE-15
Exhaust system inspection.....MA-35
ExteriorBT-31

F

Fan switch.....HA-41
F/FOG - Wiring diagram.....EL-54
Final drive (FF A/T)AT-515
Final drive (FF M/T).....MT-20, 40
Finisher, interior - See Trim.....BT-25
Finisher, trunk lid.....BT-30
Floor trimBT-25
Fluid temperature sensor (A/T)AT-125, 285
FluidsMA-13
Flywheel (clutch)CL-18
Flywheel runout.....EM-61, 139
Fog lamp, front.....EL-53
Fog lamp, front, removal and
 installation.....BT-13
Fork rod (M/T).....MT-19
Forward clutchAT-490
F/PUMP - Wiring
 diagram.....EC-675, 1339, 1927
Freeze frame data.....EC-86, 759, 1427
FRO2 - Wiring diagram.....EC-221, 243, 253,
 1196, 1201, 1218, 1226, 1559, 1578, 1586
FRO2/H - Wiring
 diagram.....EC-261, 1230, 1592
Front axleAX-2
Front bumper.....BT-13
Front combination lamp removal and
 installation.....BT-13
Front disc brake.....BR-20
Front door.....BT-19
Front fog lamp.....EL-53
Front fog lamp removal and installation.....BT-13
Front heated oxygen sensor
 (HO2S)EC-218, 227, 233, 240, 251,
 1193, 1198, 1203, 1209, 1215, 1223, 1556,
 1563, 1569, 1575, 1584
Front heated oxygen sensor (HO2S)
 heater.....EC-259, 1228, 1590
Front passenger air bagRS-23
Front seatBT-37
Front seat belt.....RS-5
Front suspensionSU-2
Front washerEL-137
Front wiperEL-137
FUEL - Wiring diagramEC-308, 317, 963,
 970, 1632, 1639

Fuel cut control (at no load & high engine
 speed).....EC-49, 726, 1390
Fuel filterEC-744
Fuel gaugeEL-85
Fuel injection
 system.....EC-306, 315, 961, 968, 1630, 1637
Fuel injector.....EC-665, 1329, 1917
Fuel line inspectionMA-19, 28
Fuel precautionsGI-8
Fuel pressure check.....EC-67, 744, 1408
Fuel pressure regulatorEC-68, 1409
Fuel pressure releaseEC-67, 744, 1408
Fuel pumpEC-674, 1338, 1926
Fuel pump relayEC-674, 1338, 1926
Fuel system.....FE-5
Fuel tank temperature
 sensorEC-324, 975, 1644
Fuel tank vacuum relief
 valve.....EC-50, 727, 1391
Fuse.....EL-19
Fuse block.....EL-351
Fusible linkEL-19

G

Garage jack and safety stand.....GI-47
GaugesEL-85
Gear components (M/T)MT-18
Generator.....SC-17
Generator - See AlternatorSC-17
Generic scan tool (GST)EC-125, 796, 1464
Grease.....MA-13
Ground distributionEL-20

H

Harness connectorEL-5
Harness connector inspectionGI-22
Harness layoutEL-328
Hazard warning lampEL-56
HeadlampEL-35
Headlamp removal and installation.....BT-13
Headlining - See Roof trim.....BT-29
Heated oxygen sensor (HO2S)
 (front)EC-218, 227, 233, 240, 251,
 1193, 1198, 1203, 1209, 1215, 1223, 1556,
 1563, 1569, 1575, 1584
Heated oxygen sensor (HO2S) heater
 (front)EC-259, 1228, 1590
Heated oxygen sensor (HO2S) heater
 (rear)EC-300, 921, 956, 1625
Heated oxygen sensor
 (rear).....EC-265, 274, 283, 292, 891, 899,
 907, 915, 926, 934, 942, 950, 1595, 1603,
 1611, 1619
HEATER - Wiring diagram.....HA-22

ALPHABETICAL INDEX

Heater mirrorEL-170
Heater system - Wiring diagram.....HA-22
Heater unit (heater core)HA-71
Height (Dimensions)GI-45
HFC134a (R134a) system identification.....HA-6
HFC134a (R134a) system
 introduction.....HA-14
HFC134a (R134a) system precaution.....HA-2
HFC134a (R134a) system service
 procedureHA-61
HFC134a (R134a) system service
 tools.....HA-11
HFC134a system service equipment
 precaution.....HA-7
High clutch.....AT-485
H/LAMP - Wiring diagramEL-36
H/MIRROR - Wiring diagramEL-170
HoodBT-13
Horn.....EL-143
HORN - Wiring diagram.....EL-143
How to erase DTC for OBD
 system.....EC-98, 770, 1438
Hydraulic lash adjuster inspection.....EM-116

I

IACV-AAC valveEC-455, 1108, 1776
IATS - Wiring diagram.....EC-192, 866, 1531
Identification plateGI-44
Idle air control (IAC)
 system.....EC-455, 1108, 1776
Idle air control valve
 (IACV)EC-455, 1108, 1776
Idle mixture ratio.....EC-71, 747, 1412
Idle speed.....EC-71, 747, 1412
IGN/SG - Wiring
 diagram.....EC-550, 1234, 1821
Ignition coil.....EC-1825
Ignition control systemEC-549, 1233, 1820
Ignition timingEC-71, 747, 1412
Ignition wire inspectionEC-1673
ILL - Wiring diagram.....EL-62
IlluminationEL-61
INJECT - Wiring
 diagram.....EC-666, 1330, 1918
Injector removal and
 installation.....EC-68, 745, 1409
Input shaft (FF M/T)MT-18, 27
Instrument panel.....BT-21
INT/L - Wiring diagram.....EL-68
Intake air temperature
 sensorEC-190, 864, 1529
Intake door control linkage adjustmentHA-32
Intake door motorHA-29
Intake manifold.....EM-12, 84
InteriorBT-25

Interior lampEL-64

J

Jacking pointsGI-47
Joint connector (J/C)EL-354
Junction box (J/B)EL-351

K

Keyless entry system - See Multi-remote
 control system.....EL-229
Knock sensor (KS)EC-354, 355,
 1005, 1006, 1674, 1675
Knuckle spindle.....AX-5

L

Length (Dimensions).....GI-45
License lampEL-49
Lifting points.....GI-48
Line pressure solenoid valveAT-162, 322
Line pressure test (A/T).....AT-72
Liquid gasket application.....EM-4, 77
LOAD - Wiring diagram.....EC-689, 1353, 1942
Location of electrical units.....EL-325
Low and reverse brake.....AT-497
Lubricant (R134a) A/CHA-63
Lubricants.....MA-13
Lubrication circuit (engine).....LC-4, 22
Lubrication oil A/C.....HA-63
Lubrication-locks, hinges and hood
 latches.....MA-40
Luggage room lampEL-64

M

MAFS - Wiring diagram.....EC-180, 854, 1519
Magnet clutchHA-67
MAIN - Wiring diagram.....EC-170, 843, 1509
Main drive gear (M/T)MT-18
Mainshaft (M/T)MT-18, 32
Maintenance (engine)MA-16, 25
MAJOR OVERHALL.....AT-439
Malfunction indicator lamp
 (MIL).....EC-100, 772, 1440
Manual air conditioner - Wiring
 diagramHA-23
Manual transaxle numberGI-45
Manual transmission oil replacement.....MA-35
Mass air flow sensor
 (MAFS).....EC-176, 850, 1515
Master cylinder (clutch).....CL-8

ALPHABETICAL INDEX

MeterEL-85
 METER - Wiring diagramEL-93
 MIL & Data link connectors
 circuit.....EC-698, 1363, 1954
 MIL/DL - Wiring
 diagram.....EC-698, 1363, 1954
 MIRROR - Wiring diagramEL-169
 Mirror defogger.....EL-170
 Mirror, doorBT-49
 MisfireEC-347, 998, 1667
 Model variation.....GI-42
 Molding - See ExteriorBT-31
 M/T major overhaul.....MT-17
 M/T removal and installationMT-12
 MULTI - Wiring diagramEL-234
 Multi-remote control systemEL-229
 Multiport fuel injection (MFI)
 system.....EC-45, 722, 1386
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system).....EL-305
 NATS - Wiring diagramEL-307
 Neutral position switchEC-659, 1325, 1912
 NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR)BR-6
 NVH troubleshooting (CL).....CL-4
 NVH troubleshooting (EM).....EM-10, 82
 NVH troubleshooting (M/T).....MT-6
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-15
 NVIS (Nissan vehicle immobilizer
 system)EL-305

O

Oil change (capacity)MA-13
 Oil pan (engine)EM-17, 88
 Oil pressure (engine)LC-5, 22
 Oil pump (A/T)AT-461
 Oil pump (engine)LC-5, 23
 Oil pump regulator valve (engine)LC-7, 24
 Oil seal replacement (engine).....EM-29, 102
 On board diagnostic
 system.....EC-85, 758, 1426
 Operating cylinder (clutch)CL-11
 ORVR (On-board Refueling Vapor
 Recovery).....EC-55, 732, 1396
 Overdrive control switch.....AT-265, 422
 Overrun clutchAT-490
 Oversize piston.....EM-134

P

Park/Neutral position
 switch.....EC-659, 1325, 1912
 Park/neutral position switch
 (A/T)AT-115, 275
 Park/neutral position switch (M/T)MT-10
 Parking brake control.....BR-36
 Parking drum brakeBR-32
 Parking lampEL-49
 PCM inspection tableAT-268
 PCV (positive crankcase
 ventilation).....EC-65, 742, 1406
 PGC/V - Wiring diagramEC-405, 600, 1057,
 1263, 1727, 1850
 Pilot bushing replacement.....EM-138
 Piston assemblyEM-62, 139
 Piston pin inspection.....EM-55, 132
 Piston ring inspection.....EM-55, 132
 Piston to bore clearanceEM-57, 134
 PNP/SW - Wiring
 diagram.....EC-661, 1327, 1914
 POWER - Wiring diagramEL-11
 Power door lockEL-198
 Power door mirrorEL-169
 Power steering fluid levelMA-39, ST-7
 Power steering gearST-15
 Power steering hydraulic pressure.....ST-9
 Power steering oil pressure
 switch.....EC-680, 1344, 1932
 Power steering oil pumpST-21, 24
 Power steering system bleedingST-7
 Power supply routing.....EL-9
 Power transistor.....EC-1825
 Power transistor & ignition
 coil.....EC-549, 1233, 1820
 Power windowEL-193
 PRE/SE - Wiring diagram ...EC-418, 1070, 1740
 Precautions (General).....GI-4
 Pressure plate - See Clutch cover.....CL-17
 Pressure test (A/T)AT-72
 PST/SW - Wiring
 diagram.....EC-681, 1345, 1933

R

Radiator.....LC-15, 33
 Radiator fan - See Cooling fan.....LC-18, 36
 Radio - See AudioEL-161
 Rear air spoiler.....BT-31
 Rear axle.....AX-21
 Rear axle (disc brake type)AX-23
 Rear axle (drum brake type).....AX-23
 Rear bumperBT-16
 Rear combination lamp removal and
 installationBT-31

ALPHABETICAL INDEX

Rear disc brakeBR-24
Rear doorBT-19, 20
Rear drum brake.....BR-32
Rear heated oxygen sensor
(HO2S).....EC-265, 274, 283, 292,
891, 899, 907, 915, 926, 934, 942, 950, 1595,
1603, 1611, 1619
Rear heated oxygen sensor (HO2S)
heater.....EC-300, 921, 956, 1625
Rear seat.....BT-39
Rear seat belt.....RS-7
Rear suspension.....SU-15
Rear window.....BT-46
Rear window defoggerEL-145
Refrigerant pressure sensor.....HA-49
Refrigerant connection precaution.....HA-3
Refrigerant general precaution.....HA-3
Refrigerant lines.....HA-75
Refrigerant pressure
sensorEC-684, 1348, 1937
Refrigeration cycleHA-14
Release bearing (clutch)CL-14
Removal and installation (A/T)AT-436
Resistor.....EC-1825
Reverse clutch.....AT-481
Reverse idler shaft (M/T).....MT-17
Reverse lamp switch (M/T) - See Back-up
lamp switch (M/T).....MT-10
Reverse main gear (M/T)MT-18
Road wheel sizeGI-45
Roof trim.....BT-29
Room lamp - See Interior lamp.....EL-64
RRO2 - Wiring
diagram.....EC-267, 276, 285, 294,
893, 901, 909, 917, 928, 936, 944, 952, 1597,
1605, 1613, 1621
RRO2/H - Wiring
diagram.....EC-302, 923, 958, 1627

S

SAE J1930 terminology list.....GI-51
Seal - See Exterior.....BT-31
Seat belt inspectionMA-40, RS-9
Seat belt pre-tensionerRS-3
Seat belt pre-tensioner disposal.....RS-25
Seat belt, frontRS-5
Seat belt, rear.....RS-7
Seat, front.....BT-37
Seat, rear.....BT-39
SHIFT - Wiring diagramAT-426
Shift control components (M/T)MT-19
Shift fork (M/T).....MT-19
Shift lever.....MT-16
Shift lock systemAT-425
Shift scheduleAT-540

Shift solenoid valve A
(A/T).....AT-140, 153, 300, 313
Shift solenoid valve B (A/T)AT-140, 300
Shock absorber (front).....SU-9
Shock absorber (rear).....SU-21
Side air bagRS-24
Side trimBT-25
Smart entrance control unit.....EL-291
Spare tire size.....GI-45
Spark plug replacement.....MA-22, 31
Speedometer.....EL-85
Spiral cableRS-20
Spring (Wheelarch) height.....SU-6
SROOF - Wiring diagram.....EL-168
SRS - See Supplemental Restraint
SystemRS-13
SRS - Wiring diagram.....RS-38
SRS Trouble diagnoses.....RS-32
S/SIG - Wiring diagramEC-671, 1335, 1923
Stabilizer bar (front).....SU-10
Stall test (A/T).....AT-68
Standardized relayEL-7
START - Wiring diagram.....SC-7
Start signalEC-670, 1334, 1922
StarterSC-10
Starting system.....SC-6
Steering gear, linkage and transfer gear
inspection.....MA-39
Steering linkage.....ST-15
Steering switch.....EL-34
Steering wheel and column.....ST-10
Steering wheel play.....ST-6
Steering wheel turning forceST-8
Stop lampEL-51
STOP/L - Wiring diagramEL-51
Striking rod (M/T).....MT-19
Strut (front).....SU-9
Strut (rear)SU-20
Sub-gear (M/T)MT-18
Sun roof, electricEL-167
Sunroof.....BT-40
Supplemental Restraint SystemRS-13
Supplemental restraint system - Wiring
diagramRS-38
S/VCSW - Wiring diagramEC-525, 1155
Swirl control valve control solenoid
valve.....EC-489, 512, 1150, 1162
Swirl control valve control vacuum check
switchEC-525, 1155
SWL/V - Wiring
diagramEC-489, 512, 1150, 1162
Symbols and abbreviations.....GI-9
Symptom matrix chartEC-147, 819, 1486
Synchronizer (M/T)MT-18
System readiness test (SRT)
codeEC-87, 760, 1428

ALPHABETICAL INDEX

T

Tachometer.....EL-85
 Tail lampEL-49
 TAIL/L - Wiring diagramEL-49
 TCM circuit diagramAT-17
 TCM inspection table.....AT-108
 Temperature control cable and linkage
 adjustment.....HA-35
 TFTS - Wiring diagram.....EC-326, 977, 1646
 THEFT - Wiring diagramEL-265
 Theft warning system.....EL-259
 Thermal protectorHA-70
 Thermostat.....LC-13, 31
 Three way catalystEC-385, 1036, 1706
 Three way catalyst precautions.....GI-6
 Throttle position sensor
 (TPS).....EC-201, 875, 1540
 Throttle position sensor
 adjustmentEC-131, 802, 1470
 Throttle position switchAT-198, 266, 358,
 423, EC-464, 1117, 1785
 Throwout bearing - See Clutch release
 bearing.....CL-14
 Tie-rodST-19
 Tie-rod ball jointsST-19
 Tightening torque of standard bolts.....GI-50
 Time control systemEL-298
 Timing chainEM-20, 93
 Tire rotationMA-37
 Tire sizeGI-45
 TLID - Wiring diagram.....EL-171
 Torque converter installationAT-437
 Tow truck towingGI-49
 TP/SW - Wiring diagram.....EC-466, 1119, 1787
 TPS - Wiring diagram.....EC-206, 880, 1545
 Transmission case (M/T)MT-17
 Tread-FR&RR (Dimensions).....GI-45
 TrimBT-25
 Trouble diagnosesGI-35
 Trunk lid.....BT-16
 Trunk lid finisher.....BT-30
 Trunk lid opener - See Trunk lidBT-16
 Trunk lid opener, electric.....EL-171
 Trunk lid trimBT-30
 Trunk room lampEL-64
 Trunk room trim.....BT-30
 TURN - Wiring diagram.....EL-58
 Turn signal lamp.....EL-56
 Two trip detection logicEC-85, 758, 1426
 Two-pole lift.....GI-48

U

Under body.....BT-55

V

Vacuum cut valve bypass valveEC-641, 647,
 1304, 1310, 1891, 1897
 Vacuum hose (brake system).....BR-19
 Vacuum hose drawing (Engine
 control)EC-43, 1384
 Valve clearanceEM-45
 Valve guideEM-37, 112
 Valve lifter.....EM-40
 Valve seat.....EM-38, 114
 Valve spring.....EM-40, 116
 Vehicle identification numberGI-43
 Vehicle recovery (freeing a stuck
 vehicle)GI-49
 Vehicle speed sensor
 (VSS).....EC-451, 1104, 1772
 Vent mode switchHA-16
 VENT/V - Wiring diagram.....EC-411, 611, 632,
 1063, 1274, 1295, 1733, 1861, 1882
 Viscosity number (SAE)MA-14
 Viscous coupling (FF A/T)AT-515
 Viscous coupling (FF M/T).....MT-11
 VSS - Wiring diagram.....EC-453, 1106, 1774

W

WARN - Wiring diagram.....EL-107
 Warning chime.....EL-115
 Warning lampsEL-105
 Washer, front.....EL-137
 Water pumpLC-12, 30
 Water temperature gaugeEL-85
 Weatherstrip - See Exterior.....BT-31
 Wheel alignment (front)SU-6
 Wheel alignment (rear).....SU-17
 Wheel balance.....MA-37
 Wheel bearing (front)AX-4
 Wheel bearing (rear).....AX-22
 Wheel hub (front)AX-5
 Wheel hub (rear).....AX-23
 Wheel sensors (ABS)BR-60, 79
 Wheel sizeGI-45
 Wheelarch height.....SU-6
 Wheelbase (Dimensions).....GI-45
 Wide open & closed throttle position
 switch.....EC-201, 875, 1540
 Width (Dimensions).....GI-45
 Window, rearBT-46
 Windshield.....BT-46
 Windshield washer - See Front
 washerEL-137
 Windshield wiper - See Front wiper.....EL-137
 WIPER - Wiring diagram.....EL-139
 Wiper and washerEL-137
 Wiper, front.....EL-137

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Wiring Diagram (Cell code) listEL-349
Wiring diagramsGI-11
Withdrawal lever (clutch).....CL-14
Wrist pin - See Piston pin
inspection.....EM-55, 132

X
