

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-455, 1108, 1767
 ABS - Wiring diagram.....BR-43
 ABS sensor rotorAX-23
 Absolute pressure
 sensorEC-183, 855, 1127, 1516
 A/C - Wiring diagram.....HA-23
 A/C air flowHA-17
 A/C component layoutHA-15
 A/C compressor clutch removal and
 installationHA-67
 A/C compressor mountingHA-66
 A/C compressor precautionHA-6
 A/C compressor special service toolHA-9
 A/C control linkage adjustment
 (manual A/C)HA-32
 A/C control operation (manual A/C)HA-16
 A/C diagnostic work flow (manual A/C).....HA-25
 A/C HFC134a (R134a) system
 identificationHA-4
 A/C HFC134a (R134a) system
 introduction.....HA-14
 A/C HFC134a (R134a) system
 precaution.....HA-2
 A/C HFC134a (R134a) system
 service procedure.....HA-61
 A/C HFC134a (R134a) system
 service toolsHA-10
 A/C HFC134a system service
 equipment precaution.....HA-6
 A/C lubricant (R134a).....HA-63
 A/C lubrication oil.....HA-63
 A/C operational checkHA-26
 A/C performance chartHA-52
 A/C performance test diagnosesHA-52
 A/C pressure switch.....HA-14
 A/C push control.....HA-16
 A/C relayHA-49
 A/C service data specificationHA-81
 A/C switch.....HA-16
 A/C trouble diagnoses (manual A/C).....HA-19
 A/C, M - Wiring diagram.....HA-23
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Air bagRS-13
 Air bag disposalRS-26
 Air bag precautions.....GI-3
 Air bleeding (hydraulic clutch).....CL-7
 Air bleeding for brake system.....BR-8
 Air cleaner filter replacement.....MA-20, 29
 Air conditioner - Wiring diagram.....HA-23
 Air conditioner cut controlEC-47, 724, 1384
 Air control cable adjustment.....HA-34
 Air flow meter - See Mass
 air flow sensorEC-174, 846, 1507
 Air mix door control linkage adjustment.....HA-35

Air spoiler, rearBT-31
 AlternatorSC-33
 Angular tightening application.....EM-4, 77
 AntennaEL-164
 Anti-lock brake system
 - Wiring diagram.....BR-43
 AP/SEN - Wiring diagram.....EC-856, 1129
 ASCD (automatic speed
 control device)EL-170
 ASCD - Wiring diagram.....EL-175
 A/T - Wiring diagram - AT - FTSAT-117
 A/T - Wiring diagram - AT - MAINAT-107
 A/T - Wiring diagram - AT - PNP/SWAT-111
 A/T - Wiring diagram - AT - VSS A/TAT-123
 A/T controlEC-469, 1122, 1781
 A/T diagnosis communication
 lineEC-655, 1317, 1891
 A/T fluid temperature sensorAT-120
 A/T shift lock systemAT-263
 A/T shift lock system - Wiring diagramAT-264
 A/T trouble diagnosesAT-56
 A/T Wiring diagram - AT - ENG SS.....AT-127
 A/T Wiring diagram AT - 1STAT-133
 A/T Wiring diagram AT - 2ND.....AT-140
 A/T Wiring diagram AT - 3RD.....AT-146
 A/T Wiring diagram AT - 4THAT-152
 A/T Wiring diagram AT - BA/FTSAT-200
 A/T Wiring diagram AT - LPSV.....AT-174
 A/T Wiring diagram AT - NONDTCAT-213
 A/T Wiring diagram AT - OVRCSV.....AT-195
 A/T Wiring diagram AT - SSV/AAT-179
 A/T Wiring diagram AT - SSV/BAT-183
 A/T Wiring diagram AT - TCCSIGAT-165
 A/T Wiring diagram AT - TCV.....AT-159
 A/T Wiring diagram AT - TPS.....AT-188
 A/T Wiring diagram AT - VSSMTR.....AT-207
 AT/C - Wiring diagram.....EC-470, 1123, 1782
 ATDIAG - Wiring
 diagram.....EC-656, 1318, 1892
 AudioEL-159
 AUDIO - Wiring diagramEL-160
 Audio and A/C control removal and
 installation - See Instrument panel.....BT-21
 Automatic speed control system - See
 ASCDEL-170
 Automatic transaxle numberGI-47
 Automatic transmission fluid
 replacementMA-36
 Auxiliary air control
 (AAC) valve.....EC-452, 1105, 1764

B

Back-up lampEL-52
 Back-up lamp switch (M/T).....MT-10
 BACK/L - Wiring diagram.....EL-52
 Ball joint (front)SU-13

ALPHABETICAL INDEX

Base idle air volume
 initializingEC-83, 755, 1419
 Basic inspectionEC-127, 798, 1461
 Battery.....SC-4
 Battery/Starting/Charging System
 TesterSC-7, 14, 26
 Baulk ring (M/T)MT-18
 Bi-level door control linkage
 adjustment.....HA-34
 Blower motor.....HA-41
 Blower resistorHA-41
 Blower unit.....HA-72
 Board-on lift.....GI-48
 Body alignment.....BT-51
 Boring/honing cylinder blockEM-134
 Brake boosterBR-17
 Brake control valve
 (Proportioning valve)BR-11
 Brake fluid change.....BR-7
 Brake fluid level.....MA-37
 Brake fluid level and line check.....BR-7
 Brake hydraulic lineBR-9
 Brake inspection.....MA-37
 Brake lines and cables inspectionMA-37
 Brake pedal.....BR-12
 Bulb specifications.....EL-344
 Bumper, front.....BT-13
 Bumper, rear.....BT-16
 BYPS/V - Wiring
 diagram.....EC-641, 1301, 1308, 1875, 1882

C

Camshaft inspectionEM-35, 111
 Camshaft position sensor
 (CMPS)EC-359, 1011, 1672
 Canister-See EVAP
 canisterEC-48, 725, 1385
 CHARGE - Wiring diagram.....SC-25
 Charging system.....SC-24
 Chassis and body maintenance.....MA-35
 CHIME - Wiring diagramEL-116
 CIGAR - Wiring diagramEL-142
 Cigarette lighterEL-142
 Circuit breakerEL-19
 CKPS - Wiring
 diagram.....EC-355, 559, 1007, 1668, 1809
 Closed loop control.....EC-521, 1172, 1788
 Closed throttle position
 switchEC-461, 1114, 1773
 Clutch coverCL-17
 Clutch disc.....CL-17
 Clutch fluid level.....MA-35
 Clutch master cylinderCL-8
 Clutch operating cylinder.....CL-11
 Clutch pedalCL-6
 Clutch release bearingCL-14

Clutch release mechanism.....CL-14
 Clutch withdrawal leverCL-14
 CMPS - Wiring diagramEC-360, 1012, 1674
 Coil spring (front)SU-9
 Coil spring (rear).....SU-21
 Collision diagnosisRS-63
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-31
 Combination meterEL-85
 Combination meter removal and
 installation - See Instrument panel.....BT-21
 Combination switchEL-32
 Component Location (manual A/C)HA-19
 Compression pressureEM-16, 88
 Compressor clutch removal and
 installationHA-67
 Compressor mountingHA-66
 Compressor precautionHA-6
 Compressor special service toolHA-9
 Connecting rod.....EM-56, 133
 Connecting rod bearing
 clearanceEM-60, 137
 Connecting rod bushing
 clearanceEM-61, 138
 Connector inspectionGI-21
 Console box - See Instrument panelBT-21
 CONSULT-II for ABSBR-48
 CONSULT-II for engineEC-107, 778, 1442
 CONSULT-II general informationGI-40
 Control lever (M/T).....MT-16
 Control units (terminal arrangement)EL-349
 Control valve (A/T)AT-303
 Converter housing installationAT-373
 COOL/F - Wiring
 diagram.....EC-329, 330, 533, 534, 981,
 982, 1176, 1177, 1643, 1793
 Coolant mixture ratioMA-15
 Coolant replacement.....MA-17, 26
 Cooling circuit (engine)LC-10, 28
 Cooling fan.....LC-15, 33
 Cooling fan controlEC-530, 1173, 1790
 Cooling fan control systemLC-18, 36
 Cooling fan motorEC-1807
 Cooling fan relayEC-546, 1189, 1806
 Cooling unit (A/C evaporator).....HA-73
 Coupling sleeve (M/T)MT-18
 Crank angle sensor built into distributor
 - See Camshaft position
 sensorEC-359, 1011, 1672
 Crankcase emission control system
 - See positive crankcase
 ventilation.....EC-65, 741, 1401
 Crankcase ventilation system
 - See Positive crankcase
 ventilation.....EC-65, 741, 1401
 Crankshaft.....EM-58, 135

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Crankshaft position sensor
(OBD)EC-354, 558, 1006, 1667, 1808
Crankshaft position sensor (OBD)
cog chipping.....EC-558, 1808
Cruise control - See ASCDEL-170
Cylinder block.....EM-53, 130
Cylinder block boring.....EM-134
Cylinder head.....EM-31, 105
Cylinder head bolt tighteningEM-42, 120

D

Data link connector for
CONSULT-II.....EC-67, 107, 743, 778, 1403, 1442
Daytime light systemEL-40
Daytime running light - See Daytime
light system.....EL-40
DEF - Wiring diagramEL-146
Detonation sensor - See Knock
sensorEC-350, 1002, 1663
Diagnosis sensor unitRS-19
Diagnostic trouble code (DTC) for OBD
system.....EC-22, 86, 700, 758, 1361, 1422
Diagnostic trouble code (DTC)
inspection priority chart.....EC-143, 813, 1475
Differential gear (FF A/T).....AT-353
Differential gear (FF M/T).....MT-20, 40
DimensionsGI-47
DistributorEC-46, 723, 1383
Distributor ignition (DI)
system.....EC-46, 723, 1383
D/LOCK - Wiring diagramEL-199
Dome light - See Interior lamp.....EL-64
Door glassBT-19
Door mirrorBT-49
Door trim.....BT-27
Door, front.....BT-19
Door, rearBT-20
Drive belt inspection.....MA-16, 25
Drive plate runout.....EM-62, 139
Drive shaft (front).....AX-10
Dropping resistor (A/T)AT-177
DTC work supportEC-119, 790, 1453
DTRL - Wiring diagramEL-44

E

ECM input/output signal.....EC-154, 824, 1486
ECTS - Wiring diagram.....EC-193, 210, 868,
884, 1526, 1542
EGR temperature
sensorEC-563, 1239, 1813
EGR/TS - Wiring
diagram.....EC-566, 1242, 1816

EGRC1 - Wiring
diagram.....EC-369, 377, 573, 1021,
1029, 1249, 1683, 1691, 1823
Electric sun roofEL-165
Electrical diagnosesGI-24
Electrical ignition system.....EC-46, 723, 1383
Electrical unit.....EL-349
Electrical units location.....EL-321
Electronic ignition (EI)
system.....EC-46, 723, 1383
Engine compartmentBT-52
Engine control circuit
diagram.....EC-39, 717, 1376
Engine control component
parts locationEC-34, 712, 1373
Engine control module
(ECM).....EC-472, 1125, 1784
Engine control system
diagram and chart.....EC-41, 719, 1378
Engine coolant temperature sensor
(ECTS)EC-191, 208, 866, 882, 1524, 1540
Engine fail-safe system.....EC-144, 814, 1476
Engine oil filter replacementMA-21, 30
Engine oil precautionsGI-7
Engine oil replacementMA-20, 29
Engine outer component parts.....EM-12, 84
Engine removal.....EM-49, 127
Engine room - See Engine
compartment.....BT-52
Engine serial numberGI-46
EVAP canisterEC-49, 726, 1386
EVAP canister purge volume control solenoid
valve.....EC-400, 595, 1052, 1255, 1714, 1829
EVAP canister vent control
valveEC-406, 607, 627, 1058,
1267, 1287, 1720, 1841, 1861
EVAP control system (small leak)
diagnosisEC-51, 385, 425, 577, 727,
1037, 1077, 1253, 1388, 1699, 1739, 1827
EVAP control system pressure
sensorEC-413, 1065, 1727
EVAP control system purge flow
monitoring diagnosis.....EC-615, 1275, 1849
EVAP system close mode.....EC-51, 727, 1388
EVAP vapor lines inspection.....MA-23, 33
Evaporative emission (EVAP)
system.....EC-48, 725, 1385
Exhaust gas recirculation (EGR)
valve.....EC-365, 571, 1017, 1247, 1679, 1821
Exhaust system.....FE-15
Exhaust system inspection.....MA-35
ExteriorBT-31

F

Fan switch.....HA-41
F/FOG - Wiring diagram.....EL-54

ALPHABETICAL INDEX

Final drive (FF A/T)AT-353
 Final drive (FF M/T).....MT-20, 40
 Finisher, interior - See Trim.....BT-25
 Finisher, trunk lidBT-30
 Floor trimBT-25
 Fluid temperature sensor (A/T)AT-120
 FluidsMA-13
 Flywheel (clutch)CL-18
 Flywheel runout.....EM-62, 139
 Fog lamp, front.....EL-53
 Fog lamp, front, removal and
 installation.....BT-13
 Fork rod (M/T).....MT-19
 Forward clutch.....AT-328
 F/PUMP - Wiring
 diagram.....EC-674, 1334, 1915
 Freeze frame data.....EC-86, 758, 1422
 FRO2 - Wiring diagram.....EC-216, 238, 248,
 1193, 1198, 1213, 1221, 1548, 1567, 1575
 FRO2/H - Wiring
 diagram.....EC-256, 1225, 1581
 Front axleAX-2
 Front bumper.....BT-13
 Front combination lamp removal
 and installation.....BT-13
 Front disc brake.....BR-20
 Front door.....BT-19
 Front fog lamp.....EL-53
 Front fog lamp removal and installation.....BT-13
 Front heated oxygen sensor
 (HO2S).....EC-213, 222, 228, 235,
 246, 1190, 1195, 1200, 1205, 1210, 1218,
 1545, 1552, 1558, 1564, 1573
 Front heated oxygen sensor
 (HO2S) heaterEC-254, 1223, 1579
 Front passenger air bagRS-24
 Front seatBT-37
 Front seat belt.....RS-4
 Front suspensionSU-2
 Front washerEL-135
 Front wiperEL-135
 FUEL - Wiring diagramEC-303, 312, 959,
 966, 1621, 1628
 Fuel cut control (at no load & high
 engine speed).....EC-48, 725, 1385
 Fuel filter.....EC-743
 Fuel gaugeEL-85
 Fuel injection
 system.....EC-301, 310, 957, 964, 1619, 1626
 Fuel injector.....EC-664, 1324, 1905
 Fuel line inspectionMA-19, 29
 Fuel precautionsGI-8
 Fuel pressure check.....EC-67, 743, 1403
 Fuel pressure regulatorEC-68, 1404
 Fuel pressure releaseEC-67, 743, 1403
 Fuel pumpEC-673, 1333, 1914
 Fuel pump relayEC-673, 1333, 1914
 Fuel system.....FE-5

Fuel tank temperature
 sensorEC-319, 971, 1633
 Fuel tank vacuum relief
 valve.....EC-49, 726, 1386
 Fuse.....EL-19
 Fuse block.....EL-347
 Fusible linkEL-19

G

Garage jack and safety stand.....GI-49
 Gauges.....EL-85
 Gear components (M/T)MT-18
 Generator.....SC-33
 Generator - See AlternatorSC-33
 Generic scan tool (GST)EC-121, 792, 1455
 Grease.....MA-13
 Ground distributionEL-20

H

Harness connectorEL-5
 Harness connector inspectionGI-21
 Harness layoutEL-324
 Hazard warning lampEL-56
 HeadlampEL-35
 Headlamp removal and installation.....BT-13
 Headlining - See Roof trim.....BT-29
 Heated oxygen sensor (HO2S)
 (front)EC-213, 222, 228, 235,
 246, 1190, 1195, 1200, 1205, 1210, 1218,
 1545, 1552, 1558, 1564, 1573
 Heated oxygen sensor (HO2S)
 heater (front)EC-254, 1223, 1579
 Heated oxygen sensor (HO2S)
 heater (rear).....EC-295, 917, 952, 1614
 Heated oxygen sensor
 (rear)EC-260, 269, 278, 287,
 887, 895, 903, 911, 922, 930, 938, 946, 1584,
 1592, 1600, 1608
 HEATER - Wiring diagram.....HA-22
 Heater mirrorEL-168
 Heater system - Wiring diagram.....HA-22
 Heater unit (heater core)HA-71
 Height (Dimensions)GI-47
 HFC134a (R134a) system identification.....HA-4
 HFC134a (R134a) system introduction.....HA-14
 HFC134a (R134a) system precaution.....HA-2
 HFC134a (R134a) system service
 procedureHA-61
 HFC134a (R134a) system service
 tools.....HA-10
 HFC134a system service equipment
 precaution.....HA-6
 High clutch.....AT-323
 H/LAMP - Wiring diagramEL-36

ALPHABETICAL INDEX

H/MIRROR - Wiring diagramEL-168
HoodBT-13
HornEL-141
HORN - Wiring diagramEL-141
How to erase DTC for OBD
 systemEC-98, 769, 1433
Hydraulic lash adjuster inspectionEM-116

I

IACV-AAC valveEC-452, 1105, 1764
IATS - Wiring diagramEC-187, 862, 1520
Identification plateGI-46
Idle air control (IAC)
 systemEC-452, 1105, 1764
Idle air control valve
 (IACV)EC-452, 1105, 1764
Idle mixture ratioEC-71, 746, 1407
Idle speedEC-71, 746, 1407
IGN/SG - Wiring diagramEC-548, 1229, 1900
Ignition coilEC-1904
Ignition control systemEC-547, 1228, 1899
Ignition timingEC-71, 746, 1407
Ignition wire inspectionEC-1662
ILL - Wiring diagramEL-62
IlluminationEL-61
INJECT - Wiring diagramEC-665, 1325, 1906
Injector removal and
 installationEC-68, 744, 1404
Input shaft (FF M/T)MT-18, 27
Instrument panelBT-21
INT/L - Wiring diagramEL-68
Intake air temperature
 sensorEC-185, 860, 1518
Intake door control linkage
 adjustmentHA-32
Intake door motorHA-29
Intake manifoldEM-12, 84
InteriorBT-25
Interior lampEL-64

J

Jacking pointsGI-49
Joint connector (J/C)EL-350
Junction box (J/B)EL-347

K

Keyless entry system - See
 Multi-remote control systemEL-226
Knock sensor
 (KS)EC-350, 351, 1002, 1003, 1663, 1664

Knuckle spindleAX-5

L

Length (Dimensions)GI-47
License lampEL-49
Lifting pointsGI-50
Line pressure solenoid valveAT-157
Line pressure test (A/T)AT-66
Liquid gasket applicationEM-4, 77
LOAD - Wiring diagramEC-688, 1348, 1930
Location of electrical unitsEL-321
Low and reverse brakeAT-335
Lubricant (R134a) A/CHA-63
LubricantsMA-13
Lubrication circuit (engine)LC-4, 22
Lubrication oil A/CHA-63
Lubrication-locks, hinges and
 hood latchesMA-40
Luggage room lampEL-64

M

MAFS - Wiring diagramEC-178, 850, 1511
Magnet clutchHA-67
MAIN - Wiring diagramEC-168, 839, 1500
Main drive gear (M/T)MT-18
Mainshaft (M/T)MT-18, 32
Maintenance (engine)MA-16, 25
MAJOR OVERHAULAT-277
Malfunction indicator lamp
 (MIL)EC-100, 771, 1435
Manual air conditioner
 - Wiring diagramHA-23
Manual transaxle numberGI-47
Manual transmission oil
 replacementMA-35
Mass air flow sensor
 (MAFS)EC-174, 846, 1507
Master cylinder (clutch)CL-8
MeterEL-85
METER - Wiring diagramEL-92
MIL & Data link connectors
 circuitEC-697, 1358, 1942
MIL/DL - Wiring diagramEC-697, 1358, 1942
MIRROR - Wiring diagramEL-167
Mirror defoggerEL-168
Mirror, doorBT-49
MisfireEC-343, 995, 1656
Model variationGI-44
Molding - See ExteriorBT-31
M/T major overhaulMT-17
M/T removal and installationMT-12
MULTI - Wiring diagramEL-231
Multi-remote control systemEL-226

ALPHABETICAL INDEX

Multiport fuel injection (MFI)
system.....EC-44, 721, 1381
Multiport fuel injection
precautions.....GI-6

N

NATS (Nissan anti-theft system).....EL-301
NATS - Wiring diagram.....EL-303
Neutral position switch.....EC-658, 1320, 1894
NVH troubleshooting (AX).....AX-3
NVH troubleshooting (BR).....BR-6
NVH troubleshooting (CL).....CL-4
NVH troubleshooting (EM).....EM-10, 82
NVH troubleshooting (M/T).....MT-6
NVH troubleshooting (ST).....ST-5
NVH troubleshooting (SU).....SU-16
NVIS (Nissan vehicle
immobilizer system).....EL-301

O

Oil change (capacity).....MA-13
Oil pan (engine).....EM-17, 89
Oil pressure (engine).....LC-5, 22
Oil pump (A/T).....AT-299
Oil pump (engine).....LC-5, 23
Oil pump regulator valve (engine).....LC-7, 24
Oil seal replacement (engine).....EM-29, 102
On board diagnostic
system.....EC-85, 757, 1421
Operating cylinder (clutch).....CL-11
ORVR (On-board Refueling
Vapor Recovery).....EC-55, 1391
Overdrive control switch.....AT-261
Overrun clutch.....AT-328
Oversize piston.....EM-134

P

Park/Neutral position
switch.....EC-658, 1320, 1894
Park/neutral position switch (A/T).....AT-110
Park/neutral position switch (M/T).....MT-10
Parking brake control.....BR-36
Parking drum brake.....BR-32
Parking lamp.....EL-49
PCV (positive crankcase
ventilation).....EC-65, 741, 1401
PGC/V - Wiring diagram.....EC-402, 598, 1054,
1258, 1716, 1832
Pilot bushing replacement.....EM-138
Piston assembly.....EM-62, 139
Piston pin inspection.....EM-55, 132

Piston ring inspection.....EM-56, 132
Piston to bore clearance.....EM-57, 134
PNP/SW - Wiring
diagram.....EC-660, 1322, 1896
POWER - Wiring diagram.....EL-11
Power door lock.....EL-195
Power door mirror.....EL-167
Power steering fluid level.....MA-39, ST-7
Power steering gear.....ST-15
Power steering hydraulic pressure.....ST-9
Power steering oil pressure
switch.....EC-679, 1339, 1920
Power steering oil pump.....ST-21, 24
Power steering system bleeding.....ST-7
Power supply routing.....EL-9
Power transistor.....EC-1904
Power transistor &
ignition coil.....EC-547, 1228, 1899
Power window.....EL-190
PRE/SE - Wiring
diagram.....EC-415, 1067, 1729
Precautions (General).....GI-4
Pressure plate - See Clutch cover.....CL-17
Pressure test (A/T).....AT-66
PST/SW - Wiring
diagram.....EC-680, 1340, 1921

R

Radiator.....LC-15, 33
Radiator fan - See Cooling fan.....LC-15, 33
Radio - See Audio.....EL-159
Rear air spoiler.....BT-31
Rear axle.....AX-21
Rear axle (disc brake type).....AX-23
Rear axle (drum brake type).....AX-23
Rear bumper.....BT-16
Rear combination lamp
removal and installation.....BT-31
Rear disc brake.....BR-24
Rear door.....BT-20
Rear drum brake.....BR-32
Rear heated oxygen sensor
(HO2S).....EC-260, 269, 278, 287,
887, 895, 903, 911, 922, 930, 938, 946, 1584,
1592, 1600, 1608
Rear heated oxygen sensor
(HO2S) heater.....EC-295, 917, 952, 1614
Rear seat.....BT-39
Rear seat belt.....RS-6
Rear suspension.....SU-16
Rear window.....BT-46
Rear window defogger.....EL-143
Refrigerant pressure sensor.....HA-49
Refrigerant connection precaution.....HA-4
Refrigerant general precaution.....HA-3
Refrigerant lines.....HA-75

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Refrigerant pressure
 sensorEC-683, 1343, 1925
Refrigeration cycleHA-14
Release bearing (clutch)CL-14
Removal and installation (A/T)AT-274
ResistorEC-1904
Reverse clutchAT-319
Reverse idler shaft (M/T)MT-17
Reverse lamp switch (M/T)
 - See Back-up lamp switch (M/T)MT-10
Reverse main gear (M/T)MT-18
Road wheel sizeGI-47
Roof trimBT-29
Room lamp - See Interior lampEL-64
RRO2 - Wiring diagramEC-262, 271, 280,
 289, 889, 897, 905, 913, 924, 932, 940, 948,
 1586, 1594, 1602, 1610
RRO2/H - Wiring
 diagramEC-297, 919, 954, 1616

S

SAE J1930 terminology listGI-53
Seal - See ExteriorBT-31
Seat belt inspectionMA-40, RS-8
Seat belt pre-tensionerRS-3, 20
Seat belt pre-tensioner disposalRS-26
Seat belt, frontRS-4
Seat belt, rearRS-6
Seat, frontBT-37
Seat, rearBT-39
SHIFT - Wiring diagramAT-264
Shift control components (M/T)MT-19
Shift fork (M/T)MT-19
Shift leverMT-16
Shift lock systemAT-263
Shift scheduleAT-378
Shift solenoid valve A (A/T)AT-135, 148
Shift solenoid valve B (A/T)AT-135
Shock absorber (front)SU-10
Shock absorber (rear)SU-21
Side air bagRS-25
Side trimBT-25
Smart entrance control unitEL-287
Spare tire sizeGI-47
Spark plug replacementMA-22, 31
SpeedometerEL-85
Spiral cableRS-21
Spring (Wheelarch) heightSU-6
SROOF - Wiring diagramEL-166
SRS - See Supplemental
 Restraint SystemRS-13
SRS - Wiring diagramRS-39
SRS Trouble diagnosesRS-33
S/SIG - Wiring diagramEC-670, 1330, 1911
Stabilizer bar (front)SU-11
Stall test (A/T)AT-62

Standardized relayEL-7
START - Wiring diagramSC-11
Start signalEC-669, 1329, 1910
StarterSC-20
Starting systemSC-10
Steering gear, linkage and
 transfer gear inspectionMA-39
Steering linkageST-15
Steering switchEL-34
Steering wheel and columnST-10
Steering wheel playST-6
Steering wheel turning forceST-8
Stop lampEL-51
STOP/L - Wiring diagramEL-51
Striking rod (M/T)MT-19
Strut (front)SU-9
Strut (rear)SU-20
Sub-gear (M/T)MT-18
Sunroof, electricEL-165
SunroofBT-40
Supplemental Restraint SystemRS-13
Supplemental restraint system
 - Wiring diagramRS-39
S/VCSW - Wiring diagramEC-523, 1152
Swirl control valve control
 solenoid valveEC-487, 510, 1147, 1159
Swirl control valve control
 vacuum check switchEC-523, 1152
SWL/V - Wiring
 diagramEC-487, 510, 1147, 1159
Symbols and abbreviationsGI-9
Symptom matrix chartEC-145, 815, 1477
Synchronizer (M/T)MT-18
System readiness test
 (SRT) codeEC-87, 759, 1423

T

TachometerEL-85
Tail lampEL-49
TAIL/L - Wiring diagramEL-49
TCM circuit diagramAT-15
TCM inspection tableAT-103
Temperature control cable
 and linkage adjustmentHA-35
TFTS - Wiring diagramEC-321, 973, 1635
THEFT - Wiring diagramEL-262
Theft warning systemEL-256
Thermal protectorHA-70
ThermostatLC-13, 31
Three way catalystEC-381, 1033, 1695
Three way catalyst precautionsGI-6
Throttle position sensor
 (TPS)EC-196, 871, 1529
Throttle position sensor
 adjustmentEC-127, 798, 1461

ALPHABETICAL INDEX

Throttle position
switch.....AT-193, 261, EC-461, 1114, 1773
Throwout bearing - See Clutch
release bearing.....CL-14
Tie-rodST-19
Tie-rod ball joints.....ST-19
Tightening torque of standard bolts.....GI-52
Time control systemEL-294
Timing chain.....EM-20, 94
Tire rotationMA-37
Tire sizeGI-47
TLID - Wiring diagram.....EL-169
Torque converter installationAT-275
Tow truck towingGI-51
TP/SW - Wiring diagram.....EC-463, 1116, 1775
TPS - Wiring diagram.....EC-201, 876, 1534
Transmission case (M/T)MT-17
Tread-FR&RR (Dimensions).....GI-47
TrimBT-25
Trouble diagnosesGI-34
Trunk lid.....BT-16
Trunk lid finisher.....BT-30
Trunk lid opener - See Trunk lidBT-16
Trunk lid opener, electric.....EL-169
Trunk lid trimBT-30
Trunk room lampEL-64
Trunk room trim.....BT-30
TURN - Wiring diagram.....EL-58
Turn signal lamp.....EL-56
Two trip detection logicEC-85, 757, 1421
Two-pole lift.....GI-50

U

Under body.....BT-55

V

Vacuum cut valve bypass
valve.....EC-639, 645, 1299,
1305, 1873, 1879
Vacuum hose (brake system).....BR-19
Vacuum hose drawing
(Engine control).....EC-42, 1379
Valve clearanceEM-45
Valve guideEM-37, 112
Valve lifter.....EM-40
Valve seat.....EM-38, 114
Valve spring.....EM-40, 115

Vehicle identification numberGI-45
Vehicle recovery (freeing a
stuck vehicle).....GI-51
Vehicle speed sensor
(VSS).....EC-448, 1101, 1760
Vent mode switchHA-16
VENT/V - Wiring diagram.....EC-408, 609, 630,
1060, 1269, 1290, 1722, 1843, 1864
Viscosity number (SAE)MA-14
Viscous coupling (FF M/T).....MT-11
VSS - Wiring diagram.....EC-450, 1103, 1762

W

WARN - Wiring diagram.....EL-105
Warning chime.....EL-113
Warning lampsEL-103
Washer, front.....EL-135
Water pumpLC-12, 30
Water temperature gaugeEL-85
Weatherstrip - See Exterior.....BT-31
Wheel alignment (front)SU-6
Wheel alignment (rear)SU-18
Wheel balance.....MA-37
Wheel bearing (front)AX-4
Wheel bearing (rear).....AX-22
Wheel hub (front)AX-5
Wheel hub (rear).....AX-23
Wheel sensors (ABS)BR-79
Wheel sizeGI-47
Wheelarch height.....SU-6
Wheelbase (Dimensions).....GI-47
Wide open & closed throttle
position switchEC-196, 871, 1529
Width (Dimensions).....GI-47
Window, rearBT-46
Windshield.....BT-46
Windshield washer - See
Front washer.....EL-135
Windshield wiper - See
Front wiper.....EL-135
WIPER - Wiring diagram.....EL-137
Wiper and washerEL-135
Wiper, front.....EL-135
Wiring Diagram (Cell code) listEL-345
Wiring diagramsGI-11
Withdrawal lever (clutch).....CL-14
Wrist pin - See Piston pin
inspection.....EM-55, 132

NOTES