

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram [MTC-27](#)
A/C air flow [MTC-21](#)
A/C component layout [MTC-19](#)
A/C compressor clutch removal and installation . [MTC-69](#)
A/C compressor mounting [MTC-68](#)
A/C compressor precaution [MTC-8](#)
A/C compressor special service tool [MTC-11](#)
A/C control linkage adjustment (manual A/C) . [MTC-41](#)
A/C control operation (manual A/C) [MTC-20](#)
A/C diagnostic work flow (manual A/C) [MTC-34](#)
A/C HFC134a (R134a) system identification [MTC-4](#)
A/C HFC134a (R134a) system introduction ... [MTC-15](#)
A/C HFC134a (R134a) system precaution [MTC-3](#)
A/C HFC134a (R134a) system service procedure [MTC-82](#)
A/C HFC134a (R134a) system service tools .. [MTC-12](#)
A/C HFC134a system service equipment precaution ... [MTC-8](#)
A/C lubricant (R134a) [MTC-16](#)
A/C lubrication oil [MTC-16](#)
A/C operational check [MTC-35](#)
A/C performance chart [MTC-58](#)
A/C performance test diagnoses [MTC-58](#)
A/C pressure switch [MTC-15](#)
A/C push control [MTC-20](#)
A/C rera [MTC-55](#)
A/C service data specification [MTC-91](#)
A/C switch [MTC-20](#)
A/C, M - Wiring diagram [MTC-27](#)
A/F - Wiring diagram [EC-1036](#), [EC-1042](#), [EC-1048](#),
[EC-1055](#), [EC-1062](#), [EC-1068](#), [EC-1076](#)
A/FH - Wiring diagram [EC-932](#)
A/T - Wiring diagram [AT-407](#)
A/T fluid temperature sensor [AT-126](#), [AT-497](#)
A/T self-diagnoses [AT-433](#), [AT-441](#), [AT-442](#)
A/T shift lock system [AT-253](#), [AT-637](#)
A/T shift lock system - Wiring diagram [AT-254](#), [AT-638](#)
A/T trouble diagnoses [AT-57](#)
A/T Wiring diagram AT - 1ST [AT-138](#), [AT-514](#)
A/T Wiring diagram AT - 2ND [AT-143](#), [AT-519](#)
A/T Wiring diagram AT - 3RD [AT-148](#), [AT-524](#)
A/T Wiring diagram AT - 4TH [AT-154](#), [AT-529](#)
A/T Wiring diagram AT - BA/FTS [AT-200](#), [AT-575](#)
A/T Wiring diagram AT - CAN [AT-210](#), [AT-591](#)
A/T Wiring diagram AT - ENG SS [AT-133](#), [AT-509](#)
A/T Wiring diagram AT - FTS [AT-123](#), [AT-499](#)
A/T Wiring diagram AT - LPSV [AT-175](#), [AT-549](#)
A/T Wiring diagram AT - MAIN [AT-113](#), [AT-488](#)
A/T Wiring diagram AT - NONDTC [AT-216](#), [AT-597](#)
A/T Wiring diagram AT - OVRCSV [AT-195](#), [AT-570](#)
A/T Wiring diagram AT - PNP/SW [AT-117](#), [AT-493](#)
A/T Wiring diagram AT - SSV/A [AT-181](#), [AT-555](#)
A/T Wiring diagram AT - SSV/B [AT-185](#), [AT-560](#)
A/T Wiring diagram AT - TCCSIG [AT-167](#), [AT-541](#)
A/T Wiring diagram AT - TCV [AT-161](#), [AT-536](#)
A/T Wiring diagram AT - TPS [AT-191](#), [AT-565](#)

A/T Wiring diagram AT - VSS A/T [AT-129](#), [AT-505](#)
A/T Wiring diagram AT - VSSMTR .. [AT-206](#), [AT-582](#),
[AT-587](#)
ABS - Wiring diagram [BRC-10](#)
ABS (anti-lock brake system) [BRC-5](#)
ABS sensor rotor [RAX-6](#)
Accelerator pedal position (APP) sensor [EC-1125](#), [EC-1147](#), [EC-1751](#), [EC-1757](#), [EC-1770](#)
Accelerator pedal released position learning ... [EC-52](#),
[EC-1255](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-47](#)
Air bag precautions [GI-3](#)
Air bleeding (hydraulic clutch) [CL-7](#), [CL-24](#)
Air bleeding for brake system [BR-7](#)
Air cleaner and air duct [EM-103](#)
Air cleaner filter replacementQG18DE [MA-19](#)
Air cleaner filter replacementQR25DE [MA-26](#)
Air conditioner - Wiring diagram [MTC-27](#)
Air conditioner cut control [EC-1242](#)
Air control cable adjustment [MTC-43](#)
Air flow meter - See Mass air flow sensor [EC-163](#), [EC-171](#), [EC-379](#), [EC-1368](#), [EC-1375](#), [EC-1594](#)
Air fuel ratio sensor 1 ... [EC-1033](#), [EC-1039](#), [EC-1045](#),
[EC-1052](#), [EC-1059](#), [EC-1065](#), [EC-1073](#)
Air fuel ratio sensor 1 heater [EC-930](#)
Air mix door control linkage adjustment [MTC-45](#)
Air spoiler, rear [EI-22](#)
Alternator [SC-30](#)
Angular tightening application [EM-4](#), [EM-91](#)
Antenna [AV-12](#)
Anti-lock brake system - See ABS [BRC-5](#)
Anti-lock brake system - Wiring diagram [BRC-10](#)
APPS1 - Wiring diagram . [EC-506](#), [EC-1127](#), [EC-1753](#)
APPS2 - Wiring diagram . [EC-513](#), [EC-1134](#), [EC-1759](#)
APPS3 - Wiring diagram . [EC-528](#), [EC-1149](#), [EC-1772](#)
ASC/BS - Wiring diagram [EC-483](#), [EC-1104](#), [EC-1732](#)
ASC/SW - Wiring diagram [EC-476](#), [EC-1097](#), [EC-1725](#)
ASCSOF - Wiring diagram [EC-571](#), [EC-1193](#), [EC-1834](#)
ASCD [EC-598](#), [EC-1860](#)
ASCD (automatic speed control device) [EC-1220](#),
[ACS-2](#)
ASCIND - Wiring diagram [EC-580](#), [EC-1202](#), [EC-1842](#)
Audio [AV-2](#)
AUDIO - Wiring diagram [AV-4](#)
Audio and A/C control removal and installation - See Instrument panel [IP-10](#)
Automatic transaxle number [GI-48](#)
Automatic transmission fluid replacement [MA-31](#)
Axle [MA-35](#)

B

Back door window [GW-12](#)
BACK/L - Wiring diagram [LT-22](#)
Back-up lamp [LT-22](#)
Back-up lamp switch (M/T) [MT-13](#)
Back-up lamp switch (M/T)Back-up lamp switch .. [MT-78](#), [MT-139](#)

ALPHABETICAL INDEX

Ball joint (front) [FSU-14](#)
 Base idle air volume initialing [EC-634](#)
 Basic inspection [EC-88](#), [EC-669](#), [EC-1291](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#),
[SC-24](#)
 Baulk ring (M/T) [MT-21](#), [MT-85](#), [MT-146](#)
 Bi-level door control linkage adjustment [MTC-43](#)
 Block heater [EM-160](#)
 Blower motor [MTC-50](#)
 Blower resistor [MTC-50](#)
 Blower unit [MTC-79](#)
 Board-on lift [GI-40](#)
 Body alignment [BL-115](#)
 Brake booster [BR-16](#)
 Brake control valve (Proportioning valve) [BR-10](#)
 Brake fluid change [BR-6](#)
 Brake fluid level [MA-32](#)
 Brake fluid level and line check [BR-6](#)
 Brake hydraulic line [BR-8](#)
 Brake inspectionDisc Brake [MA-32](#)
 Brake inspectionDrum Brake [MA-33](#)
 Brake lines and cables inspection [MA-32](#)
 Brake lining wear temporary checkingDisc Brake . [MA-33](#)
 Brake lining wear temporary checkingDrum Brake [MA-34](#)
 Brake pedal [BR-11](#)
 Brake switch [EC-497](#), [EC-1119](#), [EC-1746](#)
 BRK/SW - Wiring diagram [EC-498](#), [EC-1120](#), [EC-1747](#)
 Bulb specifications [LT-48](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-18](#)
 BYPS/V - Wiring diagram [EC-1709](#), [EC-1717](#)

C

Camshaft [EM-123](#)
 Camshaft inspection [EM-32](#), [EM-125](#)
 Camshaft position sensor (PHASE) . [EC-283](#), [EC-842](#),
[EC-1496](#)
 CAN - Wiring diagram [EC-146](#), [EC-729](#), [EC-1351](#),
[LAN-7](#), [LAN-17](#), [LAN-24](#)
 CAN (Controller Area Network) . [LAN-6](#), [LAN-16](#), [LAN-23](#)
 CAN communication [EC-40](#), [EC-145](#), [EC-621](#), [EC-728](#),
[EC-1243](#), [EC-1350](#), [AT-209](#), [AT-590](#), [LAN-6](#), [LAN-16](#),
[LAN-23](#)
 Canister-See EVAP canister [EC-586](#)
 CHARGE - Wiring diagram [SC-23](#)
 Charging system [SC-22](#)
 Chassis and body maintenance [MA-10](#), [MA-29](#)
 CHIME - Wiring diagram [DI-40](#)
 CIGAR - Wiring diagram [WW-10](#)
 Cigarette lighter [WW-10](#)
 Circuit breaker [PG-45](#)
 Closed loop control ... [EC-436](#), [EC-618](#), [EC-1240](#), [EC-1649](#)
 Clutch cover [CL-17](#), [CL-33](#)

Clutch disc [CL-17](#), [CL-33](#)
 Clutch fluid level [MA-29](#)
 Clutch master cylinder [CL-9](#), [CL-26](#)
 Clutch operating cylinder [CL-11](#), [CL-28](#)
 Clutch pedal [CL-7](#), [CL-24](#)
 Clutch release bearing [CL-14](#), [CL-31](#)
 Clutch release mechanism [CL-14](#), [CL-31](#)
 Clutch withdrawal lever [CL-14](#), [CL-31](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear) [RSU-10](#)
 Combination lamp, front, removal and installation [EI-13](#)
 Combination lamp, rear, removal and installation [EI-22](#)
 Combination meter [DI-3](#)
 Combination meter removal and installation - See Instru-
 ment panel [IP-10](#)
 Combination switch [LT-4](#)
 Component Location (manual A/C) [MTC-23](#)
 Compression pressure [EM-52](#)
 Compressor clutch removal and installation ... [MTC-69](#)
 Compressor mounting [MTC-68](#)
 Compressor precaution [MTC-8](#)
 Compressor special service tool [MTC-11](#)
 Connecting rod [EM-70](#)
 Connecting rod bearing clearance [EM-75](#)
 Connecting rod bushing clearance [EM-76](#)
 Connector inspection [GI-23](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-16](#)
 CONSULT for engine [EC-113](#), [EC-694](#), [EC-1316](#)
 CONSULT general information [GI-36](#)
 Control lever (M/T) [MT-14](#)
 Control valve (A/T) [AT-298](#)
 Controller Area Network (CAN) . [LAN-6](#), [LAN-16](#), [LAN-23](#)
 Converter housing installation [AT-380](#), [AT-745](#)
 COOL/F - Wiring diagram [EC-441](#), [EC-1012](#), [EC-1465](#),
[EC-1654](#)
 Coolant mixture ratio [MA-14](#)
 Coolant overtemperarute enrichment protection .. [EC-1461](#)
 Coolant replacementQG18DE [MA-16](#)
 Coolant replacementQR25DE [MA-23](#)
 Cooling circuit (engine) [CO-6](#)
 Cooling fan motor [EC-1474](#), [EC-1663](#)
 Cooling fan relay [EC-1022](#)
 Cooling unit (A/C evaporator) [MTC-80](#)
 Coupling sleeve (M/T) [MT-21](#), [MT-85](#), [MT-146](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-596](#), [EC-1218](#), [EC-1858](#)
 Crankshaft [EM-72](#), [EM-161](#)
 Crankshaft position sensor (POS) ... [EC-277](#), [EC-836](#),
[EC-1490](#)
 Cylinder block [EM-67](#), [EM-160](#)
 Cylinder block boring [EM-181](#)
 Cylinder head [EM-52](#), [EM-145](#)

D

D/LOCK - Wiring diagram [BL-15](#)

ALPHABETICAL INDEX

Data link connector [EC-582](#), [EC-1204](#), [EC-1845](#)
 Data link connector for Consult . [EC-115](#), [EC-637](#), [EC-696](#), [EC-1318](#)
 Daytime light system [LT-10](#)
 Daytime running light - See Daytime light system .. [LT-10](#)
 DEF - Wiring diagram [GW-20](#)
 Detonation sensor - See Knock sensor [EC-832](#)
 Diagnosis sensor unit [SRS-37](#)
 Diagnostic trouble code (DTC) for OBD system [EC-61](#), [EC-643](#), [EC-1224](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-86](#), [EC-666](#), [EC-1288](#)
 Differential gear (FF A/T) [AT-356](#)
 Differential gear (FF M/T) [MT-23](#), [MT-58](#), [MT-88](#), [MT-149](#)
 Dimensions [GI-48](#)
 DLC - Wiring diagram [EC-582](#), [EC-1204](#), [EC-1845](#)
 Dome light - See Interior lamp [LT-35](#)
 Door adjustment (front) [BL-31](#)
 Door adjustment (rear) [BL-31](#)
 Door glass [BL-31](#), [GW-6](#), [GW-12](#), [GW-13](#)
 Door glass Fitting Adjustment [BL-31](#)
 Door mirror [GW-14](#), [GW-16](#)
 Door trim [EI-31](#)
 Door, front [BL-31](#), [GW-12](#)
 Door, rear [BL-31](#), [GW-13](#)
 Drive belt [EM-100](#)
 Drive belt inspectionQG18DE [MA-16](#)
 Drive belt inspectionQR25DE [MA-23](#)
 Drive plate runout [EM-77](#)
 Drive shaft [MA-36](#)
 Drive shaft (front) [FAX-5](#), [FAX-11](#)
 Dropping resistor (A/T) [AT-179](#), [AT-547](#)
 DTC work support [EC-123](#), [EC-706](#), [EC-1327](#)
 DTRL - Wiring diagram [LT-14](#)

E

ECM input/output signal [EC-105](#), [EC-686](#), [EC-1307](#)
 ECM power supply [EC-138](#), [EC-375](#), [EC-721](#), [EC-936](#), [EC-1342](#), [EC-1590](#)
 ECM/PW - Wiring diagram [EC-376](#), [EC-1591](#)
 ECTS - Wiring diagram [EC-183](#), [EC-762](#), [EC-1388](#)
 Electric throttle control actuator [EC-390](#), [EC-392](#), [EC-404](#), [EC-952](#), [EC-954](#), [EC-966](#), [EC-1604](#), [EC-1606](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-564](#), [EC-1185](#), [EC-1821](#)
 Electrical units location [PG-42](#)
 Electronic ignition (EI) system [EC-38](#), [EC-1241](#)
 Engine compartment [BL-116](#)
 Engine control circuit diagram .. [EC-103](#), [EC-684](#), [EC-1305](#)
 Engine control component parts location ... [EC-97](#), [EC-678](#), [EC-1300](#)
 Engine control module (ECM) ... [EC-372](#), [EC-927](#), [EC-1583](#)
 Engine control system diagram and chart . [EC-33](#), [EC-](#)

[614](#), [EC-1236](#)
 Engine coolant temperature sensor (ECTS) .. [EC-181](#), [EC-193](#), [EC-760](#), [EC-772](#), [EC-1386](#), [EC-1398](#)
 Engine fail-safe system [EC-87](#), [EC-668](#), [EC-1290](#)
 Engine oil filter replacementQG18DE [MA-20](#)
 Engine oil filter replacementQR25DE [MA-27](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacementQG18DE [MA-20](#)
 Engine oil replacementQR25DE [MA-26](#)
 Engine outer component parts [EM-12](#)
 Engine removal [EM-63](#), [EM-156](#)
 Engine room - See Engine compartment [BL-116](#)
 Engine serial number [GI-47](#)
 ETC1 - Wiring diagram [EC-393](#), [EC-955](#), [EC-1607](#)
 ETC2 - Wiring diagram [EC-401](#), [EC-963](#), [EC-1615](#)
 ETC3 - Wiring diagram [EC-405](#), [EC-967](#), [EC-1619](#)
 EVAP canister [EC-586](#), [EC-1208](#)
 EVAP canister purge volume control solenoid valve [EC-311](#), [EC-460](#), [EC-867](#), [EC-1081](#), [EC-1521](#), [EC-1672](#)
 EVAP canister vent control valve [EC-317](#), [EC-468](#), [EC-873](#), [EC-1089](#), [EC-1527](#), [EC-1680](#), [EC-1687](#)
 EVAP control system (small leak) diagnosis .. [EC-301](#), [EC-338](#), [EC-346](#), [EC-858](#), [EC-893](#), [EC-1513](#), [EC-1547](#), [EC-1555](#), [EC-1695](#)
 EVAP control system pressure sensor ... [EC-324](#), [EC-880](#), [EC-886](#), [EC-1534](#), [EC-1540](#)
 EVAP control system purge flow monitoring diagnosis . [EC-294](#), [EC-852](#), [EC-1507](#)
 EVAP system close mode [EC-1209](#)
 EVAP vapor lines inspectionQG18DE [MA-22](#)
 EVAP vapor lines inspectionQR25DE [MA-28](#)
 Evaporative emission (EVAP) system [EC-1846](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [MA-29](#)
 Exterior [EI-22](#)

F

F/FOG - Wiring diagram [LT-25](#)
 F/PUMP - Wiring diagram [EC-554](#), [EC-1175](#), [EC-1807](#)
 Fan switch [MTC-50](#)
 Final drive (FF A/T) [AT-356](#)
 Final drive (FF M/T) ... [MT-23](#), [MT-58](#), [MT-88](#), [MT-149](#)
 Finisher, interior - See Trim [EI-28](#)
 Finisher, trunk lid [EI-33](#)
 Floor trim [EI-28](#)
 Flow charts [GI-26](#)
 FLS1 - Wiring diagram [EC-1565](#)
 FLS2 - Wiring diagram [EC-1572](#)
 FLS3 - Wiring diagram [EC-1705](#)
 Fluid temperature sensor (A/T) [AT-126](#), [AT-497](#)
 Fluids [MA-13](#)
 Flywheel (clutch) [CL-18](#), [CL-34](#)
 Flywheel runout [EM-77](#)
 Fog lamp, front [LT-24](#)
 Fog lamp, front, removal and installation [EI-13](#)
 Fork rod (M/T) [MT-22](#), [MT-87](#), [MT-148](#)
 Forward clutch [AT-325](#)
 Freeze frame data [EC-62](#), [EC-643](#), [EC-1264](#)

ALPHABETICAL INDEX

Front axle	FAX-5	Headlamp	LT-6	
Front bumper	EI-13	Headlamp removal and installation	EI-13	A
Front combination lamp removal and installation	EI-13	Headlining - See Roof trim	EI-32	
Front disc brake	BR-19	Heated oxygen sensor 1	EC-201 , EC-207 , EC-216 , EC-409 , EC-415 , EC-1406 , EC-1412 , EC-1421 , EC-1623 , EC-1629	B
Front door	BL-31 , GW-12	Heated oxygen sensor 1 heater	EC-151 , EC-1356	
Front fog lamp	LT-24	Heated oxygen sensor 2	EC-223 , EC-230 , EC-421 , EC-428 , EC-780 , EC-787 , EC-992 , EC-1000 , EC-1428 , EC-1435 , EC-1635 , EC-1642	C
Front fog lamp removal and installation	EI-13	Heated oxygen sensor 2 heater	EC-157 , EC-734 , EC-1362	D
Front passenger air bag	SRS-44	HEATER - Wiring diagram	MTC-25	
Front seat	SE-3	Heater mirror	GW-15	
Front seat belt	SB-3	Heater system - Wiring diagram	MTC-25	E
Front washer	WW-3	Heater unit (heater core)	MTC-78	
Front wiper	WW-3	Height (Dimensions)	GI-48	
FTTS - Wiring diagram	EC-253 , EC-257 , EC-811 , EC-815 , EC-1458	HFC134a (R134a) system identification	MTC-4	F
FUEL - Wiring diagram	EC-240 , EC-247 , EC-797 , EC-804 , EC-1444 , EC-1451	HFC134a (R134a) system introduction	MTC-15	
Fuel cut control (at no load high engine speed)	EC-620 , EC-1242	HFC134a (R134a) system precaution	MTC-3	
Fuel gauge	DI-3	HFC134a (R134a) system service procedure	MTC-82	G
Fuel injection system	EC-238 , EC-245 , EC-660 , EC-795 , EC-802 , EC-1442 , EC-1449	HFC134a (R134a) system service tools	MTC-12	
Fuel injector	EC-547	HFC134a system service equipment precaution	MTC-98	
Fuel injector and fuel tube	EM-19 , EM-118	High clutch	AT-319	H
Fuel level sensor	EC-354 , EC-356 , EC-359 , EC-910 , EC-912 , EC-914 , EC-1564 , EC-1569 , EC-1571 , EC-1704	HO2S1 - Wiring diagram	EC-203 , EC-210 , EC-219 , EC-1408 , EC-1415 , EC-1424	
Fuel line inspection	FL-2 , MA-19	HO2S1H - Wiring diagram	EC-153 , EC-1358	
Fuel line inspection QR25DE	MA-25	HO2S2 - Wiring diagram	EC-225 , EC-233 , EC-423 , EC-431 , EC-782 , EC-790 , EC-995 , EC-1003 , EC-1430 , EC-1437 , EC-1637 , EC-1644	I
Fuel precautions	GI-3 , GI-5	HO2S2H - Wiring diagram	EC-159 , EC-736 , EC-1364	
Fuel pressure check	EC-56 , EC-1257	Hood	EI-13	J
Fuel pressure release	EC-56 , EC-637 , EC-1257	Horn	WW-9	
Fuel pump	EC-553 , EC-1174 , EC-1806	HORN - Wiring diagram	WW-9	
Fuel tank temperature sensor	EC-251 , EC-256 , EC-809 , EC-814 , EC-1455 , EC-1457	How to erase DTC	EC-651 , EC-652	K
Fuel tank vacuum relief valve	EC-586 , EC-1208	How to erase DTC for OBD system	EC-71 , EC-651 , EC-1273	
Fuel tank Removal and Installation	FL-7			L
Fuse	PG-45			
Fuse and fusible link box	PG-55			
Fuse block	PG-54			
Fusible link	PG-45			
	G			
Garage jack and safety stand	GI-39	IATS - Wiring diagram	EC-178 , EC-757 , EC-1383	IDX
Gauges	DI-3	Identification plate	GI-47	
Gear components (M/T)	MT-21 , MT-85 , MT-146	Idle air volume learning	EC-53 , EC-1255	
Generator	SC-30	Idle mixture ratio	EC-43 , EC-624 , EC-1245	
Generator - See Alternator	SC-30	Idle speed	EC-43 , EC-88 , EC-623 , EC-624 , EC-1245 , EC-1291	
Generic scan tool (GST)	EC-125 , EC-709 , EC-1329	Idle speed control (ISC)	EC-363 , EC-365 , EC-918 , EC-920 , EC-1579 , EC-1581	
Ground distribution	PG-12	Ignition coil	EM-115 , EC-535 , EC-1156 , EC-1777	
	H	Ignition control system	EC-535 , EC-1156 , EC-1777	
H/LAMP - Wiring diagram	LT-7	Ignition timing	EC-43 , EC-88 , EC-623 , EC-624 , EC-1245 , EC-1291	
H/MIRROR - Wiring diagram	GW-15	IGNSYS - Wiring diagram	EC-536 , EC-1157 , EC-1778	
Harness connector	PG-46	ILL - Wiring diagram	LT-33	
Harness connector inspection	GI-23	Illumination	LT-32	
Harness layout	PG-21	INJECT - Wiring diagram	EC-548 , EC-1169 , EC-1797	
Hazard warning lamp	LT-27	Injector	EC-1168 , EC-1796	
		Input shaft (FF M/T)	MT-21 , MT-41 , MT-85 , MT-146	
		Instrument panel	IP-10	

ALPHABETICAL INDEX

INT/L - Wiring diagram [LT-37](#)
Intake air temperature sensor ... [EC-177](#), [EC-196](#), [EC-755](#), [EC-775](#), [EC-1381](#), [EC-1401](#)
Intake door control linkage adjustment [MTC-41](#)
Intake door motor [MTC-38](#)
Intake manifold [EM-12](#), [EM-105](#)
Intake sensor [MTC-66](#)
Intake valve timing control . [EC-148](#), [EC-385](#), [EC-731](#), [EC-947](#), [EC-1353](#)
Intake valve timing control solenoid valve [EC-385](#), [EC-947](#), [EC-1600](#)
Interior [EI-28](#)
Interior lamp [LT-35](#)
IVC - Wiring diagram [EC-387](#), [EC-949](#), [EC-1601](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-5](#)

J

Jacking points [GI-39](#)
Joint connector (J/C) [PG-49](#)
Junction box (J/B) [PG-54](#)

K

Keyless entry system - See Multi-remote control system [BL-34](#)
Knock sensor (KS) [EC-273](#), [EC-832](#), [EC-1486](#)
KS - Wiring diagram [EC-274](#), [EC-833](#), [EC-1487](#)

L

Length (Dimensions) [GI-48](#)
License lamp [LT-19](#)
Lifting points [GI-39](#), [GI-40](#)
Line pressure solenoid valve [AT-159](#), [AT-547](#)
Line pressure test (A/T) [AT-68](#), [AT-456](#)
Liquid gasket application [EM-4](#), [EM-92](#)
LOAD - Wiring diagram ... [EC-565](#), [EC-1185](#), [EC-1186](#)
Location of electrical units [PG-42](#)
Low and reverse brake [AT-333](#)
Lubricant (R134a) A/C [MTC-16](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [MTC-16](#)
Lubrication-locks, hinges and hood latches [MA-36](#)
Luggage room lamp [LT-35](#)

M

M/T major overhaul [MT-20](#), [MT-88](#), [MT-149](#)
M/T oil replacementM/T oil replacement ... [MT-76](#), [MT-137](#)
M/T removal and installation [MT-16](#)
MAFS - Wiring diagram [EC-166](#), [EC-173](#), [EC-381](#), [EC-743](#), [EC-750](#), [EC-942](#), [EC-1371](#), [EC-1377](#), [EC-1596](#)
Magnet clutch [MTC-69](#)
MAIN - Wiring diagram [EC-138](#), [EC-721](#), [EC-1342](#)
Main drive gear (M/T) [MT-21](#)
Mainshaft (M/T) [MT-21](#), [MT-48](#), [MT-85](#), [MT-146](#)

Maintenance [MA-5](#)
Maintenance (engine)QG18DE [MA-16](#)
Maintenance (engine)QR25DE [MA-23](#)
Malfunction indicator lamp (MIL) . [EC-72](#), [EC-653](#), [EC-1275](#), [EC-1586](#)
Manual air conditioner - Wiring diagram [MTC-27](#)
Manual transaxle number [GI-48](#)
Manual transmission oil replacement [MA-29](#)
Mass air flow sensor (MAFS) [EC-163](#), [EC-171](#), [EC-379](#), [EC-740](#), [EC-748](#), [EC-1368](#), [EC-1375](#), [EC-1594](#)
Master cylinder (clutch) [CL-9](#), [CL-26](#)
Meter [DI-3](#)
METER - Wiring diagram [DI-13](#)
MIL - Wiring diagram [EC-1587](#)
MIRROR - Wiring diagram [GW-14](#)
Mirror defogger [GW-15](#)
Mirror, door [GW-14](#), [GW-16](#)
Mirror, out side [GW-16](#)
Misfire [EC-267](#), [EC-825](#), [EC-1481](#)
Model variation [GI-45](#)
Molding - See Exterior [EI-22](#)
MULTI - Wiring diagram [BL-39](#)
Multiport fuel injection (MFI) system .. [EC-36](#), [EC-617](#), [EC-1239](#)
Multiport fuel injection precautions [GI-3](#), [GI-6](#)
Multi-remote control system [BL-34](#)

N

NATS (Nissan anti-theft system) [BL-95](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (EM) [EM-10](#), [EM-98](#)
NVH troubleshooting (FA) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (WT) [WT-2](#)
NVIS (Nissan vehicle immobilizer system) [BL-95](#)
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#), [GI-5](#)

O

Oil change (capacity) [MA-13](#)
Oil pan (engine) [EM-16](#), [EM-112](#)
Oil pump (A/T) [AT-293](#)
Oil pump (engine) [LU-8](#), [LU-19](#)
Oil pump regulator valve (engine) [LU-10](#)
Oil seal replacement (engine) [EM-49](#), [EM-142](#)
On board diagnostic system [EC-1260](#)
Operating cylinder (clutch) [CL-11](#), [CL-28](#)
ORVR (On-board Refueling Vapor Recovery) [EC-590](#), [EC-1212](#), [EC-1852](#)
Overdrive control switch [AT-250](#), [AT-252](#), [AT-632](#)
Overheat [EC-438](#), [EC-1009](#)
Overrun clutch [AT-325](#)
Overrun clutch solenoid valve [AT-568](#)

P

Park/Neutral position switch [EC-493](#), [EC-1115](#), [EC-](#)

ALPHABETICAL INDEX

[1742](#)

Park/neutral position switch (A/T) [AT-116](#), [AT-491](#)
 Park/neutral position switch (M/T) [MT-13](#)
 Park/neutral position switch (M/T)Park/neutral position switch (M/T) [MT-78](#), [MT-139](#)
 Parking brake control [PB-2](#)
 Parking drum brake [BR-31](#)
 Parking lamp [LT-19](#)
 PCV (positive crankcase ventilation) [EC-596](#), [EC-1218](#), [EC-1858](#)
 Periodic maintenance [MA-7](#)
 PGC/V - Wiring diagram [EC-313](#), [EC-462](#), [EC-869](#), [EC-1083](#), [EC-1523](#), [EC-1674](#)
 PHASE - Wiring diagram ... [EC-284](#), [EC-843](#), [EC-1497](#)
 Piston assembly [EM-77](#)
 Piston pin inspection [EM-69](#)
 Piston ring inspection [EM-70](#)
 Piston to bore clearance [EM-71](#), [EM-181](#)
 PNP/SW - Wiring diagram [EC-495](#), [EC-1117](#), [EC-1744](#)
 POS - Wiring diagram [EC-279](#), [EC-838](#), [EC-1491](#)
 POWER - Wiring diagram [EC-937](#), [PG-4](#)
 Power door lock [BL-12](#)
 Power door mirror [GW-14](#)
 Power steering fluid level [PS-8](#), [MA-34](#)
 Power steering gear [PS-15](#)
 Power steering hydraulic pressure [PS-9](#)
 Power steering oil pressure switch [EC-1811](#)
 Power steering oil pump [PS-21](#)
 Power steering pressure (PSP) sensor [EC-922](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-2](#)
 Power window [GW-7](#)
 Power window main switch [GW-7](#)
 PRE/SE - Wiring diagram .. [EC-326](#), [EC-882](#), [EC-888](#), [EC-1536](#), [EC-1542](#)
 Precautions (General) [GI-3](#)
 Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
 Pressure test (A/T) [AT-68](#), [AT-456](#)
 PS/SEN - Wiring diagram [EC-368](#), [EC-923](#)
 PST/SW - Wiring diagram [EC-1812](#)

R

Radiator [CO-13](#)
 Radio - See Audio [AV-2](#)
 Rear air spoiler [EI-22](#)
 Rear axle [RAX-5](#)
 Rear axle (disc brake type) [RAX-6](#)
 Rear axle (drum brake type) [RAX-6](#)
 Rear bumper [EI-18](#)
 Rear combination lamp removal and installation [EI-22](#)
 Rear disc brake [BR-23](#)
 Rear door [BL-31](#), [GW-13](#)
 Rear drum brake [BR-31](#)
 Rear seat [SE-5](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-3](#)
 Rear window defogger [GW-17](#)

Refrigerant connection precaution [MTC-5](#)
 Refrigerant general precaution [MTC-4](#)
 Refrigerant lines [MTC-82](#)
 Refrigerant pressure sensor [EC-559](#), [EC-1180](#), [EC-1816](#), [MTC-56](#)
 Refrigeration cycle [MTC-15](#)
 Release bearing (clutch) [CL-14](#), [CL-31](#)
 Remote keyless entry system [BL-34](#)
 Removal and installation (A/T) [AT-265](#)
 Reverse clutch [AT-314](#)
 Reverse idler shaft (M/T) [MT-20](#), [MT-85](#), [MT-146](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) [MT-13](#)
 Reverse main gear (M/T) [MT-21](#), [MT-85](#), [MT-146](#)
 Revolution sensor (A/T) [AT-503](#)
 Road wheel size [GI-49](#)
 Rocker cover [EM-121](#)
 Roof trim [EI-32](#)
 Room lamp - See Interior lamp [LT-35](#)
 RP/SEN - Wiring diagram [EC-560](#), [EC-1181](#), [EC-1817](#)

S

S/SIG - Wiring diagram [EC-1803](#)
 SAE J1979 - Mode 1 - 7 [EC-1260](#)
 Seal - See Exterior [EI-22](#)
 Seat belt inspection [SB-7](#), [MA-37](#)
 Seat belt pre-tensioner disposal [SRS-47](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-3](#)
 Seat, rear [SE-5](#)
 SEN/PW - Wiring diagram [EC-456](#), [EC-1029](#), [EC-1669](#)
 Shift warning system [BL-64](#)
 SHIFT - Wiring diagram [AT-254](#), [AT-638](#)
 Shift control components (M/T) [MT-22](#), [MT-87](#), [MT-148](#)
 Shift control components (M/T)Shift control components (M/T) [MT-79](#), [MT-140](#)
 Shift fork (M/T) [MT-22](#), [MT-87](#), [MT-148](#)
 Shift lever [MT-14](#)
 Shift lock system [AT-253](#), [AT-637](#)
 Shift schedule [AT-386](#), [AT-752](#)
 Shift solenoid valve A (A/T) .. [AT-140](#), [AT-150](#), [AT-553](#)
 Shift solenoid valve B (A/T) [AT-140](#), [AT-558](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear) [RSU-10](#)
 Side trim [EI-28](#)
 Smart entrance control unit [BCS-3](#)
 Spare tire size [GI-49](#)
 Spark plug replacementQG18DE [MA-21](#)
 Spark plug replacementQR25DE [MA-27](#)
 Specification value [EC-1337](#)
 Speedometer [DI-3](#)
 SROOF - Wiring diagram [RF-12](#)
 SRS - Wiring diagram [SRS-14](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-11](#)
 Stall test (A/T) [AT-64](#), [AT-452](#)
 Standardized relay [PG-52](#)

IDX

ALPHABETICAL INDEX

START - Wiring diagram	SC-10
Start signal	EC-1802
Starter	SC-18
Starting system	SC-9
Steering gear and linkage inspection	MA-34
Steering linkage	PS-15
Steering wheel and column	PS-11
Steering wheel play	PS-7
Steering wheel turning force	PS-9
Stop lamp	LT-21
Stop lamp switch	EC-497 , EC-1746
STOP/L - Wiring diagram	LT-21
Striking rod (M/T)	MT-22
Strut (front)	FSU-9
Strut (rear)	RSU-8
Sub-gear (M/T)	MT-21
Sunroof	RF-11
Supplemental restraint system - Wiring diagram	SRS-14
Suspension	MA-35
Swirl control valve	EC-971 , EC-984
Swirl control valve control position sensor	EC-976 , EC-984
Swirl control valve control solenoid valve	EC-984
SWL/S - Wiring diagram	EC-978 , EC-986
SWL/V - Wiring diagram	EC-971 , EC-973 , EC-984
Symbols and abbreviations	GI-8 , GI-9 , GI-21
Symptom matrix chart	EC-93 , EC-674 , EC-1295
Synchronizer (M/T)	MT-21 , MT-85 , MT-146
System readiness test (SRT) code	EC-63 , EC-644 , EC-1265

T

Tachometer	DI-3
Tail lamp	LT-19
TAIL/L - Wiring diagram	LT-19
TCM circuit diagram	AT-18 , AT-407
TCM inspection table	AT-110 , AT-485
Temperature control cable and linkage adjustment	MTC-45
Thermal protector	MTC-76
Thermostat	CO-11 , CO-28
Three way catalyst function	EC-289 , EC-848 , EC-1502
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor	EC-1618
Throttle control motor relay	EC-399 , EC-961 , EC-1613
Throttle position sensor (TPS) ..	EC-186 , EC-260 , EC-451 , EC-453 , EC-518 , EC-765 , EC-1024 , EC-1026 , EC-1140 , EC-1391 , EC-1475 , EC-1664 , EC-1666 , EC-1763
Throttle position sensor adjustment	EC-669
Throttle position switch	AT-250 , AT-632
Throttle valve closed position learning	EC-1255
Throwout bearing - See Clutch release bearing	CL-14 , CL-31
Tie-rod	PS-19
Tie-rod ball joints	PS-19
Tightening torque of standard bolts	GI-43
Time control system	BCS-10

Timing chain	EM-39 , EM-134
Tire rotation	MA-31
Tire size	GI-49
TLID - Wiring diagram	BL-33
Top tether strap child restraint	SB-10
Torque converter installation	AT-266 , AT-650 , AT-745
Torque convertor clutch solenoid valve	AT-534
Tow truck towing	GI-41
Towing point	GI-42
TPS1 - Wiring diagram	EC-262 , EC-1477
TPS2 - Wiring diagram	EC-188 , EC-767 , EC-1393
TPS3 - Wiring diagram	EC-520 , EC-1142 , EC-1765
Transmission case (M/T)	MT-20 , MT-84 , MT-145
Tread-FR&RR (Dimensions)	GI-48
Trim	EI-28
Trouble diagnoses	GI-9 , GI-23
Trunk lid	EI-18
Trunk lid finisher	EI-33
Trunk lid opener - See Trunk lid	EI-18
Trunk lid opener, electric	BL-33
Trunk lid trim	EI-33
Trunk room lamp	LT-35
Trunk room trim	EI-33
TURN - Wiring diagram	LT-29
Turn signal lamp	LT-27
Two trip detection logic	EC-58 , EC-639 , EC-1260
Two-pole lift	GI-40

U

Under body	BL-119
------------------	------------------------

V

Vacuum cut valve bypass valve	EC-1707 , EC-1714
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control)	EC-34 , EC-1237
Valve clearance	EM-35 , EM-130
Valve guide	EM-58 , EM-152
Valve seat	EM-60 , EM-153
Valve spring	EM-61 , EM-154
Variable induction air control system (VIAS) .	EC-1788
Vehicle identification number	GI-46
Vehicle recovery (freeing a stuck vehicle)	GI-42
Vehicle security (theft warning) system	BL-64
Vehicle speed sensor (VSS)	EC-361 , EC-916 , EC-1575
VEHSEC - Wiring diagram	BL-71
Vent mode switch	MTC-20
VENT/V - Wiring diagram ...	EC-319 , EC-470 , EC-875 , EC-1091 , EC-1529 , EC-1682 , EC-1690
VIAS - Wiring diagram	EC-1790
Viscosity number (SAE)	MA-14
VSS - Wiring diagram	EC-1576

W

WARN - Wiring diagram	DI-29
-----------------------------	-----------------------

ALPHABETICAL INDEX

Warning chime	DI-37	
Warning lamps	DI-27	A
Washer, front	WW-3	
Water pump	CO-9	
Water temperature gauge	DI-3	B
Weatherstrip - See Exterior	EI-22	
Wheel alignment (front)	FSU-6	
Wheel alignment (rear)	RSU-6	C
Wheel balance	MA-31	
Wheel bearing (front axle)	FAX-9	
Wheel bearing (front)	FAX-5	
Wheel bearing (rear)	RAX-5	D
Wheel hub (front)	FAX-6 , FAX-9	
Wheel hub (rear)	RAX-6	
Wheel sensors (ABS)	BRC-44	E
Wheel size	GI-49	
Wheelbase (Dimensions)	GI-48	
Width (Dimensions)	GI-48	F
WINDOW - Wiring diagram	GW-9	
Window, back door	GW-12	
Window, door	GW-6 , GW-12	
Window, rear	GW-3	G
Windshield	GW-3	
Windshield washer - See Front washer	WW-3	
Windshield wiper - See Front wiper	WW-3	H
WIPER - Wiring diagram	WW-5	
Wiper and washer	WW-3	
Wiper, front	WW-3	I
Wiring Diagram (Cell code) list	PG-39	
Wiring diagrams	GI-8 , GI-13	
Withdrawal lever (clutch)	CL-14 , CL-31	J
Wrist pin - See Piston pin inspection	EM-69	