

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram [MTC-27](#)
 A/C air flow [MTC-21](#)
 A/C component layout [MTC-19](#)
 A/C compressor clutch removal and installation . [MTC-69](#)
 A/C compressor mounting [MTC-68](#)
 A/C compressor precaution [MTC-8](#)
 A/C compressor special service tool [MTC-11](#)
 A/C control linkage adjustment (manual A/C) . [MTC-41](#)
 A/C control operation (manual A/C) [MTC-20](#)
 A/C diagnostic work flow (manual A/C) [MTC-34](#)
 A/C HFC134a (R134a) system identification [MTC-4](#)
 A/C HFC134a (R134a) system introduction ... [MTC-15](#)
 A/C HFC134a (R134a) system precaution [MTC-3](#)
 A/C HFC134a (R134a) system service procedure [MTC-82](#)
 A/C HFC134a (R134a) system service tools .. [MTC-12](#)
 A/C HFC134a system service equipment precaution ... [MTC-8](#)
 A/C lubricant (R134a) [MTC-16](#)
 A/C lubrication oil [MTC-16](#)
 A/C operational check [MTC-35](#)
 A/C performance chart [MTC-58](#)
 A/C performance test diagnoses [MTC-58](#)
 A/C pressure switch [MTC-15](#)
 A/C push control [MTC-20](#)
 A/C rera [MTC-55](#)
 A/C service data specification [MTC-91](#)
 A/C switch [MTC-20](#)
 A/C, M - Wiring diagram [MTC-27](#)
 A/F - Wiring diagram ... [EC-453](#), [EC-459](#), [EC-465](#), [EC-472](#), [EC-479](#), [EC-485](#), [EC-492](#), [EC-1116](#), [EC-1122](#), [EC-1128](#), [EC-1135](#), [EC-1142](#), [EC-1148](#), [EC-1155](#)
 A/FH - Wiring diagram [EC-353](#), [EC-1030](#)
 A/T - Wiring diagram [AT-406](#)
 A/T fluid temperature sensor [AT-125](#), [AT-494](#)
 A/T self-diagnoses [AT-431](#), [AT-439](#), [AT-440](#)
 A/T shift lock system [AT-252](#), [AT-633](#)
 A/T shift lock system - Wiring diagram [AT-253](#), [AT-634](#)
 A/T trouble diagnoses [AT-56](#)
 A/T Wiring diagram AT - 1ST [AT-137](#), [AT-511](#)
 A/T Wiring diagram AT - 2ND [AT-142](#), [AT-516](#)
 A/T Wiring diagram AT - 3RD [AT-147](#), [AT-521](#)
 A/T Wiring diagram AT - 4TH [AT-153](#), [AT-526](#)
 A/T Wiring diagram AT - BA/FTS [AT-199](#), [AT-572](#)
 A/T Wiring diagram AT - CAN [AT-209](#), [AT-588](#)
 A/T Wiring diagram AT - ENG SS [AT-132](#), [AT-506](#)
 A/T Wiring diagram AT - FTS [AT-122](#), [AT-496](#)
 A/T Wiring diagram AT - LPSV [AT-174](#), [AT-546](#)
 A/T Wiring diagram AT - MAIN [AT-112](#), [AT-485](#)
 A/T Wiring diagram AT - NONDTC [AT-215](#), [AT-594](#)
 A/T Wiring diagram AT - OVRCSV [AT-194](#), [AT-567](#)
 A/T Wiring diagram AT - PNP/SW [AT-116](#), [AT-490](#)
 A/T Wiring diagram AT - SSV/A [AT-180](#), [AT-552](#)
 A/T Wiring diagram AT - SSV/B [AT-184](#), [AT-557](#)
 A/T Wiring diagram AT - TCCSIG [AT-166](#), [AT-538](#)
 A/T Wiring diagram AT - TCV [AT-160](#), [AT-533](#)

A/T Wiring diagram AT - TPS [AT-190](#), [AT-562](#)
 A/T Wiring diagram AT - VSS A/T [AT-128](#), [AT-502](#)
 A/T Wiring diagram AT - VSSMTR ... [AT-205](#), [AT-579](#), [AT-584](#)
 ABS - Wiring diagram [BRC-10](#)
 ABS sensor rotor [RAX-6](#)
 Accelerator pedal position (APP) sensor [EC-540](#), [EC-559](#), [EC-1210](#), [EC-1217](#), [EC-1230](#)
 Accelerator pedal released position learning ... [EC-47](#), [EC-684](#)
 Air bag [SRS-3](#)
 Air bag disposal [SRS-47](#)
 Air bag precautions [GI-3](#)
 Air bleeding (hydraulic clutch) [CL-7](#), [CL-24](#)
 Air bleeding for brake system [BR-7](#)
 Air cleaner and air duct [EM-101](#)
 Air cleaner filter replacementQG18DE [MA-19](#)
 Air cleaner filter replacementQR25DE [MA-26](#)
 Air conditioner - Wiring diagram [MTC-27](#)
 Air conditioner cut control [EC-659](#)
 Air control cable adjustment [MTC-43](#)
 Air flow meter - See Mass air flow sensor [EC-807](#), [EC-815](#)
 Air fuel ratio sensor 1 .. [EC-450](#), [EC-456](#), [EC-462](#), [EC-469](#), [EC-476](#), [EC-482](#), [EC-489](#), [EC-1113](#), [EC-1119](#), [EC-1125](#), [EC-1132](#), [EC-1139](#), [EC-1145](#), [EC-1152](#)
 Air fuel ratio sensor 1 heater [EC-351](#), [EC-1028](#)
 Air mix door control linkage adjustment [MTC-45](#)
 Air spoiler, rear [EI-22](#)
 Alternator [SC-30](#)
 Angular tightening application [EM-4](#), [EM-91](#)
 Antenna [AV-13](#)
 Anti-lock brake system - Wiring diagram [BRC-10](#)
 APPS1 - Wiring diagram [EC-542](#), [EC-1212](#)
 APPS2 - Wiring diagram [EC-548](#), [EC-1219](#)
 APPS3 - Wiring diagram [EC-561](#), [EC-1232](#)
 ASC/BS - Wiring diagram [EC-519](#), [EC-1183](#)
 ASC/SW - Wiring diagram [EC-512](#), [EC-1176](#)
 ASCBOF - Wiring diagram [EC-609](#), [EC-1293](#)
 ASCD [EC-1319](#)
 ASCD (automatic speed control device) [EC-635](#), [ACS-2](#)
 ASCD brake switch [EC-1181](#), [EC-1292](#)
 ASCD clutch switch [EC-1181](#), [EC-1292](#)
 ASCD indicator lamp [EC-1300](#)
 ASCD steering switch [EC-1174](#)
 ASCIND - Wiring diagram [EC-619](#), [EC-1301](#)
 Audio [AV-2](#)
 AUDIO - Wiring diagram [AV-4](#)
 Audio and A/C control removal and installation - See Instrument panel [IP-10](#)
 Automatic transaxle number [GI-49](#)
 Automatic transmission fluid replacement [MA-31](#)
 Axle [MA-36](#)

B

Back door window [GW-12](#)
 BACK/L - Wiring diagram [LT-22](#)

ALPHABETICAL INDEX

Back-up lamp [LT-22](#)
 Back-up lamp switch (M/T) [MT-12](#)
 Back-up lamp switch (M/T)Back-up lamp switch [MT-75](#)
 Ball joint (front) [FSU-14](#)
 Basic inspection [EC-81](#), [EC-723](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#),
[SC-24](#)
 Baulk ring (M/T) [MT-19](#), [MT-82](#)
 Bi-level door control linkage adjustment [MTC-43](#)
 Block heater [EM-159](#)
 Blower motor [MTC-50](#)
 Blower resistor [MTC-50](#)
 Blower unit [MTC-79](#)
 Body alignment [BL-112](#)
 Brake booster [BR-16](#)
 Brake control valve (Proportioning valve) [BR-10](#)
 Brake fluid change [BR-6](#)
 Brake fluid level [MA-32](#)
 Brake fluid level and line check [BR-6](#)
 Brake hydraulic line [BR-8](#)
 Brake inspectionDisc Brake [MA-33](#)
 Brake inspectionDrum Brake [MA-34](#)
 Brake lines and cables inspection [MA-32](#)
 Brake lining wear temporary checkingDisc Brake . [MA-34](#)
 Brake lining wear temporary checkingDrum Brake [MA-34](#)
 Brake pedal [BR-11](#)
 Brake switch [EC-534](#), [EC-1181](#), [EC-1204](#), [EC-1292](#)
 BRK/SW - Wiring diagram [EC-535](#), [EC-1205](#)
 Bulb specifications [LT-48](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-18](#)

C

Camshaft [EM-121](#)
 Camshaft inspection [EM-33](#), [EM-123](#)
 Camshaft position sensor (PHASE) .. [EC-259](#), [EC-935](#)
 CAN - Wiring diagram . [EC-149](#), [EC-790](#), [LAN-8](#), [LAN-18](#)
 CAN (Controller Area Network) [LAN-7](#), [LAN-17](#)
 CAN communication [EC-34](#), [EC-148](#), [EC-661](#), [EC-789](#),
[AT-208](#), [AT-587](#), [LAN-7](#), [LAN-17](#)
 Canister-See EVAP canister [EC-1308](#)
 CHARGE - Wiring diagram [SC-23](#)
 Charging system [SC-22](#)
 Chassis and body maintenance [MA-9](#), [MA-30](#)
 CHIME - Wiring diagram [DI-43](#)
 CIGAR - Wiring diagram [WW-10](#)
 Cigarette lighter [WW-10](#)
 Circuit breaker [PG-46](#)
 Closed loop control [EC-31](#), [EC-657](#)
 Closed loop control (Bank 1) [EC-1090](#)
 Clutch cover [CL-17](#), [CL-33](#)
 Clutch disc [CL-17](#), [CL-33](#)
 Clutch fluid level [MA-30](#)
 Clutch master cylinder [CL-9](#), [CL-26](#)

Clutch operating cylinder [CL-11](#), [CL-28](#)
 Clutch pedal [CL-7](#), [CL-24](#)
 Clutch release bearing [CL-14](#), [CL-31](#)
 Clutch release mechanism [CL-14](#), [CL-31](#)
 Clutch withdrawal lever [CL-14](#), [CL-31](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear) [RSU-10](#)
 Combination lamp, front, removal and installation [EI-13](#)
 Combination lamp, rear, removal and installation [EI-22](#)
 Combination meter [DI-3](#)
 Combination meter removal and installation - See Instru-
 ment panel [IP-10](#)
 Combination switch [LT-4](#)
 Component Location (manual A/C) [MTC-23](#)
 Compression pressure [EM-52](#)
 Compressor clutch removal and installation ... [MTC-69](#)
 Compressor mounting [MTC-68](#)
 Compressor precaution [MTC-8](#)
 Compressor special service tool [MTC-11](#)
 Connecting rod [EM-69](#)
 Connecting rod bearing clearance [EM-74](#)
 Connecting rod bushing clearance [EM-75](#)
 Connector inspection [GI-23](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-16](#)
 CONSULT for engine [EC-114](#)
 CONSULT general information [GI-36](#)
 CONSULT-áU for engine [EC-753](#)
 Control lever (M/T) [MT-13](#)
 Control valve (A/T) [AT-297](#)
 Controller Area Network (CAN) [LAN-7](#), [LAN-17](#)
 Converter housing installation [AT-379](#), [AT-741](#)
 COOL/F - Wiring diagram [EC-431](#), [EC-1095](#)
 Coolant mixture ratio [MA-14](#)
 Coolant replacementQG18DE [MA-16](#)
 Coolant replacementQR25DE [MA-23](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan control [EC-1092](#)
 Cooling fan motor [EC-1092](#)
 Cooling fan relay [EC-440](#), [EC-1104](#)
 Cooling unit (A/C evaporator) [MTC-80](#)
 Coupling sleeve (M/T) [MT-19](#), [MT-82](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-633](#), [EC-1317](#)
 Crankshaft [EM-71](#), [EM-160](#)
 Crankshaft position sensor (POS) [EC-252](#), [EC-930](#)
 Cylinder block [EM-66](#), [EM-159](#)
 Cylinder block boring [EM-179](#)
 Cylinder head [EM-52](#), [EM-143](#)

D

D/LOCK - Wiring diagram [BL-14](#)
 Data link connector [EC-1303](#)
 Data link connector for Consult [EC-116](#), [EC-756](#)
 Daytime light system [LT-10](#)
 Daytime running light - See Daytime light system .. [LT-10](#)
 DEF - Wiring diagram [GW-20](#)

ALPHABETICAL INDEX

Detonation sensor - See Knock sensor ... [EC-247](#), [EC-926](#)
 Diagnosis sensor unit [SRS-37](#)
 Diagnostic trouble code (DTC) for OBD system [EC-56](#), [EC-639](#), [EC-693](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-78](#), [EC-720](#)
 Differential gear (FF A/T) [AT-355](#)
 Differential gear (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
 Dimensions [GI-49](#)
 DLC - Wiring diagram [EC-621](#), [EC-1303](#)
 Dome light - See Interior lamp [LT-35](#)
 Door adjustment (front) [BL-30](#)
 Door adjustment (rear) [BL-30](#)
 Door glass [BL-30](#), [GW-6](#), [GW-12](#), [GW-13](#)
 Door glass Fitting Adjustment [BL-30](#)
 Door mirror [GW-14](#), [GW-16](#)
 Door trim [EI-31](#)
 Door, front [BL-30](#), [GW-12](#)
 Door, rear [BL-30](#), [GW-13](#)
 Drive belt [EM-99](#)
 Drive belt inspectionQG18DE [MA-16](#)
 Drive belt inspectionQR25DE [MA-23](#)
 Drive plate runout [EM-76](#)
 Drive shaft [MA-37](#)
 Drive shaft (front) [FAX-5](#), [FAX-11](#)
 Dropping resistor (A/T) [AT-178](#), [AT-544](#)
 DTC work support [EC-126](#), [EC-765](#)
 DTRL - Wiring diagram [LT-14](#)

E

ECM input/output signal [EC-106](#), [EC-746](#), [EC-769](#)
 ECM power supply [EC-141](#), [EC-357](#), [EC-782](#), [EC-1034](#)
 ECM/PW - Wiring diagram [EC-358](#)
 ECTS - Wiring diagram [EC-181](#), [EC-829](#)
 Electric throttle control actuator [EC-373](#), [EC-375](#), [EC-387](#), [EC-1043](#), [EC-1045](#), [EC-1057](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-596](#), [EC-1274](#)
 Electrical units location [PG-43](#)
 Electronic ignition (EI) system [EC-658](#)
 Engine compartment [BL-113](#)
 Engine control circuit diagram [EC-102](#), [EC-742](#)
 Engine control component parts location ... [EC-90](#), [EC-732](#)
 Engine control module (ECM) [EC-348](#), [EC-1025](#)
 Engine control system diagram and chart . [EC-28](#), [EC-652](#)
 Engine coolant temperature sensor (ECTS) ... [EC-179](#), [EC-190](#), [EC-827](#), [EC-838](#)
 Engine fail-safe system [EC-80](#), [EC-721](#)
 Engine oil filter replacementQG18DE [MA-20](#)
 Engine oil filter replacementQR25DE [MA-27](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacementQG18DE [MA-20](#)
 Engine oil replacementQR25DE [MA-26](#)
 Engine outer component parts [EM-13](#)
 Engine removal [EM-62](#), [EM-155](#)

Engine room - See Engine compartment [BL-113](#)
 Engine serial number [GI-48](#)
 ETC1 - Wiring diagram [EC-376](#), [EC-1046](#)
 ETC2 - Wiring diagram [EC-384](#), [EC-1054](#)
 ETC3 - Wiring diagram [EC-388](#), [EC-1058](#)
 EVAP canister [EC-625](#), [EC-1308](#)
 EVAP canister purge volume control solenoid valve [EC-284](#), [EC-496](#), [EC-963](#), [EC-1159](#)
 EVAP canister vent control valve [EC-291](#), [EC-504](#), [EC-969](#), [EC-1167](#)
 EVAP control system (small leak) diagnosis .. [EC-275](#), [EC-314](#), [EC-955](#), [EC-990](#), [EC-998](#)
 EVAP control system pressure sensor ... [EC-298](#), [EC-300](#), [EC-306](#), [EC-976](#), [EC-982](#)
 EVAP control system purge flow monitoring diagnosis . [EC-269](#), [EC-949](#)
 EVAP vapor lines inspectionQG18DE [MA-22](#)
 EVAP vapor lines inspectionQR25DE [MA-29](#)
 Evaporative emission (EVAP) system [EC-1305](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [MA-30](#)
 Exterior [EI-22](#)

F

F/FOG - Wiring diagram [LT-25](#)
 F/PUMP - Wiring diagram [EC-586](#), [EC-1265](#)
 Fan switch [MTC-50](#)
 Final drive (FF A/T) [AT-355](#)
 Final drive (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
 Finisher, interior - See Trim [EI-28](#)
 Finisher, trunk lid [EI-33](#)
 Floor trim [EI-28](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-125](#), [AT-494](#)
 Fluids [MA-13](#)
 Flywheel (clutch) [CL-18](#), [CL-34](#)
 Flywheel runout [EM-76](#)
 Fog lamp, front [LT-24](#)
 Fog lamp, front, removal and installation [EI-13](#)
 Fork rod (M/T) [MT-20](#), [MT-84](#)
 Forward clutch [AT-324](#)
 Freeze frame data [EC-57](#), [EC-694](#)
 Front axle [FAX-5](#)
 Front bumper [EI-13](#)
 Front combination lamp removal and installation [EI-13](#)
 Front door [BL-30](#), [GW-12](#)
 Front fog lamp [LT-24](#)
 Front fog lamp removal and installation [EI-13](#)
 Front passenger air bag [SRS-44](#)
 Front seat [SE-3](#)
 Front seat belt [SB-3](#)
 Front washer [WW-3](#)
 Front wiper [WW-3](#)
 FTTS - Wiring diagram [EC-228](#), [EC-232](#), [EC-906](#), [EC-910](#)
 FUEL - Wiring diagram [EC-214](#), [EC-221](#), [EC-885](#), [EC-896](#)
 Fuel cut control (at no load high engine speed) [EC-33](#),

ALPHABETICAL INDEX

[EC-660](#)
Fuel gauge [DI-3](#)
Fuel injection system [EC-73](#), [EC-212](#), [EC-219](#), [EC-883](#),
[EC-894](#)
Fuel injector and fuel tube [EM-19](#), [EM-116](#)
Fuel level sensor [EC-331](#), [EC-333](#), [EC-335](#), [EC-1008](#),
[EC-1010](#), [EC-1012](#)
Fuel line inspection [FL-2](#), [MA-19](#)
Fuel line inspectionQR25DE [MA-25](#)
Fuel precautions [GI-3](#), [GI-5](#)
Fuel pressure check [EC-49](#), [EC-687](#)
Fuel pressure release [EC-49](#), [EC-687](#)
Fuel pump [EC-585](#), [EC-1264](#)
Fuel tank temperature sensor ... [EC-226](#), [EC-231](#), [EC-904](#), [EC-909](#)
Fuel tank vacuum relief valve [EC-625](#), [EC-1308](#)
Fuel tankRemoval and Installtion [FL-7](#)
Fuse [PG-46](#)
Fuse and fusible link box [PG-55](#)
Fuse block [PG-54](#)
Fusible link [PG-46](#)

G

Gauges [DI-3](#)
Gear components (M/T) [MT-19](#), [MT-82](#)
Generator [SC-30](#)
Generator - See Alternator [SC-30](#)
Generic scan tool (GST) [EC-129](#), [EC-767](#)
Ground distribution [PG-13](#)

H

H/LAMP - Wiring diagram [LT-7](#)
H/MIRROR - Wiring diagram [GW-15](#)
Harness connector [PG-47](#)
Harness connector inspection [GI-23](#)
Harness layout [PG-22](#)
Hazard warning lamp [LT-27](#)
Headlamp [LT-6](#)
Headlamp removal and installation [EI-13](#)
Headlining - See Roof trim [EI-32](#)
Heated oxygen sensor 1 ... [EC-846](#), [EC-852](#), [EC-862](#),
[EC-1062](#), [EC-1068](#)
Heated oxygen sensor 1 heater [EC-795](#)
Heated oxygen sensor 2 ... [EC-198](#), [EC-204](#), [EC-413](#),
[EC-420](#), [EC-869](#), [EC-875](#), [EC-1074](#), [EC-1082](#)
Heated oxygen sensor 2 heater [EC-154](#), [EC-801](#)
HEATER - Wiring diagram [MTC-25](#)
Heater mirror [GW-15](#)
Heater system - Wiring diagram [MTC-25](#)
Heater unit (heater core) [MTC-78](#)
Height (Dimensions) [GI-49](#)
HFC134a (R134a) system identification [MTC-4](#)
HFC134a (R134a) system introduction [MTC-15](#)
HFC134a (R134a) system precaution [MTC-3](#)
HFC134a (R134a) system service procedure [MTC-82](#)
HFC134a (R134a) system service tools [MTC-12](#)
HFC134a system service equipment precaution [MTC-8](#)

High clutch [AT-318](#)
HO2S1 - Wiring diaram [EC-848](#), [EC-855](#), [EC-865](#)
HO2S1H - Wiring diagram [EC-797](#)
HO2S2 - Wiring diagram ... [EC-200](#), [EC-207](#), [EC-415](#),
[EC-422](#), [EC-871](#), [EC-878](#), [EC-1077](#), [EC-1085](#)
HO2S2H - Wiring diagram [EC-156](#), [EC-803](#)
Hood [EI-13](#)
Horn [WW-9](#)
HORN - Wiring diagram [WW-9](#)
How to erase DTC for OBD system [EC-64](#), [EC-704](#)

I

IATS - Wiring diagram [EC-176](#), [EC-824](#)
Identification plate [GI-48](#)
Idle air volume learning [EC-47](#), [EC-685](#)
Idle mixture ratio [EC-36](#), [EC-663](#), [EC-674](#)
Idle speed ... [EC-35](#), [EC-36](#), [EC-663](#), [EC-674](#), [EC-723](#)
Idle speed control (ISC) ... [EC-339](#), [EC-341](#), [EC-1016](#),
[EC-1018](#)
Ignition coil [EM-113](#), [EC-566](#), [EC-1237](#)
Ignition control system [EC-566](#), [EC-1237](#)
Ignition timing [EC-35](#), [EC-36](#), [EC-663](#), [EC-674](#), [EC-723](#)
IGNSYS - Wiring diagram [EC-567](#), [EC-1238](#)
ILL - Wiring diagram [LT-33](#)
Illumination [LT-32](#)
INJECT - Wiring diagram [EC-579](#), [EC-1259](#)
Injector [EC-578](#), [EC-1258](#)
Input shaft (FF M/T) [MT-19](#), [MT-38](#), [MT-82](#)
Instrument panel [IP-10](#)
INT/L - Wiring diagram [LT-37](#)
Intake air temperature sensor [EC-175](#), [EC-193](#), [EC-822](#), [EC-841](#)
Intake door control linkage adjustment [MTC-41](#)
Intake door motor [MTC-38](#)
Intake manifold [EM-13](#), [EM-103](#)
Intake sensor [MTC-66](#)
Intake valve timing control .. [EC-151](#), [EC-368](#), [EC-792](#),
[EC-1038](#)
Intake valve timing control solenoid valve [EC-368](#), [EC-1038](#)
Interior [EI-28](#)
Interior lamp [LT-35](#)
IVC - Wiring diagram [EC-370](#), [EC-1040](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-5](#)

J

Joint connector (J/C) [PG-50](#)
Junction box (J/B) [PG-54](#)

K

Keyless entry system - See Multi-remote control system
[BL-33](#)
Knock sensor (KS) [EC-247](#), [EC-926](#)
KS - Wiring diagram [EC-248](#), [EC-927](#)

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-49
License lamp	LT-19
Lifting points	GI-39
Line pressure solenoid valve	AT-158 , AT-544
Line pressure test (A/T)	AT-67 , AT-454
Liquid gasket application	EM-5 , EM-92
LOAD - Wiring diagram	EC-597
Location of electrical units	PG-43
Low and reverse brake	AT-332
Lubricant (R134a) A/C	MTC-16
Lubrication circuit (engine)	LU-4
Lubrication oil A/C	MTC-16
Lubrication-locks, hinges and hood latches	MA-37
Luggage room lamp	LT-35

M

M/T major overhaul	MT-18 , MT-85
M/T oil replacementM/T oil replacement	MT-73
M/T removal and installation	MT-15
MAFS - Wiring diagram	EC-163 , EC-170 , EC-363 , EC-810 , EC-817
Magnet clutch	MTC-69
MAIN - Wiring diagram	EC-141 , EC-782
Main drive gear (M/T)	MT-19
Mainshaft (M/T)	MT-19 , MT-45 , MT-82
Maintenance	MA-5
Maintenance (engine)QG18DE	MA-16
Maintenance (engine)QR25DE	MA-23
Malfunction indicator lamp (MIL)	EC-66 , EC-706
Manual air conditioner - Wiring diagram	MTC-27
Manual transaxle number	GI-49
Manual transmission oil replacement	MA-30
Mass air flow sensor (MAFS)	EC-160 , EC-168 , EC-807 , EC-815
Master cylinder (clutch)	CL-9 , CL-26
Meter	DI-3
METER - Wiring diagram	DI-12 , DI-61
MIL - Wiring diagram	EC-1303
MIL data link connectors circuit	EC-621
MIRROR - Wiring diagram	GW-14
Mirror defogger	GW-15
Mirror, door	GW-14 , GW-16
Mirror, out side	GW-16
Misfire	EC-241 , EC-919
Model variation	GI-46
Molding - See Exterior	EI-22
MULTI - Wiring diagram	BL-38
Multiport fuel injection (MFI) system	EC-30 , EC-656
Multiport fuel injection precautions	GI-3 , GI-6
Multi-remote control system	BL-33

N

NATS (Nissan anti-theft system)	BL-92
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (EM)	EM-11 , EM-97

NVH troubleshooting (FA)	FAX-4
NVH troubleshooting (RA)	RAX-4
NVH troubleshooting (WT)	WT-2
NVIS (Nissan vehicle immobilizer system)	BL-92
NVIS (Nissan vehicle immobilizer system) precautions	GI-3 , GI-5

O

Oil change (capacity)	MA-13
Oil pan (engine)	EM-16 , EM-110
Oil pump (A/T)	AT-292
Oil pump (engine)	LU-8 , LU-19
Oil pump regulator valve (engine)	LU-10
Oil seal replacement (engine)	EM-49 , EM-139
On board diagnostic system	EC-689
Operating cylinder (clutch)	CL-11 , CL-28
ORVR (On-board Refueling Vapor Recovery)	EC-627 , EC-1312
Overdrive control switch	AT-249 , AT-251 , AT-628
Overheat	EC-428 , EC-1092
Overrun clutch	AT-324
Overrun clutch solenoid valve	AT-565

P

Park/Neutral position switch	EC-530 , EC-1194
Park/neutral position switch (A/T)	AT-115 , AT-488
Park/neutral position switch (M/T)	MT-12
Park/neutral position switch (M/T)Park/neutral position switch (M/T)	MT-75
Parking brake control	PB-2
Parking drum brake	BR-38
Parking lamp	LT-19
PCV (positive crankcase ventilation)	EC-633 , EC-1317
Periodic maintenance	MA-7
PGC/V - Wiring diagram	EC-286 , EC-498 , EC-965 , EC-1161
PHASE - Wiring diagram	EC-260 , EC-936
Piston assembly	EM-76
Piston pin inspection	EM-68
Piston ring inspection	EM-69
Piston to bore clearance	EM-70 , EM-179
PNP/SW - Wiring diagram	EC-532 , EC-1196
POS - Wiring diagram	EC-254 , EC-931
POWER - Wiring diagram	EC-1035 , PG-5
Power door lock	BL-11
Power door mirror	GW-14
Power steering fluid level	PS-8 , MA-35
Power steering gear	PS-15
Power steering hydraulic pressure	PS-10
Power steering oil pump	PS-21
Power steering pressure (PSP) sensor ...	EC-343 , EC-1020
Power steering system bleeding	PS-8
Power supply routing	PG-3
Power transistor	EC-1237
Power window	GW-7
Power window main switch	GW-7

ALPHABETICAL INDEX

PRE/SE - Wiring diagram ... [EC-302](#), [EC-308](#), [EC-978](#),
[EC-984](#)
Precautions (General) [GI-3](#)
Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
Pressure test (A/T) [AT-67](#), [AT-454](#)
PS/SEN - Wiring diagram [EC-344](#), [EC-1021](#)

R

Radiator [CO-14](#)
Radio - See Audio [AV-2](#)
Rear air spoiler [EI-22](#)
Rear axle [RAX-5](#)
Rear axle (disc brake type) [RAX-6](#)
Rear axle (drum brake type) [RAX-6](#)
Rear bumper [EI-18](#)
Rear combination lamp removal and installation [EI-22](#)
Rear disc brake [BR-29](#)
Rear door [BL-30](#), [GW-13](#)
Rear drum brake [BR-38](#)
Rear seat [SE-5](#)
Rear seat belt [SB-5](#)
Rear suspension [RSU-5](#)
Rear window [GW-3](#)
Rear window defogger [GW-17](#)
Refrigerant connection precaution [MTC-5](#)
Refrigerant general precaution [MTC-4](#)
Refrigerant lines [MTC-82](#)
Refrigerant pressure sensor . [EC-591](#), [EC-1269](#), [MTC-56](#)
Refrigeration cycle [MTC-15](#)
Release bearing (clutch) [CL-14](#), [CL-31](#)
Remote keyless entry system [BL-33](#)
Removal and installation (A/T) [AT-264](#)
Reverse clutch [AT-313](#)
Reverse idler shaft (M/T) [MT-18](#), [MT-82](#)
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) [MT-12](#)
Reverse main gear (M/T) [MT-19](#), [MT-82](#)
Revolution sensor (A/T) [AT-500](#)
Road wheel size [GI-50](#)
Rocker cover [EM-119](#)
Roof trim [EI-32](#)
Room lamp - See Interior lamp [LT-35](#)
RP/SEN - Wiring diagram [EC-592](#), [EC-1270](#)

S

SAE J1979 - Mode 1 - 7 [EC-689](#)
Seal - See Exterior [EI-22](#)
Seat belt inspection [SB-7](#), [MA-38](#)
Seat belt pre-tensioner disposal [SRS-47](#)
Seat belt, front [SB-3](#)
Seat belt, rear [SB-5](#)
Seat, front [SE-3](#)
Seat, rear [SE-5](#)
SEN/PW - Wiring diagram [EC-447](#), [EC-1110](#)
Shift warning system [BL-63](#)
SHIFT - Wiring diagram [AT-253](#), [AT-634](#)

Shift control components (M/T) [MT-20](#), [MT-84](#)
Shift control components (M/T)Shift control components (M/T) [MT-76](#)
Shift fork (M/T) [MT-20](#), [MT-84](#)
Shift lever [MT-13](#)
Shift lock system [AT-252](#), [AT-633](#)
Shift schedule [AT-385](#), [AT-748](#)
Shift solenoid valve A (A/T) .. [AT-139](#), [AT-149](#), [AT-550](#)
Shift solenoid valve B (A/T) [AT-139](#), [AT-555](#)
Shock absorber (front) [FSU-9](#)
Shock absorber (rear) [RSU-10](#)
Side trim [EI-28](#)
Smart entrance control unit [BCS-3](#)
Spare tire size [GI-50](#)
Spark plug replacementQG18DE [MA-21](#)
Spark plug replacementQR25DE [MA-28](#)
Specification value [EC-777](#)
Speedometer [DI-3](#)
SROOF - Wiring diagram [RF-11](#)
SRS - Wiring diagram [SRS-14](#)
SRS Trouble diagnoses [SRS-8](#)
Stabilizer bar (front) [FSU-11](#)
Stall test (A/T) [AT-63](#), [AT-450](#)
Standardized relay [PG-52](#)
START - Wiring diagram [SC-10](#)
Starter [SC-18](#)
Starting system [SC-9](#)
Steering gear and linkage inspection [MA-35](#)
Steering linkage [PS-15](#)
Steering wheel and column [PS-11](#)
Steering wheel play [PS-7](#)
Steering wheel turning force [PS-9](#)
Stop lamp [LT-21](#)
Stop lamp switch [EC-1181](#), [EC-1204](#), [EC-1292](#)
STOP/L - Wiring diagram [LT-21](#)
Striking rod (M/T) [MT-20](#)
Strut (front) [FSU-9](#)
Strut (rear) [RSU-8](#)
Sub-gear (M/T) [MT-19](#)
Sunroof [RF-10](#)
Supplemental restraint system - Wiring diagram . [SRS-14](#)
Suspension [MA-36](#)
Swirl control valve [EC-392](#), [EC-405](#)
Swirl control valve control position sensor [EC-397](#), [EC-405](#)

SWL/S - Wiring diagram [EC-399](#), [EC-407](#)
SWL/V - Wiring diagram [EC-394](#)
Symbols and abbreviations [GI-8](#), [GI-9](#), [GI-21](#)
Symptom matrix chart [EC-86](#), [EC-728](#)
Synchronizer (M/T) [MT-19](#), [MT-82](#)
System readiness test (SRT) code [EC-57](#), [EC-694](#)

T

Tachometer [DI-3](#)
Tail lamp [LT-19](#)
TAIL/L - Wiring diagram [LT-19](#)
TCM circuit diagram [AT-18](#), [AT-406](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

TCM inspection table [AT-109](#), [AT-481](#)
 Temperature control cable and linkage adjustment
[MTC-45](#)
 Thermal protector [MTC-76](#)
 Thermostat [CO-12](#), [CO-30](#)
 Three way catalyst function [EC-265](#), [EC-941](#)
 Three way catalyst precautions [GI-3](#), [GI-5](#)
 Throttle control motor [EC-1057](#)
 Throttle control motor relay [EC-382](#), [EC-1052](#)
 Throttle position sensor (TPS) .. [EC-184](#), [EC-235](#), [EC-442](#), [EC-444](#), [EC-553](#), [EC-832](#), [EC-913](#), [EC-1105](#), [EC-1107](#), [EC-1224](#)
 Throttle position switch [AT-249](#), [AT-628](#)
 Throttle valve closed position learning . [EC-47](#), [EC-684](#)
 Throwout bearing - See Clutch release bearing [CL-14](#),
[CL-31](#)
 Tie-rod [PS-19](#)
 Tie-rod ball joints [PS-19](#)
 Tightening torque of standard bolts [GI-44](#)
 Time control system [BCS-10](#)
 Timing chain [EM-39](#), [EM-131](#)
 Tire rotation [MA-32](#)
 Tire size [GI-50](#)
 TLID - Wiring diagram [BL-32](#)
 Top tether strap child restraint [SB-10](#)
 Torque converter installation [AT-265](#), [AT-646](#), [AT-741](#)
 Torque convertor clutch solenoid valve [AT-531](#)
 Tow truck towing [GI-42](#)
 Towing point [GI-43](#)
 TPS1 - Wiring diagram [EC-237](#), [EC-915](#)
 TPS2 - Wiring diagram [EC-186](#), [EC-834](#)
 TPS3 - Wiring diagram [EC-555](#), [EC-1226](#)
 Transmission case (M/T) [MT-18](#), [MT-81](#)
 Tread-FR&RR (Dimensions) [GI-49](#)
 Trim [EI-28](#)
 Trouble diagnoses [GI-9](#), [GI-23](#)
 Trunk lid [EI-18](#)
 Trunk lid finisher [EI-33](#)
 Trunk lid opener - See Trunk lid [EI-18](#)
 Trunk lid opener, electric [BL-32](#)
 Trunk lid trim [EI-33](#)
 Trunk room lamp [LT-35](#)
 Trunk room trim [EI-33](#)
 TURN - Wiring diagram [LT-29](#)
 Turn signal lamp [LT-27](#)
 Two trip detection logic [EC-52](#), [EC-689](#)

U

Under body [BL-116](#)

V

Vacuum hose (brake system) [BR-18](#)
 Vacuum hose drawing (Engine control) [EC-654](#)
 Valve clearance [EM-35](#), [EM-128](#)
 Valve guide [EM-58](#), [EM-150](#), [EM-151](#)
 Valve seat [EM-60](#), [EM-152](#)
 Valve spring [EM-61](#), [EM-153](#)

Variable induction air control system (VIAS) [EC-1198](#),
[EC-1249](#)
 Vehicle identification number [GI-47](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-43](#)
 Vehicle security (theft warning) system [BL-63](#)
 Vehicle speed sensor (VSS) [EC-337](#), [EC-1014](#)
 VEHSEC - Wiring diagram [BL-70](#)
 Vent mode switch [MTC-20](#)
 VENT/V - Wiring diagram .. [EC-293](#), [EC-506](#), [EC-971](#),
[EC-1169](#)
 VIAS - Wiring diagram [EC-1251](#)
 VIAS/V - Wiring diagram [EC-1199](#)
 Viscosity number (SAE) [MA-14](#)

W

WARN - Wiring diagram [DI-28](#)
 Warning chime [DI-40](#)
 Warning lamps [DI-26](#)
 Washer, front [WW-3](#)
 Water pump [CO-10](#)
 Water temperature gauge [DI-3](#)
 Weatherstrip - See Exterior [EI-22](#)
 Wheel alignment (front) [FSU-6](#)
 Wheel alignment (rear) [RSU-6](#)
 Wheel balance [MA-32](#)
 Wheel bearing (front axle) [FAX-9](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (front) [FAX-6](#), [FAX-9](#)
 Wheel hub (rear) [RAX-6](#)
 Wheel sensors (ABS) [BRC-44](#)
 Wheel size [GI-50](#)
 Wheelbase (Dimensions) [GI-49](#)
 Width (Dimensions) [GI-49](#)
 WINDOW - Wiring diagram [GW-9](#)
 Window, back door [GW-12](#)
 Window, door [GW-6](#), [GW-12](#)
 Window, rear [GW-3](#)
 Windshield [GW-3](#)
 Windshield washer - See Front washer [WW-3](#)
 Windshield wiper - See Front wiper [WW-3](#)
 WIPER - Wiring diagram [WW-5](#)
 Wiper and washer [WW-3](#)
 Wiper, front [WW-3](#)
 Wiring Diagram (Cell code) list [PG-40](#)
 Wiring diagrams [GI-8](#), [GI-13](#)
 Withdrawal lever (clutch) [CL-14](#), [CL-31](#)
 Wrist pin - See Piston pin inspection [EM-68](#)