

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram [MTC-27](#)
 A/C air flow [MTC-21](#)
 A/C component layout [MTC-19](#)
 A/C compressor clutch removal and installation . [MTC-65](#)
 A/C compressor mounting [MTC-64](#)
 A/C compressor precaution [MTC-8](#)
 A/C compressor special service tool [MTC-11](#)
 A/C control linkage adjustment (manual A/C) . [MTC-37](#)
 A/C control operation (manual A/C) [MTC-20](#)
 A/C diagnostic work flow (manual A/C) [MTC-30](#)
 A/C HFC134a (R134a) system identification [MTC-4](#)
 A/C HFC134a (R134a) system introduction ... [MTC-15](#)
 A/C HFC134a (R134a) system precaution [MTC-3](#)
 A/C HFC134a (R134a) system service procedure [MTC-78](#)
 A/C HFC134a (R134a) system service tools .. [MTC-12](#)
 A/C HFC134a system service equipment precaution ... [MTC-8](#)
 A/C lubricant (R134a) [MTC-16](#)
 A/C lubrication oil [MTC-16](#)
 A/C operational check [MTC-31](#)
 A/C performance chart [MTC-54](#)
 A/C performance test diagnoses [MTC-54](#)
 A/C pressure switch [MTC-15](#)
 A/C push control [MTC-20](#)
 A/C rera [MTC-51](#)
 A/C service data specification [MTC-87](#)
 A/C switch [MTC-20](#)
 A/C, M - Wiring diagram [MTC-27](#)
 A/F - Wiring diagram ... [EC-482](#), [EC-488](#), [EC-494](#), [EC-501](#), [EC-508](#), [EC-514](#), [EC-522](#), [EC-1185](#), [EC-1191](#), [EC-1197](#), [EC-1204](#), [EC-1212](#), [EC-1219](#), [EC-1228](#)
 A/FH - Wiring diagram [EC-386](#), [EC-1100](#)
 A/T - Wiring diagram [AT-406](#)
 A/T fluid temperature sensor [AT-125](#), [AT-493](#)
 A/T self-diagnoses [AT-431](#), [AT-438](#), [AT-439](#)
 A/T shift lock system [AT-252](#), [AT-632](#)
 A/T shift lock system - Wiring diagram [AT-253](#), [AT-633](#)
 A/T trouble diagnoses [AT-56](#)
 A/T Wiring diagram AT - 1ST [AT-137](#), [AT-510](#)
 A/T Wiring diagram AT - 2ND [AT-142](#), [AT-515](#)
 A/T Wiring diagram AT - 3RD [AT-147](#), [AT-520](#)
 A/T Wiring diagram AT - 4TH [AT-153](#), [AT-525](#)
 A/T Wiring diagram AT - BA/FTS [AT-199](#), [AT-571](#)
 A/T Wiring diagram AT - CAN [AT-209](#), [AT-587](#)
 A/T Wiring diagram AT - ENG SS [AT-132](#), [AT-505](#)
 A/T Wiring diagram AT - FTS [AT-122](#), [AT-495](#)
 A/T Wiring diagram AT - LPSV [AT-174](#), [AT-545](#)
 A/T Wiring diagram AT - MAIN [AT-112](#), [AT-484](#)
 A/T Wiring diagram AT - NONDTC [AT-215](#), [AT-593](#)
 A/T Wiring diagram AT - OVRCSV [AT-194](#), [AT-566](#)
 A/T Wiring diagram AT - PNP/SW [AT-116](#), [AT-489](#)
 A/T Wiring diagram AT - SSV/A [AT-180](#), [AT-551](#)
 A/T Wiring diagram AT - SSV/B [AT-184](#), [AT-556](#)
 A/T Wiring diagram AT - TCCSIG [AT-166](#), [AT-537](#)
 A/T Wiring diagram AT - TCV [AT-160](#), [AT-532](#)

A/T Wiring diagram AT - TPS [AT-190](#), [AT-561](#)
 A/T Wiring diagram AT - VSS A/T [AT-128](#), [AT-501](#)
 A/T Wiring diagram AT - VSSMTR ... [AT-205](#), [AT-578](#), [AT-583](#)
 ABS - Wiring diagram [BRC-10](#)
 ABS sensor rotor [RAX-6](#)
 Accelerator pedal position (APP) sensor [EC-573](#), [EC-594](#), [EC-1284](#), [EC-1291](#), [EC-1306](#)
 Air bag [SRS-3](#)
 Air bag precautions [GI-3](#)
 Air bleeding (hydraulic clutch) [CL-7](#), [CL-24](#)
 Air bleeding for brake system [BR-7](#)
 Air cleaner and air duct [EM-106](#)
 Air cleaner filter replacementQG18DE [MA-19](#)
 Air cleaner filter replacementQR25DE [MA-26](#)
 Air conditioner - Wiring diagram [MTC-27](#)
 Air control cable adjustment [MTC-39](#)
 Air flow meter - See Mass air flow sensor [EC-861](#), [EC-870](#)
 Air fuel ratio sensor 1 .. [EC-479](#), [EC-485](#), [EC-491](#), [EC-498](#), [EC-505](#), [EC-511](#), [EC-519](#), [EC-1183](#), [EC-1189](#), [EC-1195](#), [EC-1202](#), [EC-1209](#), [EC-1216](#), [EC-1225](#)
 Air fuel ratio sensor 1 heater [EC-385](#), [EC-1099](#)
 Air mix door control linkage adjustment [MTC-41](#)
 Air spoiler, rear [EI-22](#)
 Alternator [SC-30](#)
 Angular tightening application [EM-5](#), [EM-94](#)
 Antenna [AV-17](#)
 Anti-lock brake system - Wiring diagram [BRC-10](#)
 APPS1 - Wiring diagram [EC-575](#), [EC-1286](#)
 APPS2 - Wiring diagram [EC-582](#), [EC-1293](#)
 APPS3 - Wiring diagram [EC-596](#), [EC-1308](#)
 ASC/BS - Wiring diagram [EC-552](#), [EC-1258](#)
 ASC/SW - Wiring diagram [EC-544](#), [EC-1251](#)
 ASCBOF - Wiring diagram [EC-644](#), [EC-1371](#)
 ASCD [EC-33](#), [EC-678](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCD brake switch [EC-1370](#)
 ASCD clutch switch [EC-1370](#)
 ASCD indicator lamp [EC-1380](#)
 ASCIND - Wiring diagram [EC-653](#), [EC-1381](#)
 Audio [AV-2](#)
 AUDIO - Wiring diagram [AV-4](#)
 Audio and A/C control removal and installation - See Instrument panel [IP-10](#)
 Automatic transaxle number [GI-50](#)
 Automatic transmission fluid replacement [MA-31](#)
 Axle [MA-36](#)

B

Back door window [GW-12](#)
 BACK/L - Wiring diagram [LT-22](#)
 Back-up lamp [LT-22](#)
 Back-up lamp switch (M/T) [MT-12](#)
 Back-up lamp switch (M/T)Back-up lamp switch [MT-75](#)
 Ball joint (front) [FSU-14](#)
 Basic inspection [EC-74](#), [EC-722](#)
 Battery [SC-4](#)

ALPHABETICAL INDEX

Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#), [SC-24](#)
 Baulk ring (M/T) [MT-19](#), [MT-82](#)
 Bi-level door control linkage adjustment [MTC-39](#)
 Block heater [EM-164](#)
 Blower motor [MTC-46](#)
 Blower resistor [MTC-46](#)
 Blower unit [MTC-75](#)
 Body alignment [BL-116](#)
 Brake booster [BR-16](#)
 Brake control valve (Proportioning valve) [BR-10](#)
 Brake fluid change [BR-6](#)
 Brake fluid level [MA-32](#)
 Brake fluid level and line check [BR-6](#)
 Brake hydraulic line [BR-8](#)
 Brake inspectionDisc Brake [MA-33](#)
 Brake inspectionDrum Brake [MA-34](#)
 Brake lines and cables inspection [MA-32](#)
 Brake lining wear temporary checkingDisc Brake . [MA-34](#)
 Brake lining wear temporary checkingDrum Brake [MA-34](#)
 Brake pedal [BR-11](#)
 Brake switch [EC-567](#), [EC-1279](#), [EC-1370](#)
 BRK/SW - Wiring diagram [EC-568](#), [EC-1280](#)
 Bulb specifications [LT-49](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-18](#)

C

Camshaft [EM-126](#)
 Camshaft inspection [EM-35](#), [EM-37](#), [EM-128](#)
 Camshaft position sensor (PHASE) .. [EC-291](#), [EC-999](#)
 CAN - Wiring diagram . [EC-174](#), [EC-843](#), [LAN-7](#), [LAN-18](#)
 CAN (Controller Area Network) [LAN-6](#), [LAN-17](#)
 CAN communication ... [EC-173](#), [EC-842](#), [AT-208](#), [AT-586](#), [LAN-6](#), [LAN-17](#)
 Canister-See EVAP canister [EC-39](#), [EC-684](#)
 CHARGE - Wiring diagram [SC-23](#)
 Charging system [SC-22](#)
 Chassis and body maintenance [MA-9](#), [MA-30](#)
 CHIME - Wiring diagram [DI-44](#)
 CIGAR - Wiring diagram [WW-10](#)
 Cigarette lighter [WW-10](#)
 Circuit breaker [PG-46](#)
 Closed loop control [EC-29](#), [EC-674](#)
 Closed loop control (Bank 1) [EC-1159](#)
 Clutch cover [CL-17](#), [CL-33](#)
 Clutch disc [CL-17](#), [CL-33](#)
 Clutch fluid level [MA-30](#)
 Clutch master cylinder [CL-9](#), [CL-26](#)
 Clutch operating cylinder [CL-11](#), [CL-28](#)
 Clutch pedal [CL-7](#), [CL-24](#)
 Clutch release bearing [CL-14](#), [CL-31](#)
 Clutch release mechanism [CL-14](#), [CL-31](#)
 Clutch withdrawal lever [CL-14](#), [CL-31](#)
 Coil spring (front) [FSU-9](#)

Coil spring (rear) [RSU-10](#)
 Collision diagnosis [SRS-47](#)
 Combination lamp, front, removal and installation [EI-13](#)
 Combination lamp, rear, removal and installation [EI-22](#)
 Combination meter [DI-4](#), [DI-26](#)
 Combination meter removal and installation - See Instrument panel [IP-10](#), [DI-26](#)
 Combination switch [LT-4](#)
 Component Location (manual A/C) [MTC-23](#)
 Compression pressure [EM-55](#)
 Compressor clutch removal and installation ... [MTC-65](#)
 Compressor mounting [MTC-64](#)
 Compressor precaution [MTC-8](#)
 Compressor special service tool [MTC-11](#)
 Connecting rod [EM-72](#)
 Connecting rod bearing clearance [EM-77](#)
 Connecting rod bushing clearance [EM-78](#)
 Connector inspection [GI-24](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-16](#)
 CONSULT for engine [EC-134](#), [EC-791](#)
 CONSULT general information [GI-37](#)
 Control lever (M/T) [MT-13](#)
 Control valve (A/T) [AT-297](#)
 Controller Area Network (CAN) [LAN-6](#), [LAN-17](#)
 Converter housing installation [AT-379](#), [AT-740](#)
 COOL/F - Wiring diagram [EC-459](#), [EC-1164](#)
 Coolant mixture ratio [MA-14](#)
 Coolant replacementQG18DE [MA-16](#)
 Coolant replacementQR25DE [MA-23](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan control [EC-1161](#)
 Cooling fan motor [EC-1161](#)
 Cooling fan relay [EC-468](#), [EC-1173](#)
 Cooling unit (A/C evaporator) [MTC-76](#)
 Coupling sleeve (M/T) [MT-19](#), [MT-82](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-49](#), [EC-694](#)
 Crankshaft [EM-74](#), [EM-165](#)
 Crankshaft position sensor (POS) [EC-284](#), [EC-992](#)
 Cylinder block [EM-69](#), [EM-164](#)
 Cylinder block boring [EM-184](#)
 Cylinder head [EM-55](#), [EM-148](#)

D

D/LOCK - Wiring diagram [BL-14](#)
 Data link connector [EC-1383](#)
 Daytime light system [LT-10](#)
 Daytime running light - See Daytime light system .. [LT-10](#)
 DEF - Wiring diagram [GW-20](#)
 Detonation sensor - See Knock sensor [EC-279](#)
 Diagnosis sensor unit [SRS-38](#)
 Diagnostic trouble code (DTC) for OBD system [EC-15](#), [EC-55](#), [EC-658](#), [EC-701](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-103](#), [EC-762](#)
 Differential gear (FF A/T) [AT-355](#)

ALPHABETICAL INDEX

Differential gear (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
Dimensions [GI-50](#)
DLC - Wiring diagram [EC-655](#), [EC-1383](#)
Dome light - See Interior lamp [LT-36](#)
Door adjustment (front) [BL-31](#)
Door adjustment (rear) [BL-31](#)
Door glass [BL-31](#), [GW-6](#), [GW-12](#), [GW-13](#)
Door glass Fitting Adjustment [BL-31](#)
Door mirror [GW-14](#), [GW-16](#)
Door trim [EI-31](#)
Door, front [BL-31](#), [GW-12](#)
Door, rear [BL-31](#), [GW-13](#)
Drive belt [EM-103](#)
Drive belt inspectionQG18DE [MA-16](#)
Drive belt inspectionQR25DE [MA-23](#)
Drive plate runout [EM-79](#)
Drive shaft [MA-37](#)
Drive shaft (front) [FAX-5](#), [FAX-11](#)
Dropping resistor (A/T) [AT-178](#), [AT-543](#)
DTC work support [EC-144](#), [EC-803](#)
DTRL - Wiring diagram [LT-14](#)

E

ECM input/output signal [EC-126](#), [EC-784](#), [EC-807](#)
ECM power supply [EC-165](#), [EC-390](#), [EC-835](#), [EC-1104](#)
ECM relay [EC-841](#)
ECM/PW - Wiring diagram [EC-391](#), [EC-1105](#)
ECTS - Wiring diagram [EC-210](#), [EC-886](#)
Electric throttle control actuator [EC-398](#), [EC-400](#), [EC-412](#), [EC-1112](#), [EC-1114](#), [EC-1126](#)
Electrical diagnoses [GI-24](#)
Electrical load signal circuit [EC-631](#), [EC-1352](#)
Electrical units location [PG-43](#)
Electronic ignition (EI) system [EC-30](#), [EC-675](#)
Engine compartment [BL-117](#)
Engine control circuit diagram [EC-122](#), [EC-780](#)
Engine control component parts location . [EC-110](#), [EC-769](#)
Engine control module (ECM) [EC-382](#), [EC-1096](#)
Engine control system diagram and chart . [EC-27](#), [EC-671](#)
Engine coolant temperature sensor (ECTS) ... [EC-208](#), [EC-220](#), [EC-884](#), [EC-897](#)
Engine fail-safe system [EC-105](#), [EC-764](#)
Engine oil filter replacementQG18DE [MA-20](#)
Engine oil filter replacementQR25DE [MA-27](#)
Engine oil precautions [GI-7](#)
Engine oil replacementQG18DE [MA-20](#)
Engine oil replacementQR25DE [MA-26](#)
Engine outer component parts [EM-15](#)
Engine removal [EM-65](#), [EM-159](#)
Engine room - See Engine compartment [BL-117](#)
Engine serial number [GI-49](#)
ETC1 - Wiring diagram [EC-401](#), [EC-1115](#)
ETC2 - Wiring diagram [EC-409](#), [EC-1123](#)
ETC3 - Wiring diagram [EC-413](#), [EC-1127](#)
EVAP canister [EC-39](#), [EC-684](#)
EVAP canister purge volume control solenoid valve

[EC-318](#), [EC-527](#), [EC-1031](#), [EC-1234](#)
EVAP canister vent control valve [EC-325](#), [EC-535](#), [EC-1038](#), [EC-1242](#)
EVAP control system (small leak) diagnosis .. [EC-309](#), [EC-348](#), [EC-1022](#), [EC-1061](#), [EC-1069](#)
EVAP control system pressure sensor ... [EC-332](#), [EC-335](#), [EC-341](#), [EC-1045](#), [EC-1048](#), [EC-1054](#)
EVAP control system purge flow monitoring diagnosis . [EC-303](#), [EC-1016](#)
EVAP vapor lines inspectionQG18DE [MA-22](#)
EVAP vapor lines inspectionQR25DE [MA-29](#)
Evaporative emission (EVAP) system [EC-36](#), [EC-681](#)
Exhaust system [EX-3](#)
Exhaust system inspection [MA-30](#)
Exterior [EI-22](#)

F

F/FOG - Wiring diagram [LT-25](#)
F/PUMP - Wiring diagram [EC-622](#), [EC-1343](#)
Fan switch [MTC-46](#)
Final drive (FF A/T) [AT-355](#)
Final drive (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
Finisher, interior - See Trim [EI-28](#)
Finisher, trunk lid [EI-33](#)
Floor trim [EI-28](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-125](#), [AT-493](#)
Fluids [MA-13](#)
Flywheel (clutch) [CL-18](#), [CL-34](#)
Flywheel runout [EM-79](#)
Fog lamp, front [LT-24](#)
Fog lamp, front, removal and installation [EI-13](#)
Fork rod (M/T) [MT-20](#), [MT-84](#)
Forward clutch [AT-324](#)
Freeze frame data [EC-56](#), [EC-702](#)
Front axle [FAX-5](#)
Front bumper [EI-13](#)
Front combination lamp removal and installation [EI-13](#)
Front door [BL-31](#), [GW-12](#)
Front fog lamp [LT-24](#)
Front fog lamp removal and installation [EI-13](#)
Front passenger air bag [SRS-45](#)
Front seat [SE-3](#)
Front seat belt [SB-3](#)
Front washer [WW-3](#)
Front wiper [WW-3](#)
FTTS - Wiring diagram [EC-258](#), [EC-262](#), [EC-966](#), [EC-970](#)
FUEL - Wiring diagram [EC-244](#), [EC-251](#), [EC-945](#), [EC-956](#)
Fuel cut control (at no load high engine speed) [EC-31](#), [EC-676](#)
Fuel gauge [DI-4](#)
Fuel injection system .. [EC-242](#), [EC-249](#), [EC-943](#), [EC-954](#)
Fuel injector and fuel tube [EM-21](#), [EM-121](#)
Fuel level sensor [EC-365](#), [EC-367](#), [EC-369](#), [EC-1079](#), [EC-1081](#), [EC-1083](#)

ALPHABETICAL INDEX

Fuel line inspection [FL-2](#), [MA-19](#)
 Fuel line inspectionQR25DE [MA-25](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-94](#), [EC-752](#)
 Fuel pressure release [EC-94](#), [EC-752](#)
 Fuel pump [EC-621](#), [EC-1342](#)
 Fuel tank temperature sensor ... [EC-256](#), [EC-261](#), [EC-964](#), [EC-969](#)
 Fuel tank vacuum relief valve [EC-39](#), [EC-684](#)
 Fuel tankRemoval and Installtion [FL-7](#)
 Fuse [PG-46](#)
 Fuse and fusible link box [PG-54](#)
 Fuse block [PG-53](#)
 Fusible link [PG-46](#)

G

Gauges [DI-4](#)
 Gear components (M/T) [MT-19](#), [MT-82](#)
 Generator [SC-30](#)
 Generator - See Alternator [SC-30](#)
 Generic scan tool (GST) [EC-146](#), [EC-805](#)
 Ground distribution [PG-13](#)

H

H/LAMP - Wiring diagram [LT-7](#)
 H/MIRROR - Wiring diagram [GW-15](#)
 Harness connector [PG-47](#)
 Harness connector inspection [GI-24](#)
 Harness layout [PG-22](#)
 Hazard warning lamp [LT-27](#)
 Headlamp [LT-6](#)
 Headlamp removal and installation [EI-13](#)
 Headlining - See Roof trim [EI-32](#)
 Heated oxygen sensor 1 [EC-905](#), [EC-912](#), [EC-922](#), [EC-1131](#), [EC-1137](#)
 Heated oxygen sensor 1 heater [EC-849](#)
 Heated oxygen sensor 2 [EC-234](#), [EC-438](#), [EC-446](#), [EC-929](#), [EC-935](#), [EC-1143](#), [EC-1151](#)
 Heated oxygen sensor 2 heater [EC-180](#), [EC-855](#)
 HEATER - Wiring diagram [MTC-25](#)
 Heater mirror [GW-15](#)
 Heater system - Wiring diagram [MTC-25](#)
 Heater unit (heater core) [MTC-74](#)
 Height (Dimensions) [GI-50](#)
 HFC134a (R134a) system identification [MTC-4](#)
 HFC134a (R134a) system introduction [MTC-15](#)
 HFC134a (R134a) system precaution [MTC-3](#)
 HFC134a (R134a) system service procedure [MTC-78](#)
 HFC134a (R134a) system service tools [MTC-12](#)
 HFC134a system service equipment precaution [MTC-8](#)
 High clutch [AT-318](#)
 HO2S1 - Wiring diaram [EC-907](#), [EC-915](#), [EC-925](#)
 HO2S1H - Wiring diagram [EC-851](#)
 HO2S2 - Wiring diagram [EC-237](#), [EC-441](#), [EC-449](#), [EC-931](#), [EC-938](#), [EC-1146](#), [EC-1154](#)
 HO2S2H - Wiring diagram [EC-182](#), [EC-857](#)
 Hood [EI-13](#)

Horn [WW-9](#)
 HORN - Wiring diagram [WW-9](#)
 How to erase DTC for OBD system [EC-64](#), [EC-712](#)

I

IATS - Wiring diagram [EC-205](#), [EC-880](#)
 Identification plate [GI-49](#)
 Idle air volume learning [EC-92](#), [EC-750](#)
 Idle mixture ratio [EC-80](#), [EC-728](#), [EC-738](#)
 Idle speed ... [EC-74](#), [EC-80](#), [EC-722](#), [EC-728](#), [EC-738](#)
 Idle speed control (ISC) [EC-373](#), [EC-375](#), [EC-1087](#), [EC-1089](#)
 Ignition coil [EM-118](#), [EC-602](#), [EC-1314](#)
 Ignition control system [EC-602](#), [EC-1314](#)
 Ignition timing [EC-74](#), [EC-80](#), [EC-722](#), [EC-728](#), [EC-738](#)
 IGNSYS - Wiring diagram [EC-603](#), [EC-1315](#)
 ILL - Wiring diagram [LT-34](#)
 Illumination [LT-33](#)
 INJECT - Wiring diagram [EC-616](#), [EC-1337](#)
 Injector [EC-615](#), [EC-1336](#)
 Input shaft (FF M/T) [MT-19](#), [MT-38](#), [MT-82](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-38](#)
 Intake air temperature sensor [EC-204](#), [EC-223](#), [EC-878](#), [EC-900](#)
 Intake door control linkage adjustment [MTC-37](#)
 Intake door motor [MTC-34](#)
 Intake manifold [EM-15](#), [EM-108](#)
 Intake sensor [MTC-62](#)
 Intake valve timing control ... [EC-176](#), [EC-394](#), [EC-845](#)
 Intake valve timing control solenoid valve [EC-394](#), [EC-1108](#)
 Interior [EI-28](#)
 Interior lamp [LT-36](#)
 IVC - Wiring diagram [EC-395](#), [EC-1109](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-5](#)

J

Junction box (J/B) [PG-53](#)

K

Keyless entry system - See Multi-remote control system [BL-34](#)
 Knock sensor (KS) [EC-279](#), [EC-987](#)
 KS - Wiring diagram [EC-280](#), [EC-988](#)

L

Length (Dimensions) [GI-50](#)
 License lamp [LT-19](#)
 Lifting points [GI-40](#)
 Line pressure solenoid valve [AT-158](#), [AT-543](#)
 Line pressure test (A/T) [AT-67](#), [AT-453](#)
 Liquid gasket application [EM-6](#), [EM-95](#)
 LOAD - Wiring diagram [EC-632](#)

ALPHABETICAL INDEX

Location of electrical units [PG-43](#)
 Low and reverse brake [AT-332](#)
 Lubricant (R134a) A/C [MTC-16](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [MTC-16](#)
 Lubrication-locks, hinges and hood latches [MA-37](#)
 Luggage room lamp [LT-36](#)

M

M/T major overhaul [MT-18](#), [MT-85](#)
 M/T oil replacementM/T oil replacement [MT-73](#)
 M/T removal and installation [MT-15](#)
 MAFS - Wiring diagram [EC-189](#), [EC-198](#), [EC-864](#), [EC-872](#)
 Magnet clutch [MTC-65](#)
 MAIN - Wiring diagram [EC-165](#), [EC-835](#)
 Main drive gear (M/T) [MT-19](#)
 Mainshaft (M/T) [MT-19](#), [MT-45](#), [MT-82](#)
 Maintenance [MA-5](#)
 Maintenance (engine)QG18DE [MA-16](#)
 Maintenance (engine)QR25DE [MA-23](#)
 Malfunction indicator lamp (MIL) [EC-65](#), [EC-714](#)
 Manual air conditioner - Wiring diagram [MTC-27](#)
 Manual transaxle number [GI-50](#)
 Manual transmission oil replacement [MA-30](#)
 Mass air flow sensor (MAFS) [EC-186](#), [EC-196](#), [EC-861](#), [EC-870](#)
 Master cylinder (clutch) [CL-9](#), [CL-26](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-13](#), [DI-62](#)
 MIL data link connectors circuit [EC-655](#)
 MIRROR - Wiring diagram [GW-14](#)
 Mirror defogger [GW-15](#)
 Mirror, door [GW-14](#), [GW-16](#)
 Mirror, out side [GW-16](#)
 Misfire [EC-272](#), [EC-980](#)
 Model variation [GI-47](#)
 Molding - See Exterior [EI-22](#)
 MULTI - Wiring diagram [BL-38](#)
 Multiport fuel injection (MFI) system [EC-28](#), [EC-673](#)
 Multiport fuel injection precautions [GI-3](#), [GI-6](#)
 Multi-remote control system [BL-34](#)

N

NATS (Nissan anti-theft system) [BL-96](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (EM) [EM-13](#), [EM-101](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (WT) [WT-2](#)
 NVIS (Nissan vehicle immobilizer system) [BL-96](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#), [GI-5](#)

O

Oil change (capacity) [MA-13](#)

Oil pan (engine) [EM-18](#), [EM-115](#)
 Oil pump (A/T) [AT-292](#)
 Oil pump (engine) [LU-8](#), [LU-19](#)
 Oil pump regulator valve (engine) [LU-10](#)
 Oil seal replacement (engine) [EM-52](#), [EM-144](#)
 On board diagnostic system [EC-51](#), [EC-697](#)
 Operating cylinder (clutch) [CL-11](#), [CL-28](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-43](#), [EC-688](#)
 Overdrive control switch [AT-249](#), [AT-251](#), [AT-627](#)
 Overheat [EC-455](#), [EC-1161](#)
 Overrun clutch [AT-324](#)
 Overrun clutch solenoid valve [AT-564](#)

P

Park/Neutral position switch [EC-563](#), [EC-1269](#)
 Park/neutral position switch (A/T) [AT-115](#), [AT-487](#)
 Park/neutral position switch (M/T) [MT-12](#)
 Park/neutral position switch (M/T)Park/neutral position switch (M/T) [MT-75](#)
 Parking brake control [PB-2](#)
 Parking drum brake [BR-38](#)
 Parking lamp [LT-19](#)
 PCV (positive crankcase ventilation) .. [EC-49](#), [EC-694](#)
 Periodic maintenance [MA-7](#)
 PGC/V - Wiring diagram .. [EC-320](#), [EC-529](#), [EC-1033](#), [EC-1236](#)
 PHASE - Wiring diagram [EC-293](#), [EC-1001](#)
 Piston assembly [EM-79](#)
 Piston pin inspection [EM-71](#)
 Piston ring inspection [EM-72](#)
 Piston to bore clearance [EM-73](#), [EM-184](#)
 PNP/SW - Wiring diagram [EC-565](#), [EC-1271](#)
 POS - Wiring diagram [EC-286](#), [EC-994](#)
 POWER - Wiring diagram [PG-5](#)
 Power door lock [BL-11](#)
 Power door mirror [GW-14](#)
 Power steering fluid level [PS-8](#), [MA-35](#)
 Power steering gear [PS-15](#)
 Power steering hydraulic pressure [PS-10](#)
 Power steering oil pump [PS-21](#)
 Power steering pressure (PSP) sensor ... [EC-377](#), [EC-1091](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-3](#)
 Power transistor [EC-1314](#)
 Power window [GW-7](#)
 Power window main switch [GW-7](#)
 PRE/SE - Wiring diagram [EC-337](#), [EC-343](#), [EC-1050](#), [EC-1056](#)
 Precautions (General) [GI-3](#)
 Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
 Pressure test (A/T) [AT-67](#), [AT-453](#)
 PS/SEN - Wiring diagram [EC-378](#), [EC-1092](#)

R

Radiator [CO-14](#)

ALPHABETICAL INDEX

Radio - See Audio	AV-2	Side trim	EI-28
Rear air spoiler	EI-22	Smart entrance control unit	BCS-3
Rear axle	RAX-5	Spare tire size	GI-51
Rear axle (disc brake type)	RAX-6	Spark plug replacementQG18DE	MA-21
Rear axle (drum brake type)	RAX-6	Spark plug replacementQR25DE	MA-28
Rear bumper	EI-18	Specification value	EC-154 , EC-815
Rear combination lamp removal and installation	EI-22	Speedometer	DI-4
Rear disc brake	BR-29	SROOF - Wiring diagram	RF-11
Rear door	BL-31 , GW-13	SRS - Wiring diagram	SRS-15
Rear drum brake	BR-38	SRS Trouble diagnoses	SRS-8
Rear seat	SE-5	Stabilizer bar (front)	FSU-11
Rear seat belt	SB-5	Stall test (A/T)	AT-63 , AT-449
Rear suspension	RSU-5	Standardized relay	PG-51
Rear window	GW-3	START - Wiring diagram	SC-10
Rear window defogger	GW-17	Starter	SC-18
Refrigerant connection precaution	MTC-5	Starting system	SC-9
Refrigerant general precaution	MTC-4	Steering gear and linkage inspection	MA-35
Refrigerant lines	MTC-78	Steering linkage	PS-15
Refrigerant pressure sensor	EC-626 , EC-1347 , MTC-52	Steering wheel and column	PS-11
Refrigeration cycle	MTC-15	Steering wheel play	PS-7
Release bearing (clutch)	CL-14 , CL-31	Steering wheel turning force	PS-9
Remote keyless entry system	BL-34	Stop lamp	LT-21
Removal and installation (A/T)	AT-264	Stop lamp switch	EC-1279 , EC-1370
Reverse clutch	AT-313	STOP/L - Wiring diagram	LT-21
Reverse idler shaft (M/T)	MT-18 , MT-82	Striking rod (M/T)	MT-20
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12	Strut (front)	FSU-9
Reverse main gear (M/T)	MT-19 , MT-82	Strut (rear)	RSU-8
Revolution sensor (A/T)	AT-499	Sub-gear (M/T)	MT-19
Road wheel size	GI-51	Sunroof	RF-10
Rocker cover	EM-124	Supplemental restraint system - Wiring diagram	SRS-15
Roof trim	EI-32	Suspension	MA-36
Room lamp - See Interior lamp	LT-36	Swirl control valve	EC-417 , EC-430
RP/SEN - Wiring diagram	EC-627 , EC-1348	Swirl control valve control position sensor	EC-422 , EC-430
S		SWL/S - Wiring diagram	EC-424 , EC-432
SAE J1979 - Mode 1 - 7	EC-51 , EC-697	SWL/V - Wiring diagram	EC-419
Seal - See Exterior	EI-22	Symbols and abbreviations	GI-8 , GI-10 , GI-22
Seat belt inspection	SB-7 , MA-38	Symptom matrix chart	EC-106 , EC-765
Seat belt, front	SB-3	Synchronizer (M/T)	MT-19 , MT-82
Seat belt, rear	SB-5	System readiness test (SRT) code	EC-56 , EC-702
Seat, front	SE-3	T	
Seat, rear	SE-5	Tachometer	DI-4
SEN/PW - Wiring diagram	EC-475 , EC-1179	Tail lamp	LT-19
Shift warning system	BL-65	TAIL/L - Wiring diagram	LT-19
SHIFT - Wiring diagram	AT-253 , AT-633	TCM circuit diagram	AT-18 , AT-406
Shift control components (M/T)	MT-20 , MT-84	TCM inspection table	AT-109 , AT-480
Shift control components (M/T)Shift control components (M/T)	MT-76	Temperature control cable and linkage adjustment	MTC-41
Shift fork (M/T)	MT-20 , MT-84	Thermal protector	MTC-72
Shift lever	MT-13	Thermostat	CO-12 , CO-30
Shift lock system	AT-252 , AT-632	Three way catalyst function	EC-298 , EC-1006
Shift schedule	AT-385 , AT-747	Three way catalyst precautions	GI-3 , GI-5
Shift solenoid valve A (A/T)	AT-139 , AT-149 , AT-549	Throttle control motor relay	EC-407 , EC-1121
Shift solenoid valve B (A/T)	AT-139 , AT-554	Throttle position sensor (TPS)	EC-213 , EC-265 , EC-470 , EC-472 , EC-587 , EC-890 , EC-973 , EC-1174 , EC-1176 , EC-1299
Shock absorber (front)	FSU-9		
Shock absorber (rear)	RSU-10		

ALPHABETICAL INDEX

Throttle position switch [AT-249](#), [AT-627](#)
 Throwout bearing - See Clutch release bearing [CL-14](#),
[CL-31](#)
 Tie-rod [PS-19](#)
 Tie-rod ball joints [PS-19](#)
 Tightening torque of standard bolts [GI-45](#)
 Time control system [BCS-10](#)
 Timing chain [EM-42](#), [EM-136](#)
 Tire rotation [MA-32](#)
 Tire size [GI-51](#)
 TLID - Wiring diagram [BL-33](#)
 Top tether strap child restraint [SB-10](#)
 Torque converter installation [AT-265](#), [AT-645](#), [AT-740](#)
 Torque convertor clutch solenoid valve [AT-530](#)
 Tow truck towing [GI-43](#)
 Towing point [GI-44](#)
 TPS1 - Wiring diagram [EC-267](#), [EC-975](#)
 TPS2 - Wiring diagram [EC-215](#), [EC-892](#)
 TPS3 - Wiring diagram [EC-589](#), [EC-1301](#)
 Transmission case (M/T) [MT-18](#), [MT-81](#)
 Tread-FR&RR (Dimensions) [GI-50](#)
 Trim [EI-28](#)
 Trouble diagnoses [GI-11](#), [GI-24](#)
 Trunk lid [EI-18](#)
 Trunk lid finisher [EI-33](#)
 Trunk lid opener - See Trunk lid [EI-18](#)
 Trunk lid opener, electric [BL-33](#)
 Trunk lid trim [EI-33](#)
 Trunk room lamp [LT-36](#)
 Trunk room trim [EI-33](#)
 TURN - Wiring diagram [LT-30](#)
 Turn signal lamp [LT-27](#)
 Two trip detection logic [EC-51](#), [EC-697](#)

U

Under body [BL-120](#)

V

Vacuum hose (brake system) [BR-18](#)
 Vacuum hose drawing (Engine control) [EC-779](#)
 Valve clearance [EM-38](#), [EM-134](#)
 Valve guide [EM-61](#), [EM-154](#), [EM-155](#)
 Valve seat [EM-63](#), [EM-156](#)
 Valve spring [EM-64](#), [EM-157](#)
 Variable induction air control system (VIAS) [EC-1273](#),
[EC-1327](#)
 Vehicle identification number [GI-48](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-44](#)
 Vehicle security (theft warning) system [BL-65](#)
 Vehicle speed sensor (VSS) [EC-371](#), [EC-1085](#)
 VEHSEC - Wiring diagram [BL-72](#)
 Vent mode switch [MTC-20](#)
 VENT/V - Wiring diagram [EC-327](#), [EC-537](#), [EC-1040](#),
[EC-1244](#)
 VIAS - Wiring diagram [EC-1329](#)
 VIAS/V - Wiring diagram [EC-1274](#)
 VIN registration [EC-91](#), [EC-749](#)

Viscosity number (SAE) [MA-14](#)

W

WARN - Wiring diagram [DI-29](#)
 Warning chime [DI-41](#)
 Warning lamps [DI-27](#)
 Washer, front [WW-3](#)
 Water pump [CO-10](#)
 Water temperature gauge [DI-4](#)
 Weatherstrip - See Exterior [EI-22](#)
 Wheel alignment (front) [FSU-6](#)
 Wheel alignment (rear) [RSU-6](#)
 Wheel balance [MA-32](#)
 Wheel bearing (front axle) [FAX-9](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (front) [FAX-6](#), [FAX-9](#)
 Wheel hub (rear) [RAX-6](#)
 Wheel sensors (ABS) [BRC-44](#)
 Wheel size [GI-51](#)
 Wheelbase (Dimensions) [GI-50](#)
 Width (Dimensions) [GI-50](#)
 WINDOW - Wiring diagram [GW-9](#)
 Window, back door [GW-12](#)
 Window, door [GW-6](#), [GW-12](#)
 Window, rear [GW-3](#)
 Windshield [GW-3](#)
 Windshield washer - See Front washer [WW-3](#)
 Windshield wiper - See Front wiper [WW-3](#)
 WIPER - Wiring diagram [WW-5](#)
 Wiper and washer [WW-3](#)
 Wiper, front [WW-3](#)
 Wiring Diagram (Cell code) list [PG-40](#)
 Wiring diagrams [GI-8](#), [GI-15](#)
 Withdrawal lever (clutch) [CL-14](#), [CL-31](#)
 Wrist pin - See Piston pin inspection [EM-71](#)