

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

1ST - Wiring diagram	AT-136 , AT-509
2ND - Wiring diagram	AT-141 , AT-514
3RD - Wiring diagram	AT-146 , AT-519
4TH - Wiring diagram	AT-152 , AT-524

A

A/C - Wiring diagram	MTC-27
A/C air flow	MTC-21
A/C component layout	MTC-19
A/C compressor clutch removal and installation .	MTC-64
A/C compressor mounting	MTC-63
A/C compressor precaution	MTC-8
A/C compressor special service tool	MTC-11
A/C control linkage adjustment (manual A/C) .	MTC-37
A/C control operation (manual A/C)	MTC-20
A/C diagnostic work flow (manual A/C)	MTC-30
A/C HFC134a (R134a) system identification	MTC-4
A/C HFC134a (R134a) system introduction ...	MTC-15
A/C HFC134a (R134a) system precaution	MTC-3
A/C HFC134a (R134a) system service procedure	MTC-77
A/C HFC134a (R134a) system service tools ..	MTC-12
A/C HFC134a system service equipment precaution ...	MTC-8
A/C lubricant (R134a)	MTC-16
A/C lubrication oil	MTC-16
A/C operational check	MTC-31
A/C performance chart	MTC-53
A/C performance test diagnoses	MTC-53
A/C pressure switch	MTC-15
A/C push control	MTC-20
A/C rera y	MTC-51
A/C service data specification	MTC-86
A/C switch	MTC-20
A/C, M - Wiring diagram	MTC-27
A/F - Wiring diagram ...	EC-223 , EC-230 , EC-237 , EC-244 , EC-545 , EC-815 , EC-821 , EC-827 , EC-834 , EC-1142
A/FH - Wiring diagram	EC-162 , EC-753
A/T - Wiring diagram	AT-405
A/T fluid temperature sensor	AT-124 , AT-492
A/T self-diagnoses	AT-430 , AT-437 , AT-438
A/T shift lock system	AT-251 , AT-631
A/T shift lock system - Wiring diagram	AT-252 , AT-632
A/T trouble diagnoses	AT-56
ABS - Wiring diagram	BRC-10
ABS sensor rotor	RAX-6
Accelerator pedal position (APP) sensor .	EC-514 , EC-535 , EC-1110 , EC-1117 , EC-1132
Air bag	SRS-2
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)	CL-7 , CL-24
Air bleeding for brake system	BR-7
Air cleaner and air duct	EM-106
Air cleaner filter replacementQG18DE	MA-19

Air cleaner filter replacementQR25DE	MA-26
Air conditioner - Wiring diagram	MTC-27
Air control cable adjustment	MTC-39
Air flow meter - See Mass air flow sensor	EC-768 , EC-777
Air fuel ratio sensor 1 ..	EC-220 , EC-227 , EC-234 , EC-241 , EC-543 , EC-812 , EC-819 , EC-825 , EC-831 , EC-1140
Air fuel ratio sensor 1 heater	EC-161 , EC-752
Air mix door control linkage adjustment	MTC-41
Air spoiler, rear	EI-22
Alternator	SC-25
Angular tightening application	EM-5 , EM-94
Antenna	AV-18
Anti-lock brake system - Wiring diagram	BRC-10
APPS1 - Wiring diagram	EC-516 , EC-1112
APPS2 - Wiring diagram	EC-523 , EC-1119
APPS3 - Wiring diagram	EC-537 , EC-1134
ASC/BS - Wiring diagram	EC-478 , EC-1069
ASC/SW - Wiring diagram	EC-470 , EC-1062
ASCB OF - Wiring diagram	EC-551 , EC-1148
ASCD	EC-32 , EC-623
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-1147
ASCD clutch switch	EC-1147
ASCD indicator lamp	EC-1157
ASCIND - Wiring diagram	EC-561 , EC-1158
Audio	AV-2
AUDIO - Wiring diagram	AV-6
Audio and A/C control removal and installation - See Instrument panel	IP-10
Automatic transaxle number	GI-49
Automatic transmission fluid replacement	MA-32
Axle	MA-39

B

BA/FTS - Wiring diagram	AT-198 , AT-570
Back door window	GW-12
BACK/L - Wiring diagram	LT-22
Back-up lamp	LT-22
Back-up lamp switch (M/T)	MT-12
Back-up lamp switch (M/T)Back-up lamp switch	MT-75
Ball joint (front)	FSU-14
Basic inspection	EC-73 , EC-664
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-11 , SC-21
Baulk ring (M/T)	MT-19 , MT-82
Bi-level door control linkage adjustment	MTC-39
Block heater	EM-164
Blower motor	MTC-46
Blower resistor	MTC-46
Blower unit	MTC-74
Body alignment	BL-116
Brake booster	BR-16
Brake control valve (Proportioning valve)	BR-10
Brake fluid change	BR-6
Brake fluid level	MA-35

ALPHABETICAL INDEX

Brake fluid level and line check [BR-6](#)
 Brake hydraulic line [BR-8](#)
 Brake inspectionDisc Brake [MA-36](#)
 Brake inspectionDrum Brake [MA-37](#)
 Brake lines and cables inspection [MA-35](#)
 Brake lining wear temporary checkingDisc Brake . [MA-37](#)
 Brake lining wear temporary checkingDrum Brake [MA-37](#)
 Brake pedal [BR-11](#)
 Brake switch [EC-489](#), [EC-1085](#), [EC-1147](#)
 BRK/SW - Wiring diagram [EC-490](#), [EC-1086](#)
 Bulb specifications [LT-49](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-18](#)

C

Camshaft [EM-126](#)
 Camshaft inspection [EM-35](#), [EM-37](#), [EM-128](#)
 Camshaft position sensor (PHASE) .. [EC-328](#), [EC-917](#)
 CAN - Wiring diagram . [EC-153](#), [EC-744](#), [AT-208](#), [AT-586](#), [LAN-16](#), [LAN-19](#), [LAN-23](#)
 CAN communication ... [EC-152](#), [EC-155](#), [EC-743](#), [EC-746](#), [AT-207](#), [AT-585](#)
 Canister-See EVAP canister [EC-38](#), [EC-629](#)
 CHARGE - Wiring diagram [SC-20](#)
 Charging system [SC-19](#)
 Chassis and body maintenance [MA-9](#), [MA-30](#)
 CHIME - Wiring diagram [DI-44](#)
 CIGAR - Wiring diagram [WW-10](#)
 Cigarette lighter [WW-10](#)
 Circuit breaker [PG-46](#)
 Closed loop control [EC-28](#), [EC-619](#)
 Closed loop control (Bank 1) [EC-1042](#)
 Clutch cover [CL-17](#), [CL-33](#)
 Clutch disc [CL-17](#), [CL-33](#)
 Clutch fluid level [MA-30](#)
 Clutch master cylinder [CL-9](#), [CL-26](#)
 Clutch operating cylinder [CL-11](#), [CL-28](#)
 Clutch pedal [CL-7](#), [CL-24](#)
 Clutch release bearing [CL-14](#), [CL-31](#)
 Clutch release mechanism [CL-14](#), [CL-31](#)
 Clutch withdrawal lever [CL-14](#), [CL-31](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear) [RSU-10](#)
 Combination lamp, front, removal and installation [EI-13](#)
 Combination lamp, rear, removal and installation [EI-22](#)
 Combination meter [DI-4](#), [DI-26](#)
 Combination meter removal and installation - See Instrument panel [IP-10](#), [DI-26](#)
 Combination switch [LT-4](#)
 Component Location (manual A/C) [MTC-23](#)
 Compression pressure [EM-55](#)
 Compressor clutch removal and installation .. [MTC-64](#)
 Compressor mounting [MTC-63](#)
 Compressor precaution [MTC-8](#)
 Compressor special service tool [MTC-11](#)
 Connecting rod [EM-72](#)

Connecting rod bearing clearance [EM-77](#)
 Connecting rod bushing clearance [EM-78](#)
 Connector inspection [GI-23](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-16](#)
 CONSULT for engine [EC-115](#), [EC-705](#)
 CONSULT general information [GI-36](#)
 Control lever (M/T) [MT-13](#)
 Control valve (A/T) [AT-296](#)
 Converter housing installation [AT-378](#), [AT-739](#)
 COOL/F - Wiring diagram [EC-454](#), [EC-1047](#)
 Coolant mixture ratio [MA-14](#)
 Coolant replacementQG18DE [MA-16](#)
 Coolant replacementQR25DE [MA-23](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan control [EC-1043](#)
 Cooling fan motor [EC-1043](#)
 Cooling fan relay [EC-462](#), [EC-1055](#)
 Cooling unit (A/C evaporator) [MTC-75](#)
 Coupling sleeve (M/T) [MT-19](#), [MT-82](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-48](#), [EC-639](#)
 Crankshaft [EM-74](#), [EM-165](#)
 Crankshaft position sensor (POS) [EC-321](#), [EC-910](#)
 Cylinder block [EM-69](#), [EM-164](#)
 Cylinder block boring [EM-184](#)
 Cylinder head [EM-55](#), [EM-148](#)

D

D/LOCK - Wiring diagram [BL-14](#)
 Data link connector [EC-1210](#)
 Daytime light system [LT-10](#)
 Daytime running light - See Daytime light system .. [LT-10](#)
 DEF - Wiring diagram [GW-20](#)
 Detonation sensor - See Knock sensor [EC-316](#)
 Diagnosis sensor unit [SRS-37](#)
 Diagnostic trouble code (DTC) for OBD system [EC-14](#), [EC-54](#), [EC-605](#), [EC-645](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-91](#), [EC-683](#)
 Differential gear (FF A/T) [AT-354](#)
 Differential gear (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
 Dimensions [GI-49](#)
 DLC - Wiring diagram [EC-601](#), [EC-1210](#)
 Dome light - See Interior lamp [LT-36](#)
 Door adjustment (front) [BL-31](#)
 Door adjustment (rear) [BL-31](#)
 Door glass [BL-31](#), [GW-6](#), [GW-12](#), [GW-13](#)
 Door glass Fitting Adjustment [BL-31](#)
 Door mirror [GW-14](#), [GW-16](#)
 Door trim [EI-31](#)
 Door, front [BL-31](#), [GW-12](#)
 Door, rear [BL-31](#), [GW-13](#)
 Drive belt [EM-103](#)
 Drive belt inspectionQG18DE [MA-16](#)
 Drive belt inspectionQR25DE [MA-23](#)
 Drive plate runout [EM-79](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Drive shaft [MA-40](#)
 Drive shaft (front) [FAX-5](#), [FAX-11](#)
 Dropping resistor (A/T) [AT-177](#), [AT-542](#)
 DTC work support [EC-125](#), [EC-715](#)
 DTRL - Wiring diagram [LT-14](#)

E

ECM input/output signal [EC-107](#), [EC-698](#), [EC-719](#)
 ECM power supply [EC-145](#), [EC-433](#), [EC-736](#), [EC-1026](#)
 ECM relay [EC-742](#)
 ECM/PW - Wiring diagram [EC-434](#), [EC-1027](#)
 ECTS - Wiring diagram [EC-201](#), [EC-793](#)
 Electric throttle control actuator [EC-500](#), [EC-507](#), [EC-512](#), [EC-1096](#), [EC-1103](#), [EC-1108](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-563](#), [EC-1160](#)
 Electrical units location [PG-43](#)
 Electronic ignition (EI) system [EC-29](#), [EC-620](#)
 ENG SS - Wiring diagram [AT-131](#), [AT-504](#)
 Engine compartment [BL-117](#)
 Engine control circuit diagram [EC-105](#), [EC-696](#)
 Engine control component parts location ... [EC-98](#), [EC-690](#)
 Engine control module (ECM) [EC-437](#), [EC-1030](#)
 Engine control system diagram and chart . [EC-26](#), [EC-617](#)
 Engine coolant temperature sensor (ECTS) ... [EC-199](#), [EC-212](#), [EC-791](#), [EC-804](#)
 Engine fail-safe system [EC-93](#), [EC-685](#)
 Engine oil filter replacementQG18DE [MA-20](#)
 Engine oil filter replacementQR25DE [MA-27](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacementQG18DE [MA-20](#)
 Engine oil replacementQR25DE [MA-26](#)
 Engine outer component parts [EM-15](#)
 Engine removal [EM-65](#), [EM-159](#)
 Engine room - See Engine compartment [BL-117](#)
 Engine serial number [GI-48](#)
 ETC1 - Wiring diagram [EC-501](#), [EC-1097](#)
 ETC2 - Wiring diagram [EC-496](#), [EC-1092](#)
 ETC3 - Wiring diagram [EC-508](#), [EC-1104](#)
 EVAP canister [EC-38](#), [EC-629](#)
 EVAP canister purge volume control solenoid valve [EC-354](#), [EC-362](#), [EC-944](#), [EC-952](#)
 EVAP canister vent control valve [EC-369](#), [EC-376](#), [EC-959](#), [EC-966](#)
 EVAP control system (small leak) diagnosis .. [EC-346](#), [EC-400](#), [EC-935](#), [EC-991](#), [EC-999](#)
 EVAP control system pressure sensor [EC-384](#), [EC-387](#), [EC-393](#), [EC-973](#), [EC-976](#), [EC-983](#)
 EVAP control system purge flow monitoring diagnosis [EC-340](#), [EC-929](#)
 EVAP vapor lines inspectionQG18DE [MA-22](#)
 EVAP vapor lines inspectionQR25DE [MA-29](#)
 Evaporative emission (EVAP) system . [EC-35](#), [EC-626](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [MA-30](#)
 Exterior [EI-22](#)

F

F/FOG - Wiring diagram [LT-25](#)
 F/PUMP - Wiring diagram [EC-580](#), [EC-1179](#)
 Fan switch [MTC-46](#)
 Final drive (FF A/T) [AT-354](#)
 Final drive (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
 Finisher, interior - See Trim [EI-28](#)
 Finisher, trunk lid [EI-33](#)
 Floor trim [EI-28](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-124](#), [AT-492](#)
 Fluids [MA-13](#)
 Flywheel (clutch) [CL-18](#), [CL-34](#)
 Flywheel runout [EM-79](#)
 Fog lamp, front [LT-24](#)
 Fog lamp, front, removal and installation [EI-13](#)
 Fork rod (M/T) [MT-20](#), [MT-84](#)
 Forward clutch [AT-323](#)
 Freeze frame data [EC-55](#), [EC-646](#)
 Front axle [FAX-5](#)
 Front bumper [EI-13](#)
 Front combination lamp removal and installation [EI-13](#)
 Front door [BL-31](#), [GW-12](#)
 Front fog lamp [LT-24](#)
 Front fog lamp removal and installation [EI-13](#)
 Front passenger air bag [SRS-44](#)
 Front seat [SE-3](#)
 Front seat belt [SB-3](#)
 Front washer [WW-3](#)
 Front wiper [WW-3](#)
 FTS - Wiring diagram [AT-121](#), [AT-494](#)
 FTTS - Wiring diagram [EC-295](#), [EC-299](#), [EC-884](#), [EC-888](#)
 FUEL - Wiring diagram [EC-279](#), [EC-287](#), [EC-869](#), [EC-877](#)
 Fuel cut control (at no load high engine speed) [EC-30](#), [EC-621](#)
 Fuel gauge [DI-4](#)
 Fuel injection system .. [EC-277](#), [EC-285](#), [EC-867](#), [EC-875](#)
 Fuel injector and fuel tube [EM-21](#), [EM-121](#)
 Fuel level sensor [EC-416](#), [EC-418](#), [EC-420](#), [EC-1009](#), [EC-1011](#), [EC-1013](#)
 Fuel line inspection [FL-2](#), [MA-19](#)
 Fuel line inspectionQR25DE [MA-25](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-82](#), [EC-673](#)
 Fuel pressure release [EC-82](#), [EC-673](#)
 Fuel pump [EC-579](#), [EC-1178](#)
 Fuel tank temperature sensor ... [EC-293](#), [EC-298](#), [EC-882](#), [EC-887](#)
 Fuel tank vacuum relief valve [EC-38](#), [EC-629](#)
 Fuel tankRemoval and Installtion [FL-7](#)
 Fuse [PG-46](#)
 Fuse and fusible link box [PG-54](#)
 Fuse block [PG-53](#)
 Fusible link [PG-46](#)

ALPHABETICAL INDEX

G

Gauges [DI-4](#)
 Gear components (M/T) [MT-19](#), [MT-82](#)
 Generator [SC-25](#)
 Generator - See Alternator [SC-25](#)
 Generic scan tool (GST) [EC-127](#), [EC-717](#)
 Ground distribution [PG-13](#)

H

H/LAMP - Wiring diagram [LT-7](#)
 H/MIRROR - Wiring diagram [GW-15](#)
 Harness connector [PG-47](#)
 Harness connector inspection [GI-23](#)
 Harness layout [PG-22](#)
 Hazard warning lamp [LT-27](#)
 Headlamp [LT-6](#)
 Headlamp removal and installation [EI-13](#)
 Headlining - See Roof trim [EI-32](#)
 Heated oxygen sensor 2 [EC-251](#), [EC-269](#), [EC-841](#),
[EC-849](#), [EC-859](#)
 Heated oxygen sensor 2 heater [EC-166](#), [EC-757](#)
 HEATER - Wiring diagram [MTC-25](#)
 Heater mirror [GW-15](#)
 Heater system - Wiring diagram [MTC-25](#)
 Heater unit (heater core) [MTC-73](#)
 Height (Dimensions) [GI-49](#)
 HFC134a (R134a) system identification [MTC-4](#)
 HFC134a (R134a) system introduction [MTC-15](#)
 HFC134a (R134a) system precaution [MTC-3](#)
 HFC134a (R134a) system service procedure [MTC-77](#)
 HFC134a (R134a) system service tools [MTC-12](#)
 HFC134a system service equipment precaution [MTC-8](#)
 High clutch [AT-317](#)
 HO2S2 - Wiring diagram [EC-254](#), [EC-272](#), [EC-844](#),
[EC-852](#), [EC-862](#)
 HO2S2H - Wiring diagram [EC-168](#), [EC-759](#)
 Hood [EI-13](#)
 Horn [WW-9](#)
 HORN - Wiring diagram [WW-9](#)
 How to erase DTC for OBD system [EC-63](#), [EC-653](#)

I

IATS - Wiring diagram [EC-195](#), [EC-787](#)
 Identification plate [GI-48](#)
 Idle air volume learning [EC-80](#), [EC-671](#)
 Idle speed [EC-73](#), [EC-664](#)
 Idle speed control (ISC) ... [EC-424](#), [EC-426](#), [EC-1017](#),
[EC-1019](#)
 Ignition coil [EM-118](#), [EC-584](#), [EC-1184](#)
 Ignition control system [EC-584](#), [EC-1184](#)
 Ignition timing [EC-73](#), [EC-664](#)
 IGNSYS - Wiring diagram [EC-585](#), [EC-1185](#)
 ILL - Wiring diagram [LT-34](#)
 Illumination [LT-33](#)
 INJECT - Wiring diagram [EC-574](#), [EC-1173](#)
 Injector [EC-573](#), [EC-1172](#)

Input shaft (FF M/T) [MT-19](#), [MT-38](#), [MT-82](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-38](#)
 Intake air temperature sensor [EC-194](#), [EC-215](#), [EC-785](#), [EC-807](#)
 Intake door control linkage adjustment [MTC-37](#)
 Intake door motor [MTC-34](#)
 Intake manifold [EM-15](#), [EM-108](#)
 Intake sensor [MTC-61](#)
 Intake valve timing control .. [EC-157](#), [EC-172](#), [EC-748](#)
 Intake valve timing control solenoid valve [EC-172](#), [EC-763](#)
 Interior [EI-28](#)
 Interior lamp [LT-36](#)
 IVC - Wiring diagram [EC-173](#), [EC-764](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-5](#)

J

Junction box (J/B) [PG-53](#)

K

KEYLES - Wiring diagram [BL-38](#)
 Knock sensor (KS) [EC-316](#), [EC-905](#)
 KS - Wiring diagram [EC-317](#), [EC-906](#)

L

Length (Dimensions) [GI-49](#)
 License lamp [LT-19](#)
 Lifting points [GI-39](#)
 Line pressure solenoid valve [AT-157](#), [AT-542](#)
 Line pressure test (A/T) [AT-67](#), [AT-452](#)
 Liquid gasket application [EM-6](#), [EM-95](#)
 LOAD - Wiring diagram [EC-564](#)
 Location of electrical units [PG-43](#)
 Low and reverse brake [AT-331](#)
 LPSV - Wiring diagram [AT-173](#), [AT-544](#)
 Lubricant (R134a) A/C [MTC-16](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [MTC-16](#)
 Lubrication-locks, hinges and hood latches [MA-40](#)
 Luggage room lamp [LT-36](#)

M

M/T major overhaul [MT-18](#), [MT-85](#)
 M/T oil replacementM/T oil replacement [MT-73](#)
 M/T removal and installation [MT-15](#)
 MAFS - Wiring diagram [EC-180](#), [EC-188](#), [EC-771](#), [EC-779](#)
 Magnet clutch [MTC-64](#)
 MAIN - Wiring diagram [EC-145](#), [EC-736](#), [AT-111](#), [AT-483](#)
 Main drive gear (M/T) [MT-19](#)
 Mainshaft (M/T) [MT-19](#), [MT-45](#), [MT-82](#)
 Maintenance [MA-5](#)

ALPHABETICAL INDEX

Maintenance (engine)QG18DE [MA-16](#)
 Maintenance (engine)QR25DE [MA-23](#)
 Malfunction indicator lamp (MIL) [EC-64](#), [EC-655](#)
 Manual air conditioner - Wiring diagram [MTC-27](#)
 Manual transaxle number [GI-49](#)
 Manual transmission oil replacement [MA-31](#)
 Mass air flow sensor (MAFS) [EC-177](#), [EC-186](#), [EC-768](#), [EC-777](#)
 Master cylinder (clutch) [CL-9](#), [CL-26](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-13](#), [DI-62](#)
 MIL data link connectors circuit [EC-601](#)
 MIRROR - Wiring diagram [GW-14](#)
 Mirror defogger [GW-15](#)
 Mirror, door [GW-14](#), [GW-16](#)
 Mirror, out side [GW-16](#)
 Misfire [EC-309](#), [EC-898](#)
 Model variation [GI-46](#)
 Molding - See Exterior [EI-22](#)
 Multiport fuel injection (MFI) system [EC-27](#), [EC-618](#)
 Multiport fuel injection precautions [GI-3](#), [GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-34](#)

N

NATS (Nissan anti-theft system) [BL-96](#)
 NONDTC - Wiring diagram [AT-214](#), [AT-592](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (EM) [EM-13](#), [EM-101](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (WT) [WT-2](#)
 NVIS (Nissan vehicle immobilizer system) [BL-96](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#), [GI-5](#)

O

Oil change (capacity) [MA-13](#)
 Oil pan (engine) [EM-18](#), [EM-115](#)
 Oil pump (A/T) [AT-291](#)
 Oil pump (engine) [LU-8](#), [LU-19](#)
 Oil pump regulator valve (engine) [LU-10](#)
 Oil seal replacement (engine) [EM-52](#), [EM-144](#)
 On board diagnostic system [EC-51](#), [EC-642](#)
 Operating cylinder (clutch) [CL-11](#), [CL-28](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-42](#), [EC-633](#)
 Overdrive control switch [AT-248](#), [AT-250](#), [AT-626](#)
 Overheat [EC-450](#), [EC-1043](#)
 Overrun clutch [AT-323](#)
 Overrun clutch solenoid valve [AT-563](#)
 OVRCSV - Wiring diagram [AT-193](#), [AT-565](#)

P

Park/Neutral position switch [EC-445](#), [EC-1038](#)
 Park/neutral position switch (A/T) [AT-114](#), [AT-486](#)

Park/neutral position switch (M/T) [MT-12](#)
 Park/neutral position switch (M/T)Park/neutral position switch (M/T) [MT-75](#)
 Parking brake control [PB-2](#)
 Parking drum brake [BR-38](#)
 Parking lamp [LT-19](#)
 PCV (positive crankcase ventilation) .. [EC-48](#), [EC-639](#)
 Periodic maintenance [MA-7](#)
 PGC/V - Wiring diagram [EC-356](#), [EC-364](#), [EC-946](#), [EC-954](#)
 PHASE - Wiring diagram [EC-330](#), [EC-919](#)
 Piston assembly [EM-79](#)
 Piston pin inspection [EM-71](#)
 Piston ring inspection [EM-72](#)
 Piston to bore clearance [EM-73](#), [EM-184](#)
 PNP/SW - Wiring diagram [EC-447](#), [EC-1040](#), [AT-115](#), [AT-488](#)
 POS - Wiring diagram [EC-323](#), [EC-912](#)
 POWER - Wiring diagram [PG-5](#)
 Power door lock [BL-11](#)
 Power door mirror [GW-14](#)
 Power steering fluid level [PS-8](#), [MA-38](#)
 Power steering gear [PS-15](#)
 Power steering hydraulic pressure [PS-10](#)
 Power steering oil pump [PS-21](#)
 Power steering pressure (PSP) sensor ... [EC-428](#), [EC-1021](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-3](#)
 Power transistor [EC-1184](#)
 Power window [GW-7](#)
 Power window main switch [GW-7](#)
 PRE/SE - Wiring diagram .. [EC-389](#), [EC-395](#), [EC-978](#), [EC-985](#)
 Precautions (General) [GI-3](#)
 Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
 Pressure test (A/T) [AT-67](#), [AT-452](#)
 PS/SEN - Wiring diagram [EC-429](#), [EC-1022](#)

R

Radiator [CO-14](#)
 Radio - See Audio [AV-2](#)
 Rear air spoiler [EI-22](#)
 Rear axle [RAX-5](#)
 Rear axle (disc brake type) [RAX-6](#)
 Rear axle (drum brake type) [RAX-6](#)
 Rear bumper [EI-18](#)
 Rear combination lamp removal and installation [EI-22](#)
 Rear disc brake [BR-29](#)
 Rear door [BL-31](#), [GW-13](#)
 Rear drum brake [BR-38](#)
 Rear seat [SE-5](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-3](#)
 Rear window defogger [GW-17](#)
 Refrigerant connection precaution [MTC-4](#)
 Refrigerant general precaution [MTC-4](#)

ALPHABETICAL INDEX

Refrigerant lines [MTC-77](#)
 Refrigerant pressure sensor [EC-596](#), [EC-1197](#)
 Refrigeration cycle [MTC-15](#)
 Release bearing (clutch) [CL-14](#), [CL-31](#)
 Remote keyless entry system [BL-34](#)
 Removal and installation (A/T) [AT-263](#)
 Reverse clutch [AT-312](#)
 Reverse idler shaft (M/T) [MT-18](#), [MT-82](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) [MT-12](#)
 Reverse main gear (M/T) [MT-19](#), [MT-82](#)
 Revolution sensor (A/T) [AT-498](#)
 Road wheel size [GI-50](#)
 Rocker cover [EM-124](#)
 Roof trim [EI-32](#)
 Room lamp - See Interior lamp [LT-36](#)
 RP/SEN - Wiring diagram [EC-597](#), [EC-1198](#)

S

SAE J1979 - Mode 1 - 7 [EC-51](#), [EC-642](#)
 Seal - See Exterior [EI-22](#)
 Seat belt inspection [SB-7](#), [MA-40](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-3](#)
 Seat, rear [SE-5](#)
 SEN/PW - Wiring diagram [EC-441](#), [EC-1034](#)
 Sheft warning system [BL-65](#)
 SHIFT - Wiring diagram [AT-252](#), [AT-632](#)
 Shift control components (M/T) [MT-20](#), [MT-84](#)
 Shift control components (M/T)Shift control components (M/T) [MT-76](#)
 Shift fork (M/T) [MT-20](#), [MT-84](#)
 Shift lever [MT-13](#)
 Shift lock system [AT-251](#), [AT-631](#)
 Shift schedule [AT-384](#), [AT-746](#)
 Shift solenoid valve A (A/T) .. [AT-138](#), [AT-148](#), [AT-548](#)
 Shift solenoid valve B (A/T) [AT-138](#), [AT-553](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear) [RSU-10](#)
 Side trim [EI-28](#)
 Smart entrance control unit [BCS-3](#)
 Spare tire size [GI-50](#)
 Spark plug replacementQG18DE [MA-21](#)
 Spark plug replacementQR25DE [MA-28](#)
 Specification value [EC-134](#), [EC-725](#)
 Speedometer [DI-4](#)
 SROOF - Wiring diagram [RF-11](#)
 SRS - Wiring diagram [SRS-14](#)
 SRS Trouble diagnoses [SRS-7](#)
 SSV/A - Wiring diagram [AT-179](#), [AT-550](#)
 SSV/B - Wiring diagram [AT-183](#), [AT-555](#)
 Stabilizer bar (front) [FSU-11](#)
 Stall test (A/T) [AT-63](#), [AT-448](#)
 Standardized relay [PG-51](#)
 START - Wiring diagram [SC-8](#)
 Starter [SC-15](#)
 Starting system [SC-7](#)

Steering gear and linkage inspection [MA-38](#)
 Steering linkage [PS-15](#)
 Steering wheel and column [PS-11](#)
 Steering wheel play [PS-7](#)
 Steering wheel turning force [PS-9](#)
 Stop lamp [LT-21](#)
 Stop lamp switch [EC-1085](#), [EC-1147](#)
 STOP/L - Wiring diagram [LT-21](#)
 Striking rod (M/T) [MT-20](#)
 Strut (front) [FSU-9](#)
 Strut (rear) [RSU-8](#)
 Sub-gear (M/T) [MT-19](#)
 Sunroof [RF-10](#)
 Supplemental restraint system - Wiring diagram . [SRS-14](#)
 Suspension [MA-39](#)
 Symbols and abbreviations [GI-8](#), [GI-21](#)
 Symptom matrix chart [EC-94](#), [EC-686](#)
 Synchronizer (M/T) [MT-19](#), [MT-82](#)
 System readiness test (SRT) code [EC-56](#), [EC-647](#)

T

Tachometer [DI-4](#)
 Tail lamp [LT-19](#)
 TAIL/L - Wiring diagram [LT-19](#)
 TCCSIG - Wiring diagram [AT-165](#), [AT-536](#)
 TCM circuit diagram [AT-18](#), [AT-405](#)
 TCM inspection table [AT-108](#), [AT-479](#)
 TCV - Wiring diagram [AT-159](#), [AT-531](#)
 Temperature control cable and linkage adjustment [MTC-41](#)
 Thermal protector [MTC-71](#)
 Thermostat [CO-12](#), [CO-30](#)
 Three way catalyst function [EC-335](#), [EC-924](#)
 Three way catalyst precautions [GI-3](#), [GI-5](#)
 Throttle control motor relay [EC-494](#), [EC-1090](#)
 Throttle position sensor (TPS) ... [EC-205](#), [EC-302](#), [EC-464](#), [EC-466](#), [EC-528](#), [EC-797](#), [EC-891](#), [EC-1056](#), [EC-1058](#), [EC-1125](#)
 Throttle position switch [AT-248](#), [AT-626](#)
 Throwout bearing - See Clutch release bearing [CL-14](#), [CL-31](#)
 Tie-rod [PS-19](#)
 Tie-rod ball joints [PS-19](#)
 Tightening torque of standard bolts [GI-44](#)
 Time control system [BCS-10](#)
 Timing chain [EM-42](#), [EM-136](#)
 Tire rotation [MA-34](#)
 Tire size [GI-50](#)
 TLID - Wiring diagram [BL-33](#)
 Top tether strap child restraint [SB-10](#)
 Torque converter installation [AT-264](#), [AT-644](#), [AT-739](#)
 Torque convertor clutch solenoid valve [AT-529](#)
 Tow truck towing [GI-42](#)
 Towing point [GI-43](#)
 TPS - Wiring diagram [AT-189](#), [AT-560](#)
 TPS1 - Wiring diagram [EC-304](#), [EC-893](#)
 TPS2 - Wiring diagram [EC-207](#), [EC-799](#)

ALPHABETICAL INDEX

TPS3 - Wiring diagram [EC-530](#), [EC-1127](#)
Transmission case (M/T) [MT-18](#), [MT-81](#)
Tread-FR&RR (Dimensions) [GI-49](#)
Trim [EI-28](#)
Trouble diagnoses [GI-9](#), [GI-23](#)
Trunk lid [EI-18](#)
Trunk lid finisher [EI-33](#)
Trunk lid opener - See Trunk lid [EI-18](#)
Trunk lid opener, electric [BL-33](#)
Trunk lid trim [EI-33](#)
Trunk room lamp [LT-36](#)
Trunk room trim [EI-33](#)
TURN - Wiring diagram [LT-30](#)
Turn signal lamp [LT-27](#)
Two trip detection logic [EC-51](#), [EC-642](#)

U

Under body [BL-120](#)

V

Vacuum hose (brake system) [BR-18](#)
Vacuum hose drawing (Engine control) [EC-695](#)
Valve clearance [EM-38](#), [EM-134](#)
Valve guide [EM-61](#), [EM-154](#), [EM-155](#)
Valve seat [EM-63](#), [EM-156](#)
Valve spring [EM-64](#), [EM-157](#)
Variable induction air control system (VIAS) [EC-1080](#),
[EC-1202](#)
Vehicle identification number [GI-47](#)
Vehicle recovery (freeing a stuck vehicle) [GI-43](#)
Vehicle security (theft warning) system [BL-65](#)
Vehicle speed sensor (VSS) [EC-422](#), [EC-1015](#)
VEHSEC - Wiring diagram [BL-72](#)
Vent mode switch [MTC-20](#)
VENT/V - Wiring diagram .. [EC-371](#), [EC-379](#), [EC-961](#),
[EC-968](#)
VIAS - Wiring diagram [EC-1204](#)
VIAS/V - Wiring diagram [EC-1081](#)
VIN registration [EC-79](#), [EC-670](#)
Viscosity number (SAE) [MA-14](#)
VSS A/T - Wiring diagram [AT-127](#), [AT-500](#)
VSSMTR - Wiring diagram ... [AT-204](#), [AT-577](#), [AT-582](#)

W

WARN - Wiring diagram [DI-29](#)
Warning chime [DI-41](#)
Warning lamps [DI-27](#)
Washer, front [WW-3](#)
Water pump [CO-10](#)
Water temperature gauge [DI-4](#)
Weatherstrip - See Exterior [EI-22](#)
Wheel alignment (front) [FSU-6](#)
Wheel alignment (rear) [RSU-6](#)
Wheel bearing (front axle) [FAX-9](#)
Wheel bearing (front) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)

Wheel hub (front) [FAX-6](#), [FAX-9](#)
Wheel hub (rear) [RAX-6](#)
Wheel sensors (ABS) [BRC-44](#)
Wheel size [GI-50](#)
Wheelbase (Dimensions) [GI-49](#)
Width (Dimensions) [GI-49](#)
WINDOW - Wiring diagram [GW-9](#)
Window, back door [GW-12](#)
Window, door [GW-6](#), [GW-12](#)
Window, rear [GW-3](#)
Windshield [GW-3](#)
Windshield washer - See Front washer [WW-3](#)
Windshield wiper - See Front wiper [WW-3](#)
WIPER - Wiring diagram [WW-5](#)
Wiper and washer [WW-3](#)
Wiper, front [WW-3](#)
Wiring Diagram (Cell code) list [PG-40](#)
Wiring diagrams [GI-8](#), [GI-14](#)
Withdrawal lever (clutch) [CL-14](#), [CL-31](#)
Wrist pin - See Piston pin inspection [EM-71](#)