

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-26
A	
A/C - Wiring diagram	MTC-36
A/C compressor clutch removal and installation .	MTC-99 , MTC-101
A/C compressor mounting	MTC-97 , MTC-98
A/C compressor precaution	MTC-11
A/C compressor special service tool	MTC-14
A/C diagnostic work flow (manual A/C)	MTC-31
A/C evaporator	MTC-106
A/C HFC134a (R134a) system identification	MTC-5
A/C HFC134a (R134a) system precaution	MTC-4
A/C HFC134a (R134a) system service procedure	MTC-92
A/C HFC134a (R134a) system service tools ..	MTC-14
A/C HFC134a system service equipment precaution ...	MTC-11
A/C lubricant (R134a)	MTC-21
A/C lubrication oil	MTC-21
A/C operational check	MTC-43
A/C performance chart	MTC-70
A/C symptom chart (manual A/C)	MTC-31
A/C trouble diagnoses (manual A/C)	MTC-31
A/C, M - Wiring diagram	MTC-36 , MTC-38
A/F - Wiring diagram ...	EC-212 , EC-218 , EC-224 , EC-231 , EC-512 , EC-770 , EC-778 , EC-786 , EC-795 , EC-1107
A/FH - Wiring diagram	EC-154 , EC-707
ABS - Wiring diagram	BRC-13
ABS (anti-lock brake system)	BRC-5
ABS sensor rotor	RAX-4
Accelerator pedal position (APP) sensor .	EC-484 , EC-490 , EC-503 , EC-1076 , EC-1083 , EC-1097
Accelerator pedal released position learning	EC-77 , EC-629
Air bag	SRS-3
Air bleeding (hydraulic clutch)	CL-8
Air cleaner and air duct	EM-130
Air cleaner filter replacement	MA-28
Air conditioner - Wiring diagram	MTC-36
Air conditioner cut control	EC-31 , EC-581
Air fuel ratio sensor 1 ..	EC-209 , EC-216 , EC-222 , EC-228 , EC-510 , EC-768 , EC-776 , EC-784 , EC-792 , EC-1105
Air fuel ratio sensor 1 heater	EC-153 , EC-706
Angular tightening application	EM-6 , EM-118
Antenna	AV-63
Anti-lock brake system - See ABS	BRC-5
Anti-lock brake system - Wiring diagram	BRC-13
APPS1 - Wiring diagram	EC-486 , EC-1078
APPS2 - Wiring diagram	EC-492 , EC-1085
APPS3 - Wiring diagram	EC-505 , EC-1099
ASC/BS - Wiring diagram	EC-448 , EC-1040
ASC/SW - Wiring diagram	EC-441 , EC-1033
ASCBOF - Wiring diagram	EC-519 , EC-1116
ASCD	EC-32 , EC-582
ASCD brake switch ...	EC-446 , EC-518 , EC-1038 , EC-1115
ASCD clutch switch ...	EC-446 , EC-518 , EC-1038 , EC-1115
ASCD steering switch	EC-439 , EC-1031
ASCIND - Wiring diagram	EC-528 , EC-1125
Audio	AV-5
AUDIO - Wiring diagram	AV-10
Auto anti-dazzling inside mirror	GW-73
Automatic amplifier	MTC-41 , MTC-45
AV communication line	AV-90
Axle	MA-42
B	
BACK/L - Wiring diagram	LT-70
Back-up lamp	LT-70 , LT-87
Back-up lamp switch (M/T)	MT-13 , MT-62 , MT-138
Basic inspection	EC-71 , EC-623
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-19 , SC-28
Baulk ring (M/T)	MT-20 , MT-69 , MT-145
BCM (Body control module)	BCS-3
Block heater	EM-184
Blower motor	MTC-56 , MTC-78
Board computer	AV-84
Body alignment	BL-218
Body component parts	BL-207
Body construction	BL-217
Body exterior paint color	BL-206
Body repair	BL-206
Body sealing	BL-214
Brake booster	BR-18
Brake control valve (Proportioning valve)	BR-14
Brake fluid level	MA-39
Brake inspection	MA-41
Brake lines and cables inspection	MA-40
Brake pedal	BR-6
Brake switch	EC-460 , EC-1052
BRK/SW - Wiring diagram	EC-461 , EC-1053
Bulb specifications	LT-111
Bumper, front	EI-14
C	
Cabin air filter	MA-33
Camshaft	EM-48 , EM-149
Camshaft inspection	EM-50 , EM-151 , EM-156
Camshaft position sensor (PHASE) ..	EC-308 , EC-893
CAN - Wiring diagram	EC-146 , EC-699 , CVT-61
CAN (Controller Area Network)	BL-89
CAN communication	EC-34 , EC-145 , EC-148 , EC-584 , EC-698 , EC-701 , CVT-21 , CVT-60 , BL-89
CAN communication (EPS)	STC-6
CHARGE - Wiring diagram	SC-26
Charging system	SC-25
Chassis and body maintenance	MA-10 , MA-33

ALPHABETICAL INDEX

CHIME - Wiring diagram	DI-55
Circuit breaker	PG-17
Closed loop control EC-28 , EC-419 , EC-578 , EC-1011	
Clutch cover	CL-13
Clutch disc	CL-13
Clutch master cylinder	CL-9
Clutch pedal	CL-5
Coil spring (rear)	RSU-9
Collision diagnosis	SRS-50
Combination lamp, rear, removal and installation LT-86	
Combination meter	DI-5
Combination meter removal and installation - See Instrument panel	IP-11
COMBSW - Wiring diagram	LT-64
COMM - Wiring diagram	AV-90
Component Location (manual A/C)	MTC-32
Compression pressure	EM-63
Compressor clutch removal and installation . MTC-99 , MTC-101	
Compressor mounting	MTC-97 , MTC-98
Compressor precaution	MTC-11
Compressor special service tool	MTC-14
Condenser	MTC-105
Connecting rod	EM-94
Connecting rod bearing clearance	EM-98
Connecting rod bushing clearance	EM-94
CONSULT for ABS	BRC-19
CONSULT general information	GI-37
CONSULT-II for engine	EC-113 , EC-665
CONSULT-II function (EPS)	STC-13
CONSULT-II Reference value (CVT)	CVT-52
Control lever (M/T)	MT-14 , MT-63 , MT-139
Control units (terminal arrangement)	PG-70
Control valve (CVT)	CVT-25
Controller Area Network (CAN)	BL-89
COOL/F - Wiring diagram	EC-424 , EC-1015
Coolant mixture ratio	MA-16
Coolant replacement	CO-34 , MA-26
Cooling circuit (engine)	CO-8
Cooling fan	CO-17
Cooling fan motor EC-420 , EC-432 , EC-1012 , EC-1023	
Cooling unit (A/C evaporator)	MTC-81 , MTC-106
Corrosion protection	BL-211
Coupling sleeve (M/T)	MT-20 , MT-69 , MT-145
Crankcase ventilation system - See Positive crankcase ventilation	EC-47 , EC-597
Crankshaft	EM-74 , EM-185
Crankshaft position sensor (POS)	EC-301 , EC-885
Crash zone sensor	SRS-44
CVT air breather hose	CVT-200
CVT control system	CVT-18
CVT cross-sectional view	CVT-17
CVT Electrical parts location	CVT-35
CVT fluid checking	CVT-15 , CVT-38 , MA-34
CVT Fluid Cooler	CVT-202 , CVT-203
CVT fluid replacement	CVT-16 , MA-35
CVT fluid temperature sensor	CVT-72
CVT hydraulic control system	CVT-19
CVT indicator	DI-47
CVT self-diagnoses	CVT-54 , CVT-59
CVT shift lock system	CVT-181
CVT trouble diagnoses	CVT-29
CVTIND - Wiring diagram	DI-48
Cylinder block	EM-74 , EM-184
Cylinder block boring	EM-203
Cylinder head	EM-63 , EM-171
Cylinder head bolt tightening	EM-66
D	
D/LOCK - Wiring diagram	BL-24 , BL-30
Data link connector EC-115 , EC-124 , EC-558 , EC-676 , EC-1156	
DEF - Wiring diagram	GW-58
Diagnosis sensor unit	SRS-47
Diagnostic trouble code (DTC) for OBD system EC-14 , EC-51 , EC-562 , EC-601	
Diagnostic trouble code (DTC) inspection priority chart EC-89 , EC-641 , CVT-29	
Differential gear (FF M/T)	MT-24 , MT-72 , MT-148
DLC - Wiring diagram	EC-558 , EC-1156
Door glass	GW-48 , GW-52
Door glass Fitting Adjustment(Front)	GW-50
Door glass Fitting Adjustment(Rear)	GW-54
Door mirror	GW-71
Door trim	EI-29
Door, front	GW-48
Door, rear	GW-52
Drive belt	EM-127
Drive shaft	MA-42
Driver air bag	SRS-34
DTC work support	EC-122 , EC-673
DTRL - Wiring diagram	LT-31
Duct and grilles	MTC-88
E	
ECM input/output signal	EC-105 , EC-657
ECM power supply	EC-138 , EC-691 , EC-994
ECM/PW - Wiring diagram	EC-995
ECTS - Wiring diagram	EC-192 , EC-750
Electric sunroof	RF-10
Electric throttle control actuator .. EM-20 , EC-470 , EC-477 , EC-482 , EC-1062 , EC-1069 , EC-1074	
Electrical load signal circuit	EC-530 , EC-1127
Electrical unit	PG-70
Electrical units location	PG-62
Electronic ignition (EI) system	EC-29 , EC-579
Electronic key	BL-77
Engine control circuit diagram	EC-103 , EC-655
Engine control component parts location .. EC-96 , EC-648	
Engine control module (ECM)	EC-406 , EC-998
Engine control system diagram	EC-26 , EC-576
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ... EC-190 , EC-201 , EC-748 , EC-760	
Engine fail-safe system	EC-91 , EC-643

ALPHABETICAL INDEX

Engine oil [LU-5](#)
 Engine oil precautions [GI-7](#)
 Engine removal [EM-102](#), [EM-181](#)
 EPS - Wiring diagram [STC-9](#)
 EPS control unit input/output signal reference values .. [STC-11](#)
 EPS system description [STC-5](#)
 EPS system diagram [STC-6](#)
 ETC1 - Wiring diagram [EC-471](#), [EC-1063](#)
 ETC2 - Wiring diagram [EC-466](#), [EC-1058](#)
 ETC3 - Wiring diagram [EC-478](#), [EC-1070](#)
 EVAP canister [EC-38](#), [EC-588](#)
 EVAP canister purge volume control solenoid valve [EC-333](#), [EC-341](#), [EC-919](#), [EC-927](#)
 EVAP canister vent control valve [EC-347](#), [EC-354](#), [EC-933](#), [EC-940](#)
 EVAP control system (small leak) diagnosis .. [EC-325](#), [EC-379](#), [EC-386](#), [EC-911](#), [EC-967](#), [EC-974](#)
 EVAP control system pressure sensor [EC-360](#), [EC-364](#), [EC-371](#), [EC-946](#), [EC-950](#), [EC-958](#)
 EVAP control system purge flow monitoring diagnosis [EC-320](#), [EC-906](#)
 EVAP vapor lines inspection [MA-25](#), [MA-32](#)
 Evaporative emission (EVAP) system . [EC-35](#), [EC-585](#)
 Evaporator [MTC-106](#)
 Exhaust manifold [EM-23](#)
 Exhaust system inspection [MA-34](#), [MA-36](#)
 Expansion valve [MTC-107](#)

F

F/FOG - Wiring diagram [LT-40](#)
 F/PUMP - Wiring diagram [EC-538](#), [EC-1135](#)
 Fan control amp. [MTC-87](#)
 Final drive (FF M/T) [MT-24](#), [MT-72](#), [MT-148](#)
 Floor trim [EI-37](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (CVT) [CVT-72](#)
 Fluorescent leak detector [MTC-108](#)
 Flywheel (clutch) [CL-13](#)
 Flywheel runout [EM-100](#)
 Fork rod (M/T) [MT-23](#), [MT-71](#), [MT-147](#)
 Freeze frame data .. [EC-54](#), [EC-116](#), [EC-605](#), [EC-668](#)
 Front bumper [EI-14](#)
 Front door [GW-48](#)
 Front passenger air bag [SRS-38](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-46](#)
 Front washer [WW-3](#)
 Front wiper [WW-3](#)
 FTS - Wiring diagram [CVT-73](#)
 FTTS - Wiring diagram [EC-276](#), [EC-281](#), [EC-858](#), [EC-863](#)
 FUEL - Wiring diagram [EC-262](#), [EC-269](#)
 Fuel cut control (at no load high engine speed) [EC-30](#), [EC-580](#)
 Fuel gauge [DI-5](#)
 Fuel injection system .. [EC-260](#), [EC-267](#), [EC-836](#), [EC-846](#)

Fuel injector [EC-532](#), [EC-1129](#)
 Fuel injector and fuel tube [EM-35](#), [EM-144](#)
 Fuel level sensor .. [EC-394](#), [EC-396](#), [EC-398](#), [EC-982](#), [EC-984](#), [EC-986](#)
 Fuel line inspection [FL-4](#), [MA-20](#), [MA-28](#)
 Fuel pressure check [EC-81](#), [EC-633](#)
 Fuel pressure release [EC-81](#), [EC-633](#)
 Fuel pump [EC-537](#), [EC-1134](#)
 Fuel systemCommercial Service Tools [FL-3](#)
 Fuel systemPREPARATION [FL-3](#)
 Fuel tank temperature sensor ... [EC-274](#), [EC-280](#), [EC-856](#), [EC-862](#)
 Fuel tank vacuum relief valve [EC-38](#), [EC-588](#)
 Fuse [PG-17](#)
 Fuse and fusible link box [PG-74](#)
 Fusible link [PG-17](#)

G

Gauges [DI-5](#)
 Gear components (M/T) [MT-20](#), [MT-69](#), [MT-145](#)
 Generic scan tool (GST) [EC-123](#), [EC-675](#)
 Glass [GW-11](#), [GW-48](#), [GW-52](#)
 Grille - See Exterior [EI-18](#)
 Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-8](#)
 H/PHON - Wiring diagram [AV-69](#)
 Handling precautions for plastics [BL-230](#)
 Harness connector [PG-66](#)
 Harness layout [PG-38](#)
 Hazard warning lamp [LT-48](#)
 Headlining - See Roof trim [EI-39](#)
 Heated oxygen sensor 2 ... [EC-236](#), [EC-243](#), [EC-253](#), [EC-803](#), [EC-813](#), [EC-826](#)
 Heated oxygen sensor 2 heater [EC-158](#), [EC-713](#)
 Heater and cooling unit (Heater core) .. [MTC-81](#), [MTC-83](#)
 Heater unit (heater core) [MTC-81](#), [MTC-83](#)
 HFC134a (R134a) system identification [MTC-5](#)
 HFC134a (R134a) system precaution [MTC-4](#)
 HFC134a (R134a) system service procedure . [MTC-92](#)
 HFC134a (R134a) system service tools [MTC-14](#)
 HFC134a system service equipment precaution [MTC-11](#)
 HO2S2 - Wiring diagram ... [EC-238](#), [EC-246](#), [EC-255](#), [EC-805](#), [EC-816](#), [EC-828](#), [EC-838](#), [EC-848](#)
 HO2S2H - Wiring diagram [EC-160](#), [EC-715](#)
 Horn [WW-28](#)
 HORN - Wiring diagram [WW-28](#)
 How to erase DTC for OBD system [EC-62](#), [EC-614](#)

I

IATS - Wiring diagram [EC-187](#), [EC-745](#)
 Idle air volume learning [EC-78](#), [EC-630](#)
 Idle speed [EC-75](#), [EC-627](#)

ALPHABETICAL INDEX

Idle speed control (ISC) [EC-402](#), [EC-404](#), [EC-990](#), [EC-992](#)
 Ignition coil [EM-141](#), [EC-543](#), [EC-1140](#)
 Ignition control system [EC-543](#), [EC-1140](#)
 Ignition timing [EC-75](#), [EC-627](#)
 IGNSYS - Wiring diagram [EC-544](#), [EC-1141](#)
 ILL - Wiring diagram [LT-105](#)
 Illumination control [LT-102](#)
 In-cabin Microfilter [MA-33](#)
 INF/D - Wiring diagram [AV-86](#)
 INJECT - Wiring diagram [EC-533](#), [EC-1130](#)
 Input shaft (FF M/T) [MT-20](#), [MT-69](#), [MT-145](#)
 Input/Output signal of TCM [CVT-21](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-94](#)
 Intake air temperature sensor ... [EC-186](#), [EC-204](#), [EC-744](#), [EC-763](#)
 Intake door motor [MTC-55](#), [MTC-84](#)
 Intake manifold [EM-20](#), [EM-132](#)
 Intake valve timing control [EC-149](#), [EC-702](#)
 Intake valve timing control solenoid valve [EC-164](#), [EC-722](#)
 Interior [EI-32](#)
 Interior lamp [LT-89](#)
 IPDM (Intelligent power distribution module engine room) [PG-18](#)
 IVC - Wiring diagram [EC-165](#), [EC-723](#)

K

KEYLES - Wiring diagram [BL-56](#)
 Knock sensor (KS) [EC-297](#), [EC-880](#)
 KS - Wiring diagram [EC-298](#), [EC-881](#)

L

L/USSV - Wiring diagram [CVT-147](#)
 LAN system circuit [MTC-47](#)
 Line pressure and secondary pressure control [CVT-22](#)
 Line pressure solenoid valve [CVT-100](#), [CVT-105](#)
 Liquid gasket application [EM-7](#), [EM-118](#), [CO-4](#), [CO-26](#)
 Location of electrical units [PG-62](#)
 Lock-up and select control [CVT-24](#)
 Lock-up select solenoid valve [CVT-146](#)
 Low tire pressure warning system [WT-9](#)
 Low tire pressure warning system - trouble diagnoses [WT-12](#)
 Low tire pressure warning system - Wiring diagram [WT-12](#)
 LPSV - Wiring diagram [CVT-101](#)
 Lubricant (R134a) A/C [MTC-21](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [MTC-21](#)
 Luggage compartment trim [EI-42](#)

M

M/T major overhaul [MT-19](#), [MT-68](#), [MT-144](#)
 M/T oil replacement [MT-60](#), [MT-136](#), [MA-37](#)

M/T removal and installation ... [MT-17](#), [MT-66](#), [MT-142](#)
 MAFS - Wiring diagram [EC-172](#), [EC-180](#), [EC-730](#), [EC-738](#)
 Magnet clutch [MTC-99](#), [MTC-101](#)
 MAIN - Wiring diagram [EC-138](#), [EC-691](#)
 Mainshaft (M/T) [MT-20](#), [MT-69](#), [MT-145](#)
 Maintenance [MA-6](#)
 Malfunction indicator lamp (MIL) [EC-62](#), [EC-614](#)
 Manual air conditioner - Wiring diagram [MTC-36](#)
 Mass air flow sensor (MAFS) ... [EC-169](#), [EC-178](#), [EC-727](#), [EC-736](#)
 Master cylinder (clutch) [CL-9](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-10](#)
 MIL data link connectors circuit [EC-558](#), [EC-1156](#)
 MIRROR - Wiring diagram [GW-70](#)
 Mirror, door [GW-71](#)
 Mirror, out side [GW-71](#)
 Misfire [EC-290](#), [EC-873](#)
 MMSW - Wiring diagram [CVT-116](#)
 Mode door motor [MTC-85](#)
 Molding - See Exterior [EI-26](#), [EI-27](#)
 Multiport fuel injection (MFI) system ... [EC-27](#), [EC-577](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-52](#)

N

NATS - Wiring diagram [BL-192](#)
 NONDTC - Wiring diagram [CVT-164](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (EM) [EM-125](#)
 NVH troubleshooting (RSU) [RSU-4](#)
 NVIS (Nissan vehicle immobilizer system) [BL-189](#)

O

Oil change (capacity)QR25DE [MA-14](#)
 Oil cooler (engine) [EM-26](#)
 Oil filter [LU-8](#)
 Oil pan (engine) [EM-26](#), [EM-138](#)
 Oil pressure (engine) [LU-5](#), [LU-15](#), [MA-21](#)
 Oil pump (engine) [LU-18](#)
 Oil seal replacement (engine) . [EM-26](#), [EM-39](#), [EM-60](#), [EM-67](#), [EM-168](#)
 On board diagnostic system [EC-50](#), [EC-600](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-41](#), [EC-591](#)
 Out side mirror [GW-71](#)
 Overheat [EC-420](#), [EC-1012](#)

P

P/SCKT - Wiring diagram [WW-26](#)
 Park/Neutral position switch [EC-413](#), [EC-1005](#)
 Park/neutral position switch (CVT) [CVT-66](#)
 Park/neutral position switch (M/T) [MT-13](#), [MT-62](#), [MT-138](#)

ALPHABETICAL INDEX

Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) ... [EC-47](#), [EC-597](#)
 Periodic maintenance [MA-8](#)
 PGC/V - Wiring diagram [EC-335](#), [EC-343](#), [EC-921](#), [EC-929](#)
 PHASE - Wiring diagram [EC-310](#), [EC-895](#)
 Pilot bushing replacement [EM-74](#)
 Piston assembly [EM-96](#)
 Piston pin inspection [EM-92](#)
 Piston ring inspection [EM-93](#)
 Piston to bore clearance [EM-96](#), [EM-203](#)
 PNP/SW - Wiring diagram [EC-415](#), [EC-1007](#), [CVT-68](#)
 POS - Wiring diagram [EC-303](#), [EC-887](#)
 POWER - Wiring diagram [CVT-135](#), [PG-6](#)
 Power door lock [BL-21](#)
 Power socket [WW-26](#)
 Power steering gear [PS-13](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram .. [EC-366](#), [EC-373](#), [EC-952](#), [EC-960](#)
 Precautions (General) [GI-4](#)
 Pressure control solenoid valve A [CVT-100](#), [CVT-105](#)
 Pressure control solenoid valve B [CVT-108](#), [CVT-110](#)
 Pressure plate - See Clutch cover [CL-13](#)
 Pressure test (CVT) [CVT-40](#)
 Primary pressure sensor [CVT-128](#)
 Primary Speed Sensor [CVT-77](#)
 PRIPS - Wiring diagram [CVT-129](#)
 PRSCVT - Wiring diagram [CVT-78](#)

R

Radiator [CO-13](#)
 Radio - See Audio [AV-5](#)
 Rear axle [RAX-4](#)
 Rear combination lamp removal and installation [LT-86](#)
 Rear door [GW-52](#)
 Rear seat belt [SB-6](#)
 Rear suspension [RSU-5](#)
 Rear window defogger [GW-55](#)
 Refrigerant connection precaution [MTC-5](#)
 Refrigerant discharging evacuating charging . [MTC-92](#)
 Refrigerant general precaution [MTC-5](#)
 Refrigerant lines [MTC-92](#)
 Refrigerant pressure sensor . [EC-553](#), [EC-1150](#), [MTC-105](#)
 Remote keyless entry system [BL-52](#)
 Reverse idler shaft (M/T) [MT-20](#), [MT-69](#), [MT-145](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) [MT-13](#), [MT-62](#), [MT-138](#)
 Reverse main gear (M/T) [MT-20](#), [MT-69](#), [MT-145](#)
 Road test [CVT-41](#)
 Rocker cover [EM-147](#)
 Room lamp - See Interior lamp [LT-89](#)
 RP/SEN - Wiring diagram [EC-554](#), [EC-1151](#)

S

SAE J1979 - Service \$01 - 09 [EC-50](#), [EC-600](#)
 Seat belt inspection [SB-8](#), [MA-43](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-6](#)
 Secondary pressure sensor [CVT-121](#)
 Secondary Speed Sensor [CVT-83](#)
 SECPS - Wiring diagram [CVT-122](#)
 SECPSV - Wiring diagram [CVT-111](#)
 Self-diagnostic results ... [EC-65](#), [EC-116](#), [EC-617](#), [EC-668](#)
 SEN/PW - Wiring diagram [EC-409](#), [EC-1001](#)
 SESCOVT - Wiring diagram [CVT-84](#)
 SHIFT - Wiring diagram [CVT-182](#)
 Shift control [CVT-22](#)
 Shift control components (M/T) [MT-23](#), [MT-71](#), [MT-147](#)
 Shift control system [CVT-186](#)
 Shift fork (M/T) [MT-23](#), [MT-71](#), [MT-147](#)
 Shift lever [MT-14](#), [MT-63](#), [MT-139](#)
 Shift schedule [CVT-48](#), [CVT-211](#)
 Shock absorber (rear) [RSU-8](#)
 Side air bag (satellite) sensor [SRS-45](#)
 Side curtain air bag [SRS-42](#)
 Side trim [EI-32](#)
 Specification value [EC-128](#), [EC-681](#)
 Speedometer [DI-5](#)
 Spiral cable [SRS-36](#)
 Spot lamp [LT-100](#)
 SPSW - Wiring diagram [CVT-159](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-13](#)
 SRS Trouble diagnoses [SRS-9](#)
 Stall Test [CVT-38](#)
 START - Wiring diagram [SC-11](#)
 Starting system [SC-8](#)
 Steering linkage [PS-13](#)
 Steering wheel and column [PS-6](#), [PS-9](#)
 Steering wheel turning force [PS-6](#)
 Step motor [CVT-152](#), [CVT-156](#)
 STM - Wiring diagram [CVT-153](#)
 Stop lamp [LT-68](#), [LT-87](#)
 Stop lamp switch [EC-460](#), [EC-1052](#)
 STOP/L - Wiring diagram [LT-68](#)
 Sun roof, electric [RF-10](#)
 Sunroof [RF-10](#), [RF-22](#)
 Supplemental Restraint System [SRS-5](#)
 Suspension [MA-42](#)
 Swirl control valve [EC-558](#), [EC-1156](#)
 Symbols and abbreviations [GI-10](#), [GI-23](#)
 Symptom matrix chart [EC-92](#), [EC-644](#)
 Synchronizer (M/T) [MT-20](#), [MT-69](#), [MT-145](#)
 System readiness test (SRT) code [EC-55](#), [EC-605](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-87](#)

ALPHABETICAL INDEX

TAIL/L - Wiring diagram	LT-75	Washer, front	WW-3	
TCM circuit diagram	CVT-37	Water control valve	CO-21	A
TCM function	CVT-20	Water pump	CO-16	
TCM inspection table	CVT-49	Water temperature gauge	DI-5	
TCV - Wiring diagram	CVT-93	Wheel alignment (front)	FSU-6	B
Telephone	AV-65	Wheel alignment (rear)	RSU-5	
Theft warning system - See Vehicle security (Theft warn- ing) system	BL-170	Wheel bearing (rear)	RAX-4	
Thermostat	CO-18 , CO-42	Wheel hub (rear)	RAX-4	C
Three way catalyst function	EC-314 , EC-900	Wheel sensor (VDC)	BRC-31	
Three way catalyst precautions	GI-5	Wheel sensors (ABS)	BRC-11	
Throttle control motor relay	EC-465 , EC-1057	WINDOW - Wiring diagram	GW-21	D
Throttle position sensor (TPS) ..	EC-195 , EC-285 , EC-433 , EC-435 , EC-497 , EC-753 , EC-867 , EC-1025 , EC-1027 , EC-1090	Window, door	GW-48 , GW-52	
Throttle valve closed position learning ..	EC-78 , EC-630	Windshield	GW-11	
Tie-rod	PS-13	WIPER - Wiring diagram	WW-8	E
Timing chain	EM-39 , EM-160	Wiper, front	WW-3	
TLID - Wiring diagram	BL-161	Wiring Diagram (Cell code) list	PG-59	
Torque converter installation	CVT-205 , CVT-208	Wiring diagrams	GI-15	F
Torque convertor clutch solenoid valve .	CVT-92 , CVT-97			G
TPS1 - Wiring diagram	EC-286 , EC-868			
TPS2 - Wiring diagram	EC-197 , EC-755			H
TPS3 - Wiring diagram	EC-499 , EC-1092			
Transmission case (M/T)	MT-19 , MT-68 , MT-144			I
Trouble diagnoses	GI-11			
Trunk lid opener, electric	BL-159			J
Trunk lid trim	EI-42			
Trunk room trim	EI-42			K
TURN - Wiring diagram	LT-52			
Turn signal lamp	LT-48			L
Two trip detection logic	EC-50 , EC-600			
V				
Vacuum hose (brake system)	BR-21			
Vacuum hose drawing (Engine control) ..	EC-102 , EC-654			
Valve clearance	EM-56 , EM-157			
Valve guide	EM-69 , EM-176 , EM-177			
Valve lifter	EM-52			
Valve seat	EM-71 , EM-178			
Valve spring	EM-72 , EM-179			
Vehicle recovery (freeing a stuck vehicle)	GI-42			
Vehicle security (theft warning) system	BL-170			
Vehicle speed sensor (VSS) ..	EC-400 , EC-458 , EC-988 , EC-1050			
VEHSEC - Wiring diagram	BL-174			
VENT/V - Wiring diagram ...	EC-349 , EC-356 , EC-935 , EC-942			
VIN registration	EC-77 , EC-629			
Viscosity number (SAE)	MA-16			
W				
WARN - Wiring diagram	DI-36			
Warning chime	DI-51			
Warning lamps	DI-35			