
ALPHABETICAL INDEX

A

A-BAG BRANCH LINE CIRCUIT .LAN-54, LAN-76,
LAN-90, LAN-105, LAN-125, LAN-146,
LAN-168, LAN-191
A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT SRC-126
A/C ASSEMBLY SWITCH..... HAC-189
A/C AUTO AMP..... HAC-34, HAC-105, HAC-141,
HAC-190
A/C AUTO AMP. CONNECTION RECOGNITION
SIGNAL CIRCUIT MWI-62, MWI-138
A/C ON SIGNAL..... HAC-86, HAC-169
A/C SWITCH ASSEMBLY HAC-104
A/C SWITCH ASSEMBLY SIGNAL CIRCUIT
HAC-85, HAC-168
ABBREVIATIONS GI-14
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)BRC-43, BRC-160, BRC-211,
BRC-350
ABS BRANCH LINE CIRCUITLAN-51, LAN-74,
LAN-87, LAN-102, LAN-122, LAN-143,
LAN-165, LAN-188
ABS WARNING LAMPBRC-143, BRC-328
ACCELERATOR CONTROL SYSTEM ACC-3
ACCELERATOR PEDAL RELEASED POSITION
LEARNING EC-142
ACTION TEST BRC-256, CCS-66, DAS-124
ADAS CONTROL UNITBRC-219, CCS-33, DAS-16,
DAS-67, DAS-94
ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL.....PWC-27
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT)BRC-65, BRC-239
ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNITDAS-33
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT SEC-61, SEC-178
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE OR TRANSAXLE
ASSEMBLY TM-148
ADDITIONAL SERVICE WHEN REPLACING ECM
EC-139
ADDITIONAL SERVICE WHEN REPLACING ICC
SENSOR..... BRC-240, CCS-56, DAS-123
ADDITIONAL SERVICE WHEN REPLACING
POWER WINDOW MAIN SWITCHPWC-28
ADDITIONAL SERVICE WHEN REPLACING TCM
TM-143
ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY..... TM-145
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITIONBRC-66, BRC-241

AIR BREATHER HOSE TM-27, TM-270
AIR CLEANER AND AIR DUCT EM-25
AIR CLEANER FILTER EM-18
AIR MIX DOOR MOTOR..... HAC-164
ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/
BACK DOOR DO NOT OPEN WITH REQUEST
SWITCHDLK-127
AMBIENT SENSOR HAC-106
AMBIENT SENSOR SIGNAL CIRCUIT MWI-60,
MWI-136
AMP ON SIGNAL CIRCUIT AV-299
ANTENNA AMP. ... AV-64, AV-124, AV-218, AV-330
ANTENNA FEEDERAV-61, AV-121, AV-215, AV-327
ANTI-PINCH INSPECTION..... PWC-30
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE) PWC-67
APPLICATION NOTICE MWI-5, MWI-78
ASCD INDICATOR EC-465
AUDIO SYSTEM AV-52, AV-111
AUDIO UNIT.....AV-20, AV-57
AUTO LIGHT SYSTEM EXL-49, EXL-180
AUTO OPERATION DOES NOT OPERATE. RF-30
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY (DRIVER
SIDE)..... PWC-66
AUTOMATIC AIR CONDITIONING SYSTEM
HAC-41
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-137
AUXILIARY INPUT JACK...AV-51, AV-196, AV-307
AV BRANCH LINE CIRCUITLAN-60, LAN-130,
LAN-151, LAN-174, LAN-197
AV CONTROL UNIT AV-81, AV-116, AV-141,
AV-210, AV-236, AV-321, AV-389

B

B TERMINAL CIRCUIT CHG-23, STR-26
B0001 DRIVER AIR BAG MODULE SRC-45
B0002 DRIVER AIR BAG MODULE SRC-49
B0010 PASSENGER AIR BAG MODULE .. SRC-53
B0011 PASSENGER AIR BAG MODULE .. SRC-56
B0020 SIDE AIRBAG MODULE LH SRC-59
B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-62
B0028 SIDE AIRBAG MODULE RH SRC-65
B0029 SIDE CURTAIN AIR BAG MODULE RH.....
SRC-68
B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH SRC-71
B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH..... SRC-74
B0093 FRONT DOOR SATELLITE SENSOR LH ...
SRC-77
B0094 CRASH ZONE SENSOR SRC-80

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	SRC-83	B2581, B2582 INTAKE SENSOR	HAC-66
B0097 REAR SIDE AIR BAG SATELLITE SENSOR RH	SRC-86	B2601 SHIFT POSITION	SEC-80
B0098 FRONT DOOR SATELLITE SENSOR RH... SRC-89		B2602 SHIFT POSITION	SEC-82
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT	SRC-92	B2603 SHIFT POSITION	SEC-85
B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR	SRC-99	B2604 SHIFT POSITION	SEC-90
B130D TCU	AV-365	B2605 SHIFT POSITION	SEC-93
B1310 TCU	AV-366	B2608 STARTER RELAY	SEC-95
B13D9 TCU	AV-367	B260F ENGINE STATUS	SEC-97
B13E1 TCU	AV-368	B2614 ACC RELAY CIRCUIT	PCS-86
B1428 SEAT BELT BUCKLE SWITCH LH	SRC-102	B2615 BLOWER RELAY CIRCUIT	PCS-88
B1429 SEAT BELT BUCKLE SWITCH RH	SRC-105	B2616 IGNITION RELAY CIRCUIT	PCS-90
B142A IGN VOLTAGE	SRC-116	B2618 BCM	PCS-92
B142X COLLISION DETECTION	SRC-118	B261A PUSH-BUTTON IGNITION SWITCH	PCS-94
B1430, B1432 SEAT BELT PRE-TENSIONER LH.. SRC-108		B261F ASCD CLUTCH SWITCH	SEC-98
B1431, B1433 SEAT BELT PRE-TENSIONER RH.. SRC-112		B2620 PARK/NEUTRAL POSITION SWITCH..... SEC-101	
B14XX AIR BAG DIAGNOSIS SENSOR UNIT	SRC-120	B2621 INSIDE ANTENNA	DLK-74
B2098 IGNITION RELAY ON STUCK	PCS-28, PCS-57	B2622 INSIDE ANTENNA	DLK-77
B2099 IGNITION RELAY OFF STUCK	PCS-29, PCS-58	B2623 INSIDE ANTENNA	DLK-80
B209F CRANKING REQUEST CIRCUIT	SEC-118	B2626 OUTSIDE ANTENNA	DLK-83
B20A0 CRANKING REQUEST CIRCUIT	SEC-120	B2627 OUTSIDE ANTENNA	DLK-86
B210B STARTER CONTROL RELAY	SEC-122	B2628 OUTSIDE ANTENNA	DLK-89
B210C STARTER CONTROL RELAY	SEC-123	B2630, B2631 SUNLOAD SENSOR	HAC-69
B210D STARTER RELAY	SEC-125	B26E8 CLUTCH INTERLOCK SWITCH...	SEC-104
B210E STARTER RELAY	SEC-127	B26F1 IGNITION RELAY	PCS-96
B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH	SEC-129	B26F2 IGNITION RELAY	PCS-98
B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH	SEC-131	B26F3 STARTER CONTROL RELAY	SEC-108
B2190, P1614 NATS ANTENNA AMP.	SEC-183	B26F4 STARTER CONTROL RELAY	SEC-109
B2191, P1615 DIFFERENCE OF KEY	SEC-186	B26F6 BCM	PCS-100
B2192 ID DISCORD, IMMU-ECM	SEC-66	B26F7 BCM	SEC-110
B2192, P1611 ID DISCORD, IMMU-ECM	SEC-187	B26F8 BCM	SEC-111
B2193 CHAIN OF ECM-IMMU	SEC-67	B26F9 CRANKING REQUEST CIRCUIT	SEC-112
B2193, P1612 CHAIN OF ECM-IMMU	SEC-189	B26FA CRANKING REQUEST CIRCUIT	SEC-114
B2195 ANTI-SCANNING	SEC-68, SEC-190	B26FB CLUTCH SWITCH	SEC-116
B2196 DONGLE UNIT	SEC-69, SEC-191	B26FC KEY REGISTRATION	SEC-117
B2198 NATS ANTENNA AMP.	SEC-71	B27A0, B27A1 INTAKE DOOR MOTOR	HAC-79
B2205 VEHICLE SPEED	MWI-48, MWI-123	B27A2, B27A3, B27A4, B27A5 AIR MIX DOOR MOTOR (DRIVER SIDE)	HAC-72
B2267 ENGINE SPEED	MWI-49, MWI-124	B27A6, B27A7, B27A8, B27A9 MODE DOOR MOTOR	HAC-77
B2268 WATER TEMP	MWI-50, MWI-125	B27AA, B27AB, B27AC, B27AD AIR MIX DOOR MOTOR (PASSENGER SIDE)	HAC-74
B2555 STOP LAMP	SEC-74	B2E33 TELEMATICS SWITCH	AV-369
B2556 PUSH-BUTTON IGNITION SWITCH	SEC-77	BACK-UP LAMP	EXL-83, EXL-213
B2557 VEHICLE SPEED	SEC-79	BASE AUDIO	AV-25
B2562 LOW VOLTAGE	BCS-70	BASIC INSPECTION	EC-135
B2578, B2579 IN-VEHICLE SENSOR	HAC-60	BATTERY	PG-65, PG-74
B257B, B257C AMBIENT SENSOR	HAC-63	BATTERY CURRENT SENSOR	PG-77
		BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT	INL-52
		BATTERY TERMINAL WITH FUSIBLE LINK	PG-76
		BCM	BCS-30, BCS-53, BCS-78, BCS-103, BCS-117, DLK-40, DLK-217, INL-16, WT-14
		BCM (BODY CONTROL MODULE)	BCS-135, MWI-28, MWI-102, PWC-15, RF-11

BCM BRANCH LINE CIRCUIT LAN-63, LAN-81,
LAN-95, LAN-112, LAN-132, LAN-154, LAN-176,
LAN-200

BCM, COMBINATION METER WCS-22

BCM, IPDM E/R DEF-19, EXL-34, EXL-166, PCS-71,
WW-23

BLIND SPOT WARNING INDICATOR DAS-158

BLOWER FAN ON SIGNAL HAC-88, HAC-173

BLOWER MOTOR HAC-90, HAC-175, VTL-10

BLOWER MOTOR RESISTOR HAC-195

BLUETOOTH CONTROL UNIT AV-67

BLUETOOTH® CONTROL SIGNAL CIRCUIT AV-45

BLUETOOTH® CONTROL UNIT AV-23

BLUETOOTH® VOICE SIGNAL CIRCUIT AV-43

BODY ALIGNMENT BRM-46

BODY COMPONENT PARTS BRM-12

BODY EXTERIOR PAINT COLOR BRM-2

BODY SEALING BRM-19

BODY SIDE TRIM INT-23

BOSE SPEAKER AMP AV-241, AV-332

BOTH DOORS MIRROR DEFOGGER DON'T
OPERATE BUT REAR WINDOW DEFOGGER
OPERATES DEF-43

BOTH SIDE FRONT FOG LAMPS ARE NOT
TURNED ON EXL-122, EXL-252

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
ON EXL-249

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
ON EXL-120, EXL-250

BOTH SIDE HEADLAMPS DO NOT SWITCH TO
HIGH BEAM EXL-118

BRAKE BOOSTER BR-11, BR-34

BRAKE CONTROL SYSTEM BRC-51, BRC-225

BRAKE FLUID BR-9, BR-16

BRAKE MASTER CYLINDER BR-10, BR-32

BRAKE PEDAL BR-8, BR-15, BR-23

BRAKE PEDAL POSITION SWITCH EC-462

BRAKE PEDAL VIBRATION OR OPERATION
SOUND OCCURS BRC-153, BRC-343

BRAKE PIPING BR-25

BRAKE WARNING LAMP BRC-144, BRC-329

C

C10B7 YAW RATE SENSOR CCS-101

C1101, C1102, C1103, C1104 WHEEL SENSOR...
BRC-72, BRC-257

C1105, C1106, C1107, C1108 WHEEL SENSOR...
BRC-77, BRC-262

C1109 POWER AND GROUND SYSTEM BRC-84,
BRC-269

C1110 ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) BRC-86

C1110, C1153 ABS ACTUATOR AND ELECTRIC
UNIT (CONTROL UNIT) BRC-271

C1111 ABS MOTOR, MOTOR RELAY SYSTEM
BRC-87, BRC-273

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
SENSOR BRC-90, BRC-276

C1115 WHEEL SENSOR BRC-92, BRC-278

C1116 STOP LAMP SWITCH BRC-99, BRC-285

C1120, C1122, C1124, C1126 ABS IN VALVE
SYSTEM BRC-105, BRC-291

C1121, C1123, C1125, C1127 ABS OUT VALVE
SYSTEM BRC-107, BRC-293

C1130 ENGINE SIGNAL BRC-109, BRC-295

C1140 ACTUATOR RELAY SYSTEM BRC-111,
BRC-297

C1142 PRESS SENSOR BRC-113, BRC-299

C1143 STEERING ANGLE SENSOR BRC-116,
BRC-302

C1144 INCOMPLETE STEERING ANGLE SENSOR
ADJUSTMENT BRC-120, BRC-306

C1154 TRANSMISSION RANGE SWITCH BRC-122,
BRC-308

C1155 BRAKE FLUID LEVEL SWITCH .. BRC-124,
BRC-310

C1160 INCOMPLETE DECEL G SENSOR
CALIBRATION BRC-128, BRC-314

C1164, C1165 CV SYSTEM BRC-130, BRC-316

C1166, C1167 SV SYSTEM BRC-132, BRC-318

C1170 VARIANT CODING BRC-134, BRC-320

C1601 BATTERY POWER SUPPLY STC-23

C1604 TORQUE SENSOR STC-26

C1606 EPS MOTOR STC-28

C1607, C1608 EPS CONTROL UNIT STC-29

C1609 VEHICLE SPEED SIGNAL STC-30

C1704, C1705, C1706, C1707 LOW TIRE
PRESSURE WT-25

C1708, C1709, C1710, C1711 TRANSMITTER (NO
DATA) WT-27

C1716, C1717, C1718, C1719 TRANSMITTER
(PRESSURE DATA) WT-30

C1729 VEHICLE SPEED SIGNAL WT-32

C1A00 CONTROL UNIT CCS-70, DAS-36

C1A01 POWER SUPPLY CIRCUIT 1, C1A02
POWER SUPPLY CIRCUIT 2 CCS-71, DAS-37

C1A03 VEHICLE SPEED SENSOR CCS-72,
DAS-38

C1A04 ABS/TCS/VDC SYSTEM CCS-74

C1A05 BRAKE SW/STOP LAMP SW CCS-75

C1A06 OPERATION SW CCS-79

C1A07 CVT CCS-111

C1A0C ADAS MESSAGE COUNTER FAILURE
CCS-114

C1A0D MRR CAN FAILURE CCS-115

C1A12 LASER BEAM OFF CENTER CCS-82

C1A13 STOP LAMP RELAY DAS-40

C1A14 ECM CCS-83, DAS-45

C1A15 GEAR POSITION CCS-85

C1A16 RADAR BLOCKED OR STAINED .. CCS-87

C1A17 ICC SENSOR CCS-89, DAS-47

C1A18 RADAR AIMING INCMP CCS-90

C1A21 UNIT HIGH TEMP CCS-91
 C1A24 NP RANGE CCS-92
 C1A26 ECD MODE MALFUNCTION CCS-94
 C1A27 ECD POWER SUPPLY CIRCUIT ... CCS-96
 C1A34 COMMAND ERROR..... DAS-48
 C1A39 STEERING ANGLE SENSOR..... CCS-98
 C1A50 ADAS CONTROL UNIT CCS-100
 C1B50 SIDE RADAR MALFUNCTION..... DAS-126
 C1B51 BLIND SPOT WARNING INDICATOR
 SHORT CIRCUIT DAS-127
 C1B52 BLIND SPOT WARNING INDICATOR OPEN
 CIRCUIT DAS-129
 C1B53 SIDE RADAR RIGHT MALFUNCTION
 DAS-49
 C1B54 SIDE RADAR LEFT MALFUNCTIONDAS-50
 C1B55 RADAR BLOCKAGE DAS-131
 C1B5D FEB OPE COUNT LIMIT CCS-99
 CALIBRATION OF DECEL G SENSOR.... BRC-68,
 BRC-243
 CALIBRATION OF G SENSOR TM-151
 CAMSHAFT EM-60
 CAMSHAFT VALVE CLEARANCE..... EM-20
 CAN COMMUNICATION CIRCUITLAN-67, LAN-82,
 LAN-96, LAN-114, LAN-135, LAN-157, LAN-180,
 LAN-204
 CAN SYSTEMLAN-35
 CENTER CONSOLE ASSEMBLYIP-17, IP-23
 CHARGING SYSTEM CHG-7, CHG-9, CHG-28
 CHARGING SYSTEM PRELIMINARY INSPECTION
 CHG-20
 CHASSIS AND BODY MAINTENANCE MA-24
 CHIME DOES NOT SOUND ... CCS-123, DAS-149
 CLUSTER LID A IP-19
 CLUSTER LID C IP-20
 CLUTCH DISC AND CLUTCH COVER CL-17
 CLUTCH FLUID CL-7
 CLUTCH MASTER CYLINDER..... CL-12
 CLUTCH PEDAL CL-5, CL-10
 CLUTCH PIPING CL-14
 COIL SPRING RSU-11
 COLLISION DIAGNOSISSR-5
 COMBINATION METERMWI-21, MWI-74, MWI-95,
 MWI-150
 COMBINATION METER BUZZER.....DLK-93
 COMBINATION SWITCHBCS-80, BCS-137,
 EXL-137, EXL-267
 COMBINATION SWITCH INPUT CIRCUITBCS-72,
 BCS-129
 COMBINATION SWITCH OUTPUT CIRCUIT
 BCS-74, BCS-131
 COMBINATION SWITCH SYSTEM SYMPTOMS ...
 BCS-76, BCS-133
 COMPRESSION PRESSURE EM-23
 COMPRESSOR.....HA-30
 COMPRESSOR DOES NOT OPERATE .HAC-102,
 HAC-187

CONDENSER..... DEF-49, HA-39
 CONFIGURATION (ADAS CONTROL UNIT)DAS-34
 CONFIGURATION [ABS ACTUATOR AND
 ELECTRIC UNIT (CONTROL UNIT)]..BRC-70,
 BRC-245
 CONTROL CABLE TM-259
 CONTROL LINKAGE..... TM-22
 COOLER PIPE AND HOSE..... HA-35
 COOLING FAN CO-17, EC-479
 CORROSION PROTECTION BRM-16
 COWL TOP..... EXT-25
 CRASH ZONE SENSOR..... SR-27
 CSC (CONCENTRIC SLAVE CYLINDER) CL-16
 CVT CONTROL SYSTEM TM-129, TM-248
 CVT FLUID TM-253
 CVT FLUID FILTER TM-288
 CVT OIL WARMER..... TM-287
 CVT POSITION TM-154
 CVT SHIFT LOCK SYSTEM..... TM-137
 CVT SHIFT SELECTOR..... TM-256
 CYLINDER BLOCK EM-94
 CYLINDER HEAD..... EM-72

D

DAYTIME LIGHT SYSTEM INOPERATIVEEXL-119
 DAYTIME RUNNING LIGHT RELAY CIRCUIT.....
 EXL-99, EXL-226
 DAYTIME RUNNING LIGHT SYSTEMEXL-41,
 EXL-173
 DEFOGGER SYSTEM SYMPTOMS DEF-40
 DIAGNOSIS AND REPAIR WORK FLOW .AV-359,
 BRC-62, BRC-236, CCS-54, DAS-120, DEF-27,
 DLK-69, DLK-238, DMS-13, DMS-33, DMS-50,
 DMS-70, EXL-88, EXL-218, PCS-80, SEC-58,
 SEC-175, SRC-38, TM-140, WT-21
 DIAGNOSIS SENSOR UNITSR-30, SRC-19
 DIAGNOSIS SYSTEM (A/C AUTO AMP.) ..HAC-24
 DIAGNOSIS SYSTEM (ADAS CONTROL UNIT)....
 CCS-24, DAS-11, DAS-83
 DIAGNOSIS SYSTEM (AIR BAG)SRC-15
 DIAGNOSIS SYSTEM (AUDIO UNIT).....AV-16
 DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-76,
 AV-139, AV-234
 DIAGNOSIS SYSTEM (BCM)..... BCS-16, BCS-92,
 DLK-35, DLK-214, EXL-157, HAC-28, PCS-67,
 RF-9, SEC-19, SEC-150
 DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT
 KEY SYSTEM) DEF-7, EXL-20, HAC-129,
 INL-10, PWC-11, WCS-18, WT-10, WW-11
 DIAGNOSIS SYSTEM (BCM) (WITHOUT
 INTELLIGENT KEY SYSTEM) DEF-9, EXL-23,
 HAC-131, INL-13, PWC-13, WCS-20, WT-12,
 WW-13
 DIAGNOSIS SYSTEM (BLUETOOTH® CONTROL
 UNIT)AV-19

DIAGNOSIS SYSTEM (COMBINATION METER) ..
[MWI-17](#), [MWI-90](#), [WCS-9](#)
 DIAGNOSIS SYSTEM (ECM) [EC-56](#)
 DIAGNOSIS SYSTEM (EPS CONTROL UNIT).....
[STC-10](#)
 DIAGNOSIS SYSTEM (ICC SENSOR)... [BRC-207](#),
[CCS-29](#), [DAS-88](#)
 DIAGNOSIS SYSTEM (IPDM E/R) [EXL-162](#),
[HAC-30](#), [PCS-9](#), [PCS-38](#), [SEC-152](#)
 DIAGNOSIS SYSTEM (IPDM E/R) (WITH
 INTELLIGENT KEY SYSTEM)[DEF-11](#), [EXL-26](#),
[HAC-133](#), [WW-15](#)
 DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT
 INTELLIGENT KEY SYSTEM)[DEF-15](#), [EXL-30](#),
[HAC-137](#), [WW-19](#)
 DIAGNOSIS SYSTEM (SIDE RADAR LH) .[DAS-92](#)
 DIAGNOSIS SYSTEM (SIDE RADAR RH) .[DAS-93](#)
 DIAGNOSIS SYSTEM (TCM) [TM-107](#)
 DIAGNOSIS SYSTEM (TCU)..... [AV-347](#)
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND
 ELECTRIC UNIT (CONTROL UNIT)] . [BRC-38](#),
[BRC-202](#)
 DIFFERENTIAL SIDE OIL SEAL [TM-279](#)
 DISPLAY AUDIO WITHOUT BOSE [AV-84](#)
 DLC BRANCH LINE CIRCUIT [LAN-55](#), [LAN-77](#),
[LAN-91](#), [LAN-106](#), [LAN-126](#), [LAN-147](#),
[LAN-169](#), [LAN-192](#)
 DOES NOT OPERATE[BRC-152](#), [BRC-342](#)
 DOES NOT STOP FULLY-OPEN OR FULLY-
 CLOSED POSITION [RF-32](#)
 DOOR DOES NOT LOCK/UNLOCK AND ENGINE
 DOES NOT START (ALL I-KEY/REQ SW/PUSH
 SW) [DLK-131](#)
 DOOR DOES NOT LOCK/UNLOCK AND ENGINE
 DOES NOT START (ONE I-KEY/REQ SW/
 PUSH SW) [DLK-139](#)
 DOOR DOES NOT LOCK/UNLOCK AND ENGINE
 DOES NOT START (REQ SW/PUSH SW) (ALL
 KEYS) [DLK-129](#)
 DOOR DOES NOT LOCK/UNLOCK AND ENGINE
 DOES NOT START (REQ SW/PUSH SW) (ONE
 KEY).....[SEC-138](#)
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 REQUEST SWITCH AND INTELLIGENT KEY
[DLK-135](#)
 DOOR DOES NOT LOCK/UNLOCK WITH
 INTELLIGENT KEY [DLK-134](#)
 DOOR DOES NOT LOCK/UNLOCK WITH
 INTELLIGENT KEY (ONE KEY) [DLK-138](#)
 DOOR HANDLE [DLK-168](#), [DLK-313](#)
 DOOR LOCK.....[DLK-174](#), [DLK-319](#)
 DOOR LOCK ACTUATOR[DLK-94](#), [DLK-256](#)
 DOOR LOCK AND UNLOCK SWITCH..... [DLK-99](#),
[DLK-249](#)
 DOOR MIRROR.....[MIR-4](#), [MIR-19](#)

DOOR MIRROR REMOTE CONTROL SWITCH....
[MIR-22](#)
 DOOR MIRROR REMOTE CONTROL SWITCH
 (MIRROR SWITCH/CHANGEVER SWITCH)
[MIR-10](#)
 DOOR MIRROR TURN SIGNAL LAMP ... [EXL-131](#),
[EXL-261](#)
 DOOR MOTOR [HAC-111](#), [HAC-193](#)
 DOOR MOTOR STARTING POSITION RESET
[HAC-57](#)
 DOOR OUTSIDE MOLDING [EXT-40](#)
 DOOR PARTING SEAL [EXT-43](#)
 DOOR REQUEST SWITCH[DLK-106](#), [DLK-191](#)
 DOOR SASH TAPE..... [EXT-35](#)
 DOOR SWITCH [DLK-108](#), [DLK-188](#), [DLK-246](#),
[DLK-333](#), [PWC-53](#), [RF-27](#)
 DRIP MOLDING [EXT-34](#)
 DRIVE BELT [EM-15](#)
 DRIVE PLATE [EM-92](#)
 DRIVER AIR BAG MODULE [SR-12](#)
 DRIVER ASSISTANCE SYSTEM SYMPTOMS
[BRC-334](#), [DAS-147](#)
 DRIVER ASSISTANCE SYSTEMS [DAS-22](#),
[DAS-109](#)
 DRIVER SIDE DOOR MIRROR DEFOGGER
[DEF-35](#)
 DRIVER SIDE DOOR MIRROR DEFOGGER DOES
 NOT OPERATE.....[DEF-44](#)
 DRIVER SIDE POWER WINDOW DOES NOT
 OPERATE [PWC-59](#)
 DRIVING FORCE IS HUNTING [CCS-125](#)
 DUCTS AND GRILLES [VTL-6](#)

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE ...
[WT-43](#)
 ECM BRANCH LINE CIRCUIT.....[LAN-50](#), [LAN-73](#),
[LAN-86](#), [LAN-101](#), [LAN-121](#), [LAN-142](#),
[LAN-164](#), [LAN-187](#)
 ECM, IPDM E/R, BCM[HAC-40](#), [HAC-144](#), [SEC-24](#),
[SEC-156](#)
 ECO MODE.....[DMS-20](#), [DMS-27](#)
 ECV (ELECTRICAL CONTROL VALVE)... [HAC-95](#),
[HAC-180](#)
 ELECTRIC OIL PUMP [TM-290](#)
 ELECTRICAL LOAD SIGNAL [EC-477](#)
 ELECTRICAL UNITS LOCATION [PG-5](#)
 ENCODER [PWC-50](#)
 ENGINE ASSEMBLY [EM-82](#)
 ENGINE CAN NOT START [SEC-134](#)
 ENGINE CONTROL SYSTEM[EC-108](#), [EC-489](#)
 ENGINE COOLANT [CO-11](#)
 ENGINE DOES NOT START WHEN INTELLIGENT
 KEY IS INSIDE OF VEHICLE [SEC-135](#)

ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE (ONE KEY)
[SEC-137](#)

ENGINE MAINTENANCE..... [MA-14](#)

ENGINE OIL [LU-7](#)

ENGINE ROOM COVER..... [EM-24](#)

EPS BRANCH LINE CIRCUIT..... [LAN-56](#), [LAN-78](#),
[LAN-92](#), [LAN-107](#), [LAN-127](#), [LAN-148](#),
[LAN-170](#), [LAN-193](#)

EPS CONTROL UNIT [STC-12](#), [STC-40](#)

EPS WARNING LAMP [STC-32](#)

EPS WARNING LAMP DOES NOT TURN OFF
[STC-34](#)

EPS WARNING LAMP DOES NOT TURN ON
[STC-33](#)

EVAP CANISTER [FL-16](#)

EVAP LEAK CHECK.....[EC-498](#)

EVAPORATIVE EMISSION SYSTEM[EC-497](#)

EXCESSIVE OPERATION FREQUENCY [BRC-148](#),
[BRC-338](#)

EXHAUST MANIFOLD [EM-30](#)

EXHAUST SYSTEM.....[EX-4](#), [EX-5](#)

EXTERIOR LIGHTING SYSTEM SYMPTOMS
[EXL-115](#), [EXL-245](#)

F

FENDER PROTECTOR[EXT-27](#)

FILAMENT [DEF-47](#)

FINAL DRIVE [TM-62](#)

FLOOR TRIM [INT-35](#)

FLYWHEEL..... [EM-90](#)

FORWARD EMERGENCY BRAKING [BRC-333](#)

FREQUENTLY CANNOT DETECT THE VEHICLE
AHEAD / DETECTION ZONE IS SHORT
[CCS-126](#), [DAS-150](#)

FRONT BUMPER.....[EXT-16](#)

FRONT COIL SPRING AND STRUT [FSU-8](#), [FSU-19](#)

FRONT COMBINATION LAMP [EXL-127](#), [EXL-140](#),
[EXL-257](#), [EXL-270](#)

FRONT DISC BRAKE [BR-12](#), [BR-18](#), [BR-38](#), [BR-49](#)

FRONT DOOR [DLK-157](#), [DLK-302](#)

FRONT DOOR FINISHER.....[INT-15](#)

FRONT DOOR GLASS [GW-14](#)

FRONT DOOR SPEAKER ..[AV-39](#), [AV-58](#), [AV-100](#),
[AV-118](#), [AV-183](#), [AV-212](#), [AV-287](#), [AV-323](#)

FRONT DRIVE SHAFT [FAX-7](#), [FAX-18](#), [FAX-30](#)

FRONT DRIVE SHAFT BOOT [FAX-12](#)

FRONT FENDER [DLK-154](#), [DLK-299](#)

FRONT FOG LAMP [EXL-56](#), [EXL-125](#), [EXL-129](#),
[EXL-187](#), [EXL-255](#), [EXL-259](#)

FRONT FOG LAMP CIRCUIT ... [EXL-102](#), [EXL-235](#)

FRONT GRILLE [EXT-23](#)

FRONT PASSENGER AIR BAG MODULE ... [SR-21](#)

FRONT PASSENGER SIDE POWER WINDOW
DOES NOT OPERATE..... [PWC-60](#)

FRONT POWER WINDOW MOTOR..... [GW-19](#)

FRONT REGULATOR [GW-16](#)

FRONT SEAT [SE-28](#), [SE-40](#)

FRONT SEAT BELT.....[SB-8](#)

FRONT SEAT BELT BUCKLE SWITCH [SR-38](#)

FRONT STABILIZER [FSU-12](#)

FRONT SUSPENSION ASSEMBLY [FSU-5](#)

FRONT SUSPENSION MEMBER [FSU-16](#)

FRONT TWEETER.....[AV-102](#), [AV-117](#), [AV-185](#),
[AV-211](#), [AV-290](#), [AV-322](#)

FRONT WHEEL HUB [FAX-8](#)

FRONT WHEEL HUB AND KNUCKLE [FAX-6](#)

FRONT WIPER AND WASHER SYSTEM.....[WW-6](#)

FRONT WIPER ARM.....[WW-59](#)

FRONT WIPER AUTO STOP SIGNAL CIRCUIT
[WW-42](#)

FRONT WIPER DOES NOT OPERATE [WW-50](#)

FRONT WIPER DRIVE ASSEMBLY [WW-64](#)

FRONT WIPER MOTOR GROUND CIRCUIT
[WW-43](#)

FRONT WIPER MOTOR HI CIRCUIT [WW-40](#)

FRONT WIPER MOTOR LO CIRCUIT [WW-38](#)

FUEL FILLER LID OPENER..... [DLK-184](#), [DLK-329](#)

FUEL INJECTOR..... [EC-466](#)

FUEL INJECTOR AND FUEL TUBE [EM-40](#)

FUEL LEVEL SENSOR SIGNAL CIRCUIT [MWI-56](#),
[MWI-132](#)

FUEL LEVEL SENSOR UNIT [FL-19](#)

FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
FUEL PUMP ASSEMBLY [FL-6](#)

FUEL PRESSURE [EC-147](#)

FUEL PUMP [EC-469](#)

FUEL SYSTEM..... [FL-5](#)

FUEL TANK [FL-11](#)

FUSE BLOCK - JUNCTION BOX (J/B) [PG-62](#)

FUSE INSPECTION [PG-69](#)

FUSE, FUSIBLE LINK AND RELAY BOX [PG-63](#)

FUSIBLE LINK INSPECTION..... [PG-73](#)

G

G SENSOR..... [TM-271](#)

GENERAL MAINTENANCE [MA-6](#)

GENERATOR [CHG-29](#)

GLASS LID [RF-40](#)

GLOVE BOX ASSEMBLY [IP-22](#)

GPS ANTENNA [AV-222](#), [AV-335](#), [AV-392](#)

GROUND [PG-35](#)

H

HANDLING PRECAUTION..... [BRC-201](#), [CCS-21](#),
[DAS-81](#)

HANDLING PRECAUTIONS FOR PLASTICS
[BRM-7](#)

HARNESS [PG-44](#)

HAZARD FUNCTION [DLK-111](#), [DLK-276](#)

HAZARD SWITCH ... [EXL-113](#), [EXL-138](#), [EXL-243](#),
[EXL-268](#)
HEADLAMP [EXL-35](#), [EXL-123](#), [EXL-167](#)
HEADLAMP (HI) CIRCUIT [EXL-95](#), [EXL-222](#)
HEADLAMP (LO) CIRCUIT [EXL-97](#), [EXL-224](#)
HEADLAMP AIMING ADJUSTMENT [EXL-253](#)
HEADLINING [INT-38](#)
HEATED SEAT [SE-15](#)
HEATER AND AIR CONDITIONING SYSTEM
CONTROL SYMPTOMS [HAC-97](#), [HAC-182](#)
HEATER AND AIR CONDITIONING SYSTEM
SYMPTOMS [HA-17](#)
HEATING AND COOLING UNIT ASSEMBLY [HA-42](#)
HIGH-MOUNTED STOP LAMP [EXL-132](#), [EXL-262](#)
HOMELINK UNIVERSAL TRANSCEIVER . [DLK-67](#)
HOOD [DLK-144](#), [DLK-289](#)
HORN [HRN-3](#), [HRN-6](#)
HORN FUNCTION [DLK-266](#)
HOW TO ERASE PERMANENT DTC [EC-155](#),
[TM-155](#)
HOW TO FOLLOW TROUBLE DIAGNOSES .. [GI-6](#)
HOW TO READ WIRING DIAGRAMS [GI-9](#)
HOW TO SELECT PISTON AND BEARING [EM-112](#)
HOW TO SET SRT CODE [EC-149](#)
HOW TO USE THIS MANUAL [GI-3](#)
HOW TO USE THIS SECTION [LAN-6](#), [LAN-22](#)
HVAC BRANCH LINE CIRCUIT [LAN-61](#), [LAN-152](#),
[LAN-198](#)

I

ICC BRANCH LINE CIRCUIT [LAN-57](#), [LAN-108](#),
[LAN-128](#), [LAN-149](#), [LAN-171](#), [LAN-194](#)
ICC SENSOR [CCS-39](#), [CCS-133](#), [DAS-99](#), [DAS-154](#)
ICC SENSOR ALIGNMENT [BRC-249](#), [CCS-59](#)
ICC SENSOR INITIAL VERTICAL ALIGNMENT
[BRC-247](#), [CCS-57](#)
ICC STEERING SWITCH [CCS-135](#), [DAS-155](#)
ICC STEERING SWITCH (OTHER THAN MAIN
SWITCH) DOES NOT FUNCTION [CCS-121](#)
ICC SYSTEM CANNOT BE SET (MAIN SWITCH
TURNS ON/OFF) [CCS-119](#)
ICC SYSTEM DOES NOT CANCEL WHEN CVT
SELECTOR LEVER SETS ON
ID REGISTRATION CANNOT BE COMPLETED
[WT-44](#)
ID REGISTRATION PROCEDURE [WT-22](#)
IDENTIFICATION INFORMATION [GI-23](#)
IDLE AIR VOLUME LEARNING [EC-144](#)
IDLE SPEED [EC-495](#)
IGNITION COIL [EM-45](#)
IGNITION SIGNAL [EC-472](#)
IGNITION TIMING [EC-496](#)
ILLUMINATION [INL-27](#)
ILLUMINATION CONTROL SWITCH [INL-65](#),
[MWI-77](#), [MWI-153](#)

ILLUMINATION CONTROL SWITCH SIGNAL
CIRCUIT [MWI-54](#), [MWI-130](#)
IN-CABIN MICROFILTER [VTL-4](#), [VTL-5](#)
IN-VEHICLE SENSOR [HAC-107](#)
INPUT SHAFT AND GEAR [TM-47](#)
INSIDE KEY ANTENNA [DLK-189](#)
INSIDE MIRROR [MIR-7](#), [MIR-17](#)
INSTRUMENT LOWER PANEL LH [IP-21](#)
INSTRUMENT PANEL ASSEMBLY [IP-14](#)
INSUFFICIENT COOLING [HAC-99](#), [HAC-183](#)
INSUFFICIENT HEATING [HAC-101](#), [HAC-185](#)
INTAKE DOOR MOTOR [HAC-166](#)
INTAKE MANIFOLD [EM-27](#)
INTAKE SENSOR ... [HAC-109](#), [HAC-171](#), [HAC-191](#)
INTELLIGENT CRUISE CONTROL [CCS-45](#)
INTELLIGENT CRUISE CONTROL SYSTEM
SYMPTOMS [CCS-116](#)
INTELLIGENT KEY [DLK-114](#)
INTELLIGENT KEY BATTERY [DLK-194](#)
INTELLIGENT KEY BUTTON OPERATION HAS
POOR RANGE (ALL KEYS) [DLK-136](#)
INTELLIGENT KEY BUTTON OPERATION HAS
POOR RANGE (ONE KEY) [DLK-143](#)
INTELLIGENT KEY SYSTEM [DLK-49](#)
INTELLIGENT KEY SYSTEM ALL FUNCTIONS
CANNOT OPERATE (ALL KEYS) [DLK-132](#)
INTELLIGENT KEY SYSTEM ALL FUNCTIONS
CANNOT OPERATE (ONE KEY) [DLK-141](#)
INTELLIGENT KEY SYSTEM SYMPTOMS
[DLK-126](#), [SEC-133](#)
INTELLIGENT KEY SYSTEM/ENGINE START
FUNCTION [SEC-25](#)
INTELLIGENT KEY WARNING BUZZER [DLK-112](#),
[DLK-192](#)
INTERIOR LIGHTING SYSTEM SYMPTOMS [INL-60](#)
INTERIOR ROOM LAMP [INL-63](#)
INTERIOR ROOM LAMP CONTROL CIRCUIT
[INL-54](#)
INTERIOR ROOM LAMP CONTROL SYSTEM
[INL-17](#)
INTERMITTENT INCIDENT [SRC-42](#)
IPDM E/R [PCS-31](#), [PCS-60](#)
IPDM E/R (INTELLIGENT POWER DISTRIBUTION
MODULE ENGINE ROOM) ... [PCS-13](#), [PCS-21](#),
[PCS-42](#), [PCS-50](#), [PG-64](#)
IPDM-E BRANCH LINE CIRCUIT [LAN-52](#), [LAN-75](#),
[LAN-88](#), [LAN-103](#), [LAN-123](#), [LAN-144](#),
[LAN-166](#), [LAN-189](#)
ITS COMMUNICATION CIRCUIT [LAN-69](#), [LAN-116](#),
[LAN-137](#), [LAN-159](#), [LAN-182](#), [LAN-206](#)

K

KEY CYLINDER SWITCH [DLK-104](#), [DLK-253](#)
KEY INTERLOCK CABLE [TM-263](#)
KEY SWITCH (BCM INPUT) [DLK-255](#)
KEY WARNING LAMP [DLK-115](#)

KEYFOB BATTERY	DLK-335
KEYFOB BATTERY AND FUNCTION.....	DLK-264
KEYFOB ID REGISTRATION.....	DLK-241
KEYFOB ID SET UP WITH CONSULT	DLK-277
KEYFOB ID SET UP WITHOUT CONSULT	DLK-278

L

L TERMINAL CIRCUIT (OPEN)	CHG-24
L TERMINAL CIRCUIT (SHORT).....	CHG-26
LASER BRANCH LINE CIRCUIT	LAN-66, LAN-113, LAN-179, LAN-203
LATCH SYSTEM FOR CHILDREN	SB-14
LED HEADLAMP	EXL-228
LED HEADLAMP OPERATION INSPECTION	EXL-221
LICENSE LAMP FINISHER.....	EXT-44
LICENSE PLATE LAMP	EXL-133, EXL-263
LICENSE PLATE LAMP CIRCUIT	EXL-233
LIFTING POINT	GI-33
LINE PRESSURE TEST.....	TM-153
LOW TIRE PRESSURE WARNING LAMP .	WT-33, WT-37
LOW TIRE PRESSURE WARNING LAMP BLINKS	WT-42
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF.....	WT-41
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON	WT-40
LUMBAR SUPPORT SYSTEM.....	SE-12

M

M&A BRANCH LINE CIRCUIT	LAN-62, LAN-80, LAN-94, LAN-111, LAN-131, LAN-153, LAN-175, LAN-199
M/T OIL.....	TM-19
MAGNET CLUTCH.....	HAC-94, HAC-179
MAIN LINE BETWEEN DLC AND M&A CIRCUIT...	LAN-48, LAN-72, LAN-85, LAN-99, LAN-119, LAN-140, LAN-162, LAN-185
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	LAN-47, LAN-71, LAN-84, LAN-98, LAN-118, LAN-139, LAN-161, LAN-184
MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT	LAN-49, LAN-100, LAN-120, LAN-141, LAN-163, LAN-186
MAIN POWER SUPPLY AND GROUND CIRCUIT .	TM-238
MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH	PWC-69
MAIN SWITCH DOES NOT TURN ON, MAIN SWITCH DOES NOT TURN OFF	CCS-117
MAINSHAFT AND GEAR	TM-53
MALFUNCTION AREA CHART.....	LAN-45
MALFUNCTION INDICATOR LAMP	EC-483
MANUAL AIR CONDITIONING SYSTEM	HAC-145

MANUAL HEATER SYSTEM.....	HAC-153
MAP LAMP	INL-61
METER BUZZER CIRCUIT	WCS-35
METER SYSTEM	MWI-29, MWI-103
MICROPHONE	AV-68, AV-128, AV-223, AV-336, AV-394
MICROPHONE SIGNAL CIRCUIT .	AV-46, AV-106, AV-191, AV-302
MIXTURE RATIO SELF-LEARNING VALUE CLEAR	EC-146
MODE DOOR MOTOR.....	HAC-162
MOONROOF DOES NOT OPERATE ANTI-PINCH FUNCTION	RF-31
MOONROOF DOES NOT OPERATE PROPERLY .	RF-29
MOONROOF MOTOR ASSEMBLY ...	RF-12, RF-42
MOONROOF SWITCH	RF-25, RF-51
MOONROOF SYSTEM	RF-13
MOONROOF UNIT ASSEMBLY	RF-44, RF-52
MULTI AV SYSTEM	AV-197, AV-308

N

NATS ANTENNA AMP.	SEC-140, SEC-197
NAVIGATION WITH BOSE	AV-244
NAVIGATION WITHOUT BOSE	AV-145
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS	SEC-39
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS	SEC-196
NOISE.....	HA-20
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	BR-7, CL-4, EM-10, FAX-5, FSU-4, RAX-4, RSU-4, ST-9, TM-18, WT-45
NORMAL OPERATING CONDITION	AV-55, AV-114, AV-201, AV-312, AV-388, BCS-77, BCS-134, BRC-155, BRC-345, CCS-130, DAS-153, EC-494, EXL-117, EXL-248, WW-52
NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM- NATS).....	SEC-157

O

OCCUPANT CLASSIFICATION SYSTEM....	SR-32
OD OFF INDICATOR LAMP	TM-243
OIL	HA-25
OIL COOLER.....	LU-12
OIL FILTER.....	LU-10
OIL PAN	EM-33
OIL PAN, CONTROL VALVE	TM-272
OIL PUMP.....	LU-15
OIL SEAL.....	EM-69
ON BOARD DIAGNOSTIC (OBD) SYSTEM	EC-55, TM-106
ON BOARD REFUELING VAPOR RECOVERY (ORVR).....	EC-484

OPERATION ..[BRC-199](#), [CCS-17](#), [DAS-80](#), [EC-54](#),
[HAC-21](#), [HAC-127](#)
 OPERATION INSPECTION[HAC-53](#), [HAC-158](#)
 OPTICAL SENSOR...[EXL-111](#), [EXL-139](#), [EXL-240](#),
[EXL-269](#)
 OUTPUT SPEED SENSOR [TM-278](#)
 OUTSIDE KEY ANTENNA.....[DLK-190](#)
 OVERDRIVE CONTROL SWITCH [TM-240](#)
 OVERHEATING CAUSE ANALYSIS.....[CO-9](#)

P

[P0011](#) IVT CONTROL [EC-174](#)
[P0014](#) EVT CONTROL [EC-177](#)
[P0030](#), [P0031](#), [P0032](#) A/F SENSOR 1 HEATER....
[EC-180](#)
[P0037](#), [P0038](#) HO2S2 HEATER [EC-182](#)
[P0075](#) IVT CONTROL SOLENOID VALVE. [EC-184](#)
[P0078](#) EVT CONTROL SOLENOID VALVE [EC-187](#)
[P0101](#), [P0102](#), [P0103](#) MAF SENSOR [EC-190](#)
[P0111](#) IAT SENSOR..... [EC-195](#)
[P0112](#), [P0113](#) IAT SENSOR [EC-197](#)
[P0116](#) ECT SENSOR..... [EC-199](#)
[P0117](#), [P0118](#) ECT SENSOR..... [EC-201](#)
[P0122](#), [P0123](#) TP SENSOR..... [EC-203](#)
[P0125](#) ECT SENSOR [EC-206](#)
[P0127](#) IAT SENSOR [EC-208](#)
[P0128](#) THERMOSTAT FUNCTION [EC-210](#)
[P0130](#) A/F SENSOR 1 [EC-213](#)
[P0131](#) A/F SENSOR 1 [EC-217](#)
[P0132](#) A/F SENSOR 1 [EC-220](#)
[P0137](#) HO2S2 [EC-223](#)
[P0138](#) HO2S2 [EC-228](#)
[P0139](#) HO2S2 [EC-235](#)
[P014C](#), [P014D](#), [P015A](#), [P015B](#) A/F SENSOR 1.....
[EC-241](#)
[P0171](#) FUEL INJECTION SYSTEM FUNCTION
[EC-248](#)
[P0172](#) FUEL INJECTION SYSTEM FUNCTION
[EC-252](#)
[P0181](#) FTT SENSOR [EC-256](#)
[P0182](#), [P0183](#) FTT SENSOR..... [EC-260](#)
[P0196](#) EOT SENSOR [EC-263](#)
[P0197](#), [P0198](#) EOT SENSOR..... [EC-266](#)
[P0222](#), [P0223](#) TP SENSOR..... [EC-268](#)
[P0300](#), [P0301](#), [P0302](#), [P0303](#), [P0304](#) MISFIRE.....
[EC-271](#)
[P0327](#), [P0328](#) KS..... [EC-277](#)
[P0335](#) CKP SENSOR (POS) [EC-279](#)
[P0340](#) CMP SENSOR (PHASE) [EC-282](#)
[P0420](#) THREE WAY CATALYST FUNCTION [EC-285](#)
[P0441](#) EVAP CONTROL SYSTEM [EC-290](#)
[P0443](#) EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE [EC-295](#)
[P0444](#), [P0445](#) EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE [EC-300](#)

[P0447](#) EVAP CANISTER VENT CONTROL VALVE
[EC-303](#)
[P0448](#) EVAP CANISTER VENT CONTROL VALVE
[EC-307](#)
[P0451](#) EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-311](#)
[P0452](#) EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-315](#)
[P0453](#) EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-318](#)
[P0456](#) EVAP CONTROL SYSTEM [EC-322](#)
[P0460](#) FUEL LEVEL SENSOR [EC-328](#)
[P0461](#) FUEL LEVEL SENSOR [EC-329](#)
[P0462](#), [P0463](#) FUEL LEVEL SENSOR [EC-331](#)
[P0500](#) VSS [EC-332](#)
[P0506](#) ISC SYSTEM [EC-336](#)
[P0507](#) ISC SYSTEM [EC-338](#)
[P050A](#), [P050B](#), [P050E](#) COLD START CONTROL..
[EC-340](#)
[P0520](#) EOP SENSOR [EC-342](#)
[P0524](#) ENGINE OIL PRESSURE..... [EC-345](#)
[P0603](#) ECM [EC-348](#)
[P0604](#) ECM [EC-349](#)
[P0605](#) ECM [EC-350](#)
[P0606](#) ECM [EC-351](#)
[P0607](#) ECM [EC-352](#)
[P060A](#) ECM..... [EC-353](#)
[P060B](#) ECM..... [EC-354](#)
[P062F](#) EEPROM [TM-164](#)
[P0643](#) SENSOR POWER SUPPLY [EC-355](#)
[P0705](#) TRANSMISSION RANGE SENSOR A
[TM-165](#)
[P0706](#) TRANSMISSION RANGE SENSOR A
[TM-171](#)
[P0711](#) TRANSMISSION FLUID TEMPERATURE
 SENSOR A..... [TM-174](#)
[P0712](#) TRANSMISSION FLUID TEMPERATURE
 SENSOR A..... [TM-178](#)
[P0713](#) TRANSMISSION FLUID TEMPERATURE
 SENSOR A..... [TM-180](#)
[P0715](#) INPUT SPEED SENSOR A [TM-182](#)
[P0720](#) OUTPUT SPEED SENSOR..... [TM-185](#)
[P0740](#) TORQUE CONVERTER [TM-188](#)
[P0743](#) TORQUE CONVERTER [TM-190](#)
[P0744](#) TORQUE CONVERTER [TM-192](#)
[P0746](#) PRESSURE CONTROL SOLENOID A.....
[TM-194](#)
[P0846](#) TRANSMISSION FLUID PRESSURE SEN/
 SW B [TM-196](#)
[P0847](#) TRANSMISSION FLUID PRESSURE SEN/
 SW B [TM-198](#)
[P0848](#) TRANSMISSION FLUID PRESSURE SEN/
 SW B [TM-200](#)
[P0850](#) PNP SWITCH [EC-357](#)
[P0863](#) TCM COMMUNICATION [TM-202](#)
[P0890](#) TCM [TM-203](#)

P0962 PRESSURE CONTROL SOLENOID A.....	P2119 ELECTRIC THROTTLE CONTROL
TM-205	ACTUATOR..... EC-439
P0963 PRESSURE CONTROL SOLENOID A.....	P2122, P2123 APP SENSOR..... EC-441
TM-207	P2127, P2128 APP SENSOR..... EC-444
P0965 PRESSURE CONTROL SOLENOID B.....	P2135 TP SENSOR..... EC-447
TM-209	P2138 APP SENSOR..... EC-450
P0966 PRESSURE CONTROL SOLENOID B.....	P219A AIR FUEL RATIO..... EC-453
TM-210	P2610 ECM INTERNAL TIMER..... EC-458
P0967 PRESSURE CONTROL SOLENOID B.....	P2765 INPUT SPEED SENSOR B..... TM-227
TM-212	P2857 CLUTCH A PRESSURE..... TM-230
P0998 SHIFT SOLENOID F..... TM-214	P2858 CLUTCH B PRESSURE..... TM-232
P0999 SHIFT SOLENOID F..... TM-216	P2859 CLUTCH A PRESSURE..... TM-234
P099B SHIFT SOLENOID G..... TM-218	P285A CLUTCH B PRESSURE..... TM-236
P099C SHIFT SOLENOID G..... TM-220	PARKING BRAKE CONTROL..... PB-7
P1078 EVT CONTROL POSITION SENSOREC-361	PARKING BRAKE SHOE..... PB-6 , PB-9
P1148 CLOSED LOOP CONTROL..... EC-364	PARKING BRAKE SWITCH... BRC-139 , BRC-324
P1212 TCS COMMUNICATION LINE..... EC-365	PARKING BRAKE SWITCH SIGNAL CIRCUIT.....
P1217 ENGINE OVER TEMPERATURE... EC-366	MWI-58 , MWI-134
P1225 TP SENSOR..... EC-369	PARKING BRAKE SYSTEM..... PB-4
P1226 TP SENSOR..... EC-370	PARKING LAMP CIRCUIT..... EXL-104 , EXL-229
P1550 BATTERY CURRENT SENSOR..... EC-371	PARKING, LICENSE PLATE AND TAIL LAMPS.....
P1551, P1552 BATTERY CURRENT SENSOR.....	EXL-71 , EXL-202
EC-374	PARKING, LICENSE PLATE AND TAIL LAMPS ARE
P1553 BATTERY CURRENT SENSOR..... EC-377	NOT TURNED ON..... EXL-121 , EXL-251
P1554 BATTERY CURRENT SENSOR..... EC-380	PASSENGER AIR BAG INDICATOR..... SR-39
P1556, P1557 BATTERY TEMPERATURE	PASSENGER SIDE DOOR MIRROR DEFOGGER
SENSOR..... EC-383	DEF-37
P1564 ASCD STEERING SWITCH..... EC-385	PASSENGER SIDE DOOR MIRROR DEFOGGER
P1564 ICC STEERING SWITCH..... EC-388	DOES NOT OPERATE..... DEF-45
P1568 ICC FUNCTION..... EC-391	PERFORMANCE TEST..... HA-28
P1572 ASCD BRAKE SWITCH..... EC-392	PERIODIC MAINTENANCE..... MA-8
P1572 ICC BRAKE SWITCH..... EC-398	PLUG..... TM-285
P1574 ASCD VEHICLE SPEED SENSOR EC-404	POSITION SWITCH..... TM-17 , TM-21
P1574 ICC VEHICLE SPEED SENSOR..... EC-406	POSITIVE CRANKCASE VENTILATION... EC-500
P1586 G SENSOR..... TM-222	POWER DISTRIBUTION SYSTEM..... PCS-72
P1588 G SENSOR..... TM-225	POWER DOOR LOCK SYSTEM DLK-41 , DLK-226
P1610 LOCK MODE..... SEC-63 , SEC-182	POWER DOOR LOCK SYSTEM SYMPTOMS.....
P1611 ID DISCORD, IMMU-ECM..... SEC-64	DLK-280
P1612 CHAIN OF ECM-IMMU..... SEC-65	POWER GENERATION VOLTAGE VARIABLE
P1650 STARTER MOTOR RELAY 2..... EC-408	CONTROL SYSTEM..... CHG-8
P1651 STARTER MOTOR RELAY..... EC-411	POWER GENERATION VOLTAGE VARIABLE
P1652 STARTER MOTOR SYSTEM COMMEC-413	CONTROL SYSTEM OPERATION
P1715 INPUT SPEED SENSOR..... EC-415	INSPECTION..... CHG-21
P1800 INTAKE MANIFOLD TUNING VALVEEC-417	POWER SEAT FOR DRIVER SIDE..... SE-8
P1805 BRAKE SWITCH..... EC-419	POWER SOCKET..... PWO-3 , PWO-5
P2004 INTAKE MANIFOLD RUNNER CONTROL	POWER STEERING CONTROL SYSTEM STC-15
VALVE..... EC-422	POWER SUPPLY ROUTING CIRCUIT..... PG-15
P2014, P2016, P2017, P2018 INTAKE MANIFOLD	POWER TRANSISTOR..... HAC-113
RUNNER CONTROL VALVE POSITION	POWER WINDOW AND DOOR LOCK/UNLOCK
SENSOR..... EC-425	SWITCH RH..... PWC-70
P2096, P2097 A/F SENSOR 1..... EC-428	POWER WINDOW LOCK SWITCH..... PWC-57
P2100, P2103 THROTTLE CONTROL MOTOR	POWER WINDOW LOCK SWITCH DOES NOT
RELAY..... EC-432	FUNCTION..... PWC-68
P2101 ELECTRIC THROTTLE CONTROL	POWER WINDOW MAIN SWITCH..... PWC-16
FUNCTION..... EC-434	POWER WINDOW MOTOR..... PWC-43
P2118 THROTTLE CONTROL MOTOR..... EC-437	POWER WINDOW SYSTEM..... PWC-18

POWER WINDOWS DO NOT OPERATE WITH
POWER WINDOW MAIN SWITCHPWC-58

PRECAUTIONS ACC-2, AV-9, AV-69, AV-130,
AV-225, AV-338, BCS-5, BCS-81, BR-3, BRC-7,
BRC-164, BRM-3, CCS-4, CCS-136, CHG-3,
CL-2, CO-2, DAS-5, DAS-68, DEF-3, DLK-8,
DLK-196, DMS-3, DMS-22, DMS-40, DMS-59,
EC-9, EM-3, EX-2, EXL-6, EXL-145, EXT-3,
FAX-2, FL-2, FSU-2, GI-28, GW-2, HA-3,
HAC-5, HAC-114, HRN-2, INL-3, INT-3, IP-2,
LAN-7, LAN-23, LU-2, MA-3, MIR-2, MWI-6,
MWI-79, PB-2, PCS-4, PCS-33, PCS-62, PG-3,
PWC-4, PWO-2, RAX-2, RF-3, RSU-2, SB-2,
SE-2, SEC-5, SEC-142, SR-2, SRC-4, ST-2,
STC-3, STR-3, TM-7, TM-66, VTL-2, WCS-3,
WT-3, WW-3

PRECAUTIONS IN REPAIRING HIGH STRENGTH
STEEL BRM-4

PRIMARY SPEED SENSOR TM-276

PROCEDURE FOR TEMPORARILY DISABLING
THE IGNITION BATTERY SAVER SYSTEM....
PCS-83

PUSH-BUTTON IGNITION SWITCHPCS-102,
PCS-108, SEC-141

PUSH-BUTTON IGNITION SWITCH DOES NOT
OPERATEPCS-107

PUSH-BUTTON IGNITION SWITCH
ILLUMINATION CIRCUIT INL-58

R

RADIATORCO-15

RADIATOR CORE SUPPORT ..DLK-152, DLK-297

RDR-L BRANCH LINE CIRCUIT LAN-64, LAN-133,
LAN-155, LAN-177, LAN-201

RDR-R BRANCH LINE CIRCUIT LAN-65, LAN-134,
LAN-156, LAN-178, LAN-202

REAR AIR SPOILER EXT-46

REAR BUMPER EXT-20

REAR COMBINATION LAMP .. EXL-134, EXL-142,
EXL-264, EXL-272

REAR DISC BRAKE BR-14, BR-21, BR-45, BR-52

REAR DOORDLK-163, DLK-308

REAR DOOR FINISHER INT-19

REAR DOOR GLASS GW-20

REAR DOOR SPEAKERAV-293, AV-324

REAR DRUM BRAKE BR-13, BR-20, BR-42, BR-51

REAR LH SIDE POWER WINDOW DOES NOT
OPERATEPWC-62

REAR PARCEL SHELF FINISHER INT-32

REAR POWER WINDOW MOTOR GW-23

REAR POWER WINDOW SWITCHPWC-71

REAR REGULATOR GW-21

REAR RH SIDE POWER WINDOW DOES NOT
OPERATEPWC-64

REAR SEAT SE-35, SE-61

REAR SEAT BELT SB-11

REAR SHOCK ABSORBER RSU-8

REAR SPEAKER .. AV-41, AV-59, AV-104, AV-119,
AV-187, AV-213

REAR SUSPENSION ASSEMBLY RSU-5

REAR SUSPENSION BEAM RSU-13

REAR VIEW CAMERAAV-129, AV-224, AV-337

REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT .
AV-189, AV-300

REAR WHEEL HUB RAX-5, RAX-6

REAR WINDOW DEFOGGER AND DOOR
MIRROR DEFOGGERS DO NOT OPERATE...
DEF-41

REAR WINDOW DEFOGGER DOES NOT
OPERATE BUT BOTH DOOR MIRROR
DEFOGGERS OPERATEDEF-42

REAR WINDOW DEFOGGER FEEDBACK SIGNAL
DEF-39

REAR WINDOW DEFOGGER POWER SUPPLY
AND GROUND CIRCUITDEF-33

REAR WINDOW DEFOGGER RELAYDEF-32

REAR WINDOW DEFOGGER SWITCHDEF-30

REAR WINDOW DEFOGGER SWITCH DOES NOT
LIGHT, BUT REAR WINDOW DEFOGGER
OPERATESDEF-46

REAR WINDOW DEFOGGER SYSTEMDEF-20

REAR WINDOW GLASS GW-26

REAR WOOFERAV-296, AV-325

RECOMMENDED CHEMICAL PRODUCTS AND
SEALANTS GI-22

RECOMMENDED FLUIDS AND LUBRICANTS
MA-12

REFRIGERANT HA-21

REFRIGERANT PRESSURE SENSOREC-481,
HAC-110, HAC-192

REFRIGERATION SYSTEM HA-13

REFRIGERATION SYSTEM SYMPTOMSHA-18

REMOTE KEYLESS ENTRY RECEIVER DLK-116,
DLK-193, DLK-261, DLK-334

REMOTE KEYLESS ENTRY SYSTEMDLK-218

REMOTE KEYLESS ENTRY SYSTEM SYMPTOMS
DLK-281

REPAIRING MATERIAL BRM-10

REPLACEMENT OPERATIONS BRM-22

RETAINED POWER OPERATION DOES NOT
OPERATE PROPERLY RF-33

REVERSE IDLER SHAFT AND GEAR TM-59

RIGHT/LEFT SWITCHING SIGNAL CIRCUIT
DAS-145

ROAD WHEEL WT-46

ROAD WHEEL TIRE ASSEMBLY WT-47

ROCKER COVER EM-46

ROOF SIDE MOLDING EXT-32

S

S CONNECTOR CIRCUITSTR-28

S TERMINAL CIRCUIT CHG-27

SATELLITE RADIO ANTENNA [AV-127](#), [AV-221](#),
[AV-334](#)
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
[WCS-36](#)
SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG
INDCTR IS ON OR OFF [SRC-127](#)
SEAT BELT PRE-TENSIONER [SR-37](#)
SEAT BELT WARNING SYSTEM..... [SRC-125](#)
SECONDARY SPEED SENSOR..... [TM-277](#)
SENSOR POWER SUPPLY 2 CIRCUIT [EC-460](#)
SENSOR ROTOR..... [BRC-159](#), [BRC-349](#)
SERVICE DATA AND SPECIFICATIONS (SDS).....
[ACC-5](#), [BR-54](#), [CHG-31](#), [CL-20](#), [CO-27](#), [EC-502](#),
[EM-118](#), [EXL-144](#), [EXL-274](#), [FAX-49](#), [FL-21](#),
[FSU-23](#), [HA-46](#), [INL-66](#), [LU-17](#), [PB-13](#), [PG-78](#),
[PWO-6](#), [RAX-9](#), [RSU-15](#), [ST-20](#), [STR-32](#),
[TM-65](#), [TM-297](#), [WT-55](#), [WW-66](#)
SERVICE INFORMATION FOR ELECTRICAL
INCIDENT [GI-37](#)
SHIFT LOCK SYSTEM..... [TM-245](#)
SHIFT P WARNING LAMP..... [DLK-118](#)
SHIFT POSITION INDICATOR CIRCUIT ... [TM-244](#)
SHIPPING MODE CANCEL OPERATION [BCS-65](#),
[BCS-124](#)
SIDE AIR BAG (SATELLITE) SENSOR [SR-28](#)
SIDE AIR BAG MODULE [SR-26](#)
SIDE CURTAIN AIR BAG MODULE..... [SR-24](#)
SIDE OIL SEAL [TM-20](#)
SIDE RADAR..... [DAS-157](#)
SIDE RADAR LH [DAS-105](#)
SIDE RADAR RH [DAS-107](#)
SIDE WINDOW GLASS [GW-24](#)
SPARK PLUG..... [EM-12](#)
SPIRAL CABLE [SR-18](#)
SPORT MODE..... [DMS-57](#), [DMS-64](#)
SPORT MODE SWITCH [DMS-53](#), [DMS-58](#),
[DMS-71](#), [DMS-76](#)
SPORT MODE SYSTEM..... [DMS-45](#), [DMS-65](#)
SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
[DLK-283](#), [EXT-10](#), [GW-5](#), [INT-9](#), [IP-8](#), [MIR-11](#),
[RF-34](#), [SE-22](#)
SRS AIR BAG SYSTEM..... [SRC-26](#)
SRS AIR BAG WARNING LAMP DOES NOT TURN
OFF [SRC-123](#)
SRS AIR BAG WARNING LAMP DOES NOT TURN
ON [SRC-124](#)
STALL TEST..... [TM-152](#)
STARTER MOTOR..... [STR-30](#)
STARTING SYSTEM [STR-29](#)
STARTING SYSTEM (WITH INTELLIGENT KEY)..
[STR-10](#)
STARTING SYSTEM (WITHOUT INTELLIGENT
KEY) [STR-15](#)
STEERING ANGLE SENSOR. [BRC-163](#), [BRC-353](#)
STEERING COLUMN..... [ST-7](#), [ST-13](#)
STEERING COLUMN COVERS [IP-16](#)

STEERING GEAR AND LINKAGE [ST-8](#), [ST-16](#),
[ST-18](#)
STEERING KNUCKLE [FSU-14](#)
STEERING LOCK UNIT [DLK-337](#)
STEERING SWITCH [AV-48](#), [AV-60](#), [AV-108](#), [AV-120](#),
[AV-193](#), [AV-214](#), [AV-304](#), [AV-326](#), [MWI-76](#),
[MWI-128](#), [MWI-152](#)
STEERING SWITCH SIGNAL CIRCUIT [MWI-53](#)
STEERING WHEEL..... [ST-5](#), [ST-10](#)
STEERING WHEEL TURNING FORCE IS HEAVY
OR LIGHT [STC-35](#)
STOP LAMP [EXL-79](#), [EXL-209](#)
STRG BRANCH LINE CIRCUIT .. [LAN-58](#), [LAN-79](#),
[LAN-93](#), [LAN-109](#), [LAN-129](#), [LAN-150](#),
[LAN-172](#), [LAN-195](#)
STRUCTURE AND OPERATION [EC-30](#), [TM-15](#),
[TM-85](#)
SUNLOAD SENSOR [HAC-108](#)
SUNSHADE [RF-48](#)
SYSTEM (INTEGRATED HOMELINK
TRANSMITTER)..... [DLK-34](#)
SYSTEM (INTELLIGENT KEY SYSTEM) .. [DLK-23](#)
SYSTEM INITIALIZATION [PWC-29](#)
SYSTEM SETTING [HAC-55](#)
SYSTEM SETTINGS CANNOT BE TURNED ON/
OFF ON THE INTEGRAL SWITCH... [BRC-335](#),
[DAS-148](#)

T

TAIL LAMP CIRCUIT [EXL-231](#)
TCM [TM-115](#), [TM-266](#)
TCM BRANCH LINE CIRCUIT [LAN-53](#), [LAN-89](#),
[LAN-104](#), [LAN-124](#), [LAN-145](#), [LAN-167](#),
[LAN-190](#)
TCU [AV-349](#), [AV-390](#)
TCU BRANCH LINE CIRCUIT... [LAN-59](#), [LAN-110](#),
[LAN-173](#), [LAN-196](#)
TEL ANTENNA [AV-393](#)
TELEMATICS SWITCH [AV-391](#)
TELEMATICS SYSTEM... [AV-344](#), [AV-354](#), [AV-387](#)
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-72](#), [MWI-148](#)
THE BRAKING DISTANCE IS LONG [BRC-151](#),
[BRC-341](#)
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY.....
[MWI-70](#), [MWI-146](#)
THE ECO MODE INDICATOR LAMP DOES NOT
TURN ON [DMS-38](#)
THE FUEL GAUGE INDICATOR DOES NOT
OPERATE..... [MWI-65](#), [MWI-141](#)
THE ILLUMINATION CONTROL SWITCH IS
INOPERATIVE..... [MWI-67](#), [MWI-143](#)
THE KEY WARNING DOES NOT SOUND
(WITHOUT INTELLIGENT KEY) [WCS-44](#)

THE LIGHT REMINDER WARNING DOES NOT SOUNDWCS-43

THE LOW WASHER FLUID WARNING LAMP DOES NOT TURN ON OR OFFMWI-73, MWI-149

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFFMWI-69, MWI-145

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ONMWI-68, MWI-144

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAYMWI-71, MWI-147

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUNDWCS-41

THE SEAT BELT REMINDER WARNING CONTINUES SOUNDING, OR DOES NOT SOUNDWCS-42

THE SPORT MODE INDICATOR LAMP DOES NOT TURN ONDMS-75

THE STEERING SWITCHES ARE INOPERATIVE MWI-66, MWI-142

THE SYSTEM DOES NOT DETECT THE VEHICLE AHEAD AT ALLCCS-128, DAS-152

THERMOSTAT AND THERMOSTAT HOUSING CO-21

THROTTLE VALVE CLOSED POSITION LEARNINGEC-143

TIGHTENING TORQUE OF STANDARD BOLTS... GI-19

TIMING CHAINEM-48

TIRE PRESSURE MONITORING SYSTEM WT-15

TIRE PRESSURE RECEIVERWT-54

TOP TETHER STRAP CHILD RESTRAINT . SB-15

TORQUE CONVERTER AND CONVERTER HOUSING OIL SEALTM-295

TOW TRUCK TOWINGGI-35

TPMS SYMPTOMSWT-36

TRANSAXLE ASSEMBLYTM-28, TM-30

TRANSIT MODE CANCEL OPERATION ..BCS-66, BCS-125

TRANSMISSION ASSEMBLYTM-292

TRANSMISSION RANGE SWITCHTM-267

TRANSMITTERWT-50

TRANSVERSE LINKFSU-10

TROUBLE DIAGNOSISLAN-10

TROUBLE DIAGNOSIS - SPECIFICATION VALUE EC-161

TRUNK LAMP SWITCHDLK-123, DLK-272

TRUNK LIDDLK-178, DLK-323

TRUNK LID OPENERDLK-63, DLK-234

TRUNK LID OPENER ACTUATORDLK-119, DLK-268

TRUNK LID OPENER SWITCHDLK-121, DLK-195, DLK-270, DLK-336

TRUNK LID TRIMINT-45

TRUNK ROOM LAMPINL-64

TRUNK ROOM LAMP CIRCUITINL-56

TRUNK ROOM TRIMINT-42

TURN SIGNAL AND HAZARD WARNING LAMPS EXL-62, EXL-193

TURN SIGNAL LAMP CIRCUIT EXL-107, EXL-237

U

U0073 COMMUNICATION BUS A OFFTM-156

U0100 LOST COMMUNICATION (ECM A).TM-157

U0101 CAN COMM CIRCUITEC-172

U0104 ADAS CAN 1DAS-133

U0121 VDC CAN 2CCS-102, DAS-51

U0126 STRG SEN CAN 1CCS-104

U0140 LOST COMMUNICATION (BCM)TM-158

U0141 LOST COMMUNICATION (BCM A).TM-159

U0155 LOST COMMUNICATION (IPC)TM-160

U0235 ICC SENSOR CAN 1DAS-52

U0300 CAN COMMUNICATION DATATM-161

U0401 ECM CAN 1CCS-105, DAS-53

U0402 TCM CAN 1DAS-54

U0405 ADAS CAN 2DAS-135

U0415 VDC CAN 1CCS-106, DAS-55

U0415 VEHICLE SPEEDBCS-69

U0428 STRG SEN CAN 2CCS-107

U0433 DIST SEN CAN CIRC 2DAS-56

U1000 CAN COMM..BCS-126, DLK-243, SEC-180

U1000 CAN COMM CIRCUITAV-165, AV-267, AV-370, BCS-67, BRC-136, BRC-322, CCS-108, DAS-57, DAS-137, DLK-72, HAC-58, MWI-46, MWI-121, PCS-27, PCS-56, PCS-84, SRC-43, STC-31, TM-162

U1001 CAN COMM CIRCUITEC-173

U1010 CONTROL UNIT (CAN).....AV-166, AV-268, AV-371, BCS-68, BCS-127, CCS-109, DAS-140, DLK-73, DLK-244, HAC-59, MWI-47, MWI-122, PCS-85, SEC-181, SRC-44

U1117 LOST COMMUNICATION (ABS)TM-163

U1217 AV CONTROL UNITAV-167, AV-269

U1229 AV CONTROL UNITAV-168, AV-270

U122F AV CONTROL UNITAV-169, AV-271

U1244 GPS ANTENNAAV-170, AV-272

U1258 SATELLITE RADIO ANTENNAAV-171, AV-273

U1263 USBAV-172, AV-274

U1264 ANTENNA AMP.AV-173, AV-275

U1265 BOSE AMP.AV-276

U12AA CONFIGURATION ERRORAV-174, AV-277

U12AC AV CONTROL UNITAV-175, AV-278

U12AD AV CONTROL UNITAV-176, AV-279

U12AE AV CONTROL UNITAV-177, AV-280

U12AF AV CONTROL UNITAV-178, AV-281

U12B0 POWER SUPPLY VOLTAGEAV-179, AV-282

U12B1 POWER SUPPLY VOLTAGEAV-180, AV-283

U1310 AV CONTROL UNITAV-181, AV-284

U1321 CONFIGURATIONDAS-59

U1503 SIDE RDR L CAN 2	DAS-60
U1504 SIDE RDR L CAN 1	DAS-61
U1505 SIDE RDR R CAN 2	DAS-62
U1506 SIDE RDR R CAN 1	DAS-63
U1507 LOST COMM(SIDE RDR R)	DAS-64
U1508 LOST COMM(SIDE RDR L)	DAS-65
U153A CVT MESSAGE COUNTER FAILURE	
CCS-112	
U153B CVT CHECK SUM FAILURE	CCS-113
U1A00 TCU	AV-372
U1A01 TCU	AV-373
U1A03 TCU	AV-374
U1A04 TCU	AV-375
U1A06 TEL ANTENNA	AV-376
U1A09 GPS ANTENNA	AV-377
U1A0A TCU	AV-380
U1A0B MICROPHONE	AV-381
U1A0C MICROPHONE	AV-383
U1A0E TELEMATICS SWITCH	AV-385
U1A10 TCU	AV-378
U1A11 TCU	AV-379
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-38
UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT	STC-37
UNDER COVER	EXT-30
UNEXPECTED BRAKE PEDAL REACTION	
BRC-150, BRC-340	
UNLOCK SENSOR	DLK-102
USB CONNECTOR	AV-50, AV-110, AV-195, AV-306
USB CONNECTOR AND AUX JACK	AV-65, AV-126, AV-219, AV-331

V

VACUUM LINES	BR-36
VANITY MIRROR LAMP	INL-62
VDC OFF INDICATOR LAMP	BRC-147, BRC-332
VDC OFF SWITCH	BRC-141, BRC-162, BRC-326, BRC-352
VDC WARNING LAMP	BRC-146, BRC-331
VEHICLE JERKS DURING	BRC-154, BRC-344
VEHICLE SECURITY INDICATOR	SEC-194
VEHICLE SECURITY SYSTEM	SEC-48, SEC-165
VIN REGISTRATION	EC-141

W

WARNING BUZZER	DAS-156
WARNING BUZZER CIRCUIT	DAS-146
WARNING CHIME FUNCTION	DLK-275
WARNING CHIME SYSTEM	WCS-23
WARNING CHIME SYSTEM SYMPTOMS	WCS-40
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-63, MWI-139
WASHER LEVEL SWITCH	WW-55

WASHER MOTOR CIRCUIT	WW-44
WASHER NOZZLE & TUBE	WW-56
WASHER PUMP	WW-54
WASHER SWITCH	WW-46
WASHER TANK	WW-53
WATER HOSE	TM-282
WATER OUTLET	CO-24
WATER PUMP	CO-19
WHEEL ALIGNMENT	FSU-6, RSU-6
WHEEL SENSOR	BRC-156, BRC-346
WIND DEFLECTOR	RF-50
WINDOW ANTENNA	AV-66, AV-125, AV-220, AV-333
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-37
WIPER AND WASHER SWITCH	WW-65
WIPER AND WASHER SYSTEM	WW-24
WIPER AND WASHER SYSTEM SYMPTOMS	WW-47
WIPER BLADE	WW-60