

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [MTC-22](#)
A/C component layout [MTC-17](#)
A/C compressor mounting [MTC-84](#)
A/C compressor precaution [MTC-8](#)
A/C compressor special service tool [MTC-12](#)
A/C control operation (manual A/C) [MTC-21](#)
A/C controller [MTC-61](#)
A/C evaporator [MTC-90](#)
A/C HFC134a (R134a) system precaution [MTC-4](#)
A/C HFC134a (R134a) system service procedure [MTC-80](#)
A/C HFC134a (R134a) system service tools .. [MTC-12](#)
A/C HFC134a system service equipment precaution ... [MTC-9](#)
A/C lubricant (R134a) [MTC-5](#), [MTC-18](#)
A/C lubrication oil [MTC-96](#)
A/C operational check [MTC-33](#)
A/C service data specification [MTC-96](#)
A/C trouble diagnoses (manual A/C) [MTC-24](#)
A/C unit assembly [MTC-64](#)
A/C, M - Wiring diagram [MTC-29](#)
A/F - Wiring diagram ... [EC-223](#), [EC-229](#), [EC-235](#), [EC-242](#), [EC-542](#)
A/FH - Wiring diagram [EC-162](#)
A/T fluid checking [AT-16](#), [MA-22](#)
A/T fluid replacement [AT-17](#), [MA-23](#)
A/T fluid temperature sensor [AT-106](#)
A/T IND - Wiring diagram [DI-38](#)
A/T indicator [DI-37](#)
A/T shift control system [AT-229](#)
A/T shift lock system [AT-235](#)
A/T shift lock system - Wiring diagram [AT-236](#)
A/T trouble diagnoses [AT-43](#)
ABS - Wiring diagram [BRC-13](#)
ABS (anti-lock brake system) [BRC-5](#)
ABS sensor rotor [RAX-4](#)
Accelerator pedal position (APP) sensor . [EC-513](#), [EC-519](#), [EC-532](#)
Accelerator pedal released position learning [EC-77](#)
Air bag [SRS-3](#)
Air bleeding (hydraulic clutch) [CL-8](#)
Air cleaner filter replacement [MA-16](#)
Air conditioner cut control [EC-27](#)
Air fuel ratio sensor 1 .. [EC-220](#), [EC-227](#), [EC-233](#), [EC-239](#), [EC-540](#)
Air fuel ratio sensor 1 heater [EC-161](#)
Air mix door control linkage adjustment [MTC-70](#)
Angular tightening application [EM-4](#)
Anti-lock brake system - See ABS [BRC-5](#)
Anti-lock brake system - Wiring diagram [BRC-13](#)
APPS1 - Wiring diagram [EC-515](#)
APPS2 - Wiring diagram [EC-521](#)
APPS3 - Wiring diagram [EC-534](#)
ASC/BS - Wiring diagram [EC-475](#)
ASC/SW - Wiring diagram [EC-468](#)
ASCBOF - Wiring diagram [EC-550](#)
ASCD [EC-28](#)

ASCD brake switch [EC-473](#), [EC-549](#)
ASCD clutch switch [EC-473](#), [EC-549](#)
ASCD steering switch [EC-466](#)
ASCIND - Wiring diagram [EC-560](#)
AUDIO - Wiring diagram [AV-9](#)
Auto anti-dazzling inside mirror [GW-67](#)
Axle [MA-26](#)

B

BA/FTS - Wiring diagram [AT-171](#)
BACK/L - Wiring diagram [LT-73](#)
Back-up lamp [LT-73](#), [LT-87](#)
Back-up lamp switch (M/T) [MT-11](#)
Basic inspection [EC-70](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-18](#), [SC-26](#)
Baulk ring (M/T) [MT-18](#)
BCM (Body control module) [BCS-3](#)
Blower motor [MTC-37](#), [MTC-68](#)
Blower resistor [MTC-72](#)
Body alignment [BL-244](#)
Body component parts [BL-232](#)
Body construction [BL-243](#)
Body exterior paint color [BL-231](#)
Body repair [BL-231](#)
Body sealing [BL-240](#)
Brake booster [BR-19](#)
Brake fluid level [MA-24](#)
Brake inspection [MA-25](#)
Brake lines and cables inspection [MA-24](#)
Brake pedal [BR-6](#)
Brake switch [EC-488](#)
BRK/SW - Wiring diagram [EC-489](#)
Bulb specifications [LT-116](#)
Bumper, front [EI-14](#)

C

Cabin air filter [MA-20](#)
Camshaft [EM-47](#)
Camshaft inspection [EM-49](#)
Camshaft position sensor (PHASE) [EC-327](#)
CAN - Wiring diagram [EC-152](#), [AT-95](#), [CVT-69](#)
CAN communication [EC-30](#), [EC-151](#), [EC-154](#), [AT-31](#), [AT-94](#), [CVT-25](#), [CVT-68](#)
CAN communication (EPS) [STC-6](#)
CHARGE - Wiring diagram [SC-25](#)
Charging system [SC-24](#)
Chassis and body maintenance [MA-8](#), [MA-20](#)
CHIME - Wiring diagram [DI-50](#)
Circuit breaker [PG-16](#)
Closed loop control [EC-24](#), [EC-442](#)
Clutch cover [CL-13](#)
Clutch disc [CL-13](#)
Clutch master cylinder [CL-9](#)
Clutch pedal [CL-5](#)
Coil spring (rear) [RSU-11](#)

ALPHABETICAL INDEX

Collision diagnosis [SRS-54](#)
Combination lamp, rear, removal and installation [LT-87](#)
Combination meter [DI-5](#)
Combination meter removal and installation - See Instrument panel [IP-11](#)
COMBSW - Wiring diagram [LT-67](#)
Component Location (manual A/C) [MTC-25](#)
Compression pressure [EM-62](#)
Compressor mounting [MTC-84](#)
Compressor special service tool [MTC-12](#)
Condenser [MTC-88](#)
Connecting rod [EM-97](#)
Connecting rod bearing clearance [EM-101](#)
Connecting rod bushing clearance [EM-97](#)
CONSULT for ABS [BRC-20](#)
CONSULT general information [GI-37](#)
CONSULT-II for engine [EC-113](#)
CONSULT-II function (EPS) [STC-13](#)
CONSULT-II Reference value (CVT) [CVT-57](#)
Control lever (M/T) [MT-12](#)
Control units (terminal arrangement) [PG-72](#)
Control valve (CVT) [CVT-29](#)
Converter housing installation [AT-254](#), [AT-369](#)
COOL/F - Wiring diagram [EC-448](#)
Coolant mixture ratio [MA-12](#)
Cooling circuit (engine) [CO-7](#)
Cooling fan [CO-15](#)
Cooling fan motor [EC-443](#)
Corrosion protection [BL-237](#)
Coupling sleeve (M/T) [MT-18](#)
Crankcase ventilation system - See Positive crankcase ventilation [EC-44](#)
Crankshaft [EM-77](#)
Crankshaft position sensor (POS) [EC-319](#)
Crash zone sensor [SRS-49](#)
CVT air breather hose [CVT-205](#)
CVT control system [CVT-22](#)
CVT cross-sectional view [CVT-21](#)
CVT Electrical parts location [CVT-40](#)
CVT fluid checking [CVT-16](#), [CVT-43](#), [MA-20](#)
CVT fluid cooler cleaning [CVT-18](#)
CVT fluid replacement [CVT-17](#), [MA-21](#)
CVT fluid temperature sensor [CVT-85](#)
CVT hydraulic control system [CVT-23](#)
CVT indicator [DI-42](#)
CVT self-diagnoses [CVT-60](#), [CVT-67](#)
CVT shift lock system [CVT-197](#)
CVT trouble diagnoses [CVT-34](#)
CVTIND - Wiring diagram [DI-43](#)
Cylinder block [EM-77](#)
Cylinder head [EM-62](#)
Cylinder head bolt tightening [EM-65](#)

D

D/LOCK - Wiring diagram [BL-26](#), [BL-31](#)
Data link connector [EC-115](#), [EC-127](#), [EC-592](#)
DEF - Wiring diagram [GW-52](#)
Diagnosis sensor unit [SRS-52](#)

Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-48](#)
Diagnostic trouble code (DTC) inspection priority chart [EC-89](#), [CVT-34](#)
Differential gear (FF M/T) [MT-22](#)
Differential side oil seal [CVT-206](#)
DLC - Wiring diagram [EC-592](#)
Door glass [GW-43](#), [GW-47](#)
Door glass Fitting Adjustment(Front) [GW-46](#)
Door glass Fitting Adjustment(Rear) [GW-49](#)
Door mirror [GW-65](#)
Door trim [EI-27](#)
Door, front [GW-43](#)
Door, rear [GW-47](#)
Drive shaft [MA-27](#)
Driver air bag [SRS-41](#)
Dropping resistor (A/T) [AT-150](#)
DTC work support [EC-122](#)
DTRL - Wiring diagram [LT-31](#)
Duct and grilles [MTC-75](#)

E

ECM input/output signal [EC-105](#)
ECM power supply [EC-144](#)
ECTS - Wiring diagram [EC-202](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator .. [EM-18](#), [EC-499](#), [EC-506](#), [EC-511](#)
Electrical load signal circuit [EC-562](#)
Electrical unit [PG-72](#)
Electrical units location [PG-64](#)
Electronic ignition (EI) system [EC-25](#)
Electronic key [BL-80](#)
ENG SS - Wiring diagram [AT-114](#)
Engine control circuit diagram [EC-103](#)
Engine control component parts location [EC-96](#)
Engine control module (ECM) [EC-427](#)
Engine control system diagram [EC-22](#)
Engine coolant [CO-8](#)
Engine coolant temperature sensor (ECTS) ... [EC-200](#), [EC-212](#)
Engine fail-safe system [EC-91](#)
Engine oil [LU-5](#)
Engine oil precautions [GI-7](#)
Engine removal [EM-73](#)
EPS - Wiring diagram [STC-9](#)
EPS control unit input/output signal reference values .. [STC-11](#)
EPS system description [STC-5](#)
EPS system diagram [STC-6](#)
ETC1 - Wiring diagram [EC-500](#)
ETC2 - Wiring diagram [EC-495](#)
ETC3 - Wiring diagram [EC-507](#)
EVAP canister [EC-34](#)
EVAP canister purge volume control solenoid valve [EC-354](#), [EC-362](#)
EVAP canister vent control valve [EC-369](#), [EC-376](#)
EVAP control system (small leak) diagnosis .. [EC-346](#),

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

[EC-398](#), [EC-406](#)

EVAP control system pressure sensor [EC-382](#), [EC-385](#), [EC-391](#)

EVAP control system purge flow monitoring diagnosis
[EC-340](#)

EVAP vapor lines inspection [MA-19](#)

Evaporative emission (EVAP) system [EC-31](#)

Evaporator [MTC-90](#)

Exhaust manifold [EM-21](#)

Exhaust system inspection [MA-20](#), [MA-22](#)

Expansion valve [MTC-91](#)

F

F/FOG - Wiring diagram [LT-43](#)

F/PUMP - Wiring diagram [EC-571](#)

Final drive (FF M/T) [MT-22](#)

Floor trim [EI-37](#)

Flow charts [GI-27](#)

Fluid temperature sensor (CVT) [CVT-85](#)

Fluid temperature sensor (A/T) [AT-106](#)

Fluids [MA-11](#)

Fluorescent leak detector [MTC-92](#)

Flywheel (clutch) [CL-13](#)

Flywheel runout [EM-103](#)

Fork rod (M/T) [MT-21](#)

Freeze frame data [EC-52](#), [EC-116](#)

Front bumper [EI-14](#)

Front door [GW-43](#)

Front passenger air bag [SRS-46](#)

Front seat belt [SB-3](#)

Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-51](#)

Front washer [WW-4](#)

Front wiper [WW-4](#)

FTS - Wiring diagram [AT-103](#), [CVT-86](#)

FTTS - Wiring diagram [EC-293](#), [EC-298](#)

FUEL - Wiring diagram [EC-278](#), [EC-286](#)

Fuel cut control (at no load high engine speed) . [EC-26](#)

Fuel gauge [DI-5](#)

Fuel injection system [EC-276](#), [EC-284](#)

Fuel injector [EC-564](#)

Fuel injector and fuel tube [EM-33](#)

Fuel level sensor [EC-415](#), [EC-417](#), [EC-419](#)

Fuel line inspection [FL-4](#), [MA-15](#)

Fuel precautions [GI-6](#)

Fuel pressure check [EC-81](#)

Fuel pressure release [EC-81](#)

Fuel pump [EC-570](#)

Fuel systemCommercial Service Tools [FL-3](#)

Fuel systemPREPARATION [FL-3](#)

Fuel tank temperature sensor [EC-291](#), [EC-297](#)

Fuel tank vacuum relief valve [EC-34](#)

Fuse [PG-16](#)

Fuse and fusible link box [PG-77](#)

Fusible link [PG-16](#)

G

Gauges [DI-5](#)

Gear components (M/T) [MT-18](#)

Generic scan tool (GST) [EC-126](#)

Glass [GW-11](#), [GW-43](#), [GW-47](#)

Grille - See Exterior [EI-19](#)

Ground distribution [PG-30](#)

H

H/LAMP - Wiring diagram [LT-8](#)

H/PHON - Wiring diagram [AV-52](#)

Handling precautions for plastics [BL-255](#)

Harness connector [PG-68](#)

Harness layout [PG-39](#)

Hazard warning lamp [LT-51](#)

Headlining - See Roof trim [EI-39](#)

Heated oxygen sensor 2 [EC-248](#), [EC-257](#), [EC-267](#)

Heated oxygen sensor 2 heater [EC-166](#)

HEATER - Wiring diagram [MTC-28](#)

Heater system - Wiring diagram [MTC-28](#)

HFC134a (R134a) system precaution [MTC-4](#)

HFC134a (R134a) system service procedure . [MTC-80](#)

HFC134a (R134a) system service tools [MTC-12](#)

HFC134a system service equipment precaution [MTC-9](#)

HO2S2 - Wiring diagram [EC-251](#), [EC-260](#), [EC-270](#)

HO2S2H - Wiring diagram [EC-168](#)

Horn [WW-46](#)

HORN - Wiring diagram [WW-46](#)

How to erase DTC for OBD system [EC-60](#)

I

IATS - Wiring diagram [EC-197](#)

Idle air volume learning [EC-78](#)

Idle speed [EC-75](#)

Idle speed control (ISC) [EC-423](#), [EC-425](#)

Ignition coil [EC-576](#)

Ignition control system [EC-576](#)

Ignition timing [EC-75](#)

IGNSYS - Wiring diagram [EC-577](#)

ILL - Wiring diagram [LT-111](#)

Illumination control [LT-108](#)

In-cabin Microfilter [MA-20](#)

INJECT - Wiring diagram [EC-565](#)

Input shaft (FF M/T) [MT-18](#)

Input/Output signal of TCM [CVT-25](#)

Instrument panel [IP-10](#)

INT/L - Wiring diagram [LT-96](#)

Intake air temperature sensor [EC-195](#), [EC-215](#)

Intake door control linkage adjustment [MTC-69](#)

Intake manifold [EM-18](#)

Intake valve timing control [EC-156](#)

Intake valve timing control solenoid valve [EC-173](#)

Interior [EI-32](#)

Interior lamp [LT-91](#)

IPDM (Intelligent power distribution module engine room) [PG-17](#)

IVC - Wiring diagram [EC-174](#)

ALPHABETICAL INDEX

K		
KEYLES - Wiring diagram	BL-57	
Knock sensor (KS)	EC-315	
KS - Wiring diagram	EC-316	
L		
L/USSV - Wiring diagram	CVT-159	
Line pressure and secondary pressure control	CVT-26	
Line pressure solenoid valve	CVT-113 , CVT-118	
Line pressure test (A/T)	AT-56	
Liquid gasket application	EM-5 , LU-2 , CO-3	
Location of electrical units	PG-64	
Lock-up and select control	CVT-28	
Lock-up select solenoid valve	CVT-158	
Low tire pressure warning system	WT-7	
Low tire pressure warning system - trouble diagnoses	WT-10	
Low tire pressure warning system - Wiring diagram	WT-10	
LPSV - Wiring diagram	AT-146 , CVT-114	
Lubricant (R134a) A/C	MTC-5 , MTC-18	
Lubrication circuit (engine)	LU-4	
Lubrication oil A/C	MTC-96	
M		
M/T major overhaul	MT-17	
M/T removal and installation	MT-15	
MAFS - Wiring diagram	EC-181 , EC-189	
Magnet clutch	MTC-41	
MAIN - Wiring diagram	EC-144 , AT-183	
Mainshaft (M/T)	MT-18	
Maintenance	MA-5	
Malfunction indicator lamp (MIL)	EC-61	
Manual air conditioner - Wiring diagram	MTC-29	
Mass air flow sensor (MAFS)	EC-178 , EC-187	
Master cylinder (clutch)	CL-9	
Meter	DI-5	
METER - Wiring diagram	DI-9	
MIL data link connectors circuit	EC-592	
MIRROR - Wiring diagram	GW-64	
Mirror, door	GW-65	
Mirror, out side	GW-65	
Misfire	EC-308	
Mode door control linkage adjustment	MTC-71	
Molding - See Exterior	EI-23 , EI-24	
Mud guard - See Exterior	EI-26	
Multiport fuel injection (MFI) system	EC-23	
Multiport fuel injection precautions	GI-6	
Multi-remote control system - See Remote keyless entry system	BL-54	
N		
NATS - Wiring diagram	BL-215	
NATS (Nissan anti-theft system) precautions	GI-3	
NONDTC - Wiring diagram	AT-193 , CVT-176	
NVH troubleshooting (BR)	BR-5	
NVH troubleshooting (RSU)	RSU-4	
NVIS (Nissan vehicle immobilizer system)	BL-212	
O		
Oil change (capacity)	MA-11	
Oil cooler (engine)	EM-24	
Oil filter	LU-8	
Oil pan (engine)	EM-24	
Oil pressure (engine)	LU-5	
Oil seal replacement (engine) .	EM-24 , EM-37 , EM-59 , EM-66	
On board diagnostic system	EC-47	
ORVR (On-board Refueling Vapor Recovery) ...	EC-38	
Out side mirror	GW-65	
Overdrive control switch	AT-186 , AT-191	
Overheat	EC-443	
OVRCNV - Wiring diagram	AT-162	
P		
P/SCKT - Wiring diagram	WW-44	
Park/Neutral position switch	EC-436	
Park/neutral position switch (A/T)	AT-97 , AT-186	
Park/neutral position switch (CVT)	CVT-78	
Park/neutral position switch (M/T)	MT-11	
Parking brake control	PB-4	
PCV (positive crankcase ventilation)	EC-44	
Periodic maintenance	MA-7	
PGC/V - Wiring diagram	EC-356 , EC-364	
PHASE - Wiring diagram	EC-329	
Pilot bushing replacement	EM-77	
Piston assembly	EM-99	
Piston pin inspection	EM-95	
Piston ring inspection	EM-96	
Piston to bore clearance	EM-99	
PNP/SW - Wiring diagram	EC-438 , AT-98 , CVT-80	
POS - Wiring diagram	EC-321	
POWER - Wiring diagram	CVT-146 , PG-6	
Power door lock	BL-23	
Power socket	WW-44	
Power steering gear	PS-12	
Power supply routing	PG-4	
Power window	GW-17	
PRE/SE - Wiring diagram	EC-387 , EC-393	
Precautions for Leak detection dye	MTC-10	
Precautions (General)	GI-4	
Pressure control solenoid valve A	CVT-113 , CVT-118	
Pressure control solenoid valve B	CVT-121 , CVT-124	
Pressure plate - See Clutch cover	CL-13	
Pressure test (CVT)	CVT-45	
Primary pressure sensor	CVT-137	
Primary Speed Sensor	CVT-90	
PRIPS - Wiring diagram	CVT-138	
PRSCVT - Wiring diagram	CVT-91	
PT/SEN - Wiring diagram	AT-177	

ALPHABETICAL INDEX

R

Radiator	CO-11
Rear axle	RAX-4
Rear combination lamp removal and installation	LT-87
Rear door	GW-47
Rear seat belt	SB-6
Rear suspension	RSU-5
Rear washer	WW-30
Rear window defogger	GW-50
Rear wiper	WW-30
Refrigerant connection precaution	MTC-5
Refrigerant discharging evacuating charging .	MTC-80
Refrigerant general precaution	MTC-5
Refrigerant lines	MTC-80
Refrigerant pressure sensor	EC-586 , MTC-88
Refrigeration cycle	MTC-16
Remote keyless entry system	BL-54
Removal and installation (A/T)	AT-253
Reverse idler shaft (M/T)	MT-18
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-11
Reverse main gear (M/T)	MT-18
Road test	AT-58 , AT-61 , AT-64 , AT-65 , CVT-46
Room lamp - See Interior lamp	LT-91
RP/SEN - Wiring diagram	EC-587

S

SAE J1979 - Service \$01 - 09	EC-47
Seat belt inspection	SB-8 , MA-27
Seat belt, front	SB-3
Seat belt, rear	SB-6
Secondary pressure sensor	CVT-129
Secondary Speed Sensor	CVT-95
SECPS - Wiring diagram	CVT-130
SECPSV - Wiring diagram	CVT-125
Self-diagnostic results	EC-64 , EC-116
SEN/PW - Wiring diagram	EC-431
SESCVT - Wiring diagram	CVT-96
SHIFT - Wiring diagram	AT-236 , CVT-198
Shift control	CVT-26
Shift control components (M/T)	MT-21
Shift control system	CVT-191
Shift fork (M/T)	MT-21
Shift lever	MT-12
Shift lock system	AT-235
Shift schedule	AT-67 , CVT-53 , CVT-210
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-50
Side curtain air bag	SRS-47
Side trim	EI-32
SMJ (super multiple junction)	PG-75
Specification value	EC-133
Speedometer	DI-5
Spiral cable	SRS-44
Spot lamp	LT-107
SPSW - Wiring diagram	CVT-171
SROOF - Wiring diagram	RF-13

SRS - See Supplemental Restraint System	SRS-4
SRS - Wiring diagram	SRS-13
SRS Trouble diagnoses	SRS-9
SSV/A - Wiring diagram	AT-152
SSV/B - Wiring diagram	AT-157
Stall Test	CVT-43
Stall test (A/T)	AT-53
START - Wiring diagram	SC-12
Starting system	SC-10
Steering linkage	PS-12
Steering wheel and column	PS-6 , PS-9
Steering wheel turning force	PS-6
Step motor	CVT-164 , CVT-168
STM - Wiring diagram	CVT-165
Stop lamp	LT-71 , LT-87
Stop lamp switch	EC-488
STOP/L - Wiring diagram	LT-71
STSIG - Wiring diagram	CVT-73
Sun roof, electric	RF-10
Sunroof	RF-10 , RF-22
Supplemental Restraint System	SRS-4
Suspension	MA-26
Swirl control valve	EC-592
Symbols and abbreviations	GI-10 , GI-23
Symptom matrix chart	EC-92
Synchronizer (M/T)	MT-18
System readiness test (SRT) code	EC-52

T

Tachometer	DI-5
Tail lamp	LT-87
TAIL/L - Wiring diagram	LT-78
TCM circuit diagram	CVT-42
TCM function	CVT-24
TCM inspection table	AT-78 , CVT-54
TCV - Wiring diagram	AT-135 , CVT-106
Telephone	AV-49
Theft warning system - See Vehicle security (Theft warning) system	BL-193
Thermo control amp	MTC-63
Thermostat	CO-18
Three way catalyst function	EC-334
Three way catalyst precautions	GI-5
Throttle control motor relay	EC-493
Throttle position sensor (TPS) ..	EC-206 , EC-302 , EC-460 , EC-462 , EC-526
Throttle valve closed position learning	EC-78
Tie-rod	PS-12
Timing chain	EM-37
TLID - Wiring diagram	BL-177
Torque converter installation	AT-254 , AT-369 , CVT-208
Torque convertor clutch solenoid valve	CVT-105 , CVT-110
TPS1 - Wiring diagram	EC-304
TPS2 - Wiring diagram	EC-208
TPS3 - Wiring diagram	EC-528
Transmission case (M/T)	MT-17

ALPHABETICAL INDEX

Trouble diagnoses	GI-11
TURN - Wiring diagram	LT-55
Turn signal lamp	LT-51
Two trip detection logic	EC-47

V

Vacuum hose (brake system)	BR-22
Vacuum hose drawing (Engine control)	EC-102
Valve clearance	EM-55
Valve guide	EM-68
Valve lifter	EM-51
Valve seat	EM-70
Valve spring	EM-71
Vehicle recovery (freeing a stuck vehicle)	GI-44
Vehicle security (theft warning) system	BL-193
Vehicle speed sensor (VSS) EC-421 , EC-485 , EC-486	
VEHSEC - Wiring diagram	BL-197
VENT/V - Wiring diagram	EC-371 , EC-378
Ventilation air filter	MTC-74
VIN registration	EC-77
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-109
VSSMTR - Wiring diagram	AT-167

W

WARN - Wiring diagram	DI-25
Warning chime	DI-47
Warning lamps	DI-24
Washer, front	WW-4
Washer, rear	WW-30
Water control valve	CO-20
Water pump	CO-17
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-6 , MA-24
Wheel bearing (rear)	RAX-4
Wheel hub (rear)	RAX-4
Wheel sensor (VDC)	BRC-33
Wheel sensors (ABS)	BRC-11
WINDOW - Wiring diagram	GW-23
Window, door	GW-43 , GW-47
Windshield	GW-11
WIP/R - Wiring diagram	WW-33
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-30
Wiring Diagram (Cell code) list	PG-61
Wiring diagrams	GI-15

A

B

C

D

E

F

G

H

I

J

K

L

IDX