
ALPHABETICAL INDEX

Numerics

5TH MAIN GEAR ASSEMBLY TM-23

A

A-BAG BRANCH LINE CIRCUIT . LAN-49, LAN-62,
LAN-76, LAN-90, LAN-105, LAN-119

A/C INDICATOR..... HAC-39

A/C ON SIGNAL..... HAC-32

ABBREVIATIONS GI-14

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT).....BRC-36, BRC-144

ABS BRANCH LINE CIRCUIT LAN-45, LAN-60,
LAN-73, LAN-87, LAN-101, LAN-116

ABS FUNCTION DOES NOT OPERATE. BRC-136

ABS WARNING LAMP..... BRC-128

ACC WARNING DOES NOT OPERATE... DLK-128

ACCELERATOR CONTROL SYSTEM ACC-3

ACCELERATOR PEDAL RELEASED POSITION
LEARNING.....EC-128

ACTIVE GRILLE SHUTTEREXT-13, EXT-33

ADDITIONAL SERVICE WHEN REPLACING BCM
BCS-58, BCS-121

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNITSEC-49

ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE OR TRANSAXLE
ASSEMBLY TM-127

ADDITIONAL SERVICE WHEN REPLACING ECM
EC-125

ADDITIONAL SERVICE WHEN REPLACING TCM
TM-125

AIR BAG DIAGNOSIS SENSOR UNIT SR-30

AIR BREATHER HOSE..... TM-22, TM-240

AIR CLEANER AND AIR DUCT.....EM-26

AIR CLEANER FILTER.....EM-19

AMBIENT SENSORMWI-116

AMBIENT SENSOR SIGNAL CIRCUITMWI-104

ANTENNA FEEDER AV-61, AV-124, AV-256

APPLICATION NOTICE ... MWI-5, MWI-55, WCS-3

AROUND VIEW MONITOR CONTROL UNIT.....
AV-152, AV-249

ASCD BRAKE SWITCH.....EC-437

AUDIO SYSTEMAV-48, AV-108

AUDIO UNITAV-18, AV-53, AV-76, AV-113

AUTO DOOR LOCK OPERATION DOES NOT
OPERATE DLK-120

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY (DRIVER
SIDE)PWC-52

AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-3

AUXILIARY INPUT JACK AV-107, AV-117, AV-227,
AV-246

AV BRANCH LINE CIRCUITLAN-50, LAN-77,
LAN-106, LAN-120

AV CONTROL UNITAV-148, AV-241

AVM BRANCH LINE CIRCUITLAN-48, LAN-75,
LAN-104

B

B TERMINAL CIRCUIT CHG-23, STR-27

B0001, B0002 DRIVER AIRBAG MODULE SRC-42

B0010, B0011 PASSENGER AIRBAG MODULE....
SRC-45

B0020 SIDE AIRBAG MODULE LH SRC-47

B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-51

B0028 SIDE AIRBAG MODULE RH SRC-49

B0029 SIDE CURTAIN AIR BAG MODULE RH.....
SRC-53

B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH SRC-71

B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH..... SRC-77

B0093 FRONT DOOR SATELLITE SENSOR LH ...
SRC-65

B0094 CRASH ZONE SENSOR SRC-63

B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH..... SRC-74

B0097 REAR SIDE AIR BAG SATELLITE SENSOR
RH SRC-80

B0098 FRONT DOOR SATELLITE SENSOR RH...
SRC-67

B00A0 OCS SYSTEM..... SRC-83

B00D2 FRONT PASSENGER AIR BAG ON
INDICATOR..... SRC-88

B00D5 FRONT PASSENGER AIR BAG OFF
INDICATOR..... SRC-90

B1428 SEAT BELT BUCKLE SWITCH LH. SRC-59

B1429 SEAT BELT BUCKLE SWITCH RH SRC-61

B142A IGNITION VOLTAGE SRC-92

B142X COLLISION DETECTION..... SRC-96

B1430 SEAT BELT PRE-TENSIONER..... SRC-55

B1431 SEAT BELT PRE-TENSIONER..... SRC-57

B14XX AIR BAG DIAGNOSIS SENSOR UNIT
SRC-86

B1500 DOOR SATELLITE SENSOR SRC-69

B2098 IGNITION RELAY ON STUCK..... PCS-27

B2099 IGNITION RELAY OFF STUCK PCS-28

B210B STARTER CONTROL RELAY SEC-99

B210C STARTER CONTROL RELAY SEC-100

B210D STARTER RELAY SEC-102

B210E STARTER RELAY..... SEC-104

B210F SHIFT POSITION/CLUTCH INTERLOCK
SWITCH SEC-106

B2110 SHIFT POSITION/CLUTCH INTERLOCK
SWITCH SEC-108

B2190, P1614 NATS ANTENNA AMP. SEC-144
 B2191, P1615 DIFFERENCE OF KEY SEC-147
 B2192 ID DISCORD, IMMU-ECM SEC-54
 B2192, P1611 ID DISCORD, IMMU-ECM SEC-148
 B2193 CHAIN OF ECM-IMMU SEC-55
 B2193, P1612 CHAIN OF ECM-IMMU SEC-150
 B2195 ANTI-SCANNING SEC-56, SEC-151
 B2196 DONGLE UNIT SEC-57, SEC-152
 B2198 NATS ANTENNA AMP. SEC-59
 B2205 VEHICLE SPEED MWI-40, MWI-95
 B2267 ENGINE SPEED MWI-41, MWI-96
 B2268 WATER TEMP MWI-42, MWI-97
 B2555 STOP LAMP SEC-62
 B2556 PUSH-BUTTON IGNITION SWITCH SEC-65
 B2557 VEHICLE SPEED SEC-67
 B2562 LOW VOLTAGE BCS-66
 B2601 SHIFT POSITION SEC-68
 B2602 SHIFT POSITION SEC-70
 B2603 SHIFT POSITION SEC-73
 B2604 SHIFT POSITION SEC-77
 B2605 SHIFT POSITION SEC-80
 B2608 STARTER RELAY SEC-82
 B260F ENGINE STATUS SEC-84
 B2614 ACC RELAY CIRCUIT PCS-56
 B2615 BLOWER RELAY CIRCUIT PCS-58
 B2616 IGNITION RELAY CIRCUIT PCS-60
 B2618 BCM PCS-62
 B261A PUSH-BUTTON IGNITION SWITCH PCS-63
 B261F ASCD CLUTCH SWITCH SEC-85
 B2620 PARK/NEUTRAL POSITION SWITCH
 SEC-88
 B2621 INSIDE ANTENNA DLK-65
 B2622 INSIDE ANTENNA DLK-67
 B2623 INSIDE ANTENNA DLK-69
 B2626 OUTSIDE ANTENNA DLK-71
 B2627 OUTSIDE ANTENNA DLK-73
 B2628 OUTSIDE ANTENNA DLK-75
 B26E8 CLUTCH INTERLOCK SWITCH SEC-91
 B26F1 IGNITION RELAY PCS-65
 B26F2 IGNITION RELAY PCS-66
 B26F3 STARTER CONTROL RELAY SEC-94
 B26F4 STARTER CONTROL RELAY SEC-95
 B26F6 BCM PCS-68
 B26F7 BCM SEC-96
 B26FB CLUTCH SWITCH SEC-97
 B26FC KEY REGISTRATION SEC-98
 BACK DOOR DLK-159, DLK-286
 BACK DOOR LOCK DLK-176, DLK-303
 BACK DOOR LOCK ACTUATOR RELAY ... DLK-86
 BACK DOOR OUTER FINISHER EXT-48
 BACK DOOR REQUEST SWITCH DLK-96
 BACK DOOR TRIM INT-36
 BACK DOOR WINDOW GLASS GW-19
 BACK-UP LAMP EXL-67
 BASE AUDIO AV-24
 BASIC INSPECTION EC-133

BATTERY PG-61, PG-70
 BATTERY CURRENT SENSOR PG-73
 BATTERY SAVER OUTPUT/POWER SUPPLY
 CIRCUIT INL-41
 BATTERY TERMINAL WITH FUSIBLE LINK PG-72
 BCM BCS-30, BCS-52, BCS-101, BCS-117, DEF-11,
 DLK-35, INL-20, PWC-13, WT-14
 BCM (BODY CONTROL MODULE) BCS-74,
 BCS-137, MWI-25, MWI-78, PCS-76
 BCM BRANCH LINE CIRCUIT LAN-55, LAN-67,
 LAN-82, LAN-95, LAN-111, LAN-125
 BCM, COMBINATION METER WCS-25
 BCM, ECM, IPDM E/R HAC-21
 BCM, IPDM E/R DLK-205, EXL-24, PCS-41, WW-21
 BLOWER FAN ON SIGNAL HAC-35
 BLUETOOTH® ANTENNA AV-57, AV-120
 BLUETOOTH® CONTROL SIGNAL CIRCUIT AV-43
 BLUETOOTH® CONTROL UNIT AV-21, AV-56,
 AV-119
 BLUETOOTH® VOICE SIGNAL CIRCUIT AV-41
 BODY ALIGNMENT BRM-41
 BODY COMPONENT PARTS BRM-12
 BODY EXTERIOR PAINT COLOR BRM-2
 BODY SEALING BRM-19
 BODY SIDE TRIM INT-21
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES DEF-32
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON EXL-96
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON EXL-94
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAM EXL-93
 BRAKE BOOSTER BR-15
 BRAKE BOOSTER AND CHECK VALVE BR-31
 BRAKE CONTROL SYSTEM BRC-44
 BRAKE FLUID BR-12
 BRAKE MASTER CYLINDER BR-14, BR-28
 BRAKE PEDAL BR-9, BR-20
 BRAKE PIPING BR-22
 BRAKE WARNING LAMP BRC-129

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-58
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-63
 C1109 POWER AND GROUND SYSTEM . BRC-70
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT) BRC-72
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
 BRC-74
 C1115 WHEEL SENSOR BRC-77
 C1116 STOP LAMP SWITCH BRC-84

DIAGNOSIS SYSTEM (BLUETOOTH® CONTROL UNIT).....AV-17

DIAGNOSIS SYSTEM (COMBINATION METER)...MWI-17, MWI-69, WCS-13

DIAGNOSIS SYSTEM (ECM)EC-50

DIAGNOSIS SYSTEM (EPS CONTROL UNIT)STC-6

DIAGNOSIS SYSTEM (IPDM E/R) EXL-20, PCS-9, SEC-127, WW-17

DIAGNOSIS SYSTEM (TCM).....TM-91

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]...BRC-31

DIFFERENTIAL SIDE OIL SEAL.....TM-249

DISPLAY AUDIOAV-80

DLC BRANCH LINE CIRCUIT.....LAN-51, LAN-63, LAN-78, LAN-91, LAN-107, LAN-121

DOOR CABLEHAC-56

DOOR DOES NOT LOCK/UNLOCK WITH DOOR LOCK AND UNLOCK SWITCH.....DLK-112

DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH.....DLK-116

DOOR DOES NOT LOCK/UNLOCK WITH DRIVER SIDE DOOR LOCK KNOB OR DOOR KEY CYLINDERDLK-115

DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEYDLK-118

DOOR LOCK ACTUATOR.....DLK-79, DLK-242

DOOR LOCK AND UNLOCK SWITCHDLK-89, DLK-235

DOOR LOCK OPERATION WARNING DOES NOT OPERATE.....DLK-132

DOOR MIRRORMIR-15

DOOR MIRROR GLASSMIR-17

DOOR MIRROR REAR FINISHERMIR-18

DOOR MIRROR REMOTE CONTROL SWITCHMIR-19

DOOR MIRROR SYSTEMMIR-4, MIR-7

DOOR MIRROR TURN SIGNAL LAMP ...EXL-106

DOOR OUTSIDE MOLDINGEXT-46

DOOR REQUEST SWITCHDLK-94, DLK-185

DOOR SASH TAPEEXT-44

DOOR SWITCH.....DLK-98, DLK-181, DLK-232, DLK-308, PWC-39

DRIVE BELTEM-16

DRIVE BELT IDLER PULLEY.....EM-24

DRIVER AIR BAG MODULESR-12

DRIVER SIDE DOOR MIRROR DEFOGGER.....DEF-26

DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.....DEF-33

DRIVER SIDE POWER WINDOW DOES NOT OPERATE.....PWC-45

DUCT AND GRILLEVTL-5

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE ...WT-40

ECM BRANCH LINE CIRCUITLAN-44, LAN-59, LAN-72, LAN-86, LAN-100, LAN-115

ECM, IPDM E/R, BCM.....SEC-23, SEC-131

ELECTRICAL LOAD SIGNAL.....EC-444

ELECTRICAL UNITS LOCATION.....PG-5

ENGINE ASSEMBLYEM-86

ENGINE CONTROL SYSTEM.....EC-99

ENGINE CONTROL SYSTEM SYMPTOMS.....EC-464

ENGINE COOLANT.....CO-8

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE.....SEC-112

ENGINE MAINTENANCE.....MA-13

ENGINE OILLU-7

ENGINE UNIT.....EM-91

EPS BRANCH LINE CIRCUITLAN-52, LAN-64, LAN-79, LAN-92, LAN-108, LAN-122

EPS CONTROL UNIT.....STC-8, STC-37

EPS SYSTEM.....STC-11

EPS WARNING LAMP.....STC-29

EPS WARNING LAMP DOES NOT TURN OFF.....STC-31

EPS WARNING LAMP DOES NOT TURN ONSTC-30

EVAP CANISTERFL-14

EVAP CANISTER FILTERFL-16

EVAP CANISTER VENT CONTROL VALVE .FL-17

EVAP CONTROL SYSTEM PRESSURE SENSOR FL-19

EVAP LEAK CHECK.....EC-474

EVAPORATIVE EMISSION SYSTEM.....EC-473

EXCESSIVE ABS FUNCTION OPERATION FREQUENCYBRC-133

EXHAUST MANIFOLDEM-31

EXHAUST SYSTEM.....EX-4, EX-5

EXTERIOR LIGHTING SYSTEM SYMPTOMSEXL-91

F

FENDER PROTECTOREXT-38

FILAMENTDEF-36

FINAL DRIVE.....TM-52

FLOOR TRIM.....INT-27

FLUID COOLER HOSETM-254

FRONT AIR CONTROLHAC-52

FRONT AIR CONTROL FINISHERIP-23

FRONT BLOWER MOTORHAC-41, VTL-9

FRONT BLOWER MOTOR RESISTORHAC-55

FRONT BUMPEREXT-23

FRONT CAMERAAV-250

FRONT COIL SPRING AND STRUTFSU-9, FSU-16

FRONT COMBINATION LAMP .EXL-102, EXL-113

FRONT DISC BRAKE.....BR-8, BR-16, BR-35

FRONT DOORDLK-149, DLK-277
 FRONT DOOR FINISHER INT-15
 FRONT DOOR GLASS AND REGULATOR GW-21
 FRONT DOOR LOCKDLK-168, DLK-295
 FRONT DOOR SPEAKER AV-37, AV-54, AV-96,
 AV-114, AV-218, AV-243
 FRONT DRIVE SHAFT FAX-8, FAX-19, FAX-21
 FRONT DRIVE SHAFT BOOT FAX-14
 FRONT FENDERDLK-147, DLK-275
 FRONT FOG LAMP EXL-43, EXL-104
 FRONT FOG LAMP AIMING ADJUSTMENT
 EXL-100
 FRONT FOG LAMP CIRCUIT EXL-88
 FRONT GRILLEEXT-32
 FRONT HEATED SEAT SWITCH SE-29
 FRONT PASSENGER AIR BAG MODULE...SR-19
 FRONT PASSENGER AIR BAG OFF INDICATOR
 SR-36
 FRONT PASSENGER SIDE POWER WINDOW
 DOES NOT OPERATEPWC-46
 FRONT POWER WINDOW MOTORGW-24
 FRONT POWER WINDOW SWITCH (PASSENGER
 SIDE)PWC-30
 FRONT SEAT SE-18, SE-30
 FRONT SEAT BELT SB-8
 FRONT SEAT BELT BUCKLE SWITCHSR-35
 FRONT SPOILEREXT-34
 FRONT STABILIZERFSU-12
 FRONT SUSPENSION ASSEMBLYFSU-6
 FRONT SUSPENSION MEMBERFSU-14
 FRONT WASHER MOTORWW-58
 FRONT WASHER NOZZLE AND TUBEWW-60
 FRONT WHEEL HUB AND KNUCKLE FAX-7, FAX-9
 FRONT WIPER AND WASHER SYSTEM ..WW-22
 FRONT WIPER ARMWW-63
 FRONT WIPER AUTO STOP SIGNAL CIRCUIT....
 WW-40
 FRONT WIPER BLADEWW-65
 FRONT WIPER DOES NOT OPERATEWW-53
 FRONT WIPER DRIVE ASSEMBLYWW-66
 FRONT WIPER MOTOR GROUND CIRCUIT
 WW-42
 FRONT WIPER MOTOR HI CIRCUITWW-38
 FRONT WIPER MOTOR LO CIRCUITWW-36
 FUEL FILLER LID OPENERDLK-178, DLK-305
 FUEL INJECTOREC-446
 FUEL INJECTOR AND FUEL TUBEEM-40
 FUEL LEVEL SENSOR SIGNAL CIRCUIT MWI-45,
 MWI-101
 FUEL LEVEL SENSOR UNITFL-20
 FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
 FUEL PUMP ASSEMBLYFL-6
 FUEL PRESSURE CHECKEC-137
 FUEL PUMPEC-448
 FUEL SYSTEMFL-5
 FUEL TANKFL-10

FUSE AND FUSIBLE LINK BOXPG-59
 FUSE BLOCK - JUNCTION BOX (J/B)PG-58
 FUSE INSPECTIONPG-65
 FUSIBLE LINK INSPECTIONPG-69

G

G SENSORTM-241
 GEAR OILTM-17
 GENERAL MAINTENANCEMA-5
 GENERATORCHG-29
 GLOVE BOX ASSEMBLYIP-25
 GPS ANTENNAAV-253
 GROUNDPG-35

H

HANDLING PRECAUTIONS FOR PLASTICS
 BRM-4
 HARNESSPG-42
 HAZARD AND BUZZER REMINDER DOES NOT
 OPERATEDLK-123
 HAZARD FUNCTIONDLK-101, DLK-255
 HAZARD SWITCHEXL-108
 HEADLAMPEXL-25
 HEADLAMP (HI) CIRCUITEXL-77
 HEADLAMP (LO) CIRCUITEXL-79
 HEADLAMP AIMING ADJUSTMENTEXL-97
 HEADLININGINT-30
 HEATED SEAT SYSTEMSE-14
 HEATING AND COOLING UNIT ASSEMBLY HA-33
 HIGH-MOUNTED STOP LAMPEXL-111
 HOODDLK-140, DLK-268
 HOOD LOCKDLK-165, DLK-292
 HORNHRN-3, HRN-6
 HORN FUNCTIONDLK-252
 HOW TO ERASE PERMANENT DTCEC-145,
 TM-134
 HOW TO FOLLOW TROUBLE DIAGNOSES ..GI-6
 HOW TO READ WIRING DIAGRAMSGI-9
 HOW TO SELECT PISTON AND BEARING EM-111
 HOW TO SET SRT CODEEC-139
 HOW TO USE THIS MANUALGI-3
 HOW TO USE THIS SECTIONLAN-5, LAN-21

I

ID REGISTRATION CANNOT BE COMPLETED....
 WT-42
 ID REGISTRATION PROCEDUREWT-22
 IDENTIFICATION INFORMATIONGI-33
 IDLE AIR VOLUME LEARNINGEC-130
 IDLE SPEEDEC-471
 IGN OFF INTERLOCK DOOR UNLOCK FUNCTION
 DOES NOT OPERATEDLK-122
 IGNITION COILEM-47

IGNITION POSITION WARNING FUNCTION DOES NOT OPERATE	DLK-119
IGNITION SIGNAL	EC-451
IGNITION TIMING	EC-472
ILLUMINATION	INL-28
ILLUMINATION CONTROL SWITCH	INL-56
INPUT SHAFT AND GEAR	TM-45
INSIDE KEY ANTENNA	DLK-182
INSIDE MIRROR	MIR-14
INSTRUMENT LOWER PANEL LH	IP-24
INSTRUMENT PANEL ASSEMBLY	IP-14
INSUFFICIENT COOLING	HAC-48
INSUFFICIENT HEATING	HAC-49
INTAKE MANIFOLD	EM-28
INTELLIGENT KEY	DLK-104
INTELLIGENT KEY BATTERY	DLK-188
INTELLIGENT KEY LOW BATTERY WARNING DOES NOT OPERATE	DLK-131
INTELLIGENT KEY SYSTEM	DLK-46
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION	SEC-24
INTELLIGENT KEY WARNING BUZZER	DLK-102, DLK-186
INTERIOR LIGHTING SYSTEM SYMPTOMS	INL-50
INTERIOR ROOM LAMP	INL-53
INTERIOR ROOM LAMP CONTROL CIRCUIT	INL-43
INTERIOR ROOM LAMP CONTROL SYSTEM	INL-21
INTERMITTENT INCIDENT	SRC-41
IPDM E/R	PCS-30
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	PCS-13, PCS-21, PG-60
IPDM-E BRANCH LINE CIRCUIT	LAN-46, LAN-61, LAN-74, LAN-88, LAN-102, LAN-117

K

KEY CYLINDER SWITCH	DLK-239
KEY ID WARNING DOES NOT OPERATED	DLK-133
KEY INTERLOCK CABLE	TM-237
KEY REMINDER FUNCTION DOES NOT OPERATE	DLK-124
KEY SWITCH (BCM INPUT)	DLK-241
KEY SWITCH SIGNAL CIRCUIT (WITHOUT INTELLIGENT KEY)	WCS-45
KEY WARNING LAMP	DLK-105
KEYFOB BATTERY	DLK-310
KEYFOB BATTERY AND FUNCTION	DLK-250
KEYFOB ID SET UP WITH CONSULT	DLK-256
KEYFOB ID SET UP WITHOUT CONSULT	DLK-257

L

L TERMINAL CIRCUIT (OPEN)	CHG-24
L TERMINAL CIRCUIT (SHORT)	CHG-26

LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM	SB-15
LICENSE PLATE LAMP	EXL-112
LIFTING POINT	GI-28
LINE PRESSURE TEST	TM-132
LOW TIRE PRESSURE WARNING LAMP	WT-33
LOW TIRE PRESSURE WARNING LAMP BLINKS	WT-39
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF	WT-38
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON	WT-37
LUGGAGE TRIM	INT-33

M

M&A BRANCH LINE CIRCUIT	LAN-53, LAN-65, LAN-80, LAN-93, LAN-109, LAN-123
MAGNET CLUTCH	HAC-45
MAIN LINE BETWEEN AVM AND DLC CIRCUIT	LAN-43, LAN-71, LAN-99
MAIN LINE BETWEEN IPDM-E AND AVM CIRCUIT	LAN-42, LAN-70, LAN-98
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	LAN-41, LAN-58, LAN-85, LAN-114
MAIN POWER SUPPLY AND GROUND CIRCUIT	TM-215
MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH	PWC-55
MAINSHAFT AND GEAR	TM-47
MALFUNCTION AREA CHART	LAN-40
MALFUNCTION INDICATOR LAMP	EC-456
MANUAL AIR CONDITIONING SYSTEM	HAC-22, HAC-47
MAP LAMP	INL-51
METER BUZZER CIRCUIT	WCS-38
METER SYSTEM	MWI-26, MWI-79
MICROPHONE	AV-59, AV-122, AV-248
MICROPHONE SIGNAL CIRCUIT	AV-44, AV-102, AV-222
MIXTURE RATIO SELF-LEARNING VALUE CLEAR	EC-132
MULTI AV SYSTEM	AV-228

N

NATS ANTENNA AMP	SEC-114, SEC-159
NAVIGATION SYSTEM	AV-155
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS	SEC-158
NOISE	HA-17
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	BR-7, CL-4, EM-14, FAX-6, FSU-5, RAX-4, RSU-4, ST-7, TM-16, WT-43
NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH	PWC-44

NORMAL OPERATING CONDITION [AV-51](#), [AV-111](#),
[AV-232](#), [BCS-73](#), [BCS-136](#), [BRC-139](#), [EC-470](#),
[WW-55](#)

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-
NATS) [SEC-132](#)

NVIS - WITH INTELLIGENT KEY SYSTEM [SEC-37](#)

O

OCCUPANT CLASSIFICATION SYSTEM

CONTROL UNIT [SR-32](#)

OD OFF INDICATOR LAMP [TM-219](#)

OFF POSITION WARNING DOES NOT OPERATE
[DLK-125](#)

OIL [HA-22](#)

OIL COOLER [LU-13](#)

OIL FILTER [LU-10](#)

OIL PAN AND OIL STRAINER [EM-34](#)

OIL PAN, CONTROL VALVE [TM-242](#)

OIL PUMP [LU-11](#)

OIL SEAL [EM-73](#)

ON BOARD DIAGNOSTIC (OBD) SYSTEM [EC-49](#),
[TM-90](#)

ON BOARD REFUELING VAPOR RECOVERY
(ORVR) [EC-457](#)

OPERA WINDOW [GW-14](#)

OPERATION [EC-47](#), [HAC-16](#), [MWI-16](#), [MWI-68](#)

OPERATION INSPECTION [HAC-30](#)

OUTPUT SPEED SENSOR [TM-248](#)

OUTSIDE KEY ANTENNA [DLK-184](#)

OVERDRIVE CONTROL SWITCH [TM-217](#)

OVERHEATING CAUSE ANALYSIS [CO-6](#)

P

P POSITION WARNING DOES NOT OPERATE....
[DLK-126](#)

P0011 IVT CONTROL [EC-167](#)

P0014 EVT CONTROL [EC-171](#)

P0030, P0031, P0032 A/F SENSOR HEATER.....
[EC-174](#)

P0037, P0038 HO2S2 HEATER [EC-177](#)

P0075 IVT CONTROL SOLENOID VALVE [EC-180](#)

P0078 EVT CONTROL SOLENOID VALVE [EC-182](#)

P0101 MAF SENSOR [EC-185](#)

P0102, P0103 MAF SENSOR [EC-190](#)

P0111 IAT SENSOR [EC-195](#)

P0112, P0113 IAT SENSOR [EC-197](#)

P0116 ECT SENSOR [EC-199](#)

P0117, P0118 ECT SENSOR [EC-201](#)

P0122, P0123 TP SENSOR [EC-203](#)

P0125 ECT SENSOR [EC-206](#)

P0127 IAT SENSOR [EC-208](#)

P0128 THERMOSTAT FUNCTION [EC-210](#)

P0130 A/F SENSOR 1 [EC-213](#)

P0131 A/F SENSOR 1 [EC-217](#)

P0132 A/F SENSOR 1 [EC-220](#)

P0137 HO2S2 [EC-223](#)

P0138 HO2S2 [EC-229](#)

P0139 HO2S2 [EC-237](#)

P014C, P014D, P015A, P015B, A/F SENSOR 1
[EC-243](#)

P0171 FUEL INJECTION SYSTEM FUNCTION
[EC-248](#)

P0172 FUEL INJECTION SYSTEM FUNCTION
[EC-252](#)

P0181 FTT SENSOR [EC-256](#)

P0182, P0183 FTT SENSOR [EC-260](#)

P0196 EOT SENSOR [EC-262](#)

P0197, P0198 EOT SENSOR [EC-265](#)

P0222, P0223 TP SENSOR [EC-267](#)

P0300, P0301, P0302, P0303, P0304 MISFIRE.....
[EC-270](#)

P0327, P0328 KS [EC-276](#)

P0335 CKP SENSOR (POS) [EC-278](#)

P0340 CMP SENSOR (PHASE) [EC-282](#)

P0420 THREE WAY CATALYST FUNCTION [EC-285](#)

P0441 EVAP CONTROL SYSTEM [EC-290](#)

P0443 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE [EC-295](#)

P0444, P0445 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE [EC-300](#)

P0447 EVAP CANISTER VENT CONTROL VALVE
[EC-303](#)

P0448 EVAP CANISTER VENT CONTROL VALVE
[EC-307](#)

P0451 EVAP CONTROL SYSTEM PRESSURE
SENSOR [EC-311](#)

P0452 EVAP CONTROL SYSTEM PRESSURE
SENSOR [EC-315](#)

P0453 EVAP CONTROL SYSTEM PRESSURE
SENSOR [EC-318](#)

P0456 EVAP CONTROL SYSTEM [EC-322](#)

P0460 FUEL LEVEL SENSOR [EC-328](#)

P0461 FUEL LEVEL SENSOR [EC-329](#)

P0462, P0463 FUEL LEVEL SENSOR [EC-331](#)

P0500 VSS [EC-332](#)

P0506 ISC SYSTEM [EC-334](#)

P0507 ISC SYSTEM [EC-335](#)

P050A, P050B, P050E COLD START CONTROL..
[EC-337](#)

P0520 EOP SENSOR [EC-339](#)

P0524 ENGINE OIL PRESSURE [EC-341](#)

P059F ACTIVE GRILLE SHUTTER [EC-344](#)

P0603 ECM [EC-349](#)

P0604 ECM [EC-350](#)

P0605 ECM [EC-351](#)

P0606 ECM [EC-352](#)

P0607 ECM [EC-353](#)

P060A ECM [EC-354](#)

P060B ECM [EC-355](#)

P062F EEPROM [TM-143](#)

P0643 SENSOR POWER SUPPLY [EC-356](#)

P0705 TRANSMISSION RANGE SENSOR A	P159F ACTIVE GRILLE SHUTTER	EC-390
TM-144	P1610 LOCK MODE	SEC-51, SEC-143
P0706 TRANSMISSION RANGE SENSOR A	P1611 ID DISCORD, IMMU-ECM	SEC-52
TM-150	P1612 CHAIN OF ECM-IMMU	SEC-53
P0711 TRANSMISSION FLUID TEMPERATURE	P1715 INPUT SPEED SENSOR	EC-392
SENSOR A	P1720 VSS	EC-394
TM-153	P1805 BRAKE SWITCH	EC-396
P0712 TRANSMISSION FLUID TEMPERATURE	P2096, P2097 A/F SENSOR 1	EC-398
SENSOR A	P2100, P2103 THROTTLE CONTROL MOTOR	
TM-157	RELAY	EC-402
P0713 TRANSMISSION FLUID TEMPERATURE	P2101 ELECTRIC THROTTLE CONTROL	
SENSOR A	FUNCTION	EC-405
TM-159	P2118 THROTTLE CONTROL MOTOR	EC-409
P0715 INPUT SPEED SENSOR A	P2119 ELECTRIC THROTTLE CONTROL	
TM-161	ACTUATOR	EC-411
P0720 OUTPUT SPEED SENSOR	P2122, P2123 APP SENSOR	EC-413
TM-164	P2127, P2128 APP SENSOR	EC-416
P0740 TORQUE CONVERTER	P2135 TP SENSOR	EC-419
TM-167	P2138 APP SENSOR	EC-422
P0743 TORQUE CONVERTER	P219A AIR FUEL RATIO	EC-426
TM-169	P219C, P219D, P219E, P219F AIR FUEL RATIO ..	EC-431
P0744 TORQUE CONVERTER	P2765 CLUTCH B SPEED SENSOR	TM-206
TM-171	P2857 CLUTCH A PRESSURE	TM-209
P0746 PRESSURE CONTROL SOLENOID A	P2858 CLUTCH B PRESSURE	TM-210
TM-173	P2859 CLUTCH A PRESSURE	TM-211
P0846 TRANSMISSION FLUID PRESSURE SEN/	P285A CLUTCH B PRESSURE	TM-213
SW B	PARKING BRAKE CABLE	PB-7
TM-175	PARKING BRAKE CONTROL	PB-6
P0847 TRANSMISSION FLUID PRESSURE SEN/	PARKING BRAKE REAR CABLE	PB-8
SW B	PARKING BRAKE SWITCH	BRC-124, PB-9
TM-177	PARKING BRAKE SWITCH SIGNAL CIRCUIT	
P0848 TRANSMISSION FLUID PRESSURE SEN/	WCS-42	
SW B	PARKING BRAKE SYSTEM	PB-4
TM-179	PARKING LAMP CIRCUIT	EXL-82
P0850 PNP SWITCH	PARKING, LICENSE PLATE AND TAIL LAMPS ARE	
EC-358	NOT TURNED ON	EXL-95
P0863 TCM COMMUNICATION	PARKING, LICENSE PLATE AND TAIL LAMPS	
TM-181	SYSTEM	EXL-55
P0890 TCM	PASSENGER SIDE DOOR MIRROR DEFOGGER	
TM-182	DEF-28	
P0962 PRESSURE CONTROL SOLENOID A	PASSENGER SIDE DOOR MIRROR DEFOGGER	
TM-184	DOES NOT OPERATE	DEF-34
P0963 PRESSURE CONTROL SOLENOID A	PEDAL VIBRATION OR ABS OPERATION SOUND	
TM-186	OCCURS	BRC-137
P0965 PRESSURE CONTROL SOLENOID B	PERFORMANCE TEST	HA-24
TM-188	PERIODIC MAINTENANCE	MA-7
P0966 PRESSURE CONTROL SOLENOID B	PLUG	TM-255
TM-189	POSITION SWITCH	TM-15, TM-19
P0967 PRESSURE CONTROL SOLENOID B	POSITIVE CRANKCASE VENTILATION ...	EC-476
TM-191	POWER DISTRIBUTION SYSTEM	PCS-42
P0998 SHIFT SOLENOID F	POWER DOOR LOCK SYSTEM DLK-36, DLK-206	
TM-193	POWER DOOR LOCK SYSTEM SYMPTOMS	
P0999 SHIFT SOLENOID F	DLK-259	
TM-195	POWER GENERATION VOLTAGE VARIABLE	
P099B SHIFT SOLENOID G	CONTROL SYSTEM	CHG-8
TM-197		
P099C SHIFT SOLENOID G		
TM-199		
P1078 EVT CONTROL POSITION SENSOREC-361		
EC-364		
P1148 CLOSED LOOP CONTROL		
EC-365		
P1212 TCS COMMUNICATION LINE		
EC-366		
P1217 ENGINE OVER TEMPERATURE ...		
EC-369		
P1225 TP SENSOR		
EC-370		
P1226 TP SENSOR		
EC-371		
P1550 BATTERY CURRENT SENSOR		
EC-373		
P1551, P1552 BATTERY CURRENT SENSOR		
EC-375		
P1553 BATTERY CURRENT SENSOR		
EC-377		
P1564 ASCD STEERING SWITCH		
EC-380		
P1572 ASCD BRAKE SWITCH		
EC-383		
P1574 ASCD VEHICLE SPEED SENSOR		
EC-388		
P1586 G SENSOR		
TM-201		
P1588 G SENSOR		
TM-204		

POWER GENERATION VOLTAGE VARIABLE
CONTROL SYSTEM OPERATION
INSPECTION CHG-21
POWER SOCKET PWO-4
POWER SUPPLY ROUTING CIRCUIT PG-15
POWER WINDOW AND DOOR LOCK/UNLOCK
SWITCH RH.....PWC-56
POWER WINDOW CONTROL SYSTEM
SYMPTOMS.....PWC-43
POWER WINDOW LOCK SWITCH DOES NOT
FUNCTIONPWC-54
POWER WINDOW MAIN SWITCH.....PWC-14
POWER WINDOW MOTORPWC-34
POWER WINDOW RETAINED POWER
OPERATION DOES NOT OPERATE
PROPERLYPWC-53
POWER WINDOW SYSTEM.....PWC-16
PRECAUTIONS ACC-2, AV-6, AV-62, AV-126,
BCS-5, BCS-76, BR-3, BRC-4, BRM-3, CCS-2,
CHG-3, CL-2, CO-2, DEF-3, DLK-9, DLK-189,
EC-8, EM-3, EX-2, EXL-4, EXT-3, FAX-2, FL-2,
FSU-2, GI-23, GW-2, HA-3, HAC-3, HRN-2,
INL-3, INT-3, IP-2, LAN-6, LAN-22, LU-2, MA-3,
MIR-2, MWI-6, MWI-56, PB-2, PCS-3, PCS-32,
PG-3, PWC-4, PWO-2, RAX-2, RSU-2, SB-2,
SE-2, SEC-5, SEC-117, SR-2, SRC-4, ST-2,
STC-3, STR-2, TM-7, TM-55, VTL-2, WCS-4,
WT-3, WW-3
PRECAUTIONS IN REPAIRING HIGH STRENGTH
STEEL..... BRM-8
PRIMARY SPEED SENSOR TM-246
PROCEDURE FOR TEMPORARILY DISABLING
THE IGNITION BATTERY SAVER SYSTEM....
PCS-53
PUSH-BUTTON IGNITION SWITCHPCS-70,
PCS-77, SEC-115
PUSH-BUTTON IGNITION SWITCH DOES NOT
OPERATEPCS-75
PUSH-BUTTON IGNITION SWITCH
ILLUMINATION CIRCUIT..... INL-48

R

RADIATOR CO-12, CO-13
RADIATOR CORE SUPPORT ..DLK-144, DLK-272
REAR BUMPER.....EXT-28
REAR COMBINATION LAMP ... EXL-109, EXL-114
REAR DOORDLK-154, DLK-281
REAR DOOR FINISHER..... INT-18
REAR DOOR GLASS AND REGULATOR...GW-25
REAR DOOR LOCK.....DLK-172, DLK-299
REAR DOOR SPEAKER AV-39, AV-55, AV-98,
AV-115, AV-220, AV-244
REAR DRUM BRAKEBR-18, BR-41
REAR LH SIDE POWER WINDOW DOES NOT
OPERATEPWC-48
REAR POWER WINDOW MOTOR GW-28

REAR POWER WINDOW SWITCH PWC-32,
PWC-57
REAR RH SIDE POWER WINDOW DOES NOT
OPERATE PWC-50
REAR SEAT SE-23, SE-38
REAR SEAT BELT SB-12
REAR SHOCK ABSORBER..... RSU-8
REAR SPOILER.....EXT-49
REAR SUSPENSION ASSEMBLY RSU-5
REAR SUSPENSION BEAM..... RSU-13
REAR VIEW CAMERA.....AV-118, AV-251
REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT .
AV-100
REAR WASHER NOZZLE AND TUBE WW-73
REAR WHEEL HUBRAX-5, RAX-6
REAR WINDOW DEFOGGER AND DOOR
MIRROR DEFOGGER DO NOT OPERATE.
DEF-30
REAR WINDOW DEFOGGER DOES NOT
OPERATE BUT BOTH OF DOOR MIRROR
DEFOGGER OPERATE.....DEF-31
REAR WINDOW DEFOGGER POWER SUPPLY
AND GROUND CIRCUITDEF-24
REAR WINDOW DEFOGGER RELAYDEF-22
REAR WINDOW DEFOGGER SWITCH.....DEF-20
REAR WINDOW DEFOGGER SWITCH DOES NOT
LIGHT, BUT REAR WINDOW DEFOGGER
OPERATES.....DEF-35
REAR WINDOW DEFOGGER SYSTEMDEF-12
REAR WIPER AND WASHER SYSTEM..... WW-28
REAR WIPER ARM.....WW-69
REAR WIPER AUTO STOP SIGNAL CIRCUIT
WW-48
REAR WIPER BLADE WW-71
REAR WIPER MOTOR WW-72
REAR WIPER MOTOR CIRCUIT WW-46
RECOMMENDED CHEMICAL PRODUCTS AND
SEALANTS GI-22
RECOMMENDED FLUIDS AND LUBRICANTS
MA-11
REFRIGERANT..... HA-18
REFRIGERANT PRESSURE SENSOR.....EC-462,
HAC-54
REFRIGERATION SYSTEM SYMPTOMS....HA-15
REMOTE KEYLESS ENTRY RECEIVER DLK-106,
DLK-187, DLK-247, DLK-309, SEC-116,
SEC-160
REMOTE KEYLESS ENTRY SYSTEM.....DLK-216
REMOTE KEYLESS ENTRY SYSTEM SYMPTOMS
DLK-260
REPAIRING MATERIAL BRM-11
REPLACEMENT OPERATIONS BRM-22
ROCKER COVER EM-48
ROD ANTENNAAV-60, AV-123, AV-255
ROOF SIDE MOLDINGEXT-42

S

S CONNECTOR CIRCUIT..... [STR-29](#)
S TERMINAL CIRCUIT[CHG-27](#)
SATELLITE RADIO ANTENNA [AV-125](#), [AV-254](#)
SATELLITE SENSOR.....[SR-26](#)
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
[WCS-39](#)
SEAT BELT PRE-TENSIONER[SR-34](#)
SEAT BELT WARNING SYSTEM.....[SRC-99](#)
SECONDARY SPEED SENSOR..... [TM-247](#)
SECURITY INDICATOR LAMP DOES NOT TURN
ON OR BLINK [SEC-113](#)
SENSOR ROTOR.....[BRC-143](#)
SERVICE DATA AND SPECIFICATIONS (SDS).....
[ACC-5](#), [BR-45](#), [CHG-31](#), [CL-22](#), [CO-25](#), [EC-478](#),
[EM-116](#), [EXL-115](#), [FAX-27](#), [FL-22](#), [FSU-20](#),
[HA-37](#), [INL-57](#), [LU-15](#), [PB-10](#), [PG-74](#), [PWO-7](#),
[RAX-10](#), [RSU-15](#), [ST-19](#), [STR-32](#), [TM-54](#),
[TM-265](#), [WT-54](#), [WW-76](#)
SERVICE INFORMATION FOR ELECTRICAL
INCIDENT [GI-38](#)
SHIFT LOCK SYSTEM..... [TM-221](#)
SHIFT P WARNING LAMP.....[DLK-111](#)
SHIFT POSITION INDICATOR CIRCUIT ... [TM-220](#)
SHIFT SELECTOR LAMP [INL-55](#)
SHIPPING MODE CANCEL OPERATION [BCS-61](#),
[BCS-125](#)
SIDE AIR BAG MODULE[SR-23](#)
SIDE CAMERA[AV-252](#)
SIDE CURTAIN AIR BAG MODULE.....[SR-21](#)
SIDE OIL SEAL [TM-18](#)
SIDE WINDOW GLASS [GW-16](#)
SLIP INDICATOR LAMP..... [BRC-131](#)
SPARK PLUG [EM-21](#)
SPIRAL CABLE[SR-16](#)
SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
[DLK-134](#), [DLK-262](#), [EXT-17](#), [GW-5](#), [INT-9](#), [IP-8](#),
[MIR-8](#), [SE-8](#)
SRS AIR BAG SYSTEM.....[SRC-25](#)
SRS AIR BAG WARNING LAMP DOES NOT TURN
OFF [SRC-97](#)
SRS AIR BAG WARNING LAMP DOES NOT TURN
ON [SRC-98](#)
STALL TEST [TM-131](#)
STARTER MOTOR..... [STR-31](#)
STARTING SYSTEM [STR-10](#), [STR-30](#)
STEERING ANGLE SENSOR..... [BRC-147](#)
STEERING COLUMN..... [ST-9](#)
STEERING COLUMN COVERS [IP-17](#)
STEERING GEAR AND LINKAGE [ST-14](#), [ST-16](#)
STEERING LOCK UNIT [DLK-311](#)
STEERING SHAFT [ST-12](#)
STEERING SWITCH [AV-46](#), [AV-58](#), [AV-104](#), [AV-121](#),
[AV-224](#), [AV-247](#), [MWI-103](#)
STEERING WHEEL [ST-5](#), [ST-8](#)

STEERING WHEEL TURNING FORCE IS HEAVY
OR LIGHT [STC-32](#)
STOP LAMP [EXL-63](#)
STRG BRANCH LINE CIRCUIT .. [LAN-54](#), [LAN-66](#),
[LAN-81](#), [LAN-94](#), [LAN-110](#), [LAN-124](#)
STRUCTURE AND OPERATION [EC-28](#), [TM-13](#),
[TM-70](#)
SYSTEM (INTELLIGENT KEY SYSTEM) .. [DLK-22](#)

T

TAKE AWAY WARNING DOES NOT OPERATE.....
[DLK-129](#)
TCM [TM-99](#), [TM-239](#)
TCM BRANCH LINE CIRCUIT [LAN-47](#), [LAN-89](#),
[LAN-103](#), [LAN-118](#)
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-113](#)
THE BRAKING DISTANCE IS LONG [BRC-135](#)
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY.....
[MWI-51](#), [MWI-110](#)
THE FUEL GAUGE INDICATOR DOES NOT
OPERATE..... [MWI-48](#), [MWI-107](#)
THE KEY WARNING DOES NOT SOUND
(WITHOUT INTELLIGENT KEY) [WCS-50](#)
THE LIGHT REMINDER WARNING DOES NOT
SOUND..... [WCS-49](#)
THE LOW WASHER FLUID WARNING
CONTINUES DISPLAYING, or DOES NOT
DISPLAY [MWI-53](#), [MWI-114](#)
THE OIL PRESSURE WARNING LAMP DOES NOT
TURN OFF [MWI-50](#), [MWI-109](#)
THE OIL PRESSURE WARNING LAMP DOES NOT
TURN ON [MWI-49](#), [MWI-108](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES DISPLAYING, OR DOES NOT
DISPLAY [MWI-52](#), [MWI-111](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND..... [WCS-47](#)
THE SEAT BELT REMINDER WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND..... [WCS-48](#)
THE STEERING SWITCH (METER CONTROL
SWITCH) IS INOPERATIVE [MWI-112](#)
THERMO CONTROL AMPLIFIER..... [HAC-53](#)
THERMOSTAT [CO-20](#)
THROTTLE VALVE CLOSED POSITION
LEARNING [EC-129](#)
TIGHTENING TORQUE OF STANDARD BOLTS ...
[GI-19](#)
TIMING CHAIN [EM-51](#)
TIRE PRESSURE MONITORING SYSTEM. [WT-15](#)
TIRE PRESSURE RECEIVER [WT-53](#)
TOP TETHER STRAP CHILD RESTRAINT .. [SB-16](#)

TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL	TM-263
TOW TRUCK TOWING	GI-31
TPMS SYMPTOMS	WT-36
TRANSAXLE ASSEMBLY	TM-24, TM-26
TRANSIT MODE CANCEL OPERATION	BCS-62, BCS-126
TRANSMISSION ASSEMBLY	TM-259
TRANSMITTER	WT-49
TRANSVERSE LINK	FSU-10
TROUBLE DIAGNOSIS	LAN-9
TROUBLE DIAGNOSIS - SPECIFICATION VALUE	EC-151
TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM	EXL-48
TURN SIGNAL LAMP CIRCUIT	EXL-85

U

U0073 COMMUNICATION BUS A OFF	TM-135
U0100 LOST COMMUNICATION (ECM A)	TM-136
U0101 CAN COMM CIRCUIT	EC-162
U0140 LOST COMMUNICATION (BCM)	TM-137
U0141 LOST COMMUNICATION (BCM A)	TM-138
U0155 LOST COMMUNICATION (IPC)	TM-139
U0284 ACTIVE GRILLE SHUTTER	EC-163
U0300 CAN COMMUNICATION DATA	TM-140
U0415 VEHICLE SPEED	BCS-65
U0428 STEERING ANGLE SENSOR	AV-185
U1000 CAN COMM	BCS-127, DLK-229
U1000 CAN COMM CIRCUIT	AV-186, BCS-63, BRC-117, MWI-38, MWI-93, PCS-26, PCS-54, SRC-94, STC-28, TM-141
U1001 CAN COMM CIRCUIT	EC-164
U1002 SYSTEM COMM (CAN)	BRC-118
U1010 CONTROL UNIT (CAN)	AV-187, BCS-64, BCS-128, BRC-120, DLK-230, MWI-39, MWI-94, PCS-55, SRC-95
U1040 ENG COMM CIRCUIT	EC-165
U1044 ENG COMM CIRCUIT	EC-166
U1117 LOST COMMUNICATION (ABS)	TM-142
U111A REAR CAMERA IMAGE SIGNAL CIRCUIT	AV-188
U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT	AV-192
U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT	AV-194
U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT	AV-196
U1200 AV CONTROL UNIT	AV-198
U1217 AV CONTROL UNIT	AV-199
U1229 AV CONTROL UNIT	AV-200
U122F AV CONTROL UNIT	AV-201
U1232 STEERING ANGLE SENSOR	AV-202
U1244 GPS ANTENNA	AV-203
U1258 SATELLITE RADIO ANTENNA	AV-204
U1263 USB	AV-205

U1264 ANTENNA AMP.	AV-206
U12AA CONFIGURATION ERROR	AV-207
U12AC AV CONTROL UNIT	AV-208
U12AD AV CONTROL UNIT	AV-209
U12AE AV CONTROL UNIT	AV-210
U12AF AV CONTROL UNIT	AV-211
U12B0 POWER SUPPLY VOLTAGE	AV-212
U12B1 POWER SUPPLY VOLTAGE	AV-213
U1304 CAMERA IMAGE CALIBRATION	AV-214
U1305 CONFIG UNFINISH	AV-215
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-35
UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT	STC-34
UNDER COVER	EXT-39
UNEXPECTED PEDAL REACTION	BRC-134
UNLOCK SENSOR	DLK-92
UPPER GLOVE BOX	IP-26
USB CONNECTOR	AV-106, AV-226
USB INTERFACE	AV-116, AV-245

V

VACUUM LINES	BR-33
VDC OFF INDICATOR LAMP	BRC-130
VDC OFF SWITCH	BRC-126, BRC-146
VDC/TCS/ABS	BRC-132
VEHICLE JERKS DURING VDC/TCS/ABS CONTROL	BRC-138
VEHICLE SECURITY INDICATOR	SEC-110, SEC-155
VEHICLE SPEED SENSING AUTO LOCK OPERATION DOES NOT OPERATE	DLK-121
VENTILATION SYSTEM	VTL-4
VIN REGISTRATION	EC-127

W

WARNING CHIME FUNCTION	DLK-254
WARNING CHIME SYSTEM	WCS-26
WASHER FLUID LEVEL SWITCH	WW-59
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-47, MWI-106
WASHER MOTOR CIRCUIT	WW-43
WASHER SWITCH	WW-44
WASHER TANK	WW-56
WATER HOSE	TM-251
WATER OUTLET	CO-23
WATER PUMP	CO-18
WHEEL	WT-44
WHEEL ALIGNMENT	FSU-7, RSU-6
WHEEL AND TIRE	WT-45, WT-48
WHEEL SENSOR	BRC-140
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-35
WIPER AND WASHER SWITCH	WW-68

WIPER AND WASHER SYSTEM SYMPTOMS

[WW-50](#)

